

8W-10 POWER DISTRIBUTION

Component	Page	Component	Page
A/C Compressor Clutch	8W-10-17, 40	Fuse 25	8W-10-14, 31
A/C Compressor Clutch Relay	8W-10-17, 40	Fuse 26	8W-10-49
A/C-Heater Control	8W-10-42, 43, 49	Fuse 27	8W-10-17, 18, 43
Adjustable Pedal Relay	8W-10-15, 32	Fuse 28	8W-10-40, 41
Adjustable Pedal Switch	8W-10-15, 32, 42	Fuse 29	8W-10-46
Airbag Control Module	8W-10-42, 44	Fuse 32	8W-10-17, 34
Airbag-Passenger On/Off Switch	8W-10-42	Fuse 33	8W-10-17, 34
Ambient Temperature Sensor	8W-10-48, 50	Fuse 34	8W-10-17, 34
Amplifier Audio	8W-10-31	Fuse 35	8W-10-44
Ashtray Lamp	8W-10-35	Fuse 36	8W-10-43
Auto Shut Down Relay	8W-10-12, 19	Fuse 37	8W-10-44
Automatic Day/Night Mirror	8W-10-41, 48	Fuse 38	8W-10-43, 44
Auxiliary Battery	8W-10-12	Fuse 40	8W-10-15, 16, 32
Backup Lamp Switch	8W-10-44, 49	Fuse 41	8W-10-16, 36
Battery	8W-10-12, 19	Fuse 42	8W-10-14, 32
Blower Motor	8W-10-52	Fuse 43	8W-10-14, 32
Brake Lamp Switch	8W-10-14, 30, 40	Fuse 45	8W-10-16, 17, 36
Capacitor	8W-10-22	Fuse 46	8W-10-15, 16, 33
Cigar Lighter Outlet	8W-10-46	Fuse 47	8W-10-16, 33
Circuit Breaker	8W-10-52	Fuse 48	8W-10-15, 32
Clearance Lamp No. 1	8W-10-35	Fuse 49	8W-10-12, 19
Clearance Lamp No. 2	8W-10-35	Fuse 50	8W-10-26, 40
Clearance Lamp No. 3	8W-10-35	Fuse 51	8W-10-14, 15, 30
Clearance Lamp No. 4	8W-10-35	Fuse 52	8W-10-43, 44
Clearance Lamp No. 5	8W-10-35	Fuse 53	8W-10-41
Clutch Interlock Brake Switch	8W-10-37	Fusible Link	8W-10-12
Coil On Plug No. 1	8W-10-20, 23	G104	8W-10-27, 29, 47, 48, 53
Coil On Plug No. 2	8W-10-21, 22	G201	8W-10-25
Coil On Plug No. 3	8W-10-20, 23	Generator	8W-10-12
Coil On Plug No. 4	8W-10-21, 22	Headlamp Switch	8W-10-36
Coil On Plug No. 5	8W-10-20, 23	Headlamp-Left	8W-10-51
Coil On Plug No. 6	8W-10-21, 22	Headlamp-Right	8W-10-51
Coil On Plug No. 7	8W-10-20, 23	Heated Mirror Relay	8W-10-18, 43
Coil On Plug No. 8	8W-10-21, 22	Horn Relay	8W-10-16, 36
Compass/Mini-Trip Computer	8W-10-31, 39, 41	Horn-High Note	8W-10-36
Condenser Fan	8W-10-18, 45	Horn-Low Note	8W-10-36
Condenser Fan Relay	8W-10-18, 45	Ignition Switch	8W-10-13, 25, 37, 41, 44, 46, 52
Controller Antilock Brake	8W-10-14, 28, 44	Instrument Cluster	8W-10-14, 25, 30, 31, 41, 46, 52
Data Link Connector	8W-10-30, 50	Integrated Power Module	8W-10-3, 4, 12, 13, 14, 15, 16, 17, 18, 19, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 36, 37, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 53
Door Lock Switch-Passenger	8W-10-41	License Lamp-Left	8W-10-34
Driver Door Module	8W-10-15, 32, 52	License Lamp-Right	8W-10-34
Electric Backlight	8W-10-49	Oxygen Sensor Downstream Relay	8W-10-12, 19
Electric Brake Provision	8W-10-12, 19	Park Lamp Relay	8W-10-17, 34
Engine Control Module	8W-10-12, 26, 38, 40	Park/Turn Signal Lamp-Left Front	8W-10-34, 47
Fender Lamp-Front Left	8W-10-35	Park/Turn Signal Lamp-Right Front	8W-10-34, 47
Fender Lamp-Front Right	8W-10-35	Passenger Lumbar Switch	8W-10-28
Fender Lamp-Rear Left	8W-10-35	Power Mirror-Left	8W-10-43
Fender Lamp-Rear Right	8W-10-35	Power Mirror-Right	8W-10-43
Fog Lamp Relay	8W-10-16, 36	Power Outlet	8W-10-14, 31
Fog Lamp-Left	8W-10-36	Power Outlet-Console	8W-10-14, 32
Fog Lamp-Right	8W-10-36	Power Seat Switch-Driver	8W-10-28
Front Control Module	8W-10-13, 26, 29, 30, 32, 33, 34, 36, 47, 48, 50, 51	Power Seat Switch-Passenger	8W-10-28
Fuel Heater	8W-10-53	Power Window Circuit Breaker	8W-10-52
Fuel Heater Relay	8W-10-18, 40, 53	Powertrain Control Module	8W-10-18, 19, 22, 27, 31, 37, 39, 40, 45, 52
Fuel Injector No. 1	8W-10-23, 24	PTC No. 1	8W-10-39, 40, 41
Fuel Injector No. 2	8W-10-21, 22	PTC No. 2	8W-10-46
Fuel Injector No. 3	8W-10-23, 24	PTC No. 5	8W-10-33
Fuel Injector No. 4	8W-10-21, 22	Radio	8W-10-30, 46
Fuel Injector No. 5	8W-10-23, 24	Rear Window Defogger Relay	8W-10-49
Fuel Injector No. 6	8W-10-21, 22	Seat Belt Tensioner Reducer	8W-10-46
Fuel Injector No. 7	8W-10-23, 24	Seat Heater Interface Module	8W-10-32
Fuel Injector No. 8	8W-10-21, 22	Sentry Key Immobilizer Module	8W-10-31, 39, 40
Fuel Pump Module	8W-10-17, 39	Starter Motor	8W-10-15, 37
Fuel Pump Relay	8W-10-17, 39, 40	Starter Motor Relay	8W-10-15, 37
Fuse 1	8W-10-12, 19	Tail/Stop/Turn Signal Lamp-Left	8W-10-34, 47, 48, 50
Fuse 2	8W-10-12, 13, 19	Tail/Stop/Turn Signal Lamp-Right	8W-10-35, 47, 48, 50
Fuse 3	8W-10-13, 25	Tailgate Lamp	8W-10-34
Fuse 4	8W-10-13, 25	Trailer Tow Connector	8W-10-16, 17, 33, 34
Fuse 5	8W-10-12, 13, 14, 26, 27	Trailer Tow Connector-Add On	8W-10-14, 31, 33, 34, 48
Fuse 6	8W-10-13, 14, 28	Trailer Tow Left Turn Relay	8W-10-16, 33
Fuse 7	8W-10-14, 28	Trailer Tow Right Turn Relay	8W-10-16, 33
Fuse 8	8W-10-15, 29	Transfer Case Control Module	8W-10-14, 32, 37
Fuse 9	8W-10-13, 25	Transfer Case Selector Switch	8W-10-41
Fuse 10	8W-10-13, 25	Transmission Control Relay	8W-10-13, 26, 27
Fuse 11	8W-10-13, 14, 30	Transmission Range Sensor	8W-10-38, 44, 49
Fuse 12	8W-10-18, 45, 53	Transmission Solenoid Assembly	8W-10-26
Fuse 13	8W-10-13, 30	Transmission Solenoid/TRS Assembly	8W-10-27, 44, 49
Fuse 14	8W-10-15, 37	Underhood Lamp	8W-10-30
Fuse 15	8W-10-16, 17, 34	Vistronic Fan Drive	8W-10-43
Fuse 16	8W-10-17, 40	Washer Fluid Level Switch	8W-10-48
Fuse 17	8W-10-17, 18, 39	Washer Pump Motor-Front	8W-10-48
Fuse 18	8W-10-14, 30	Wiper High/Low Relay	8W-10-15, 29
Fuse 19	8W-10-14, 31	Wiper Motor-Front	8W-10-29, 48
Fuse 20	8W-10-13, 25	Wiper On/Off Relay	8W-10-15, 29
Fuse 21	8W-10-14, 31		
Fuse 22	8W-10-14, 31		
Fuse 23	8W-10-14, 31		
Fuse 24	8W-10-14, 30		