

WIRING

TABLE OF CONTENTS

	page		page
WIRING DIAGRAM INFORMATION.....	8W-01-1	AUDIO SYSTEM	8W-47-1
COMPONENT INDEX.....	8W-02-1	REAR WINDOW DEFOGGER.....	8W-48-1
POWER DISTRIBUTION	8W-10-1	OVERHEAD CONSOLE.....	8W-49-1
GROUND DISTRIBUTION	8W-15-1	FRONT LIGHTING	8W-50-1
BUS COMMUNICATIONS	8W-18-1	REAR LIGHTING	8W-51-1
CHARGING SYSTEM.....	8W-20-1	TURN SIGNALS.....	8W-52-1
STARTING SYSTEM	8W-21-1	WIPERS.....	8W-53-1
FUEL/IGNITION SYSTEM	8W-30-1	TRAILER TOW.....	8W-54-1
TRANSMISSION CONTROL SYSTEM	8W-31-1	NAVIGATION/TELECOMMUNICATION	8W-55-1
VEHICLE SPEED CONTROL	8W-33-1	POWER WINDOWS.....	8W-60-1
REAR WHEEL ANTILOCK BRAKES.....	8W-34-1	POWER DOOR LOCKS	8W-61-1
ALL WHEEL ANTILOCK BRAKES	8W-35-1	POWER MIRRORS	8W-62-1
VEHICLE THEFT SECURITY SYSTEM.....	8W-39-1	POWER SEATS	8W-63-1
INSTRUMENT CLUSTER.....	8W-40-1	SPLICE INFORMATION	8W-70-1
HORN/CIGAR LIGHTER/POWER OUTLET ..	8W-41-1	CONNECTOR PIN-OUTS	8W-80-1
AIR CONDITIONING	8W-42-1	CONNECTOR/GROUND/SPLICE	
AIRBAG SYSTEM	8W-43-1	LOCATION	8W-91-1
INTERIOR LIGHTING.....	8W-44-1	POWER DISTRIBUTION	8W-97-1