



## 8W-47 AUDIO SYSTEM

<b>Component</b>	<b>Page</b>	<b>Component</b>	<b>Page</b>
Amplifier-Radio . . . . .	8W-47-4, 5, 10	Radio . . . . .	8W-47-2, 3, 4, 7, 9, 10
Amplifier-Subwoofer . . . . .	8W-47-10	Receiver-Satellite . . . . .	8W-47-7, 8
Clockspring . . . . .	8W-47-9	Speaker-Instrument Panel Right . . . . .	8W-47-4
Cluster . . . . .	8W-47-2, 9	Speaker-Instrument Panel-Center . . . . .	8W-47-4
Data Link Connector . . . . .	8W-47-2, 5	Speaker-Instrument Panel-Left . . . . .	8W-47-4
Fuse 21 . . . . .	8W-47-5	Speaker-Left Front Door . . . . .	8W-47-3, 6
Fuse 43 . . . . .	8W-47-10	Speaker-Left Rear . . . . .	8W-47-3, 5, 6
Fuse 51 . . . . .	8W-47-2	Speaker-Right Front Door . . . . .	8W-47-3, 6
G201 . . . . .	8W-47-9	Speaker-Right Rear . . . . .	8W-47-3, 5, 6
G202 . . . . .	8W-47-2, 5	Speaker-Subwoofer . . . . .	8W-47-10
G302 . . . . .	8W-47-10	Switch-Remote Radio-Left . . . . .	8W-47-9
Module-Hands Free . . . . .	8W-47-2, 5, 8	Switch-Remote Radio-Right . . . . .	8W-47-9
Module-Integrated Power . . . . .	8W-47-2, 5, 10		
PTC No. 2 . . . . .	8W-47-2, 5		

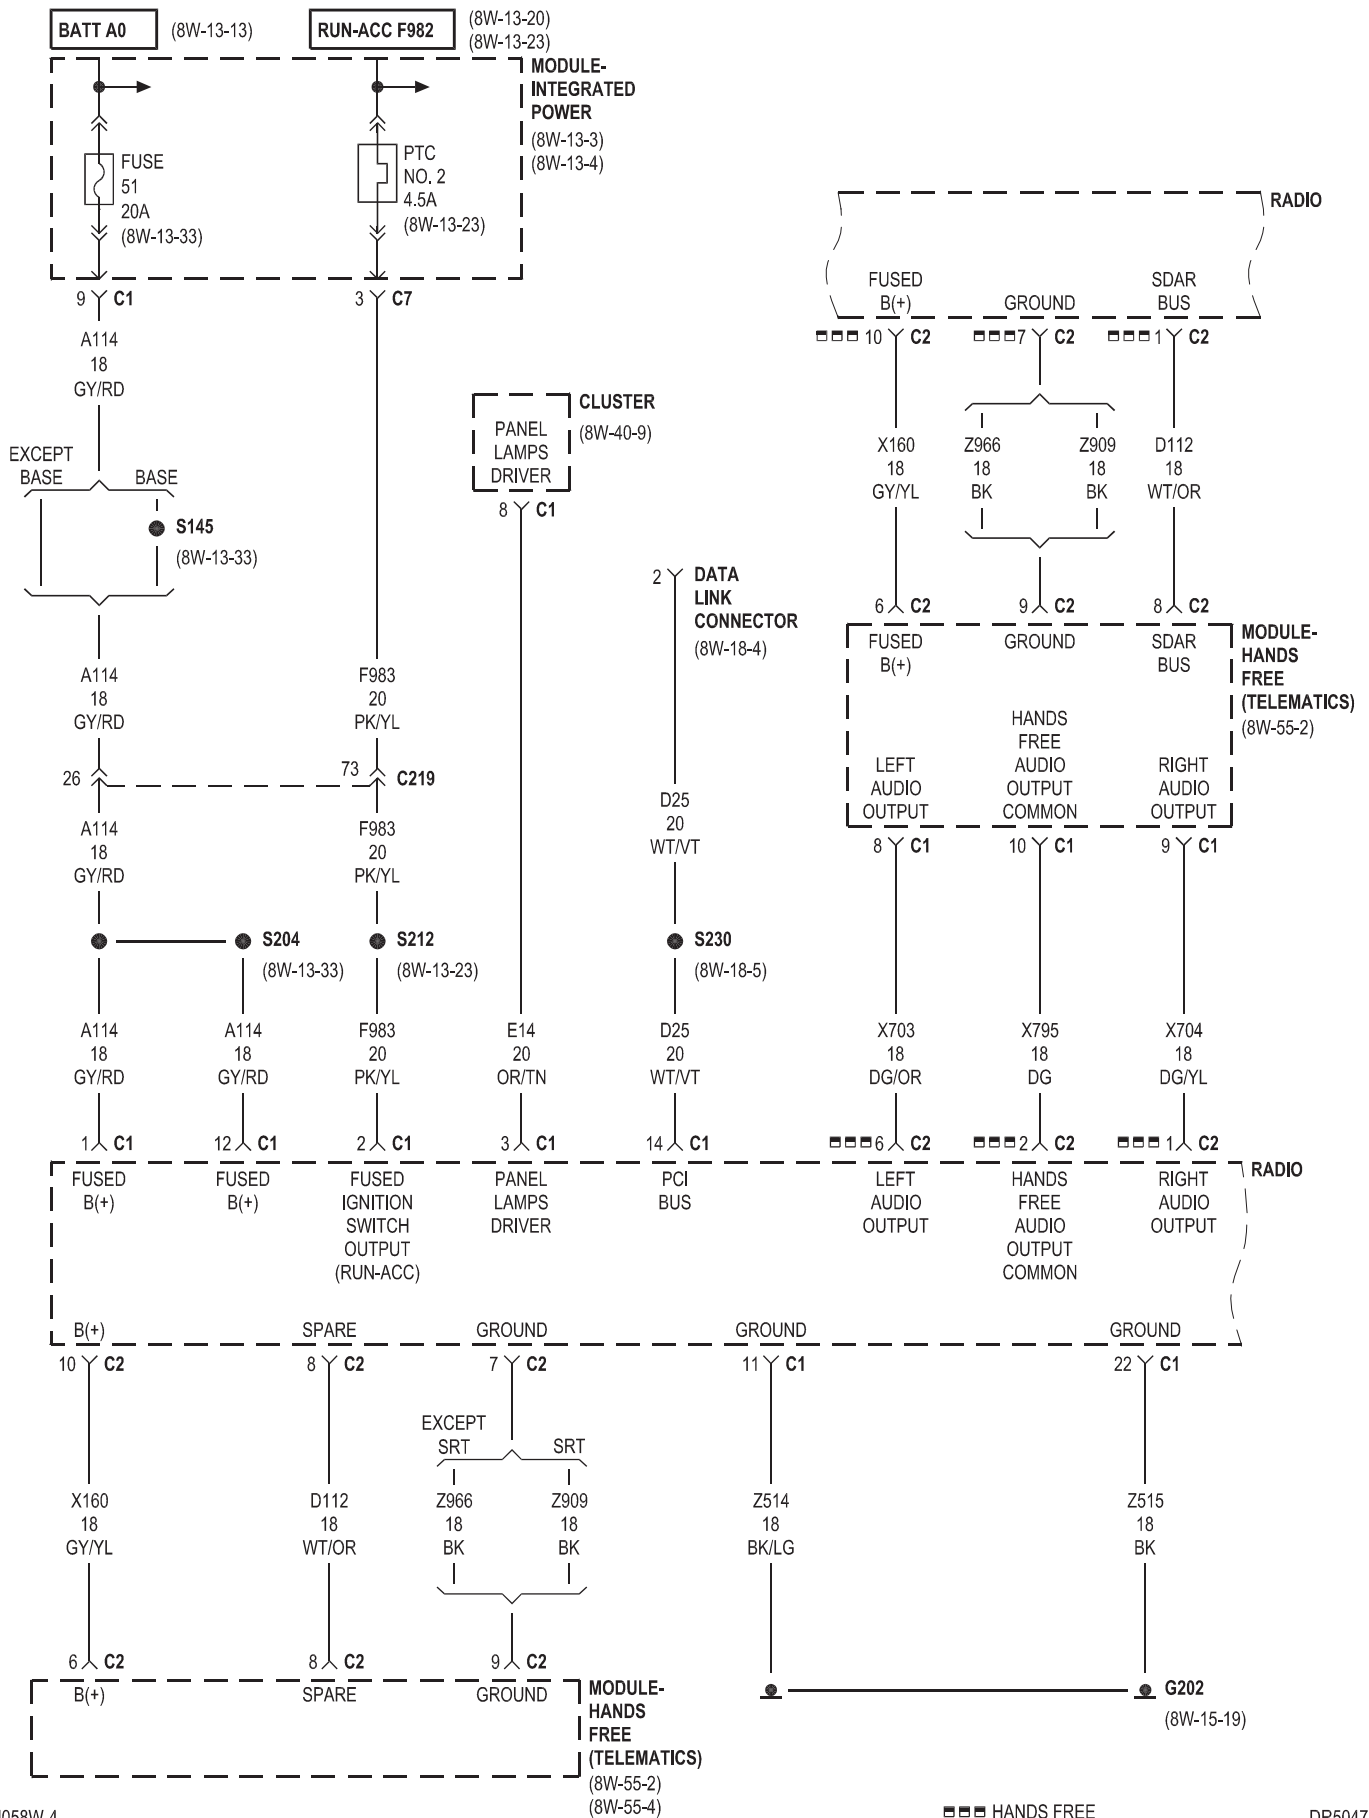

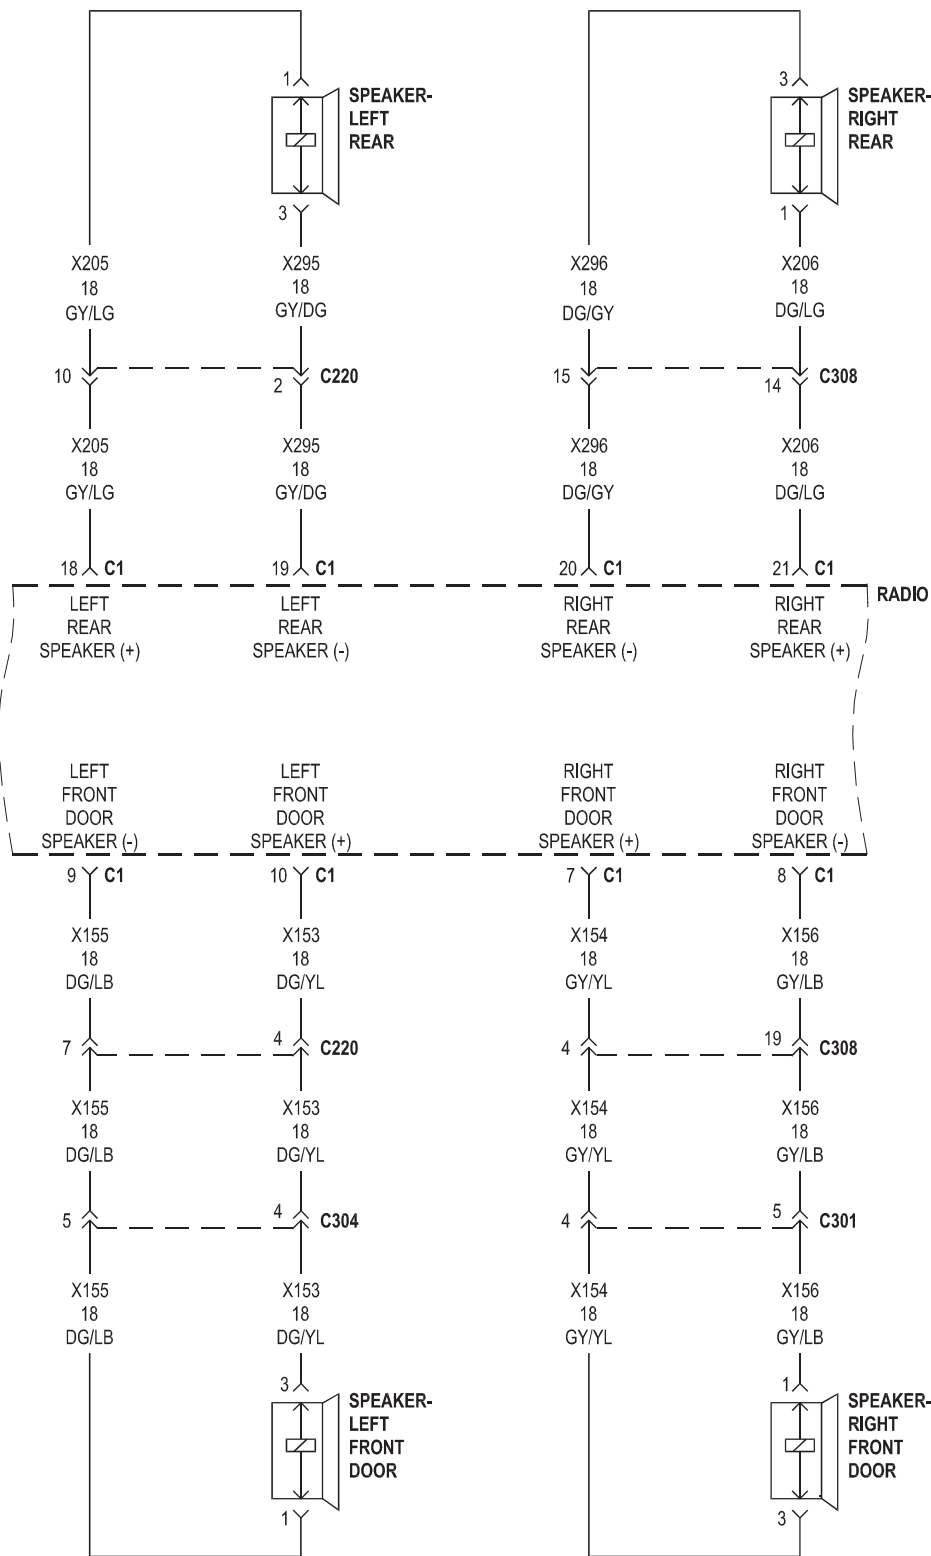

PREMIUM EXCEPT HANDS FREE CAPABLE

