





8W-18 BUS COMMUNICATIONS

Component	Page	Component	Page
Amplifier-Radio	8W-18-3, 5	Module-Hands Free	8W-18-3, 5
Cluster	8W-18-3, 5	Module-Heated Seat	8W-18-4, 6
Control-A/C-Heater	8W-18-3, 5	Module-Memory Mirror-Driver	8W-18-4, 6
Data Link Connector	8W-18-2	Module-Memory Mirror-Passenger	8W-18-4, 6
Fuse 14	8W-18-2	Module-Occupant Classification	8W-18-4, 6
G208	8W-18-2	Module-Occupant Restraint Controller . .	8W-18-3, 5
Junction Block	8W-18-2, 3, 4, 5, 6	Module-Powertrain Control	8W-18-2, 7
Media System-Monitor/Dvd	8W-18-4, 6	Module-Seat Memory	8W-18-4, 6
Module-Antilock Brakes	8W-18-7	Module-Sentry Key Remote Entry	8W-18-3, 5
Module-Electronic Overhead	8W-18-4, 6	Radio	8W-18-3, 5
Module-Front Control	8W-18-2, 4, 6, 7	Receiver-Satellite	8W-18-4, 6

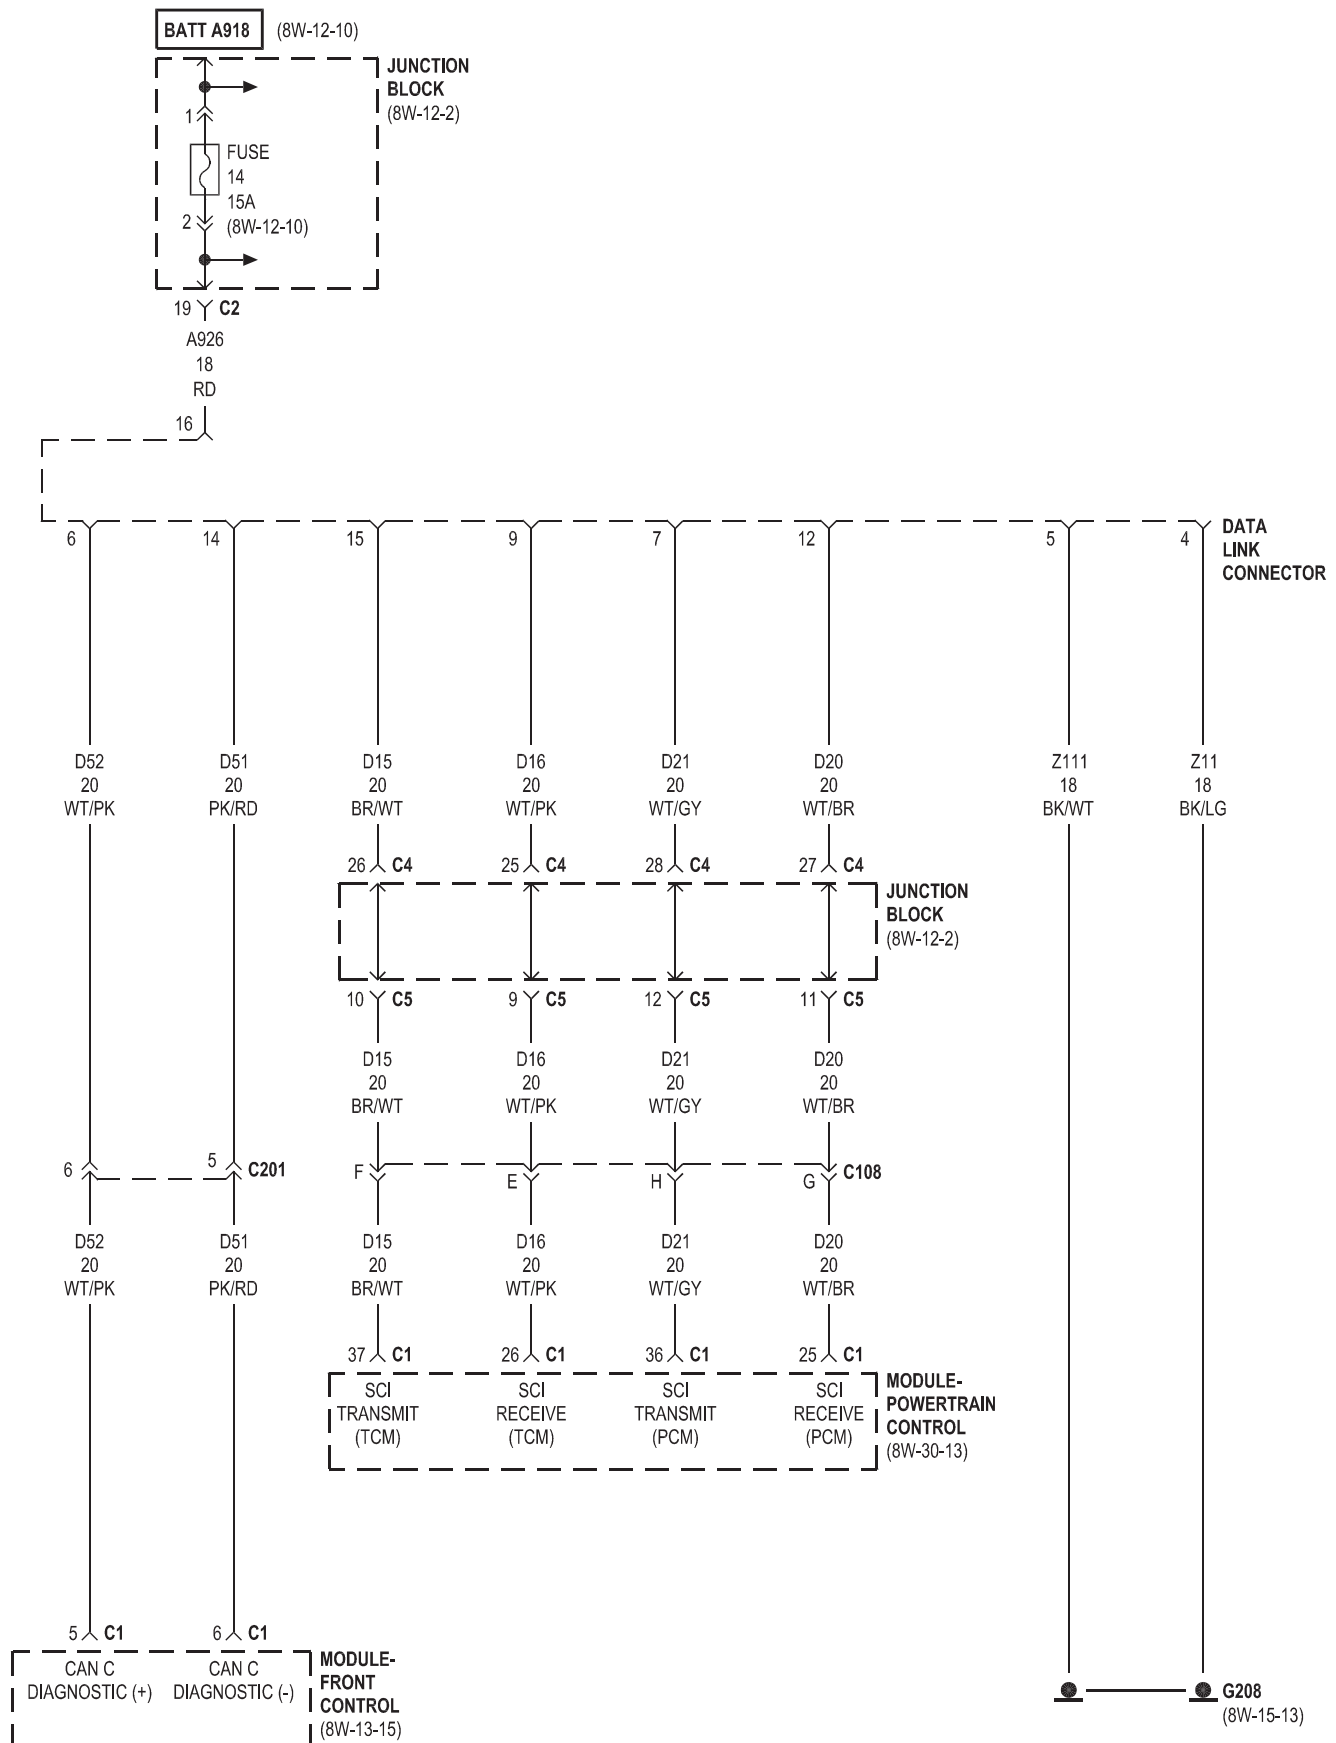

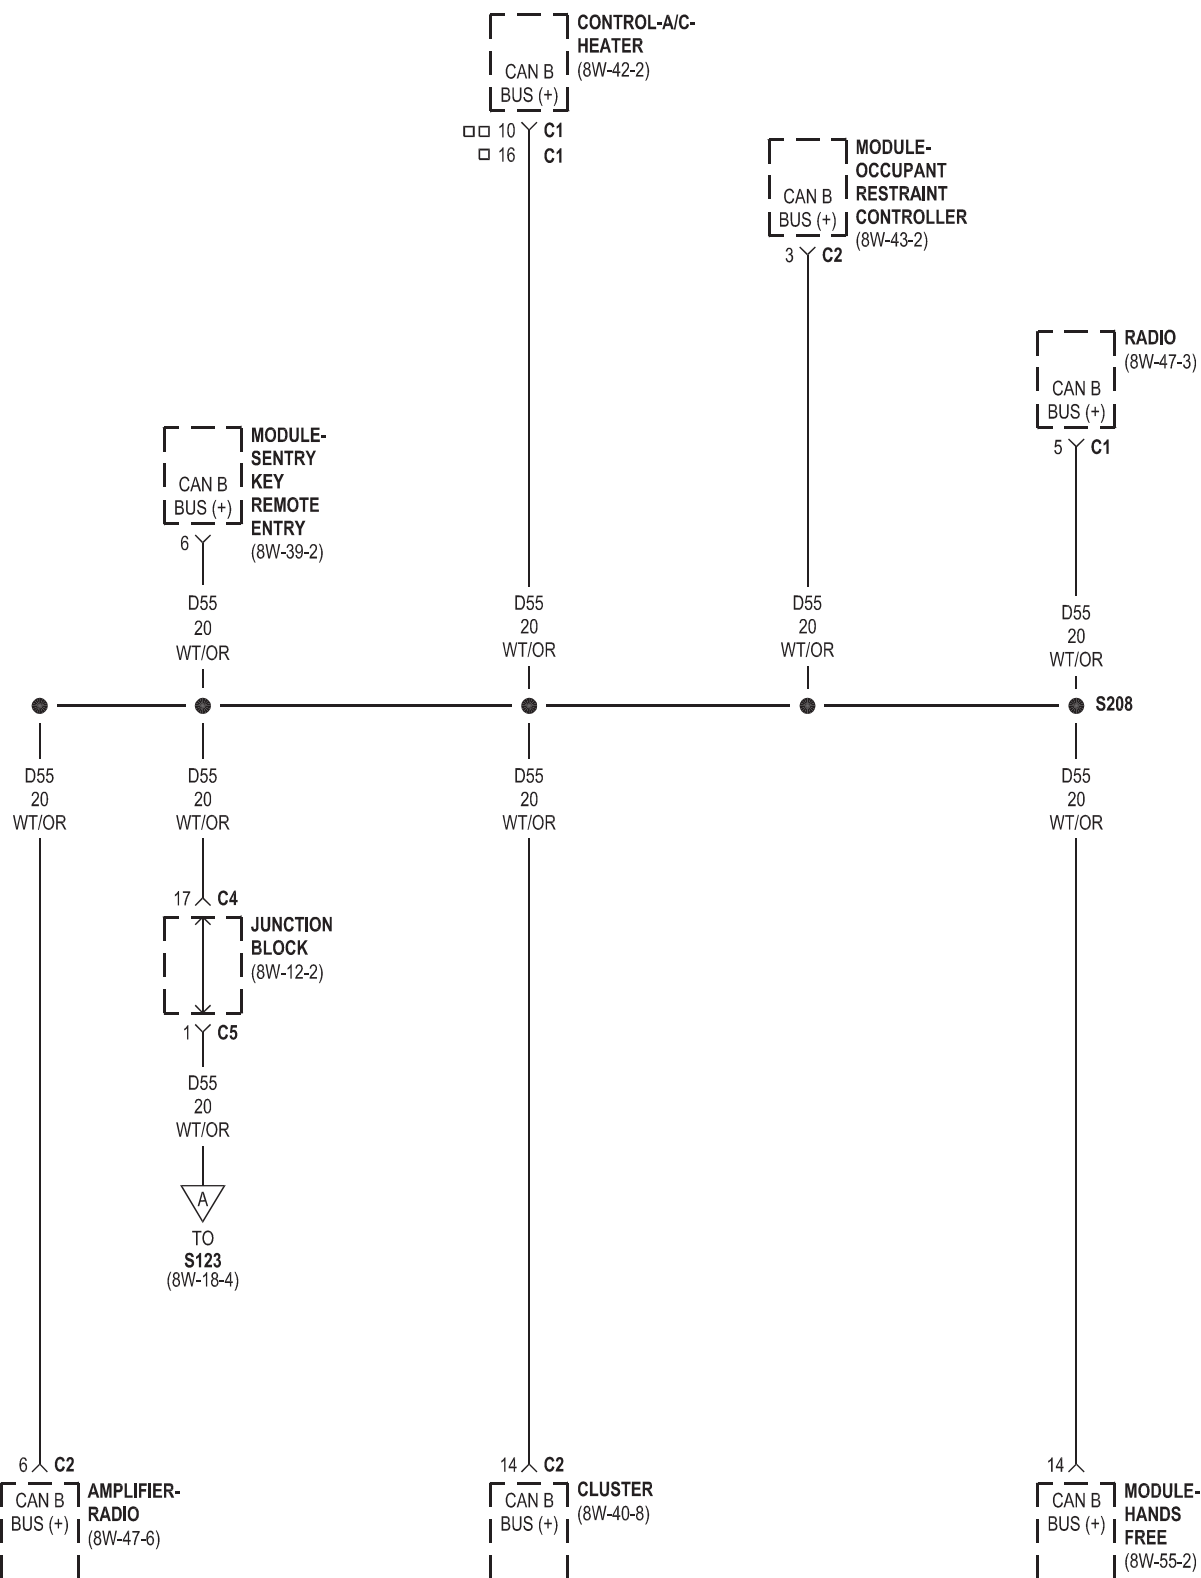

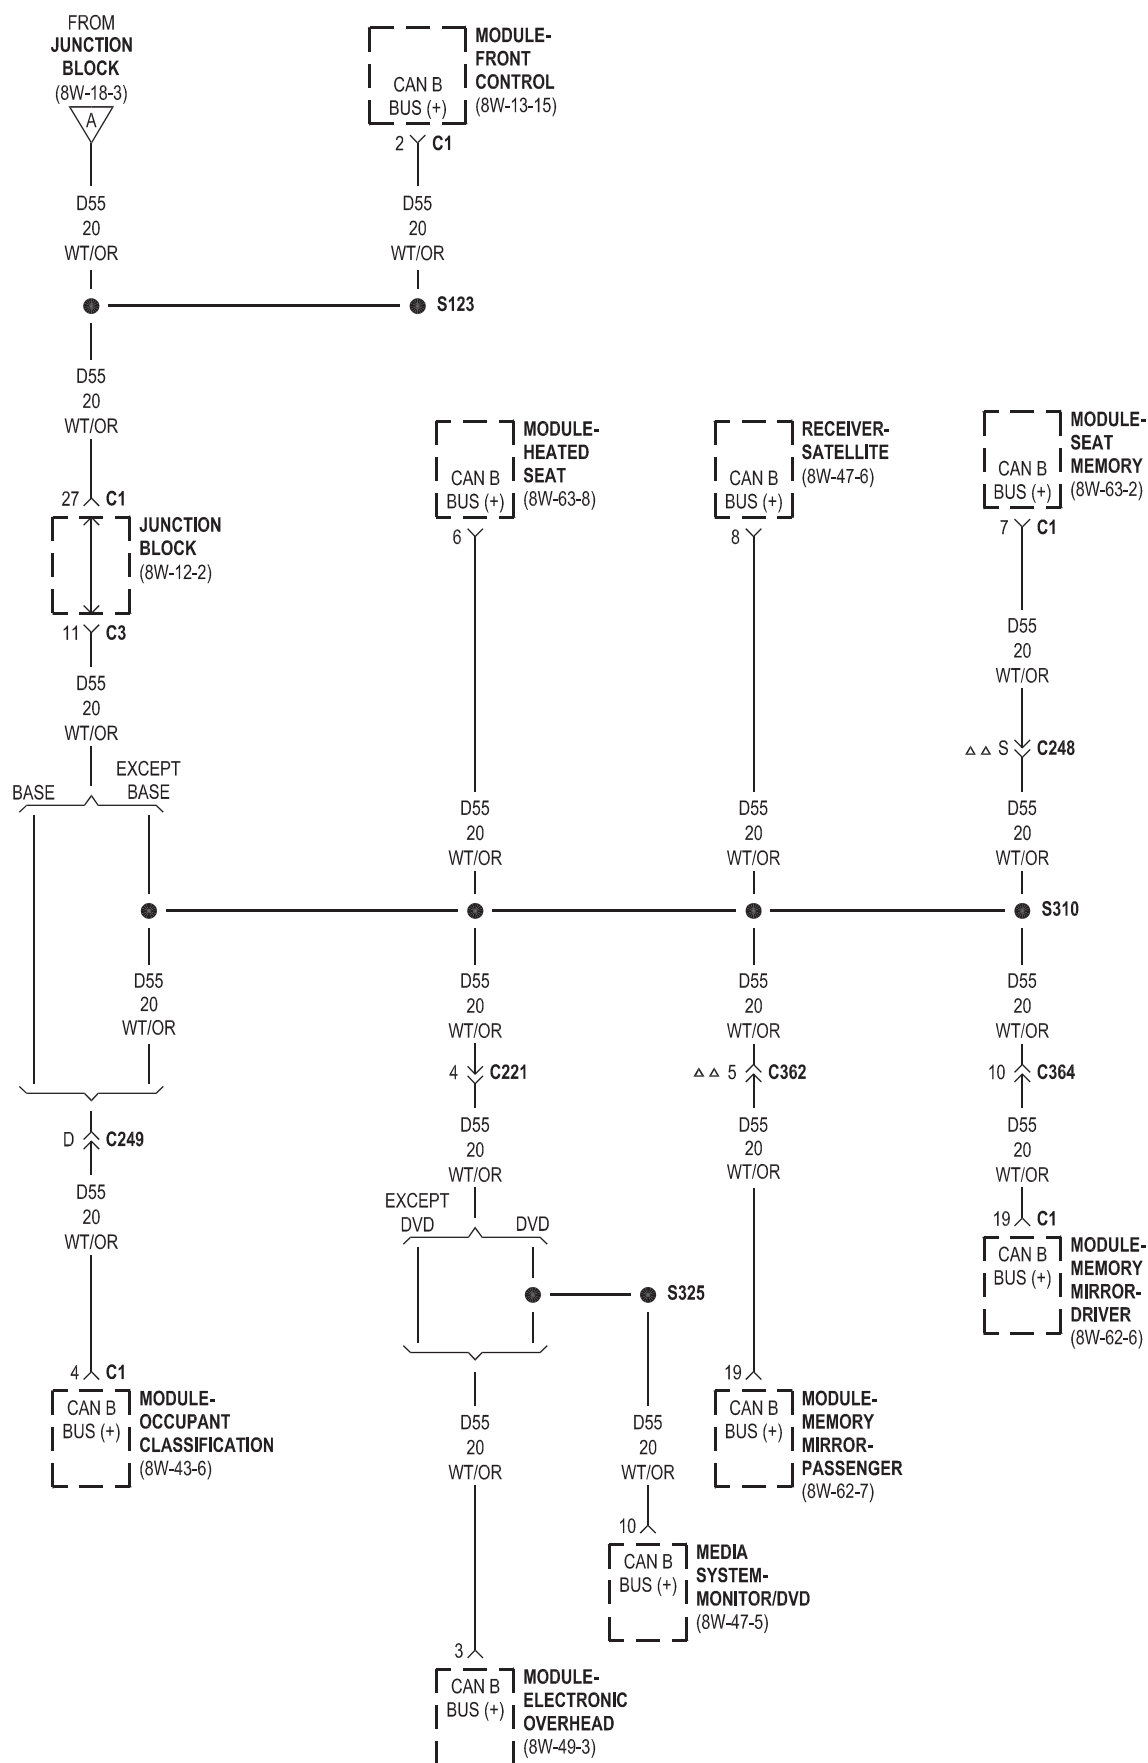

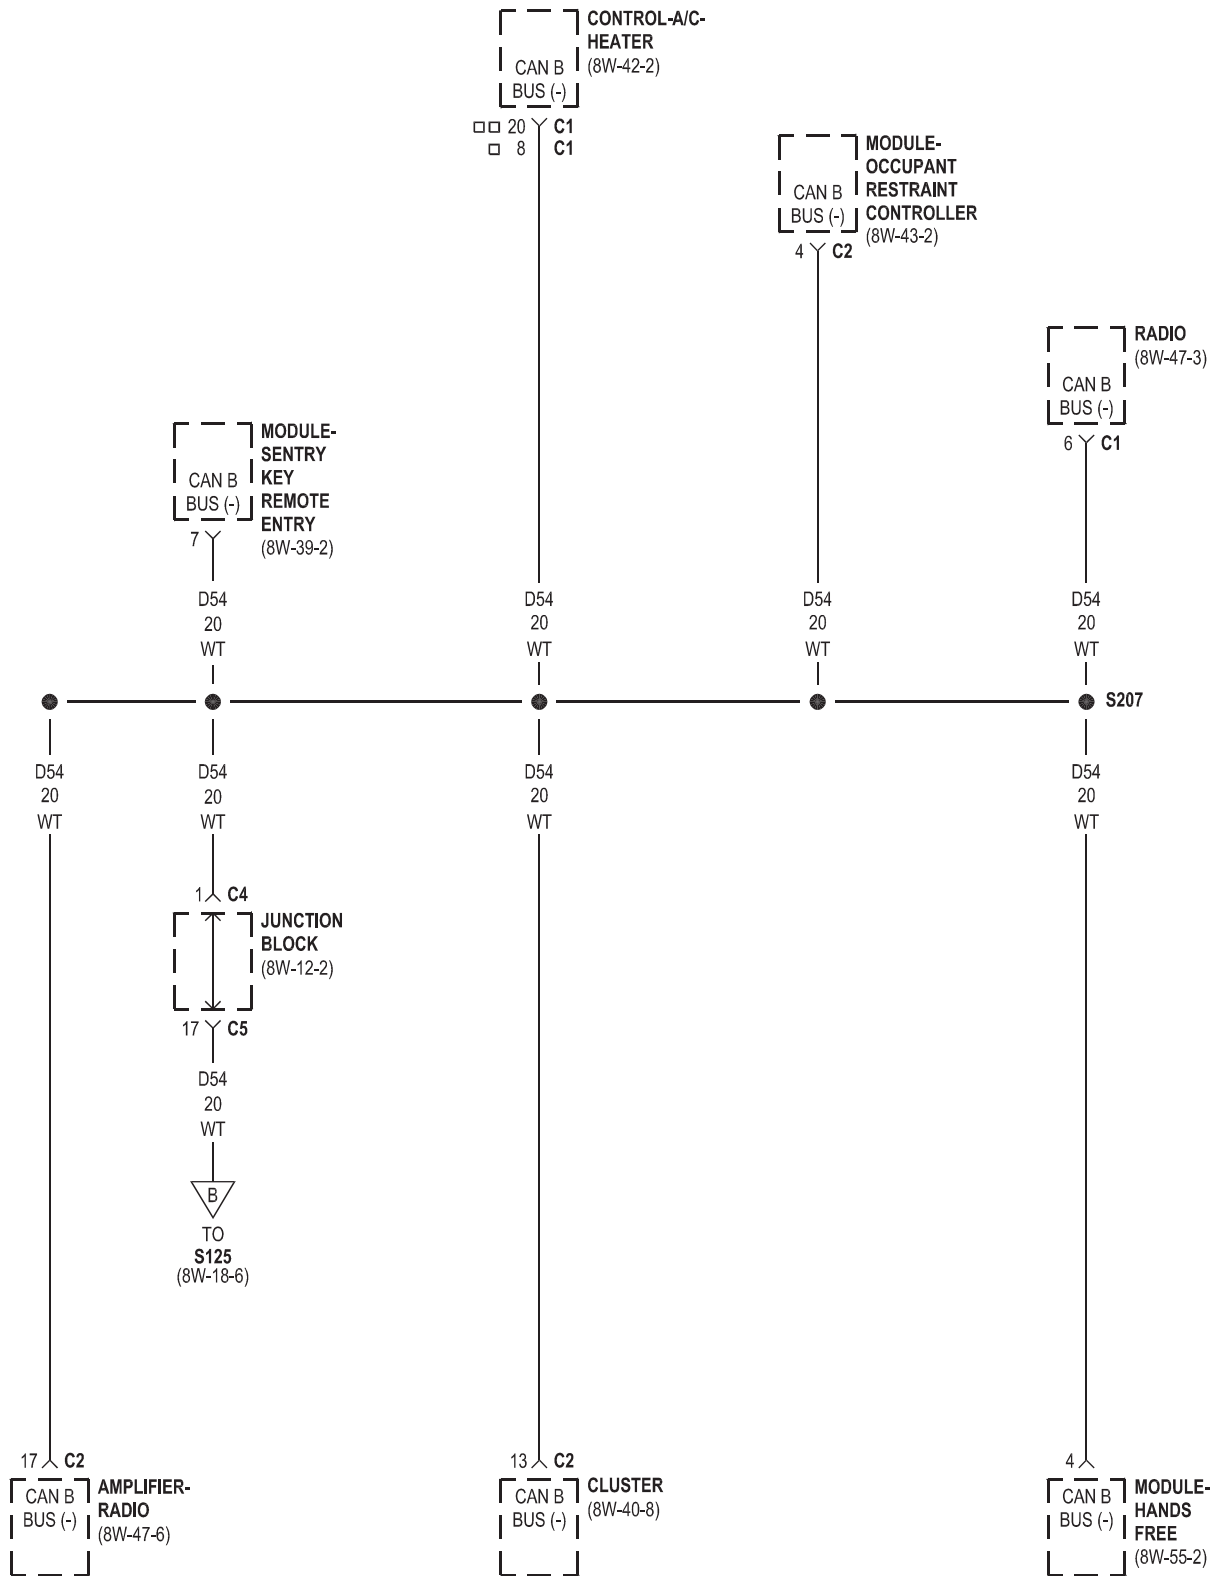

□ ATC
□ MTC

