

8W-44 INTERIOR LIGHTING

Component	Page
Cluster	8W-44-2, 3, 4, 5
Control-A/C-Heater	8W-44-5
Control-A/C-Heater-Rear	8W-44-5
Fuse 19	8W-44-6, 7
G207	8W-44-3, 4, 5
G208	8W-44-2
G304	8W-44-3, 4
G306	8W-44-3, 4, 6, 7
Junction Block	8W-44-6, 7
Lamp-Center Bezel	8W-44-5
Lamp-Dome-Front	8W-44-3
Lamp-Dome-Rear	8W-44-3, 4
Lamp-Liftgate	8W-44-3, 4

Component	Page
Lamp-Reading-Front	8W-44-4
Lamp-Vanity-Left	8W-44-3
Lamp-Vanity-Right	8W-44-3
Mirror-Inside Rearview	8W-44-6, 7
Mirror-Outside Rearview-Driver	8W-44-6, 7
Module-Front Control	8W-44-6, 7
Module-Integrated Power	8W-44-6, 7
Switch And Lamp-Glove Box	8W-44-3, 4
Switch-Headlamp	8W-44-2
Switch-Heated Seat-Driver	8W-44-2, 5
Switch-Heated Seat-Passenger	8W-44-2, 5
Switch-Transfer Case Selector	8W-44-5













