


8W-12 JUNCTION BLOCK

Component	Page
Amplifier-Radio	8W-12-8
Circuit Breaker	8W-12-6, 7
Clockspring	8W-12-21
Cluster	8W-12-8, 11, 13, 15
Control-A/C-Heater	8W-12-10, 14, 22
Control-A/C-Heater-Rear	8W-12-14
Data Link Connector	8W-12-10, 17
Fuse 1	8W-12-11
Fuse 2	8W-12-5
Fuse 3	8W-12-6
Fuse 4	8W-12-15
Fuse 5	8W-12-19
Fuse 6	8W-12-11
Fuse 7	8W-12-8
Fuse 8	8W-12-6, 8, 16
Fuse 9	8W-12-8
Fuse 10	8W-12-8, 16
Fuse 11	8W-12-9
Fuse 12	8W-12-5, 9
Fuse 13	8W-12-10, 20
Fuse 14	8W-12-10, 16
Fuse 15	8W-12-8
Fuse 16	8W-12-12
Fuse 17	8W-12-16
Fuse 18	8W-12-12
Fuse 19	8W-12-13
Fuse 24	8W-12-14
Fuse 25	8W-12-14, 20
Fuse 26	8W-12-14
Fuse 27	8W-12-9, 11
Fuse 28	8W-12-10
Fuse 33	8W-12-8
Fuse 34	8W-12-15
Fuse 35	8W-12-15
G114	8W-12-14
Glass-Liftgate-Heated	8W-12-5
Junction Block	8W-12-2, 5, 6, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23
Lamp-High Mounted Stop	8W-12-18
Lamp-License Plate	8W-12-16
Lamp-Passenger Airbag On/Off Indicator	8W-12-12
Lamp-Tail/Stop/Turn-Left	8W-12-16, 18, 22
Lamp-Tail/Stop/Turn-Right	8W-12-16, 18, 22
Media System-Monitor/Dvd	8W-12-9
Mirror-Inside Rearview	8W-12-13, 22
Mirror-Outside Rearview-Driver	8W-12-5
Mirror-Outside Rearview-Passenger	8W-12-5
Module-Antilock Brakes	8W-12-14
Module-Brake Provision	8W-12-18
Module-Electronic Overhead	8W-12-10
Module-Front Control	8W-12-6, 12, 14, 15, 16, 17, 18, 22

Component	Page
Module-Hands Free	8W-12-10
Module-Heated Seat	8W-12-19
Module-Integrated Power	8W-12-6, 9, 10, 12, 14, 15, 16, 22
Module-Memory Mirror-Driver	8W-12-8
Module-Memory Mirror-Passenger	8W-12-8
Module-Occupant Classification	8W-12-8, 12, 17, 18
Module-Occupant Restraint Controller	8W-12-12, 14, 17, 18
Module-Power-Blower Motor-Front	8W-12-12
Module-Powertrain Control	8W-12-12, 15, 17, 20, 21, 23
Module-Seat Memory	8W-12-19
Module-Sentry Key Remote Entry	8W-12-10, 12
Motor-Blower-Rear	8W-12-20
Motor-Rear Window Wiper	8W-12-16
Motor-Sunroof	8W-12-7, 15
Power Distribution Center	8W-12-5, 6, 8, 11, 15, 19, 20
Power Outlet-Console	8W-12-15
Power Outlet-Instrument Panel	8W-12-6
Power Outlet-Rear	8W-12-15
Pump-Auxiliary Coolant	8W-12-22
Radio	8W-12-9
Receiver-Satellite	8W-12-9
Relay-A/C Clutch	8W-12-12
Relay-Accessory Delay	8W-12-6
Relay-Adjustable Pedals	8W-12-16
Relay-Blower Motor-Front	8W-12-12
Relay-Blower Motor-Rear	8W-12-14, 20
Relay-Fuel Pump	8W-12-12
Relay-Park Lamp	8W-12-16
Relay-Rear Window Defogger	8W-12-5, 14
Relay-Wiper-Rear	8W-12-16
Sensor-Accelerator Pedal Position	8W-12-23
Sensor-Infrared	8W-12-13
Servo-Speed Control	8W-12-20
Switch-Adjustable Pedals	8W-12-16
Switch-Heated Seat-Driver	8W-12-13
Switch-Heated Seat-Passenger	8W-12-13
Switch-Ignition	8W-12-11, 15
Switch-Mirror	8W-12-7, 8
Switch-Seat-Driver	8W-12-19
Switch-Seat-Passenger	8W-12-19
Switch-Speed Control-Left	8W-12-21
Switch-Speed Control-Right	8W-12-21
Switch-Stop Lamp	8W-12-18, 20
Switch-Tow/Haul Overdrive	8W-12-23
Switch-Transfer Case Selector	8W-12-13
Switch-Window/Door Lock-Driver	8W-12-7
Switch-Window/Door Lock-Passenger	8W-12-7

JUNCTION BLOCK

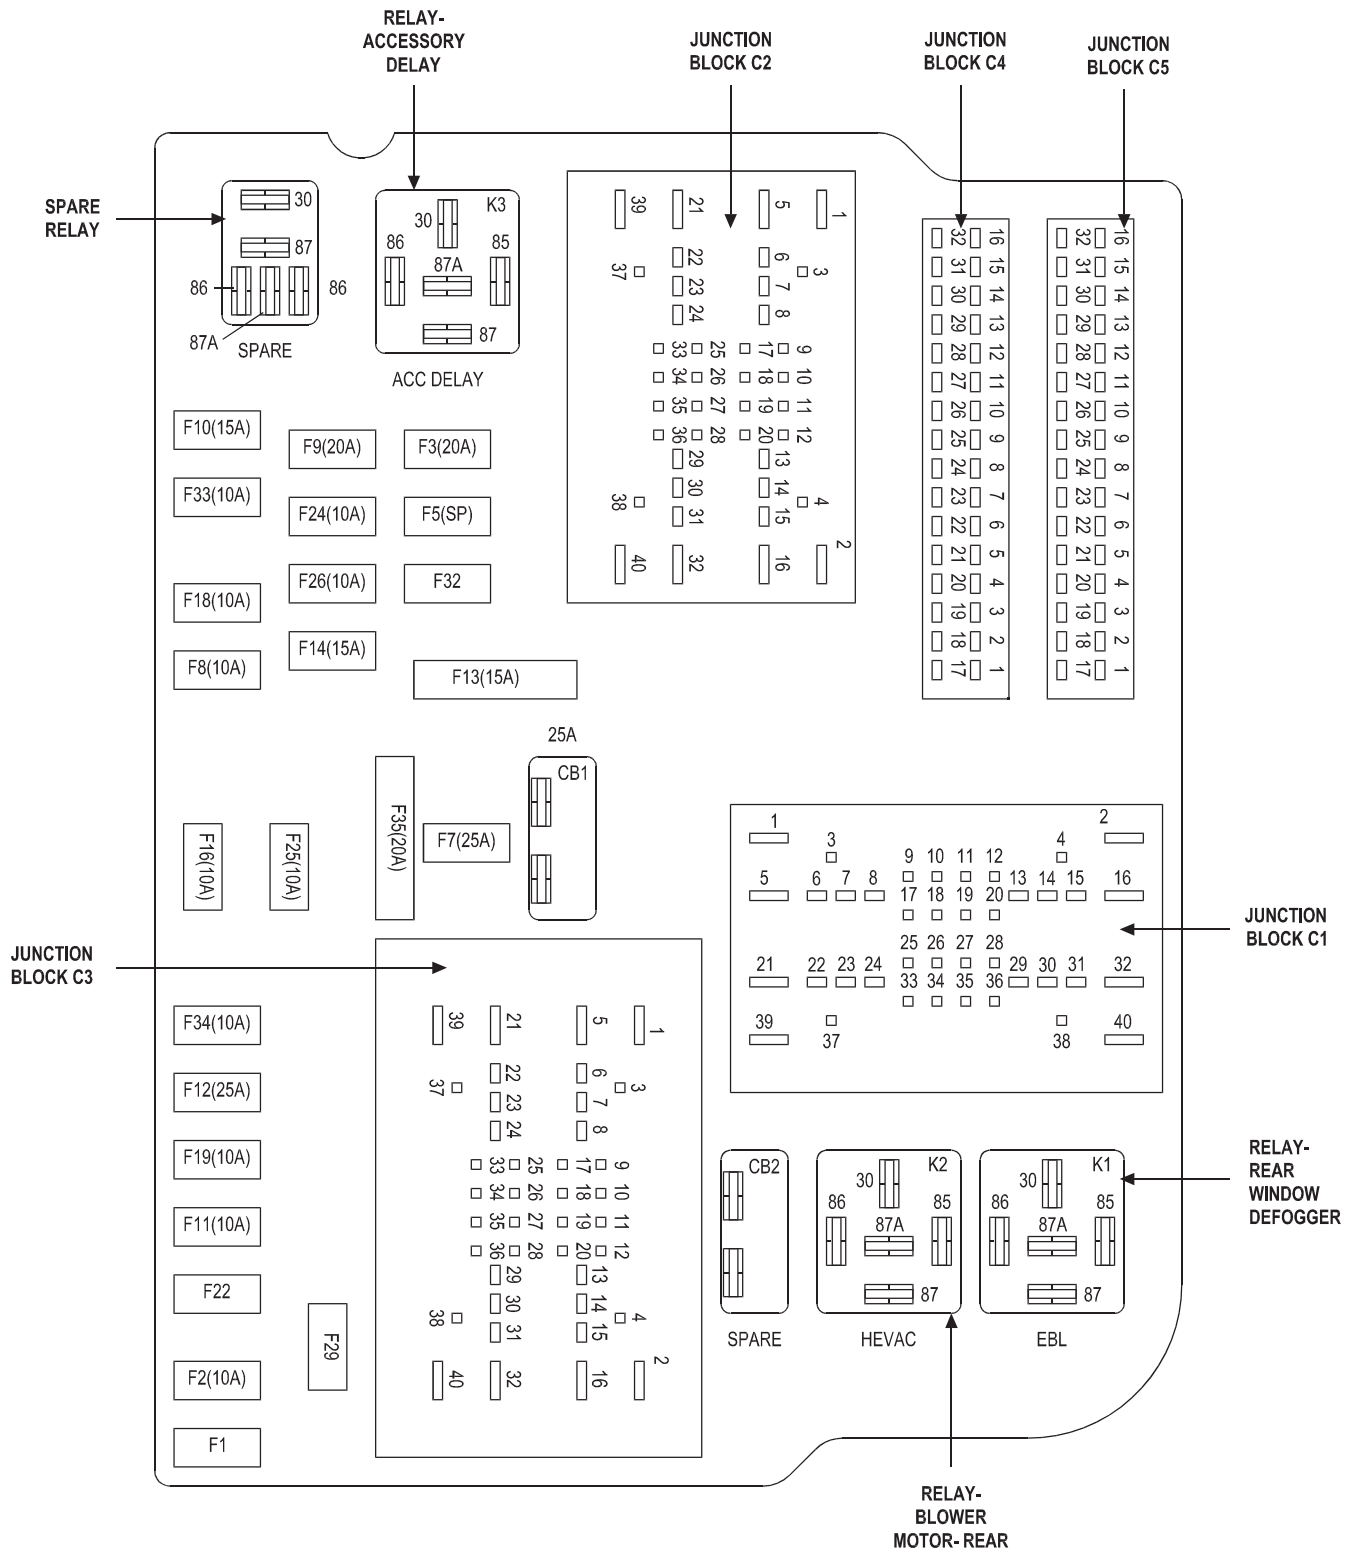

FUSES

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	-	-	-
2	10A	C16 20DB/GY	FUSED REAR WINDOW DEFOGGER RELAY OUTPUT
3	20A	F306 18DB/PK	FUSED ACCESSORY RELAY OUTPUT
4	-	-	-
5	-	-	-
6	-	-	-
7	25A	A116 16YL/RD	FUSED B(+)
8	10A	A215 20RD/LG	FUSED B(+)
9	20A	A924 16RD/LG	FUSED B(+)
10	15A	A117 18RD/DG	FUSED B(+)
11	10A	A300 20GY/LG	FUSED B(+)
12	25A	A114 16GY/RD	FUSED B(+)
13	15A	A925 18RD/BK	FUSED B(+)
14	15A	A926 18RD	FUSED B(+)
15	-	-	-
16	10A	F201 20PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
17	-	-	-
18	10A	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
19	10A	F21 20PK/DG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
20	-	-	-
21	-	-	-
22	-	-	-
23	-	-	-
24	10A	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
25	10A	F100 20PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
26	10A	F500 20DG/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
27	-	-	-
28	-	-	-
29	-	-	-
30	-	-	-
31	-	-	-
32	-	-	-
33	10A	A956 20RD/BL	FUSED B(+)
34	10A	F1 20PK/DG	FUSED IGNITION SWITCH OUTPUT (OFF-RUN-START)
35	20A	F307 18LB/PK	FUSED ACCESSORY RELAY OUTPUT

CIRCUIT BREAKER

C.B.	AMPS	FUSED CIRCUIT	FUNCTION
1	25A	F30 14PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)

RELAYS

RELAY-
ACCESSORY
DELAY


CAVITY	CIRCUIT	FUNCTION
30	A901 12RD/PK	FUSED B(+)
85	P305 20LG/LB	ACCESSORY DELAY RELAY CONTROL
86	A901 12RD/PK	FUSED B(+)
87	INTERNAL	ACCESSORY DELAY RELAY OUTPUT
87A	-	-


RELAY-
BLOWER
MOTOR-
REAR


CAVITY	CIRCUIT	FUNCTION
30	A222 14RD/LB	FUSED B(+)
85	Z911 20BK	GROUND
86	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
87	C51 14BR/RD	FUSED REAR BLOWER MOTOR RELAY OUTPUT
87A	-	-


RELAY-
REAR
WINDOW
DEFOGGER


CAVITY	CIRCUIT	FUNCTION
30	A915 12OR/BR	FUSED B(+)
85	C115 20DB	DEFOGGER RELAY CONTROL
86	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
87	C15 12DB/WT	REAR WINDOW DEFOGGER RELAY OUTPUT
87A	-	-

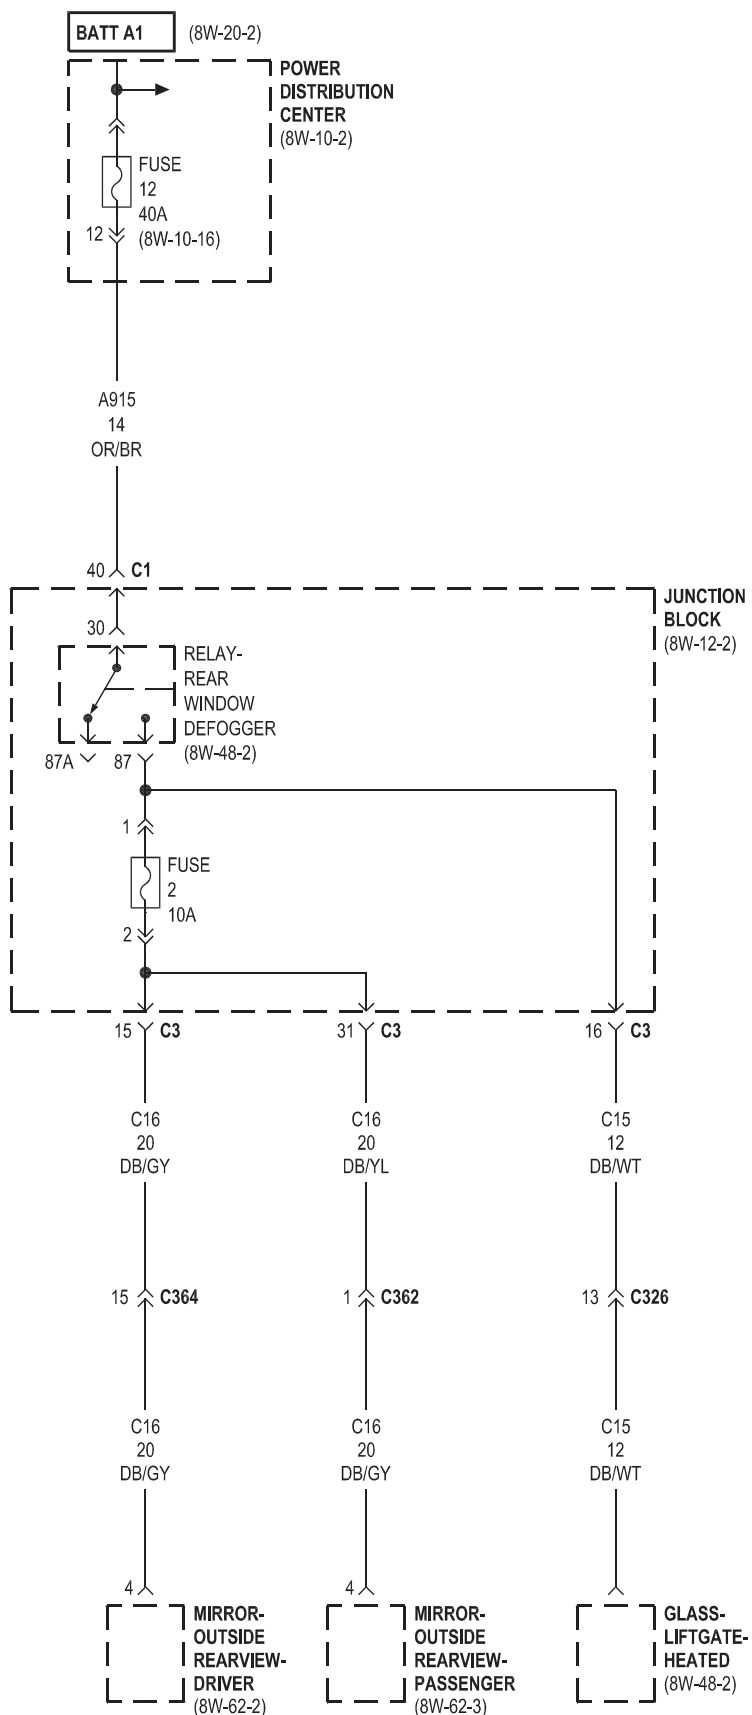


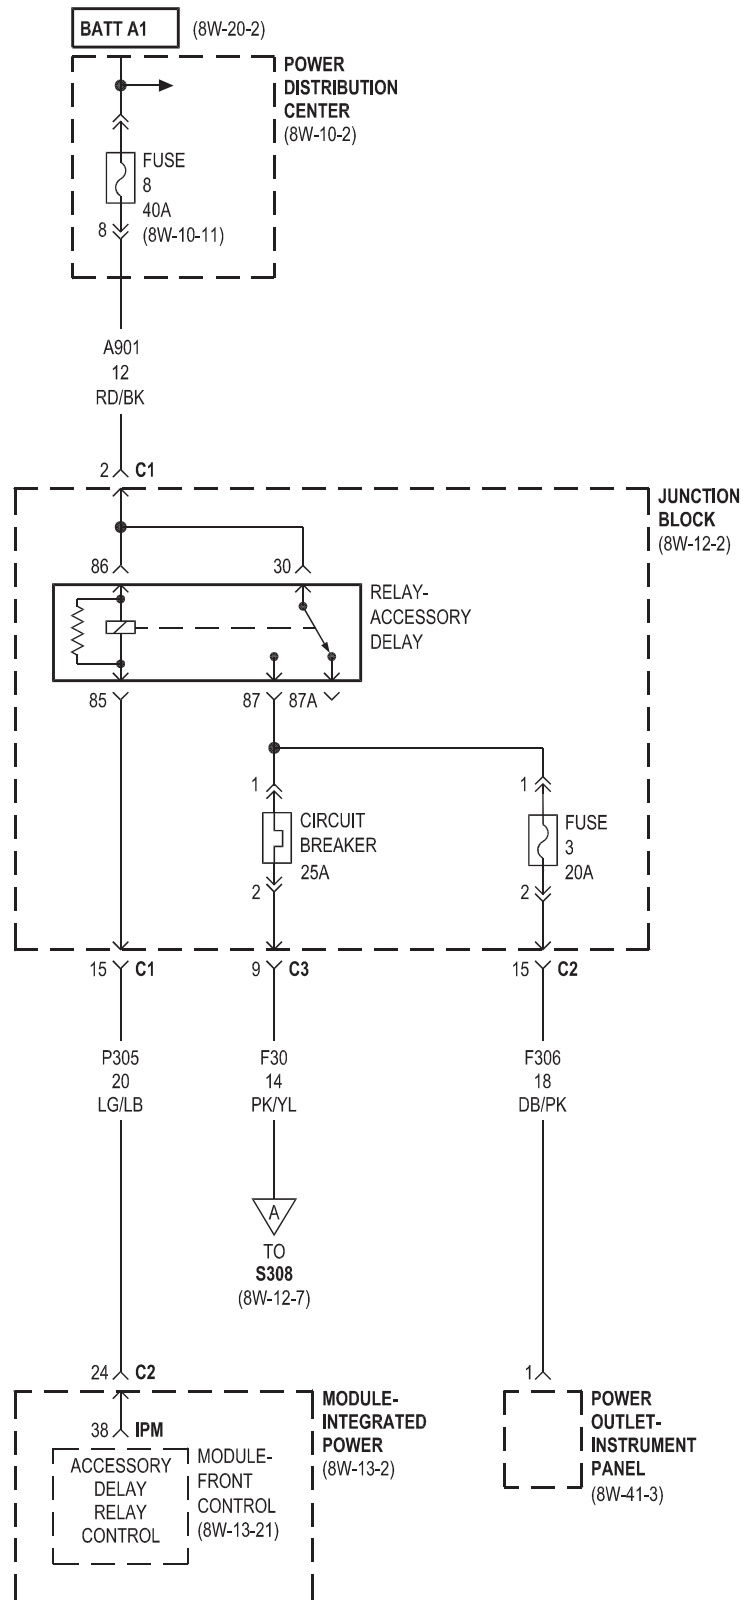


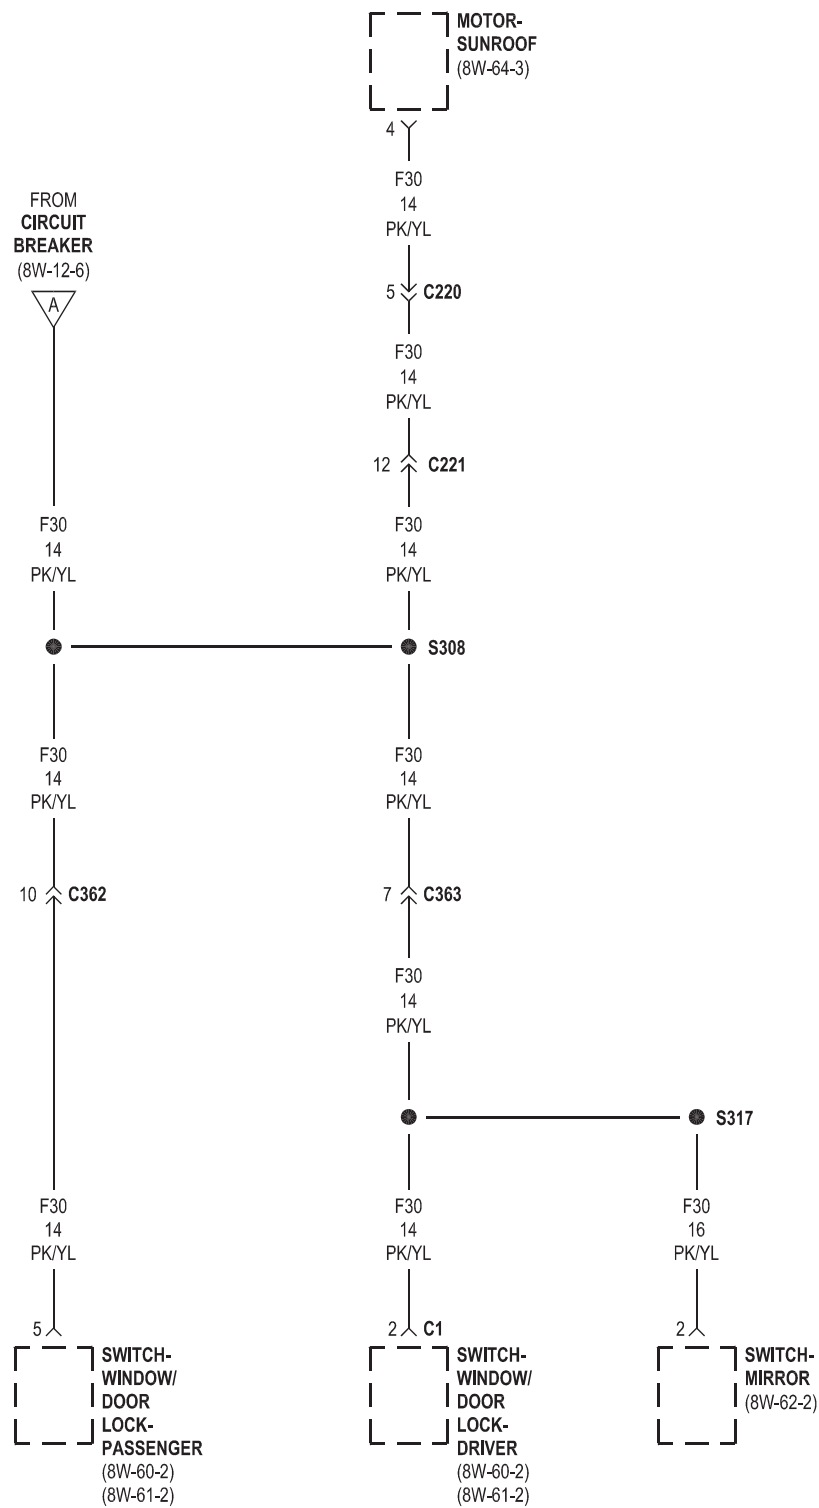


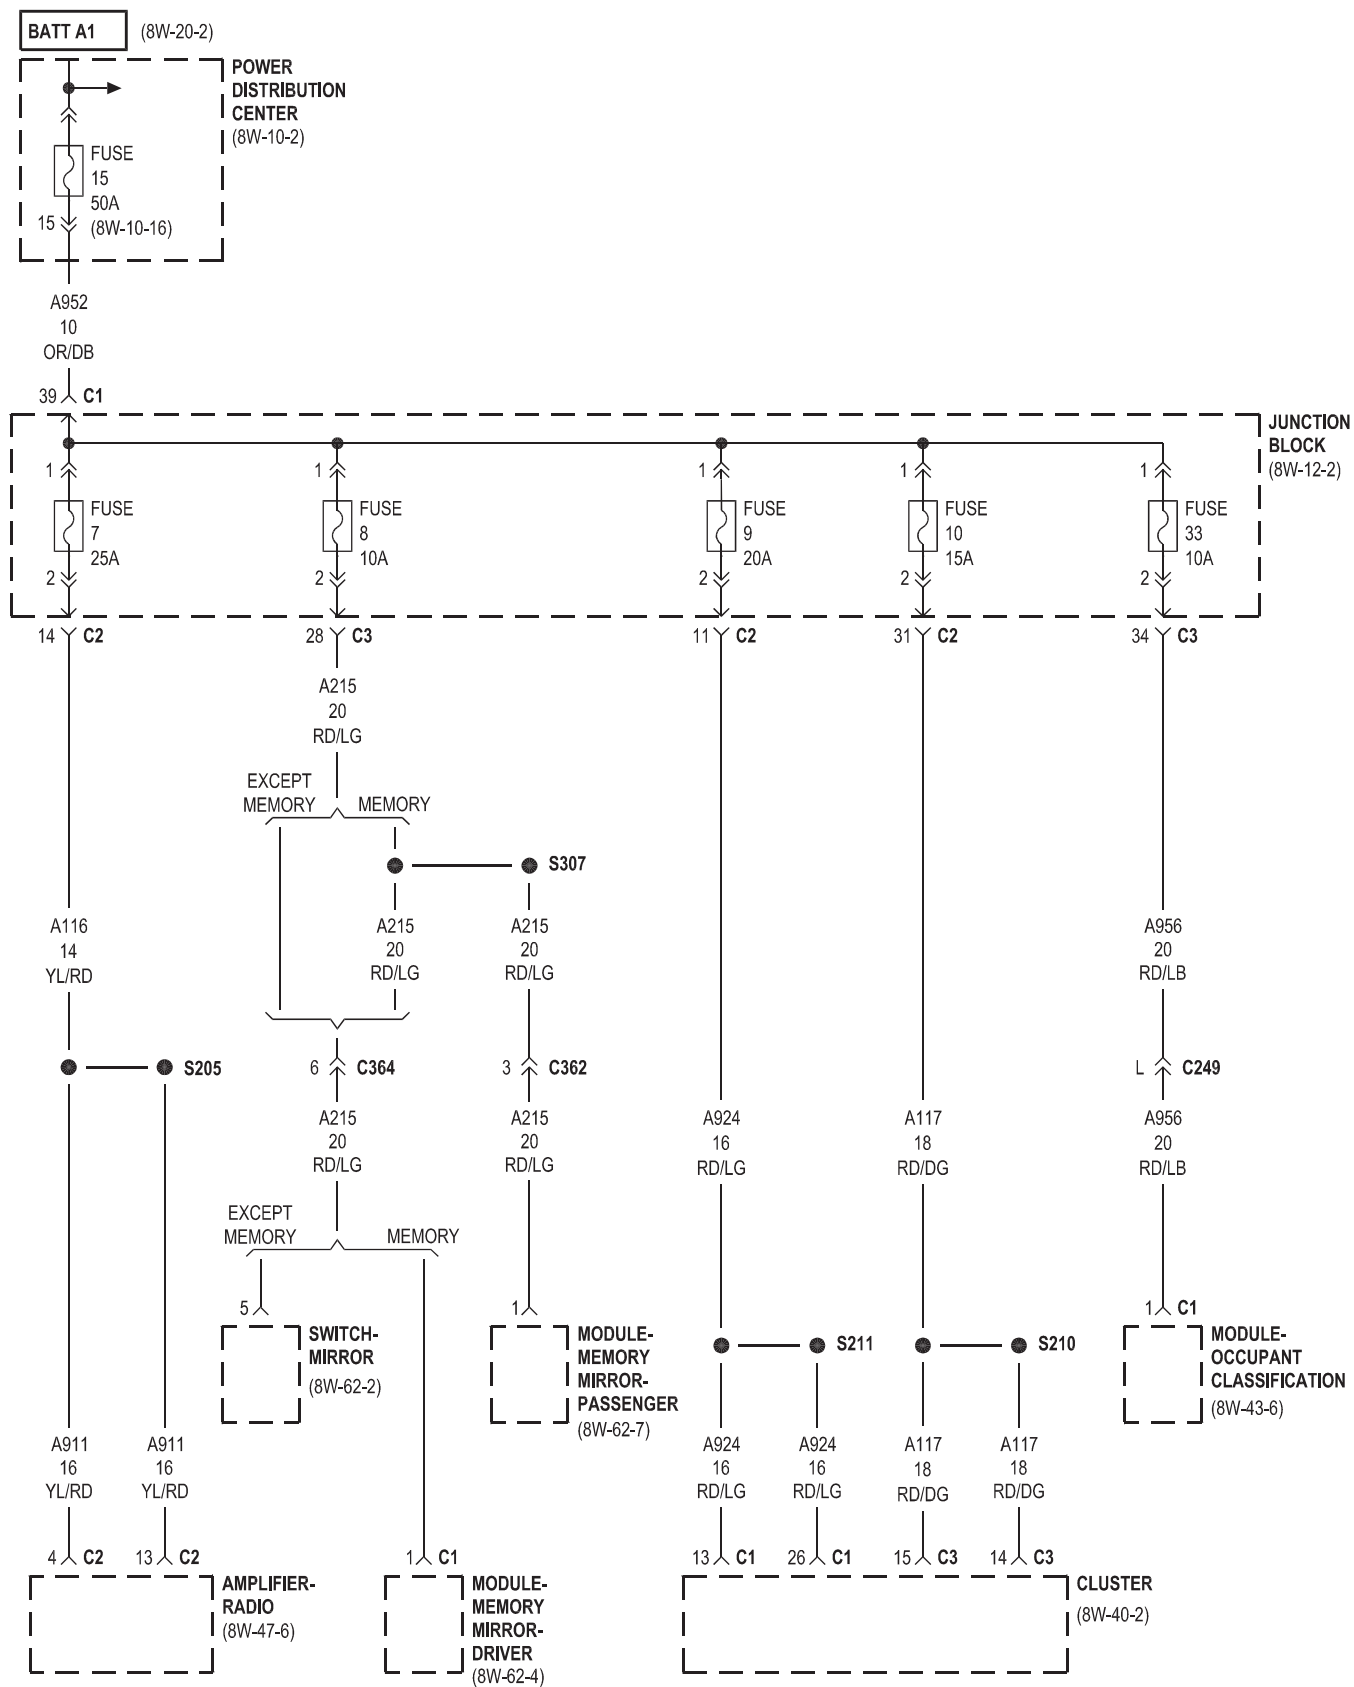


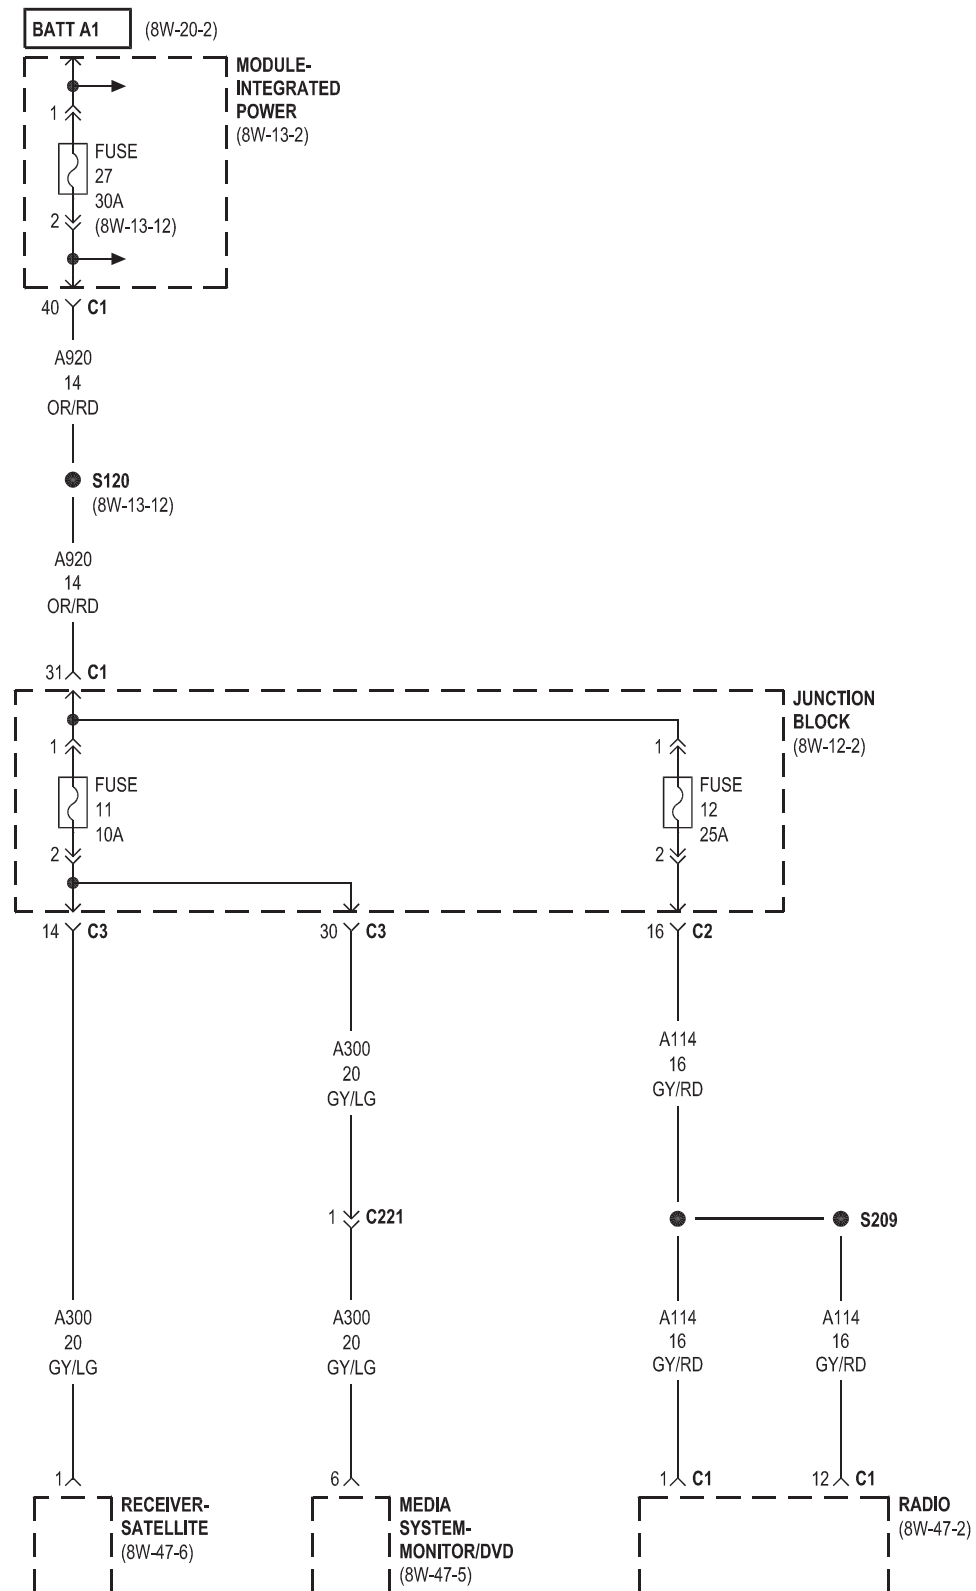


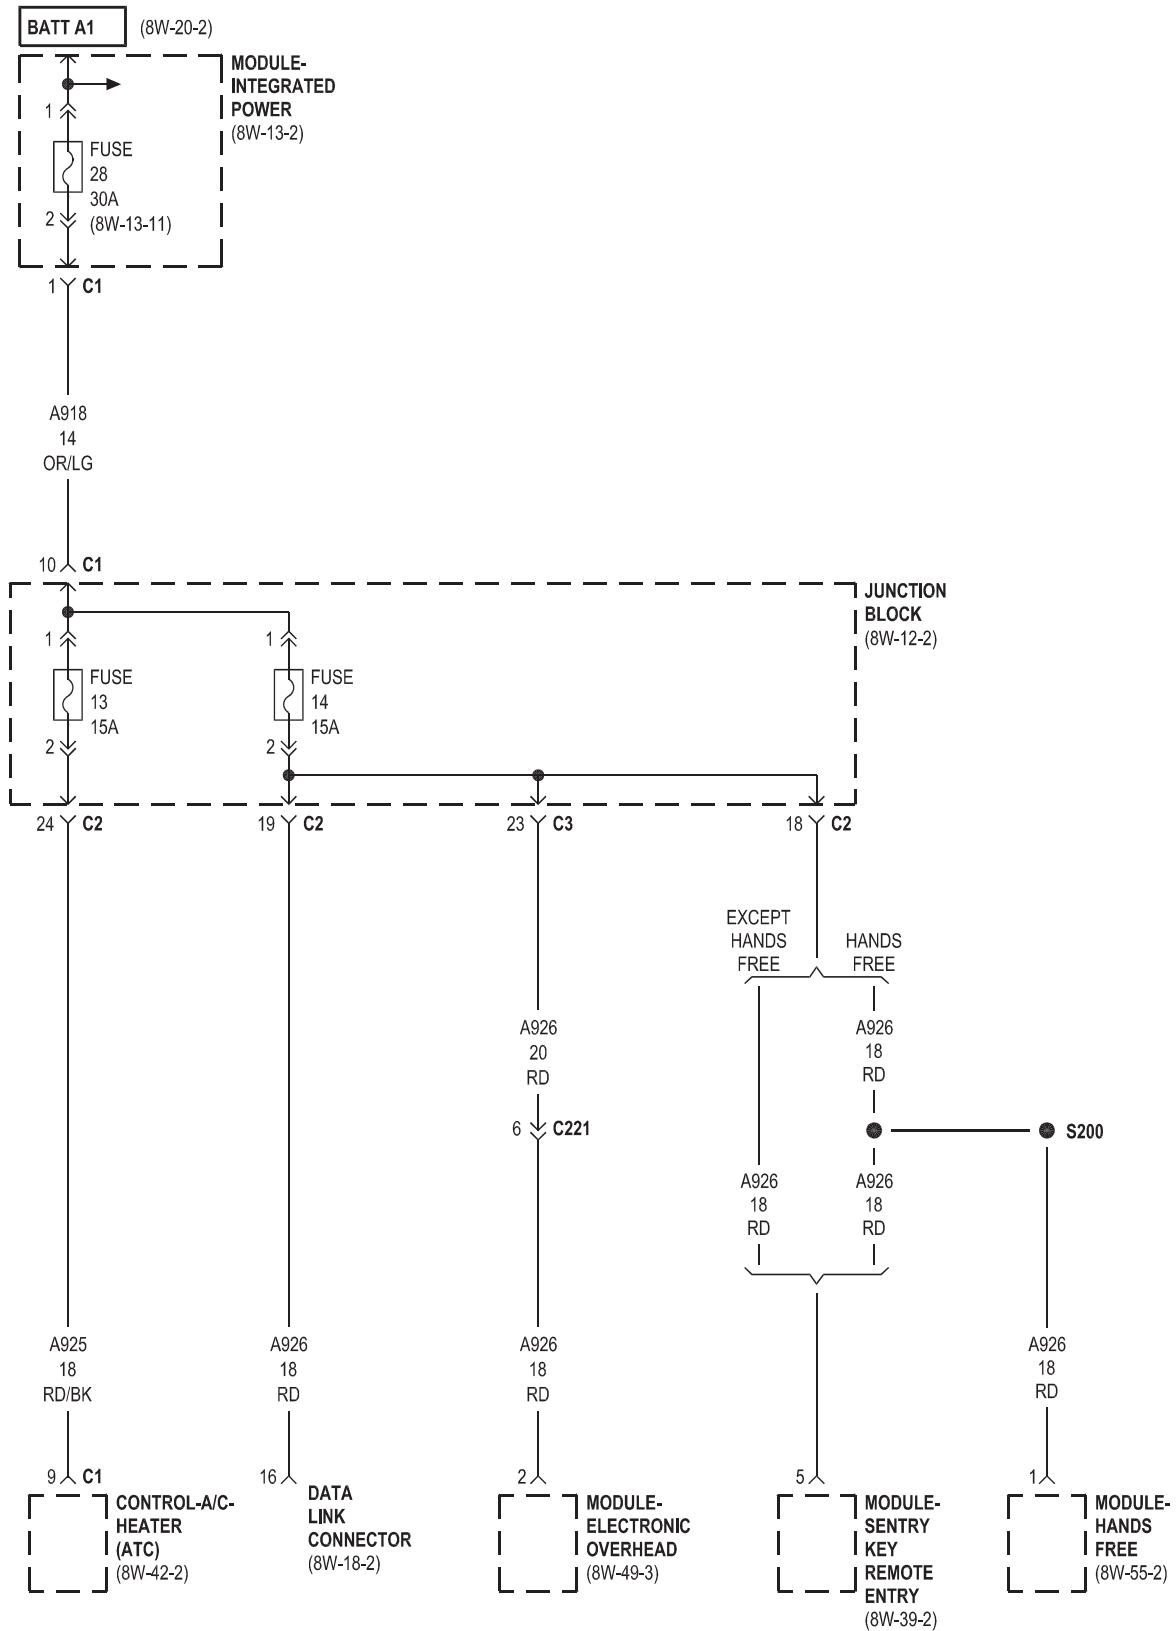


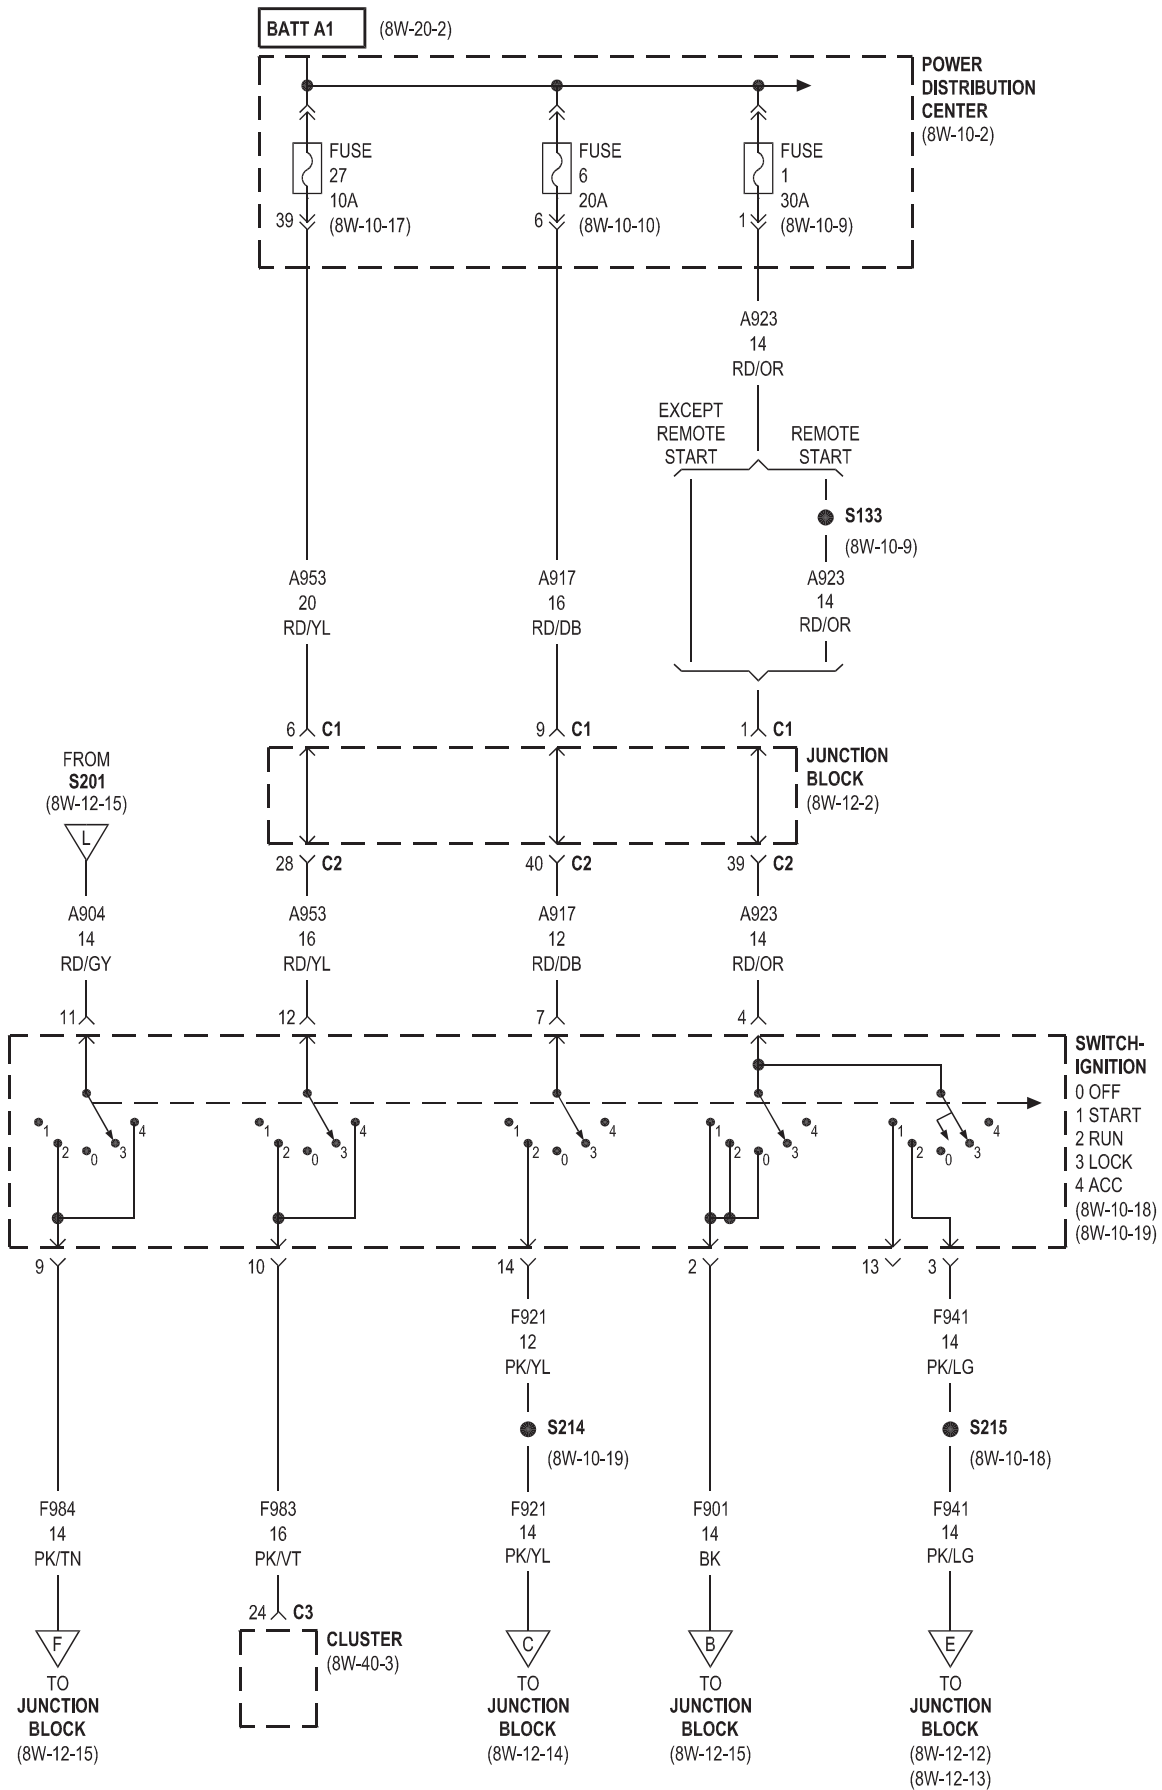


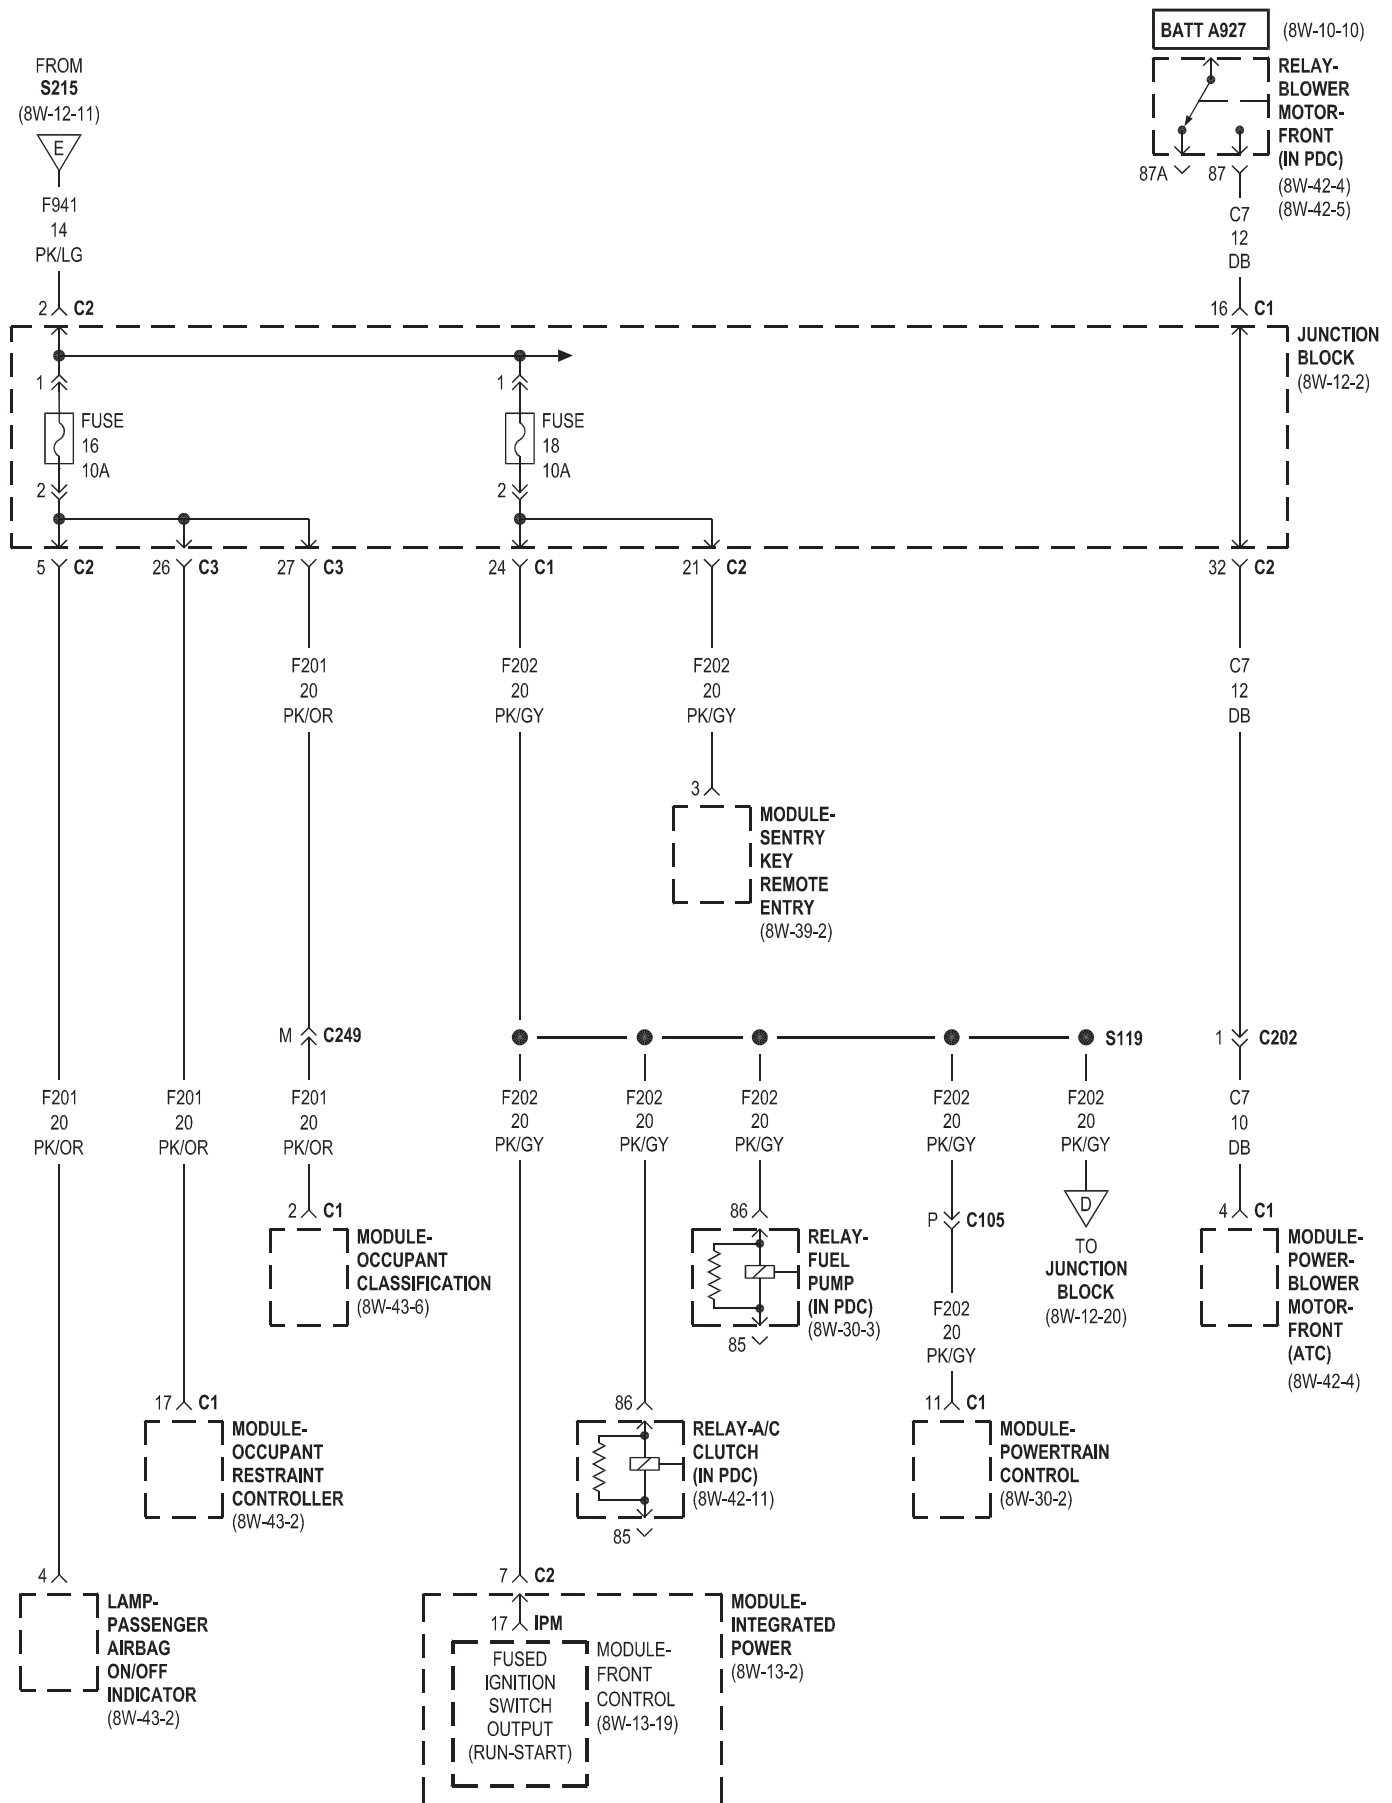


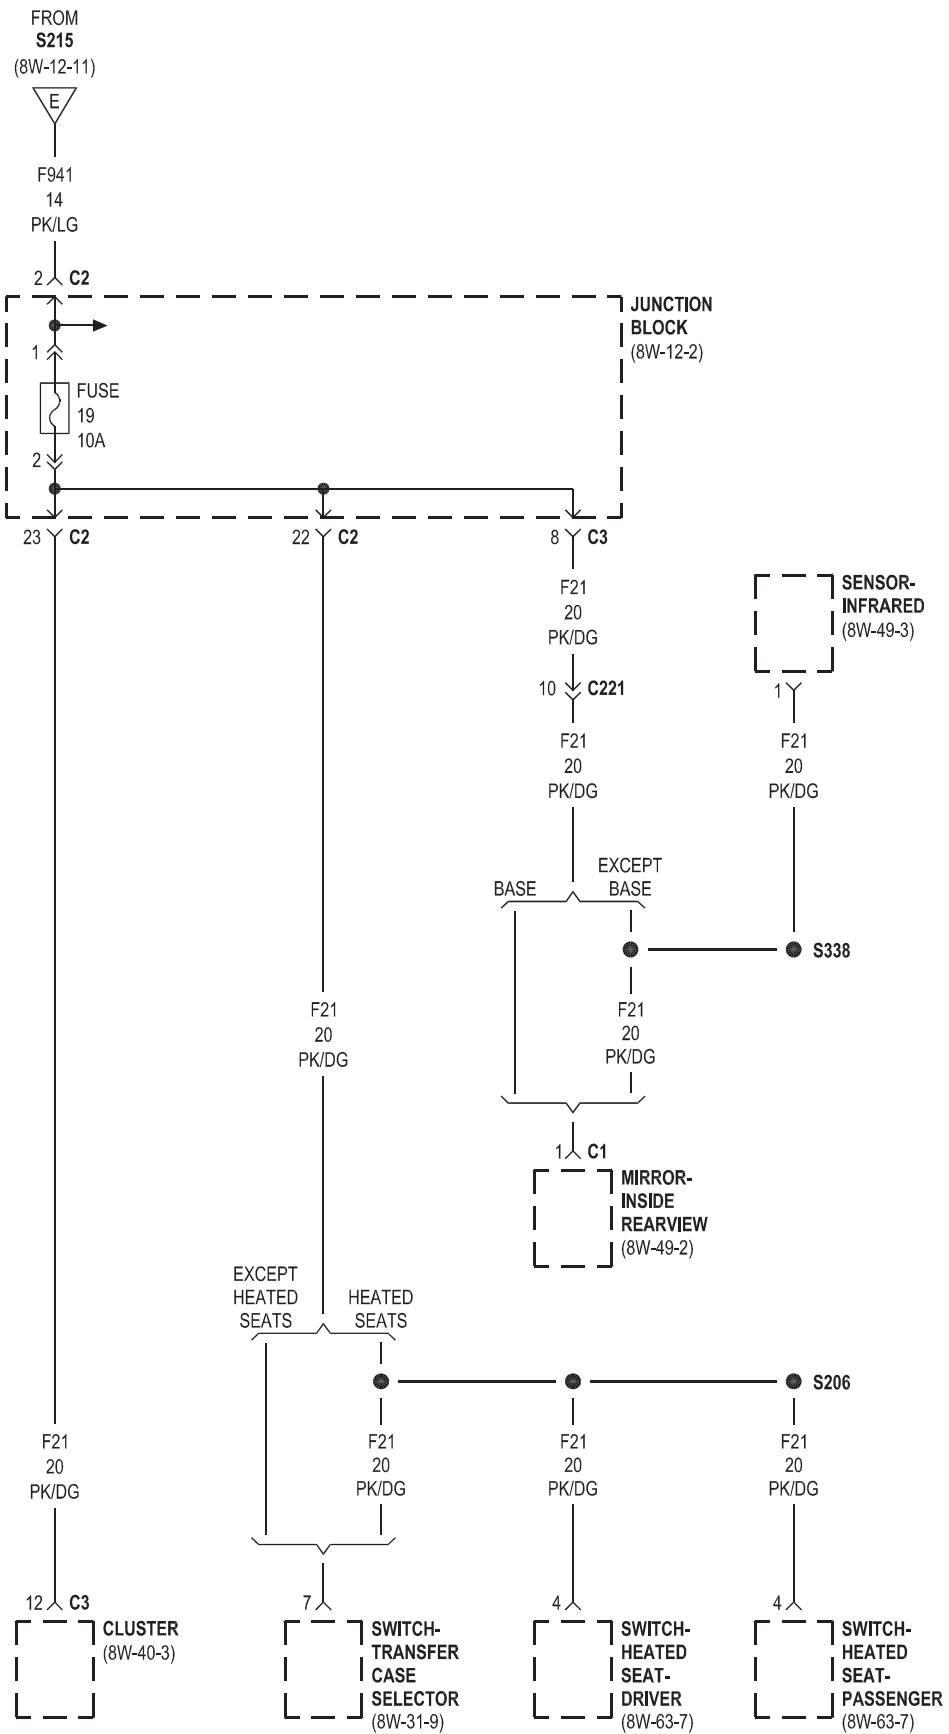


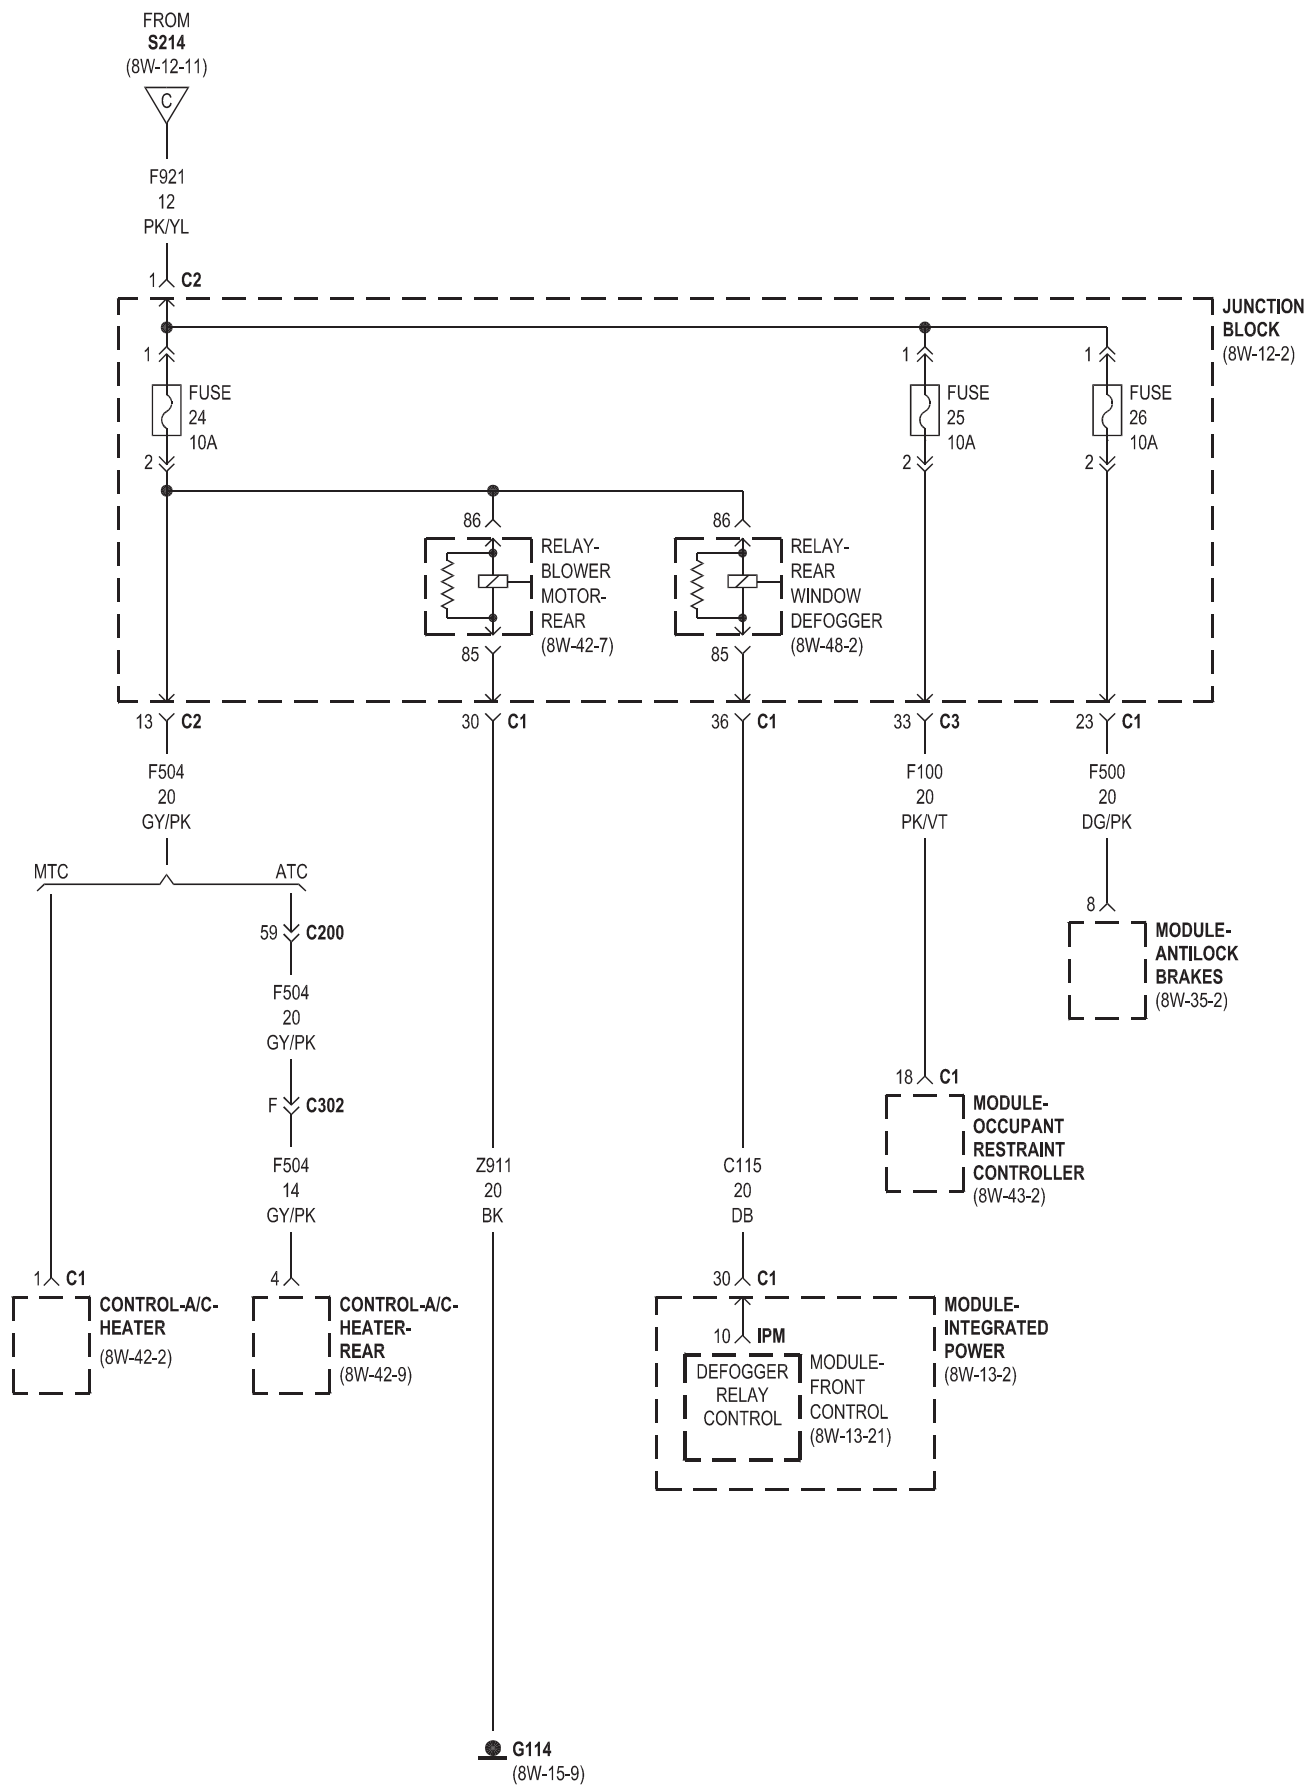


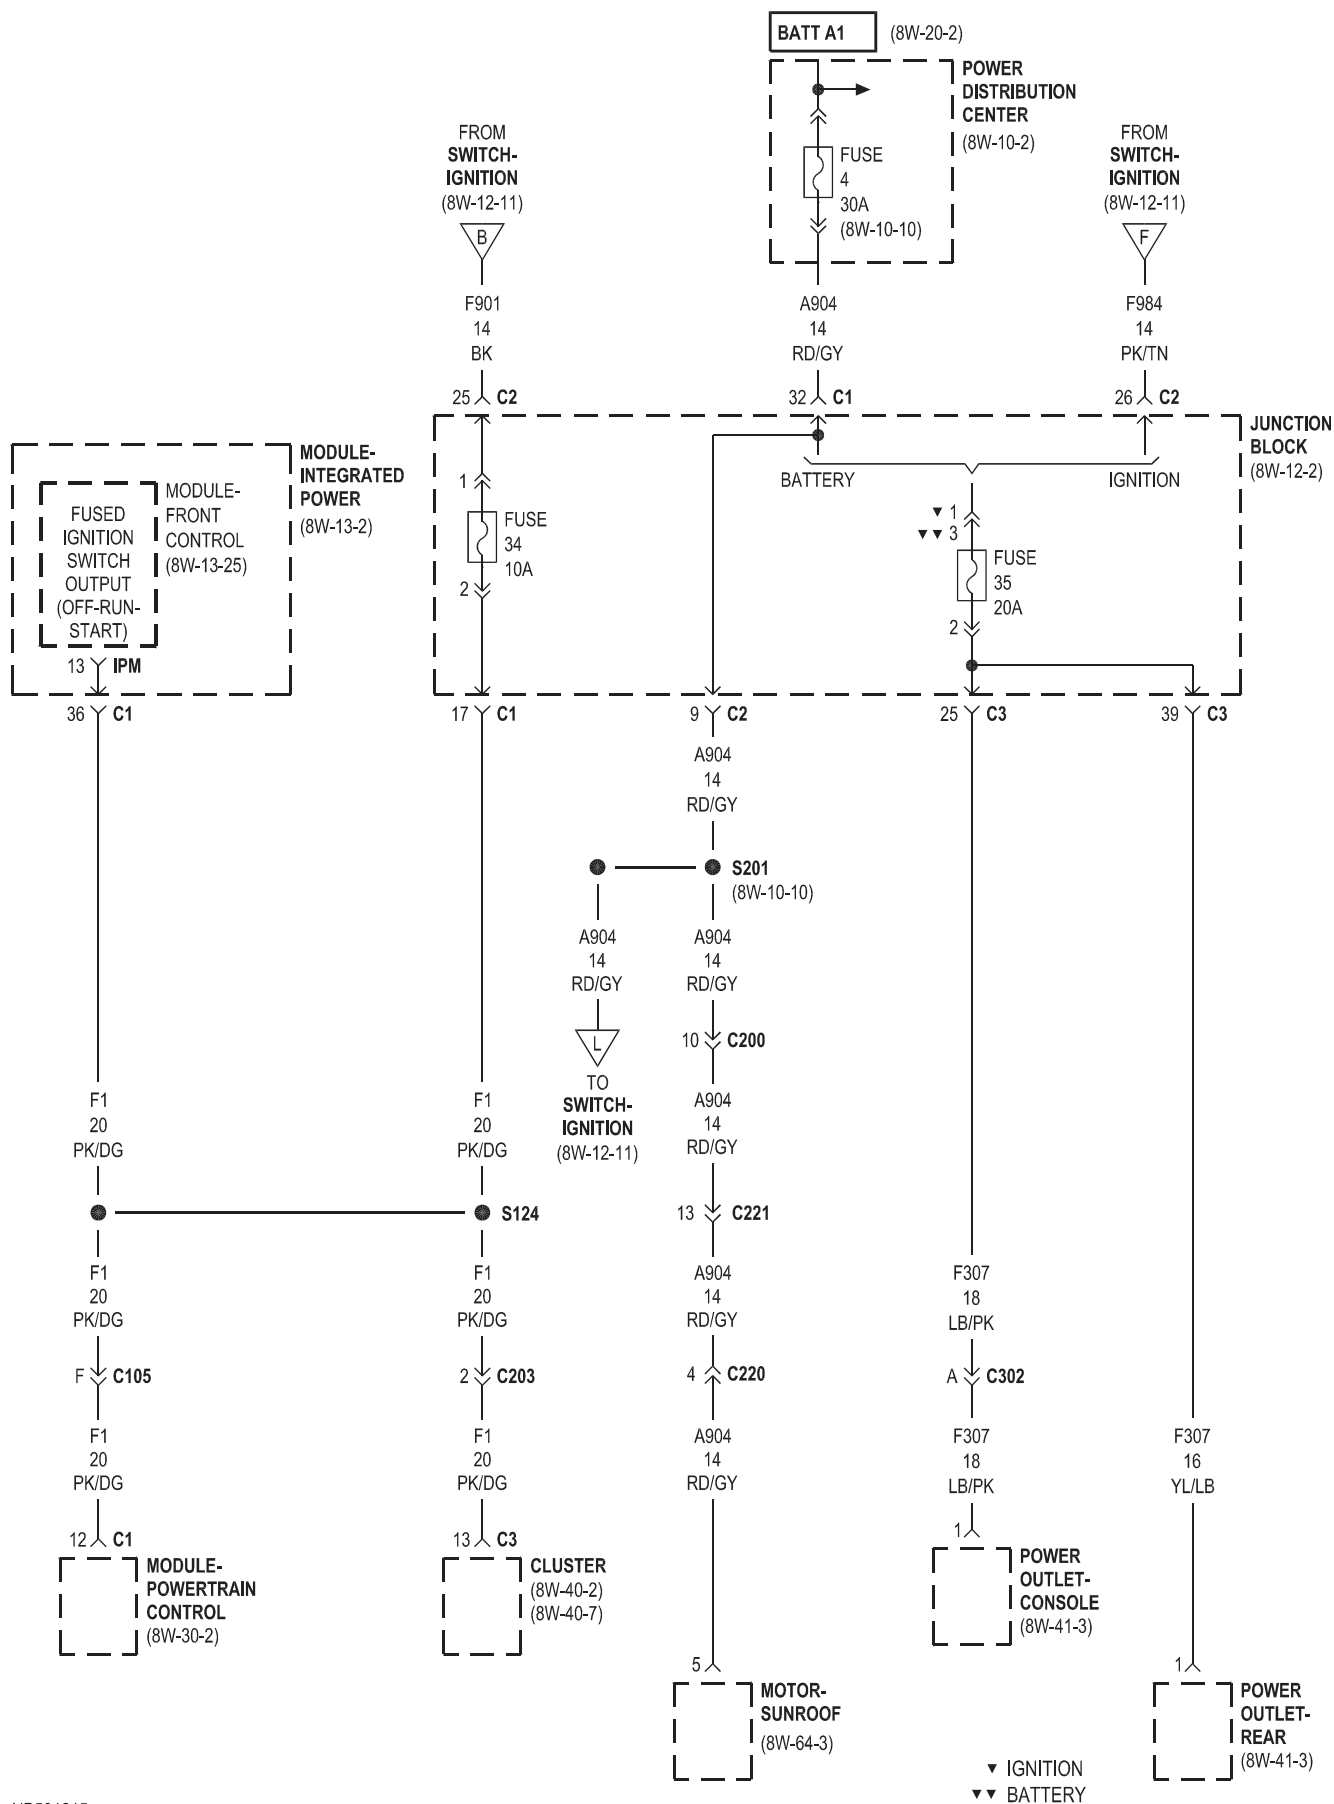


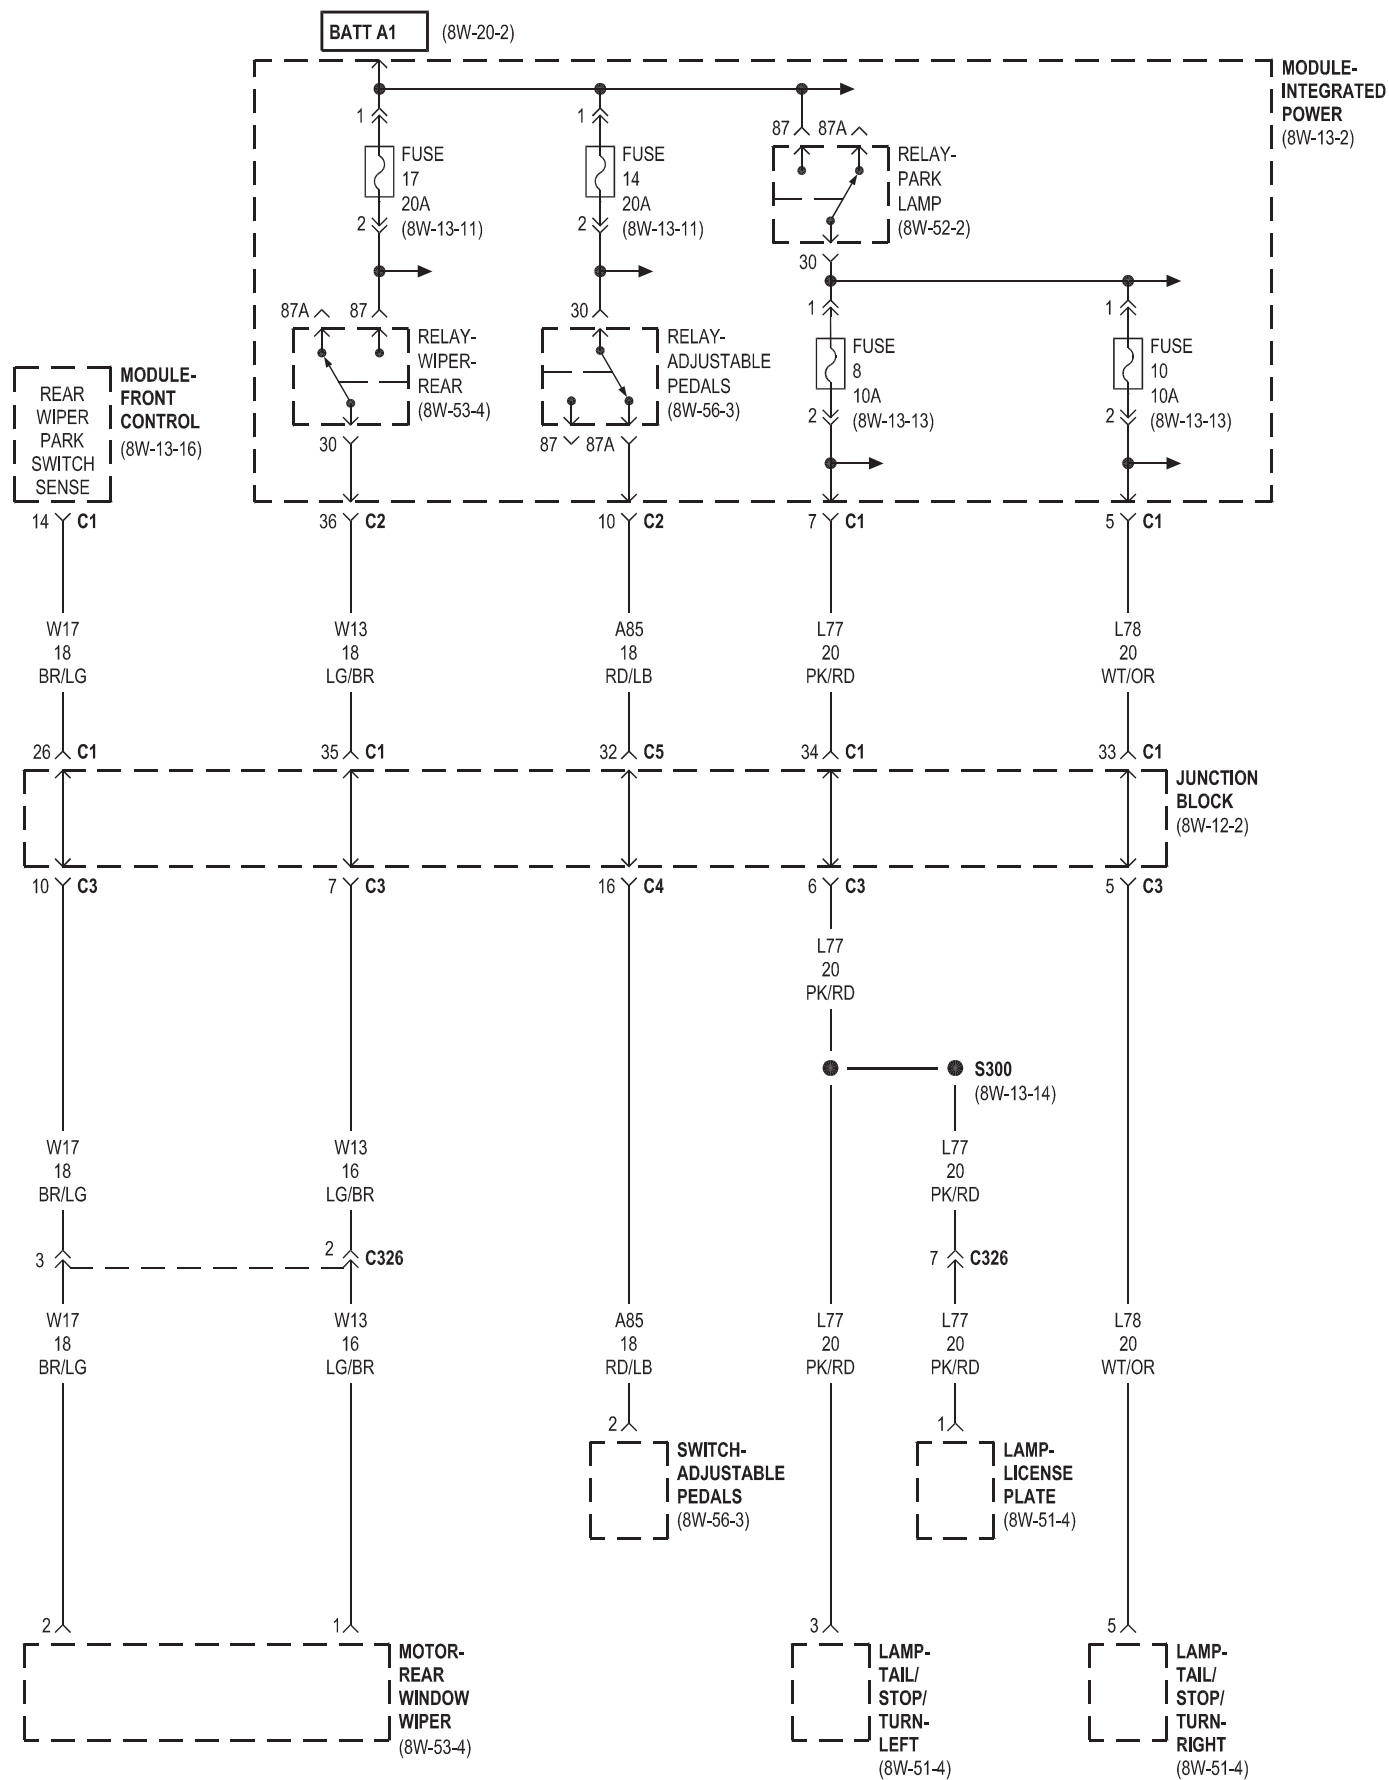

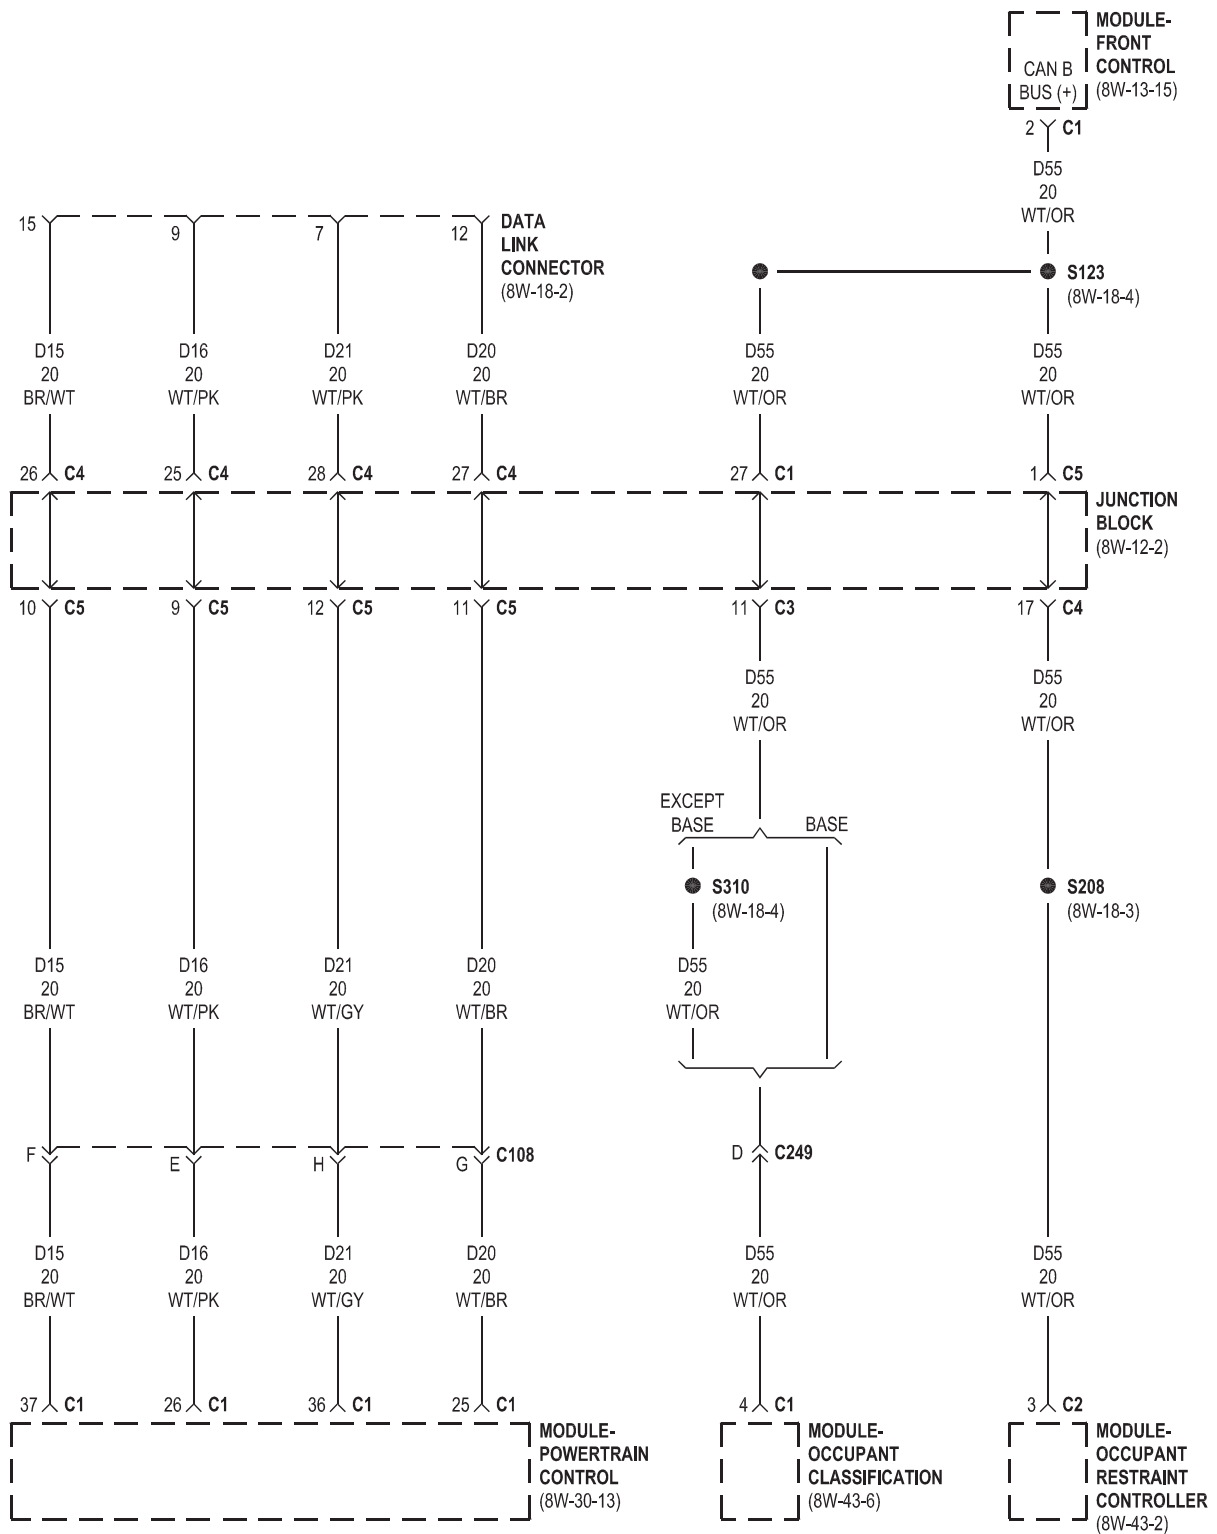

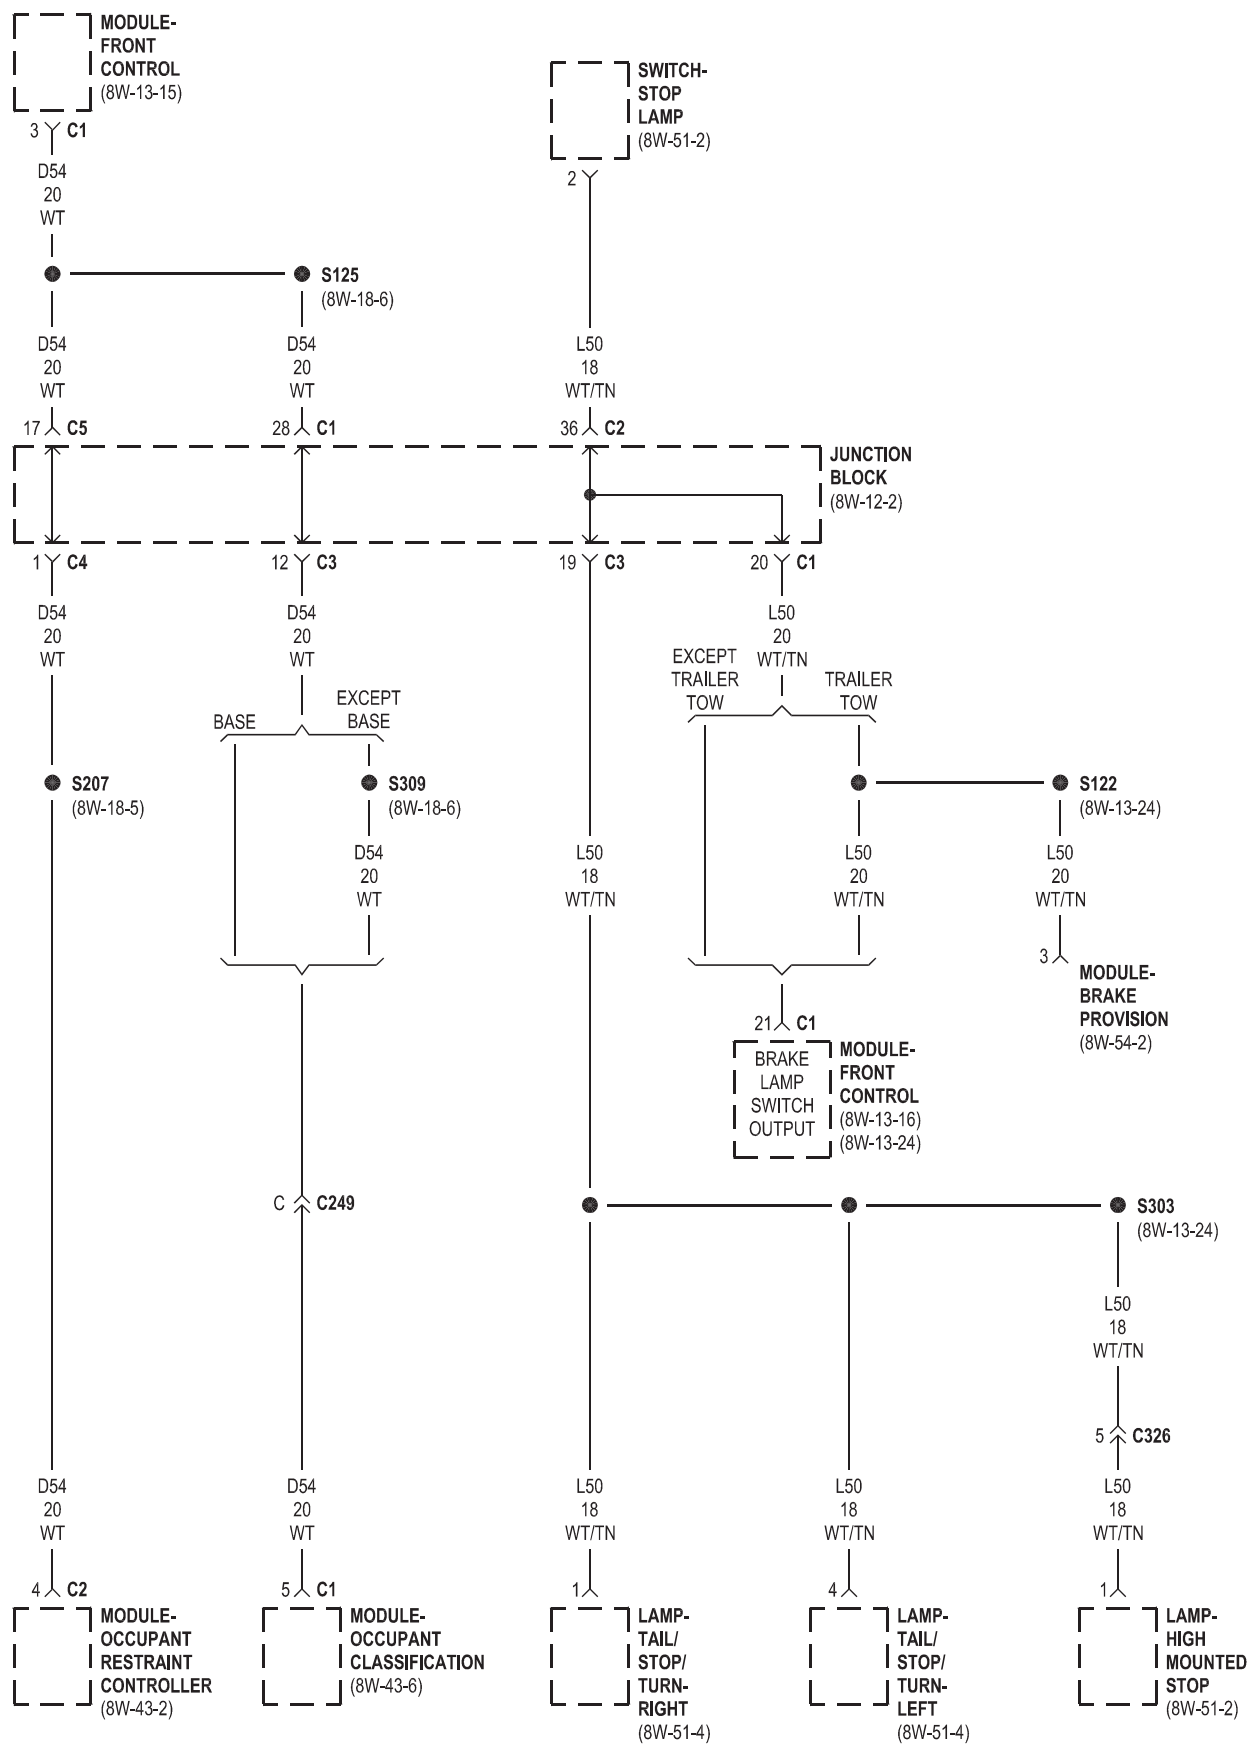

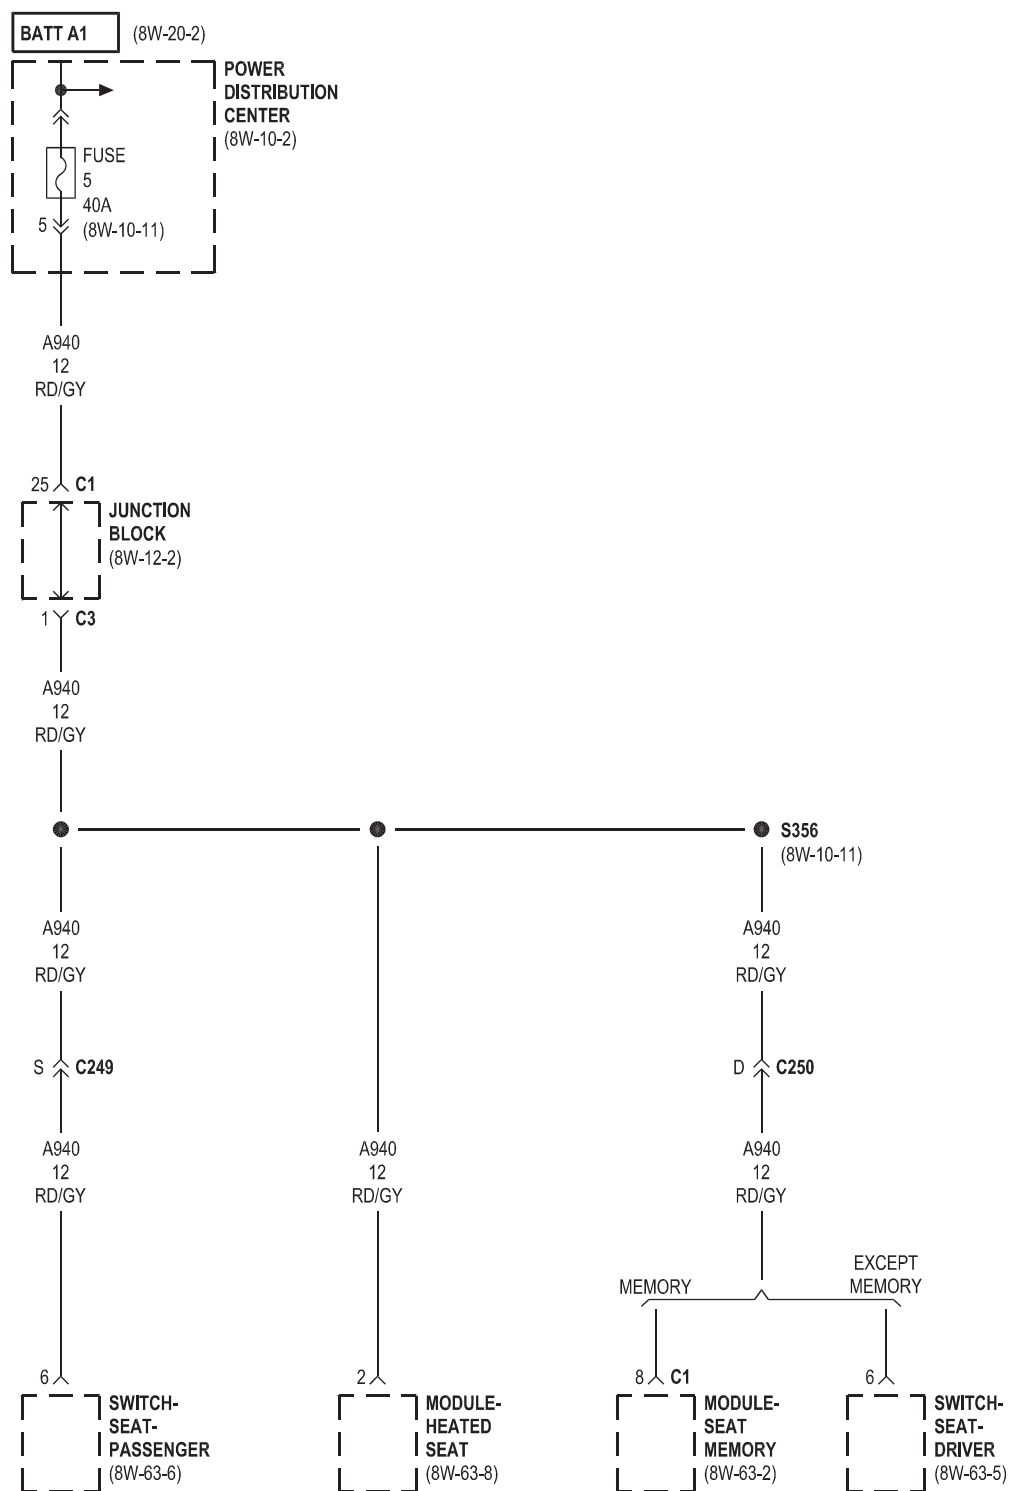

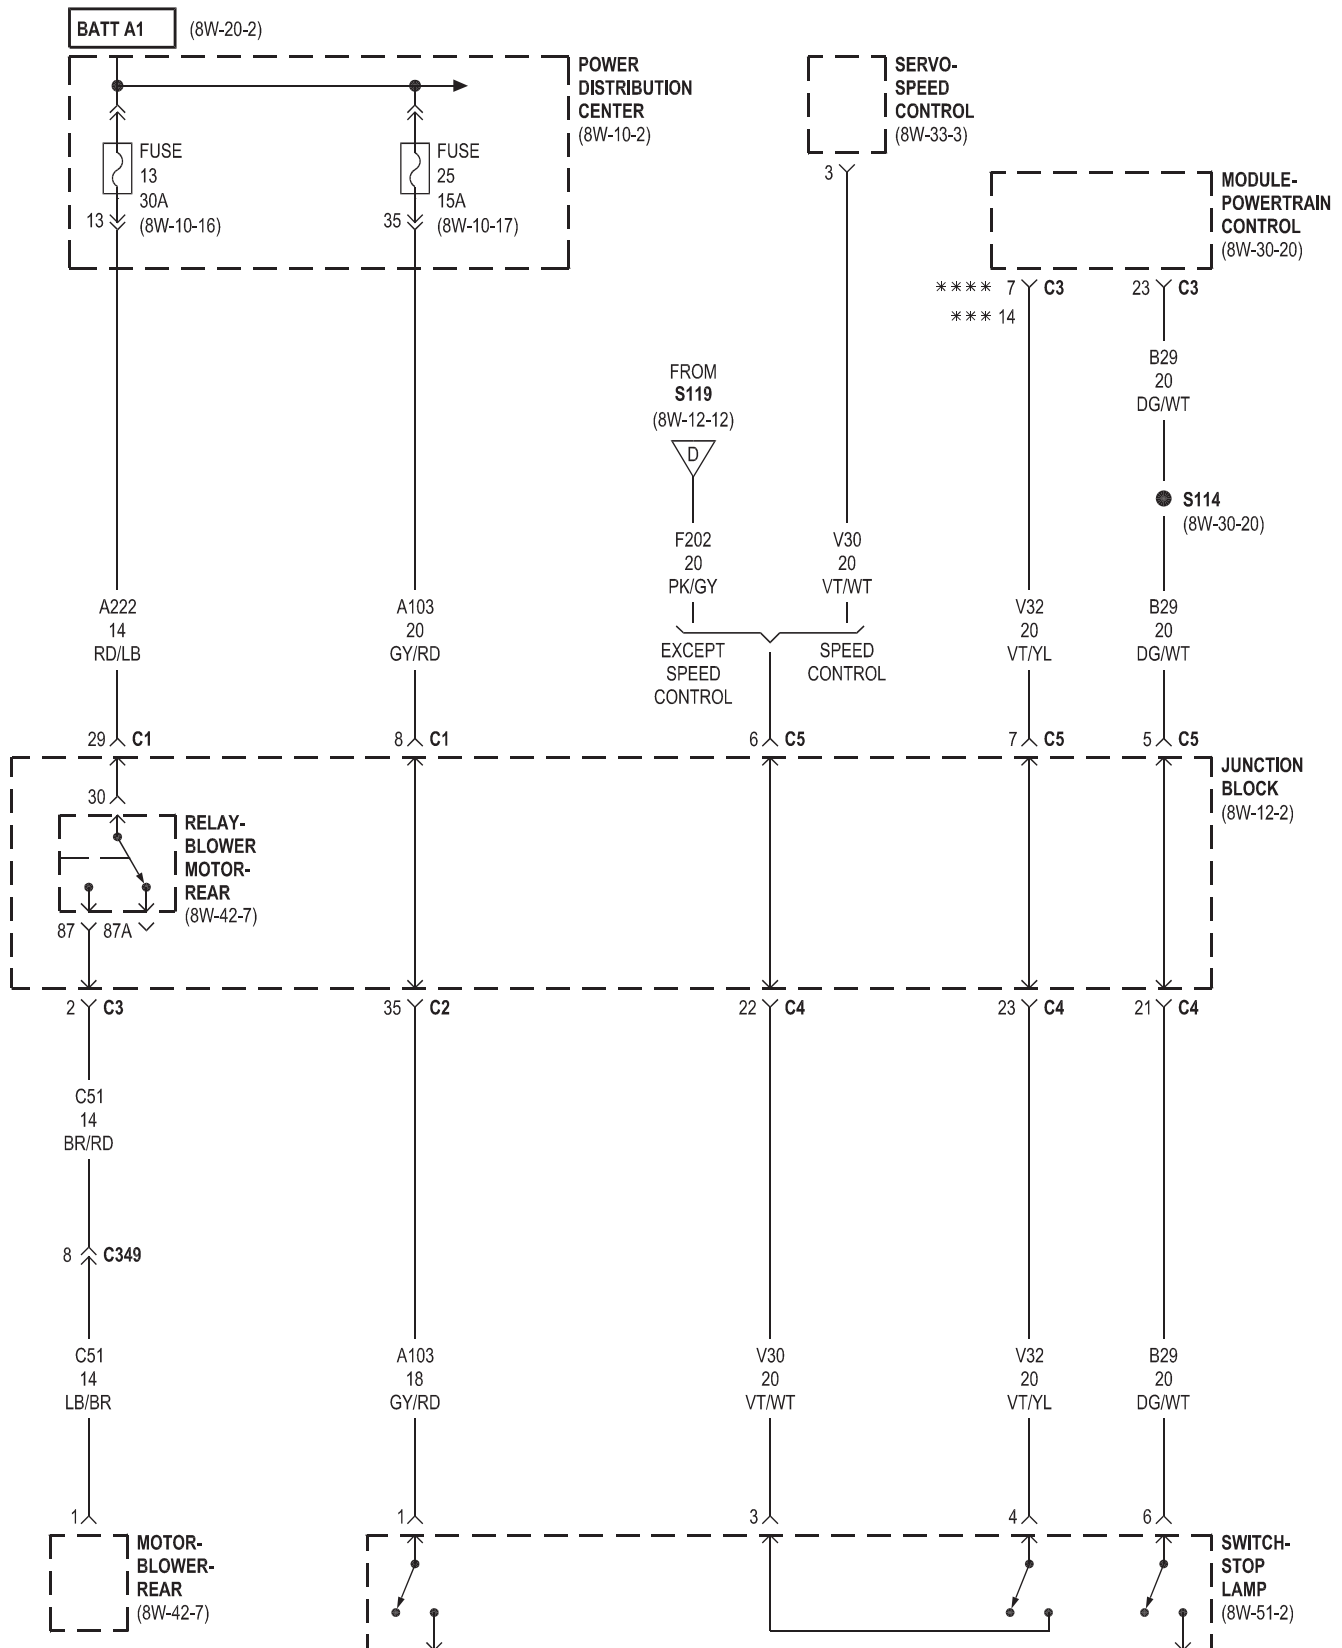

*** 5.7L

**** 3.7L/4.7L

