


## 8W-10 POWER DISTRIBUTION

<b>Component</b>	<b>Page</b>	<b>Component</b>	<b>Page</b>
Battery . . . . .	8W-10-6	G113 . . . . .	8W-10-12
Capacitor-Ignition . . . . .	8W-10-13	G208 . . . . .	8W-10-19
Circuit Breaker . . . . .	8W-10-11	Generator . . . . .	8W-10-6
Cluster . . . . .	8W-10-19, 20	Injector-Fuel-No. 1 . . . . .	8W-10-14, 15
Coil-Ignition-No. 1 . . . . .	8W-10-14, 15	Injector-Fuel-No. 2 . . . . .	8W-10-14, 15
Coil-Ignition-No. 2 . . . . .	8W-10-14, 15	Injector-Fuel-No. 3 . . . . .	8W-10-14, 15
Coil-Ignition-No. 3 . . . . .	8W-10-14, 15	Injector-Fuel-No. 4 . . . . .	8W-10-13, 14, 15
Coil-Ignition-No. 4 . . . . .	8W-10-13, 14, 15	Injector-Fuel-No. 5 . . . . .	8W-10-14, 15
Coil-Ignition-No. 5 . . . . .	8W-10-14, 15	Injector-Fuel-No. 6 . . . . .	8W-10-14, 15
Coil-Ignition-No. 6 . . . . .	8W-10-13, 15	Injector-Fuel-No. 7 . . . . .	8W-10-14, 15
Coil-Ignition-No. 7 . . . . .	8W-10-15	Injector-Fuel-No. 8 . . . . .	8W-10-13, 15
Coil-Ignition-No. 8 . . . . .	8W-10-13, 15	Junction Block . . . . .	8W-10-7, 8, 9, 10, 11, 16, 17, 18, 19
Fuse 1 . . . . .	8W-10-7, 9	Module-Antilock Brakes . . . . .	8W-10-8, 16
Fuse 2 . . . . .	8W-10-7, 9	Module-Brake Provision . . . . .	8W-10-7, 10
Fuse 3 . . . . .	8W-10-7, 10, 11	Module-Front Control . . . . .	8W-10-9, 12, 20
Fuse 4 . . . . .	8W-10-7, 10	Module-Heated Seat . . . . .	8W-10-11
Fuse 5 . . . . .	8W-10-7, 11	Module-Integrated Power . . . . .	8W-10-7, 9, 12
Fuse 6 . . . . .	8W-10-7, 10	Module-Powertrain Control . . . . .	8W-10-8, 11, 13, 17, 20
Fuse 7 . . . . .	8W-10-7, 10, 16	Module-Seat Memory . . . . .	8W-10-11
Fuse 8 . . . . .	8W-10-7, 11, 16	Motor-Sunroof . . . . .	8W-10-10
Fuse 9 . . . . .	8W-10-16	Power Distribution Center . . . . .	8W-10-2, 6, 7, 8, 9, 10, 11, 16, 17, 20
Fuse 10 . . . . .	8W-10-7, 8, 11, 16	Relay-A/C Clutch . . . . .	8W-10-8, 17
Fuse 12 . . . . .	8W-10-7, 8, 16	Relay-Accessory Delay . . . . .	8W-10-11
Fuse 13 . . . . .	8W-10-8, 16	Relay-Auto Shut Down . . . . .	8W-10-7, 11, 12
Fuse 14 . . . . .	8W-10-8, 16	Relay-Blower Motor-Front . . . . .	8W-10-10
Fuse 15 . . . . .	8W-10-8, 16	Relay-Blower Motor-Rear . . . . .	8W-10-16
Fuse 16 . . . . .	8W-10-18, 20	Relay-Fuel Pump . . . . .	8W-10-8, 16
Fuse 18 . . . . .	8W-10-8, 16, 18	Relay-Rear Window Defogger . . . . .	8W-10-16
Fuse 19 . . . . .	8W-10-8, 16, 18	Relay-Run Remote . . . . .	8W-10-10
Fuse 21 . . . . .	8W-10-8, 16	Relay-Run/Start . . . . .	8W-10-9, 18
Fuse 22 . . . . .	8W-10-8, 17	Relay-Starter Motor . . . . .	8W-10-7, 9, 20
Fuse 23 . . . . .	8W-10-8, 17	Relay-Transmission Control . . . . .	8W-10-8, 16
Fuse 24 . . . . .	8W-10-8, 17, 19	Relay-Wiper High/Low . . . . .	8W-10-9
Fuse 25 . . . . .	8W-10-8, 17, 19	Relay-Wiper On/Off . . . . .	8W-10-9
Fuse 26 . . . . .	8W-10-19	Starter . . . . .	8W-10-6, 9
Fuse 27 . . . . .	8W-10-8, 17	Switch-Ignition . . . . .	8W-10-9, 10, 17, 18, 19
Fuse 33 . . . . .	8W-10-16	Switch-Seat-Driver . . . . .	8W-10-11
Fuse 34 . . . . .	8W-10-18	Switch-Seat-Passenger . . . . .	8W-10-11
Fuse 35 . . . . .	8W-10-10	Switch-Stop Lamp . . . . .	8W-10-17
Fusible Link . . . . .	8W-10-6	Wiring-Trailer Tow 7-Way . . . . .	8W-10-8, 17
G110 . . . . .	8W-10-6		
G111 . . . . .	8W-10-6		

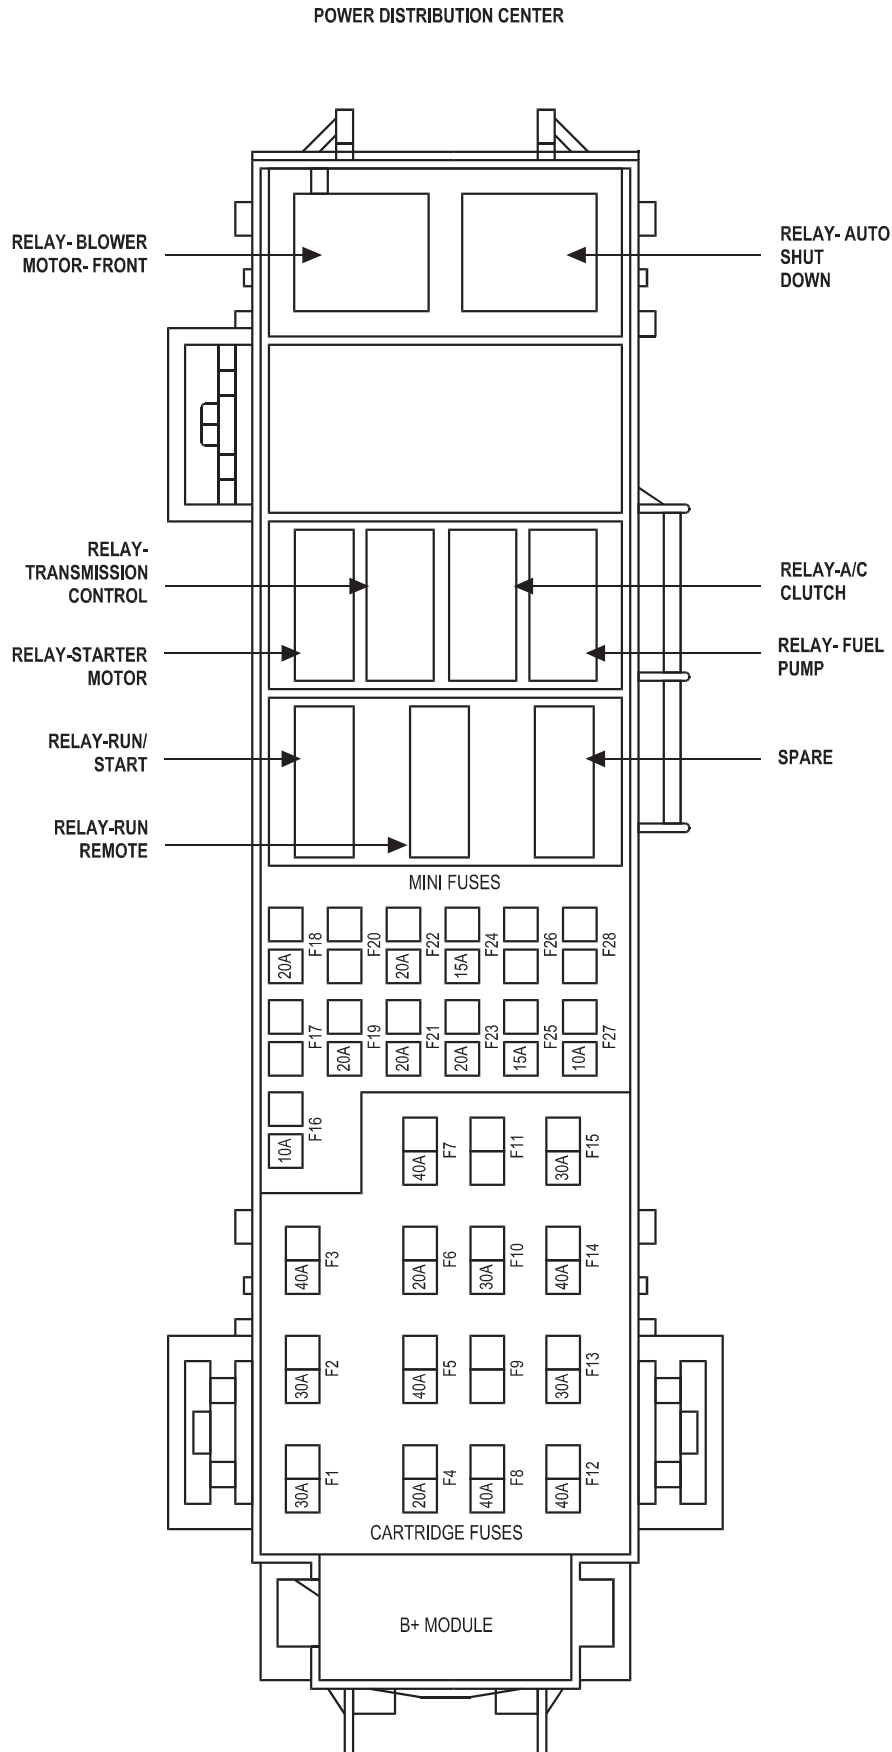

## FUSES

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	30A	A923 14RD/OR	FUSED B(+)
2	30A	A5 14 RD/VT	FUSED B(+)
3	40A	A400 12TN/RD	FUSED B(+)
4	30A	A904 14RD/GY	FUSED B(+)
5	40A	A940 12RD/GY	FUSED B(+)
6	20A	A917 16RD/DB	FUSED B(+)
7	40A	A927 12RD/BR	FUSED B(+)
8	40A	A901 12RD/PK	FUSED B(+)
9	-	-	-
10	30A	A922 14RD/LB	FUSED B(+)
11	-	-	-
12	40A	A915 14OR/BR	FUSED B(+)
13	30A	A222 14RD/LB	FUSED B(+)
14	40A	A107 12TN/RD	FUSED B(+)
15	50A	A952 10OR/DB	FUSED B(+)
16	10A	F924 20PK/YL	FUSED IGNITION SWITCH OUTPUT (START)
17	-	-	-
18	20A	A921 18OR/PK	FUSED B(+)
19	20A	A104 18YL/RD	FUSED B(+)
20	-	-	-
21	20A	A111 18DG/RD	FUSED B(+)
22	20A	A919 18OR/GY	FUSED B(+)
23	20A	A100 18RD/VT	FUSED B(+)
24	15A	A916 20OR/WT	FUSED B(+)
25	15A	A103 20GY/RD	FUSED B(+)
26	-	-	-
27	10A	A953 20RD/YL	FUSED B(+)
28	-	-	-

## RELAYS

RELAY-A/C  
CLUTCH

CAVITY	CIRCUIT	FUNCTION
30	A916 20OR/WT	FUSED B(+)
85	C13 20LB/OR	A/C CLUTCH RELAY CONTROL
86	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
87	C3 20DB/GY	A/C CLUTCH RELAY OUTPUT
87A	-	-

RELAY-AUTO  
SHUT  
DOWN

CAVITY	CIRCUIT	FUNCTION
30	A922 14RD/LB	FUSED B(+)
85	K51 20BR/GY	ASD RELAY OUTPUT
86	A922 14RD/LB	FUSED B(+)
87	A955 14RD	ASD RELAY OUTPUT
87A	-	-

RELAY-BLOWER  
MOTOR-  
FRONT

CAVITY	CIRCUIT	FUNCTION
30	A927 12RD/BR	FUSED B(+)
85	C229 20DB	FRONT BLOWER CONTROL
86	A927 12RD/BR	FUSED B(+)
87	C7 12DB	FRONT BLOWER MOTOR RELAY OUTPUT
87A	-	-

RELAY-FUEL  
PUMP

CAVITY	CIRCUIT	FUNCTION
30	A921 18OR/PK	FUSED B(+)
85	K31 20BR	FUEL PUMP RELAY CONTROL
86	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
87	N1 18DB/OR	FUEL PUMP RELAY OUTPUT
87A	-	-

## RELAYS

RELAY-RUN  
REMOTE

CAVITY	CIRCUIT	FUNCTION
30	A927 12RD/BR	FUSED B(+)
85	C229 20DB	FRONT BLOWER CONTROL
86	A927 12RD/BR	FUSED B(+)
87	F921 12PK/YL	IGNITION SWITCH OUTPUT (RUN)
87A	-	-

RELAY-RUN/  
START


CAVITY	CIRCUIT	FUNCTION
30	A923 14RD/OR	FUSED B(+)
85	K617 20BR	RUN START RELAY CONTROL
86	A923 14RD/OR	FUSED B(+)
87	F941 14PK/LG	IGNITION SWITCH OUTPUT (RUN-START)
87A	-	-


RELAY-  
STARTER  
MOTOR


CAVITY	CIRCUIT	FUNCTION
30	A923 14RD/OR	FUSED B(+)
85	T752 20DG/OR	ENGINE STARTER MOTOR RELAY CONTROL
86	F924 20PK/YL	FUSED IGNITION SWITCH OUTPUT (START)
87	T750 14GY/YL	ENGINE STARTER MOTOR RELAY OUTPUT
87A	-	-

RELAY-  
TRANSMISSION  
CONTROL


CAVITY	CIRCUIT	FUNCTION
30	A104 18YL/RD	FUSED B(+)
85	Z915 20BK	GROUND
86	T15 20YL/VT	TRANSMISSION CONTROL RELAY CONTROL
87	T16 18YL/OR	TRANSMISSION CONTROL RELAY OUTPUT
87A	-	-

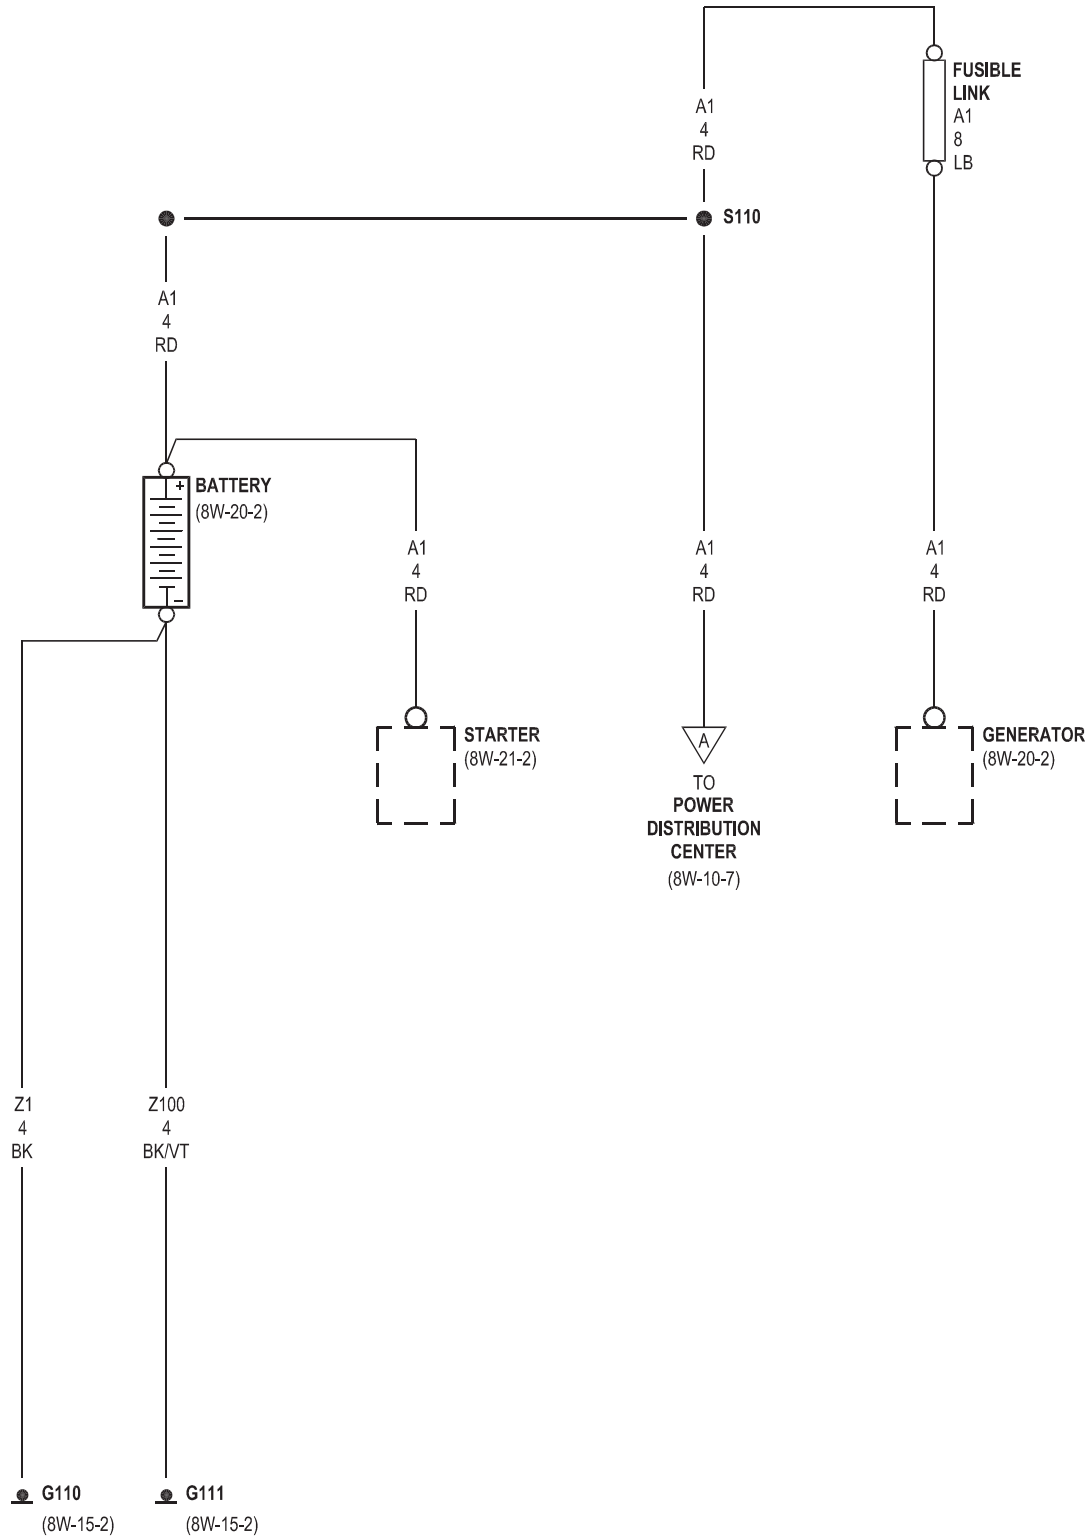


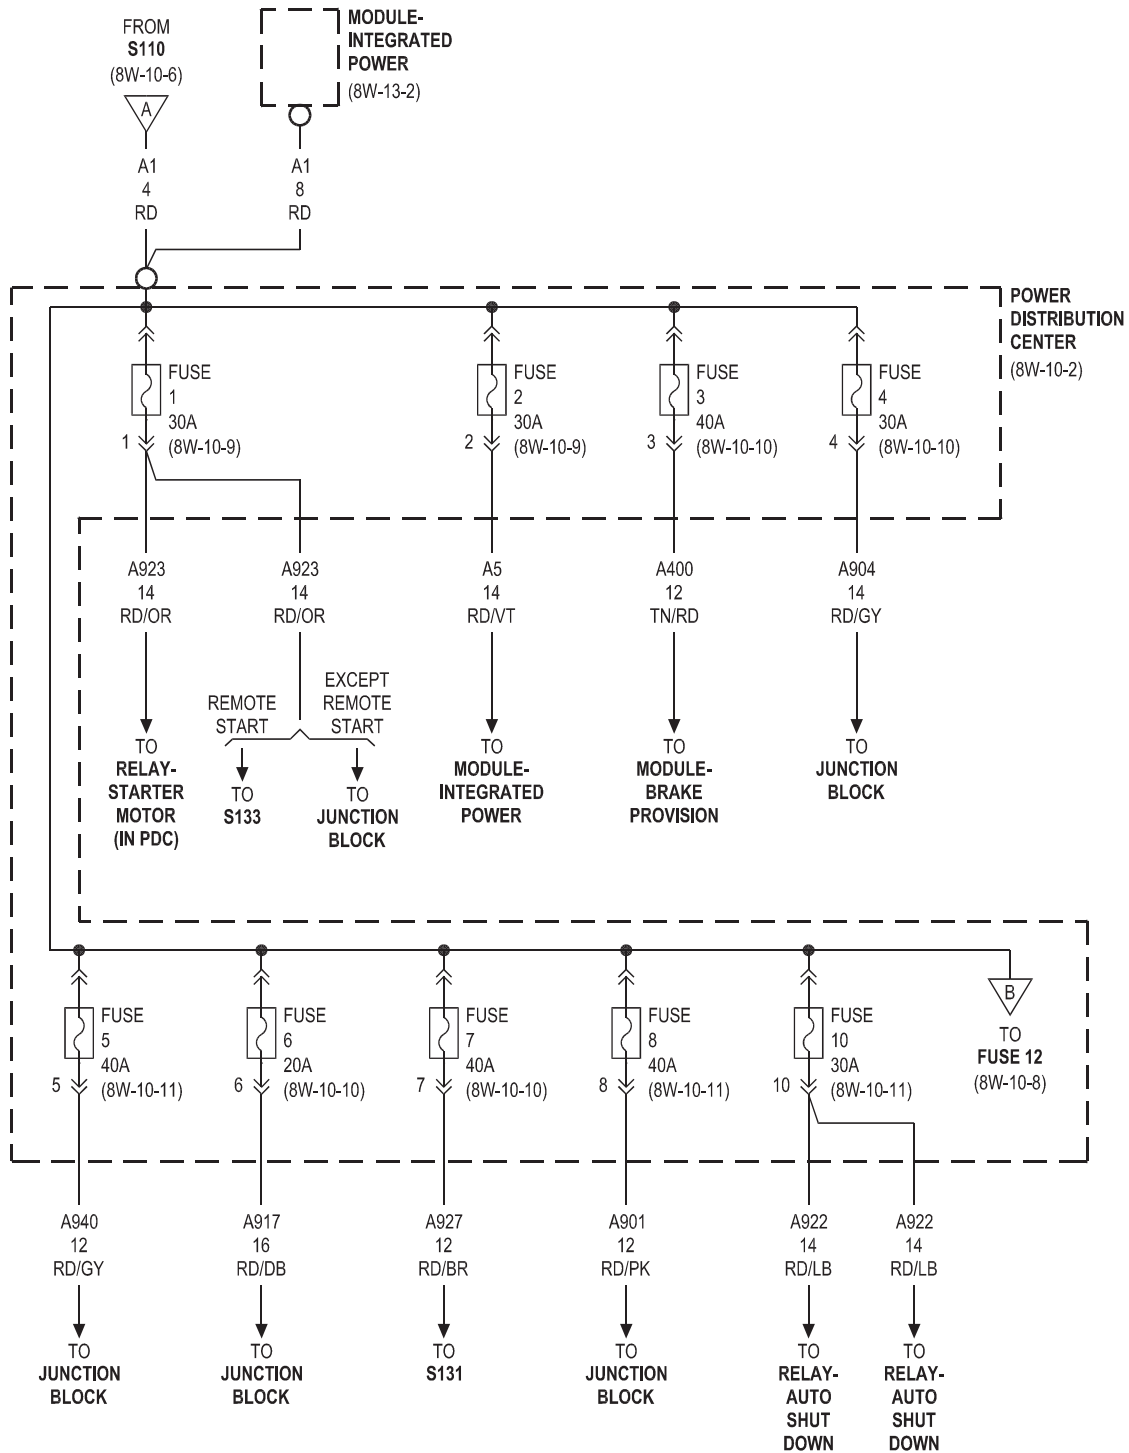

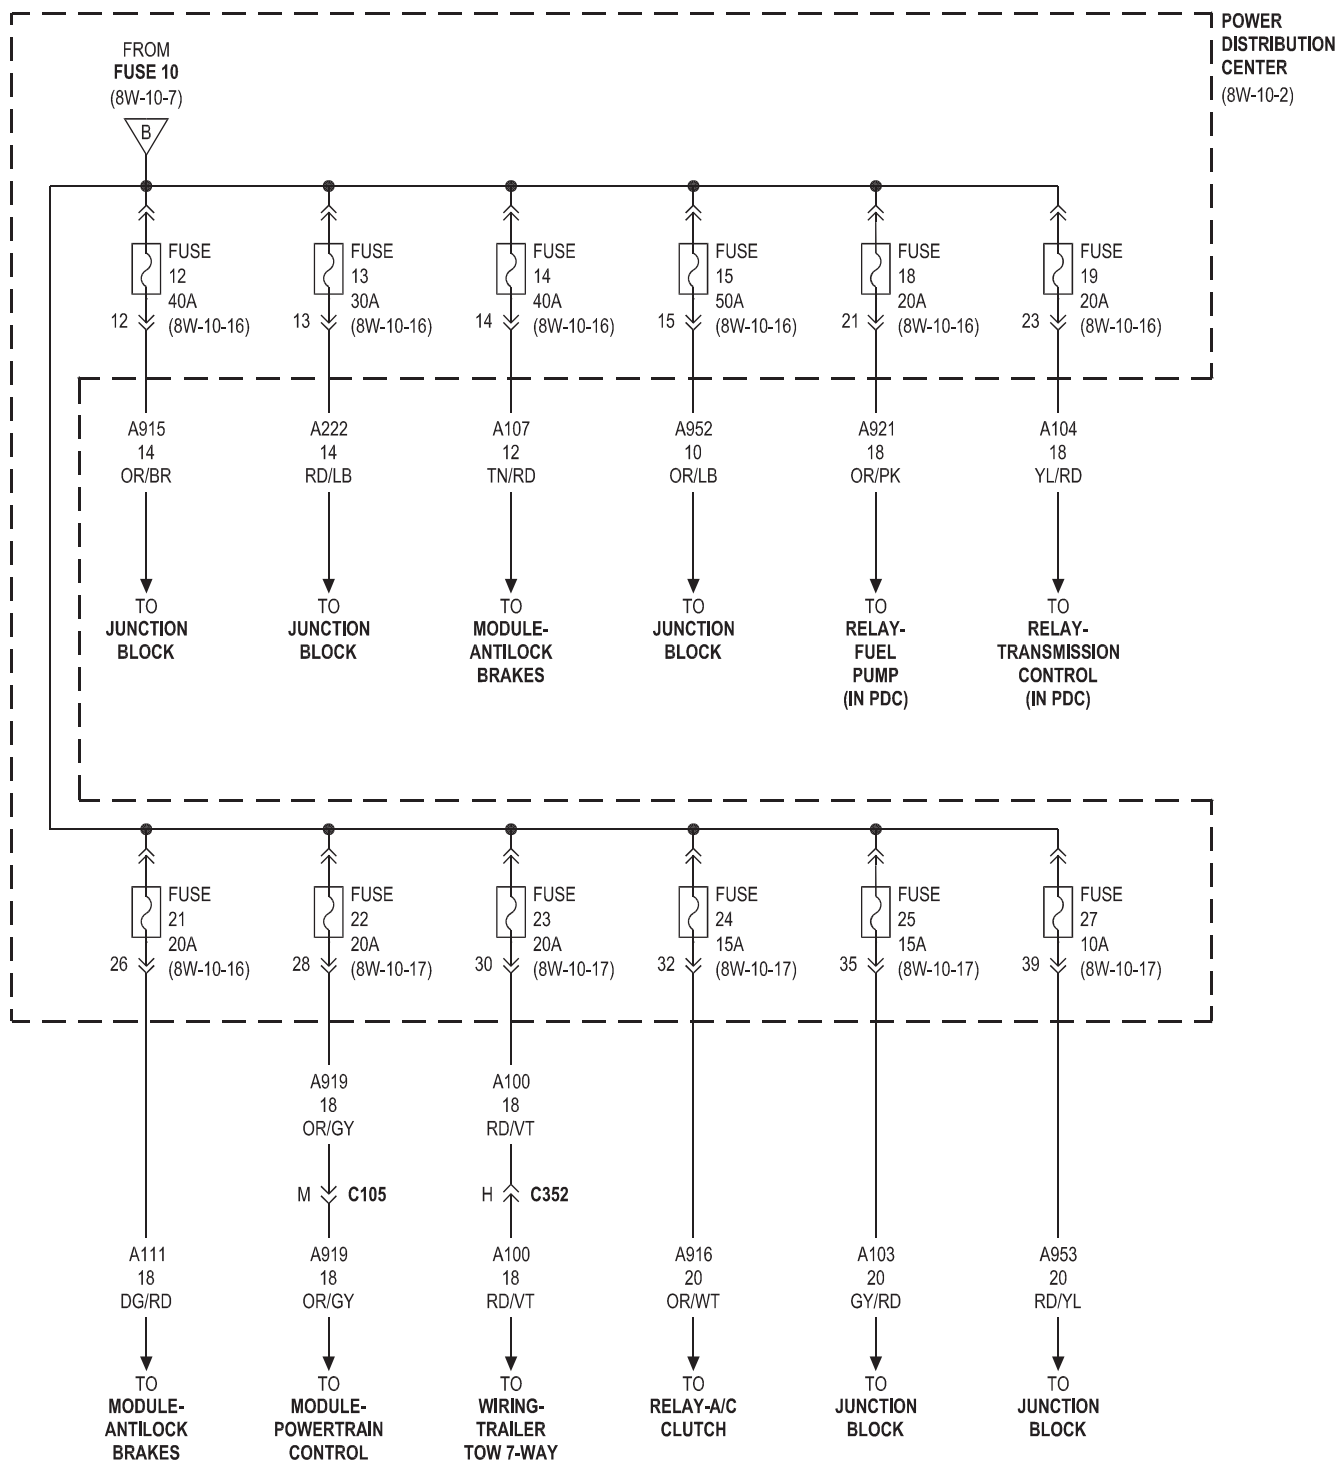



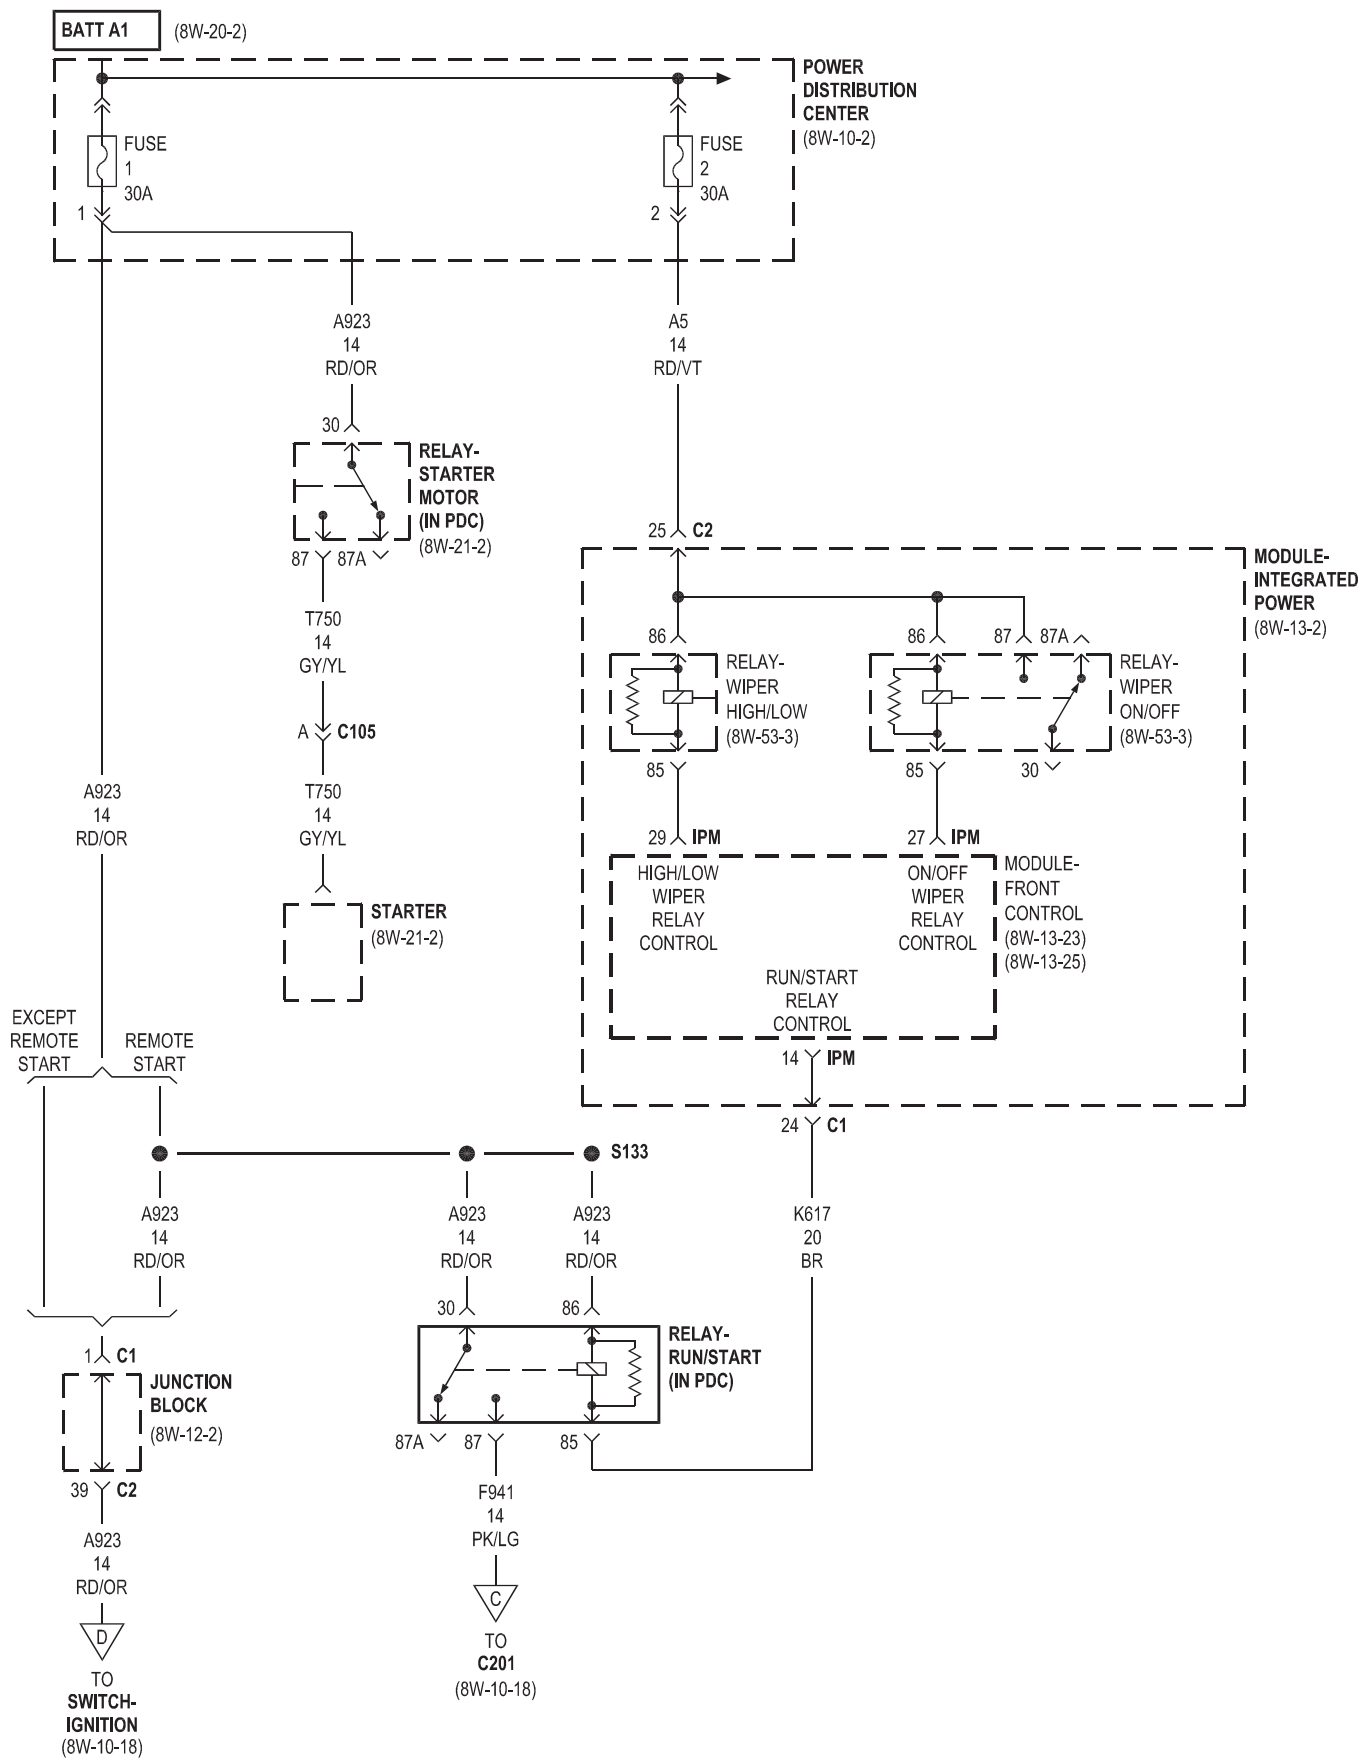

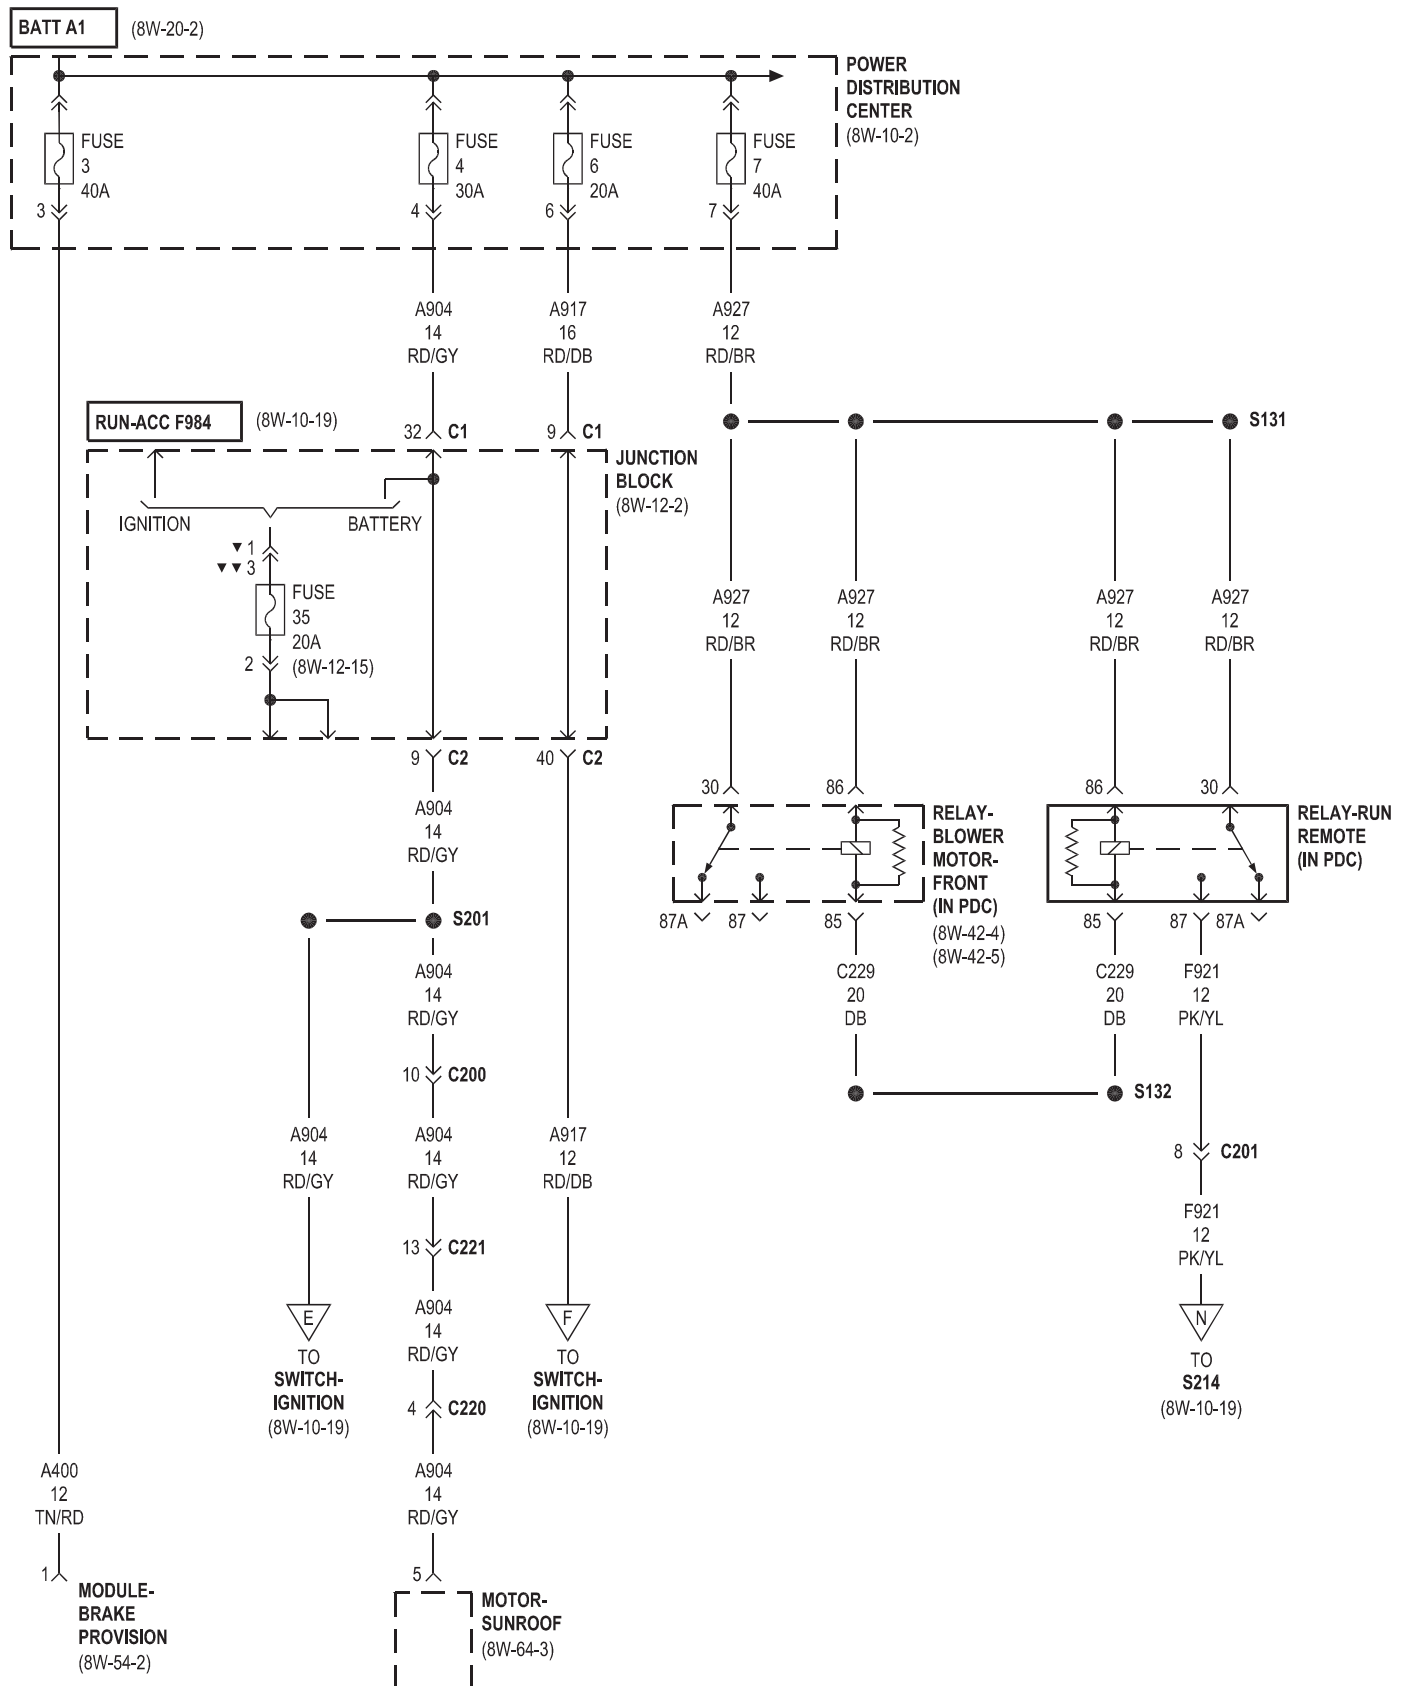

▼ IGNITION

▼▼ BATTERY

