

8W-21 STARTING SYSTEM

Component	Page	Component	Page
Battery . . . . .	8W-21-2	Module-Powertrain Control . . . . .	8W-21-2
Fuse 1 . . . . .	8W-21-2	Power Distribution Center . . . . .	8W-21-2
Fuse 16 . . . . .	8W-21-2	Relay-Starter Motor . . . . .	8W-21-2
G110 . . . . .	8W-21-2	Starter . . . . .	8W-21-2
G111 . . . . .	8W-21-2		

