




## 8W-40 INSTRUMENT CLUSTER


<b>Component</b>	<b>Page</b>
Cluster . . . . .	8W-40-2, 3, 4, 5, 6, 7, 8, 9, 10
Control-A/C-Heater . . . . .	8W-40-8
Electronics . . . . .	8W-40-2
Fuse 11 . . . . .	8W-40-2
Fuse 2 . . . . .	8W-40-2
Fuse 29 . . . . .	8W-40-10
Fuse 35 . . . . .	8W-40-2
G201 . . . . .	8W-40-2, 10
G203 . . . . .	8W-40-2, 4
G303 . . . . .	8W-40-6
Gauge-Engine Oil Temperature . . . . .	8W-40-9, 10
Lamp-Dome-Rear . . . . .	8W-40-8
Lamp-Glove Box . . . . .	8W-40-8
Lamp-High Mounted Stop/Cargo . . . . .	8W-40-8
Lamp-Reading-Front . . . . .	8W-40-8
Latch-Door-Driver . . . . .	8W-40-6, 7
Latch-Door-Left Rear . . . . .	8W-40-7
Latch-Door-Passenger . . . . .	8W-40-6
Latch-Door-Right Rear . . . . .	8W-40-6
Module-Fuel Pump . . . . .	8W-40-3
Module-Totally Integrated Power . . . . .	8W-40-2, 10

<b>Component</b>	<b>Page</b>
Relay-Starter . . . . .	8W-40-2
Sensor-Engine Oil Temperature . . . . .	8W-40-10
Sensor-Transmission Range . . . . .	8W-40-3
Solenoid-Brake Transmission Shift Interlock . . . . .	8W-40-9
Switch-Disconnecting Stabilizer Bar . . . . .	8W-40-9
Switch-Door Lock-Passenger . . . . .	8W-40-6
Switch-Headlamp . . . . .	8W-40-4
Switch-Heated Seat-Driver . . . . .	8W-40-8
Switch-Horn . . . . .	8W-40-9
Switch-Ignition . . . . .	8W-40-3
Switch-Multifunction . . . . .	8W-40-5
Switch-Parking Brake . . . . .	8W-40-9
Switch-Power Sliding Backlite . . . . .	8W-40-8
Switch-Remote Radio-Left . . . . .	8W-40-9
Switch-Remote Radio-Right . . . . .	8W-40-9
Switch-Seat Belt-Driver . . . . .	8W-40-4
Switch-Transfer Case Selector . . . . .	8W-40-3, 9
Switch-Window/Door Lock-Driver . . . . .	8W-40-7

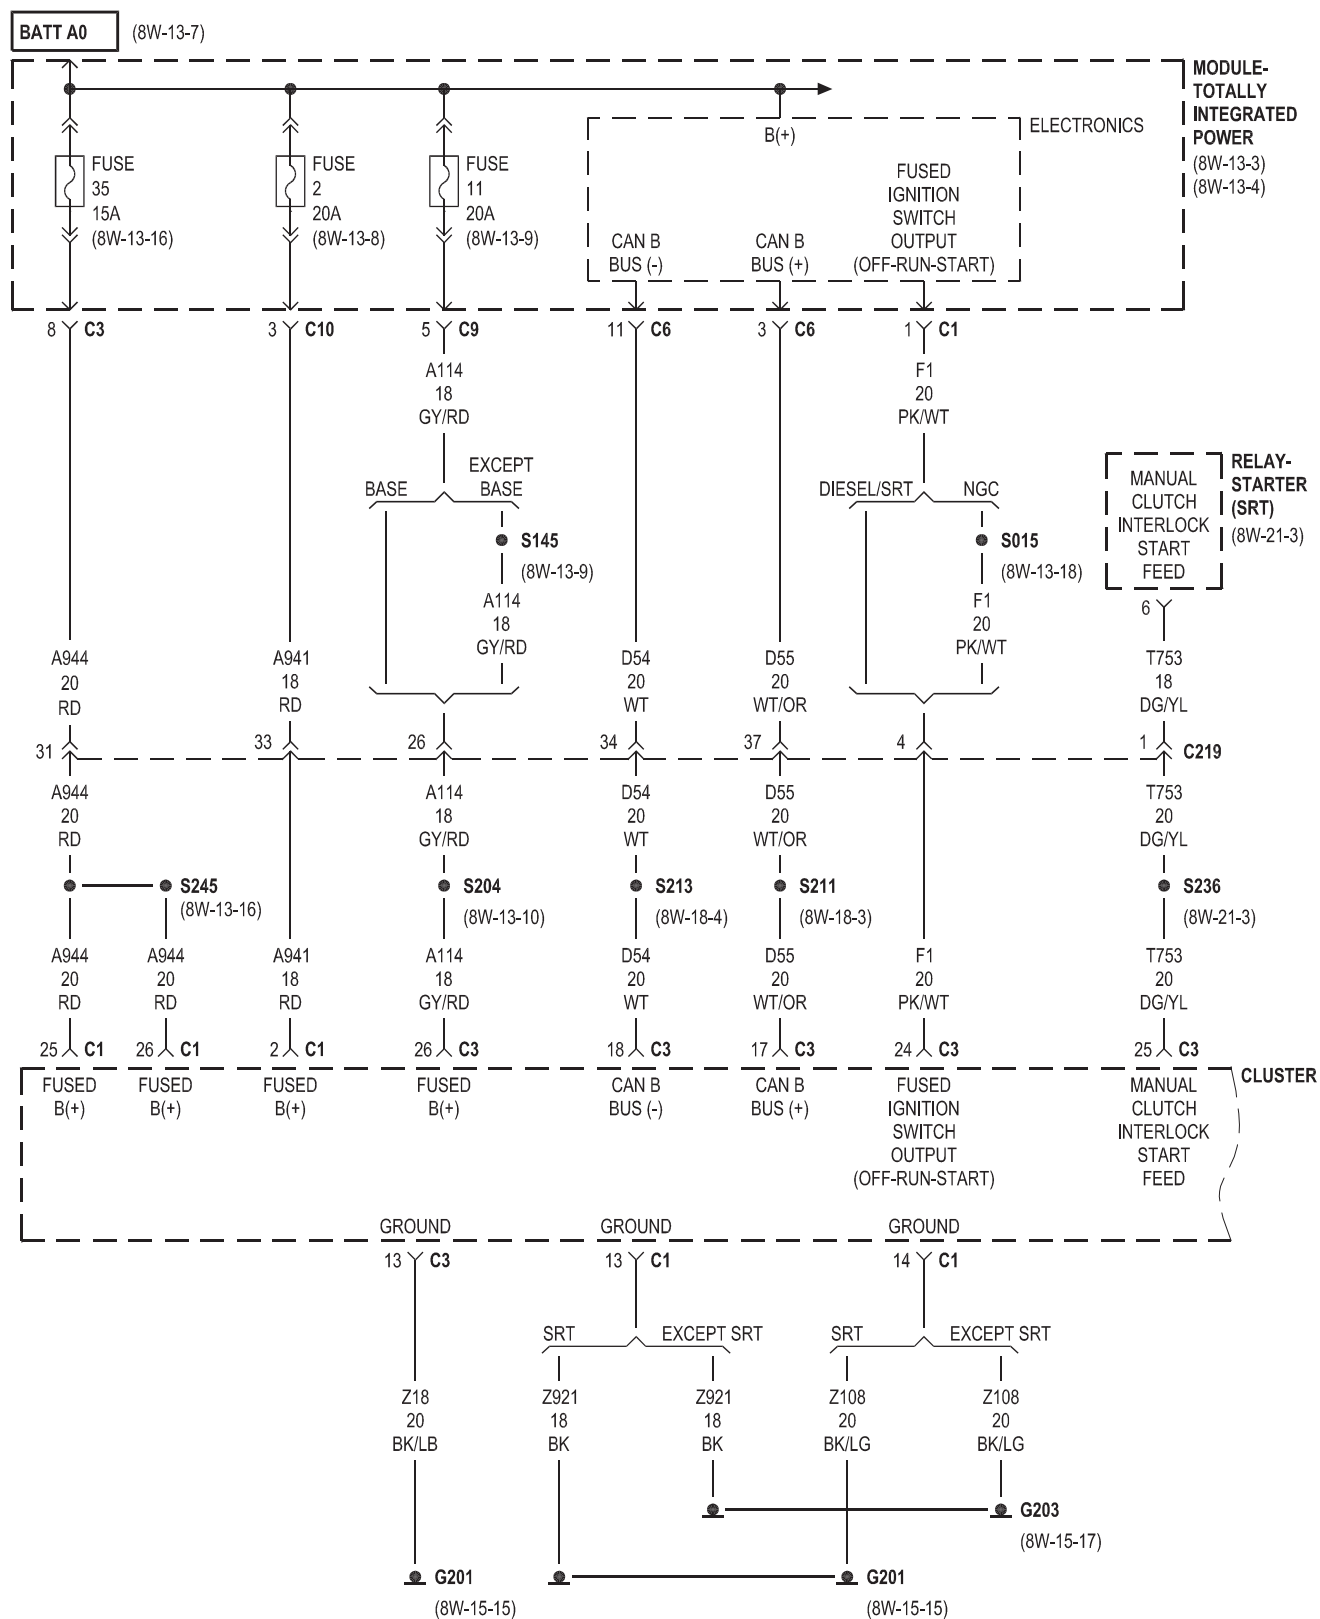


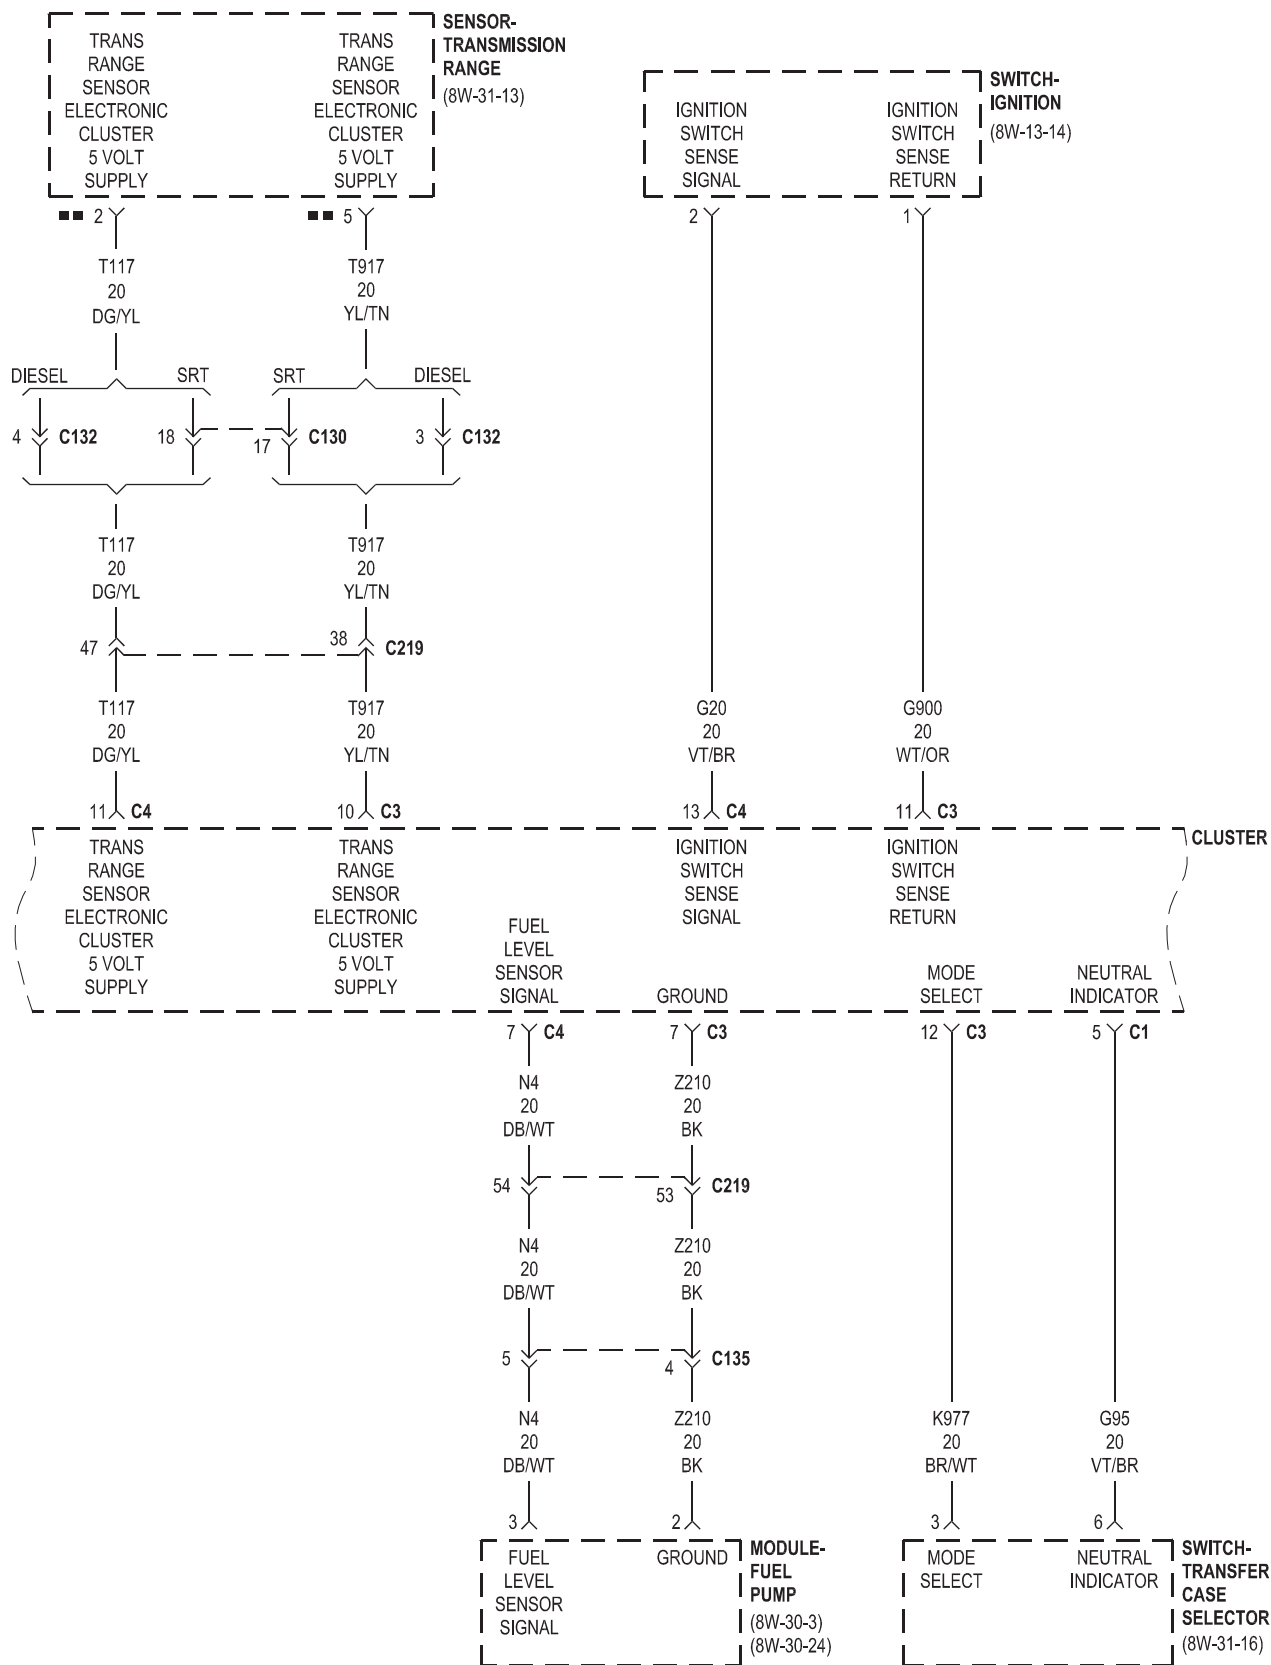


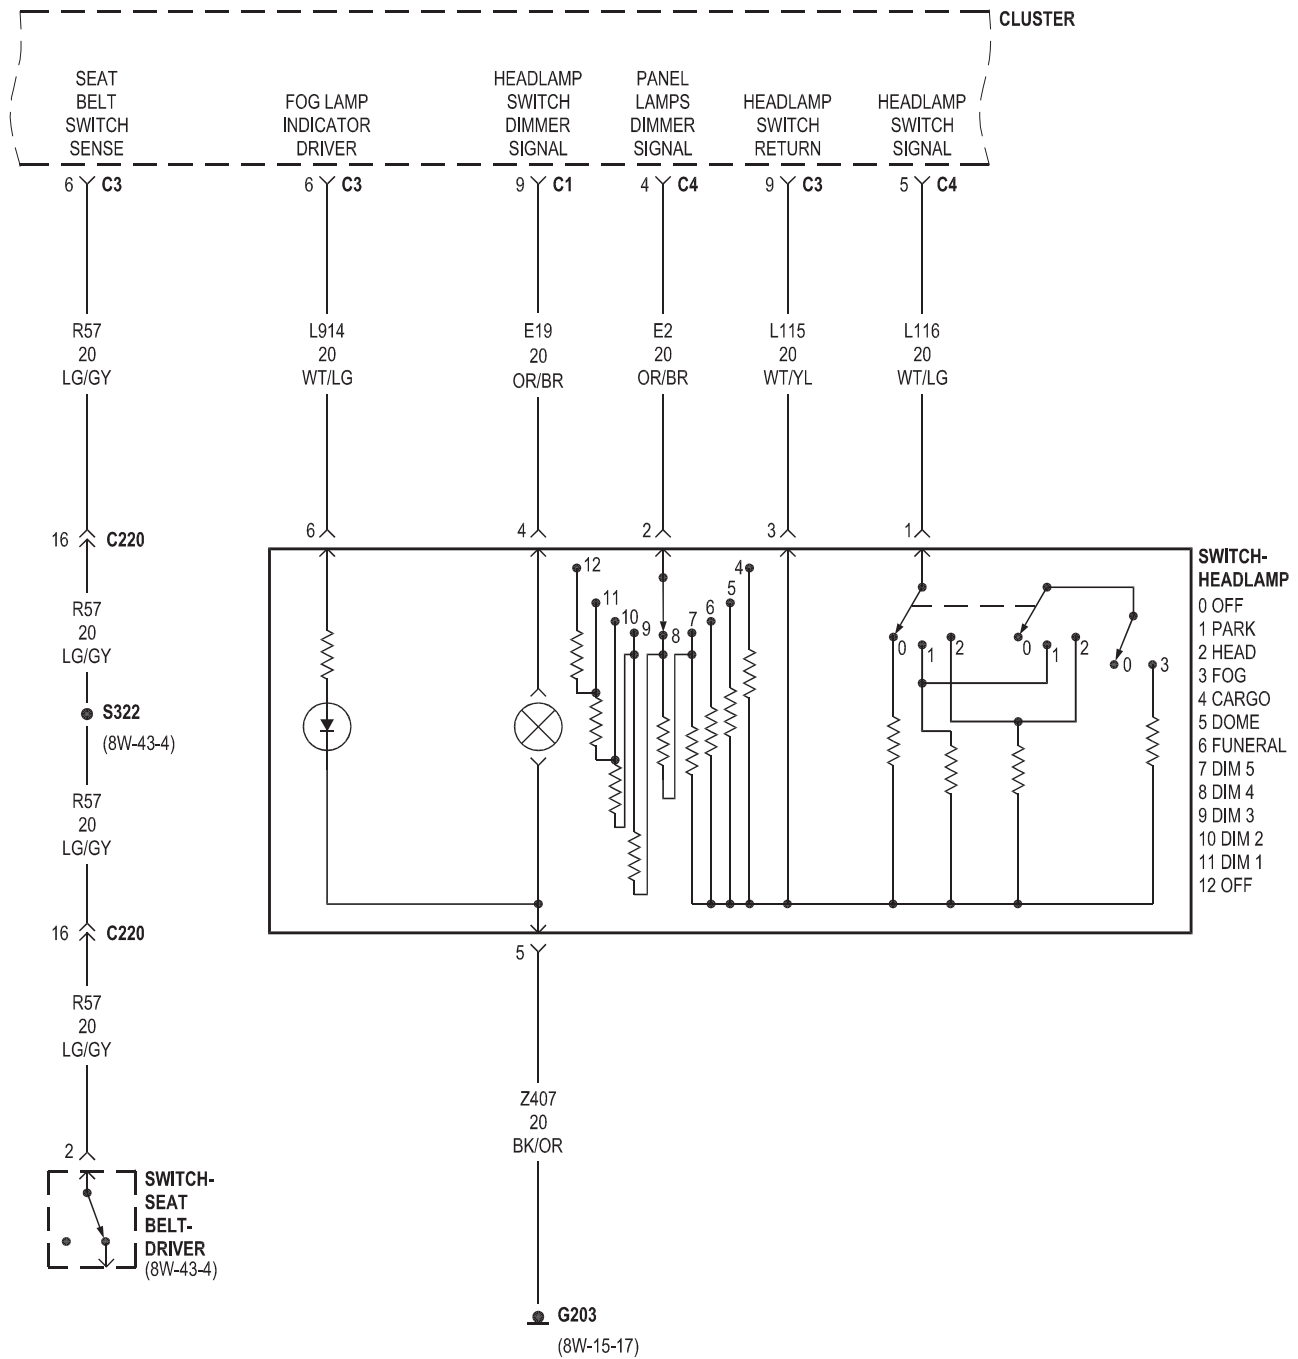

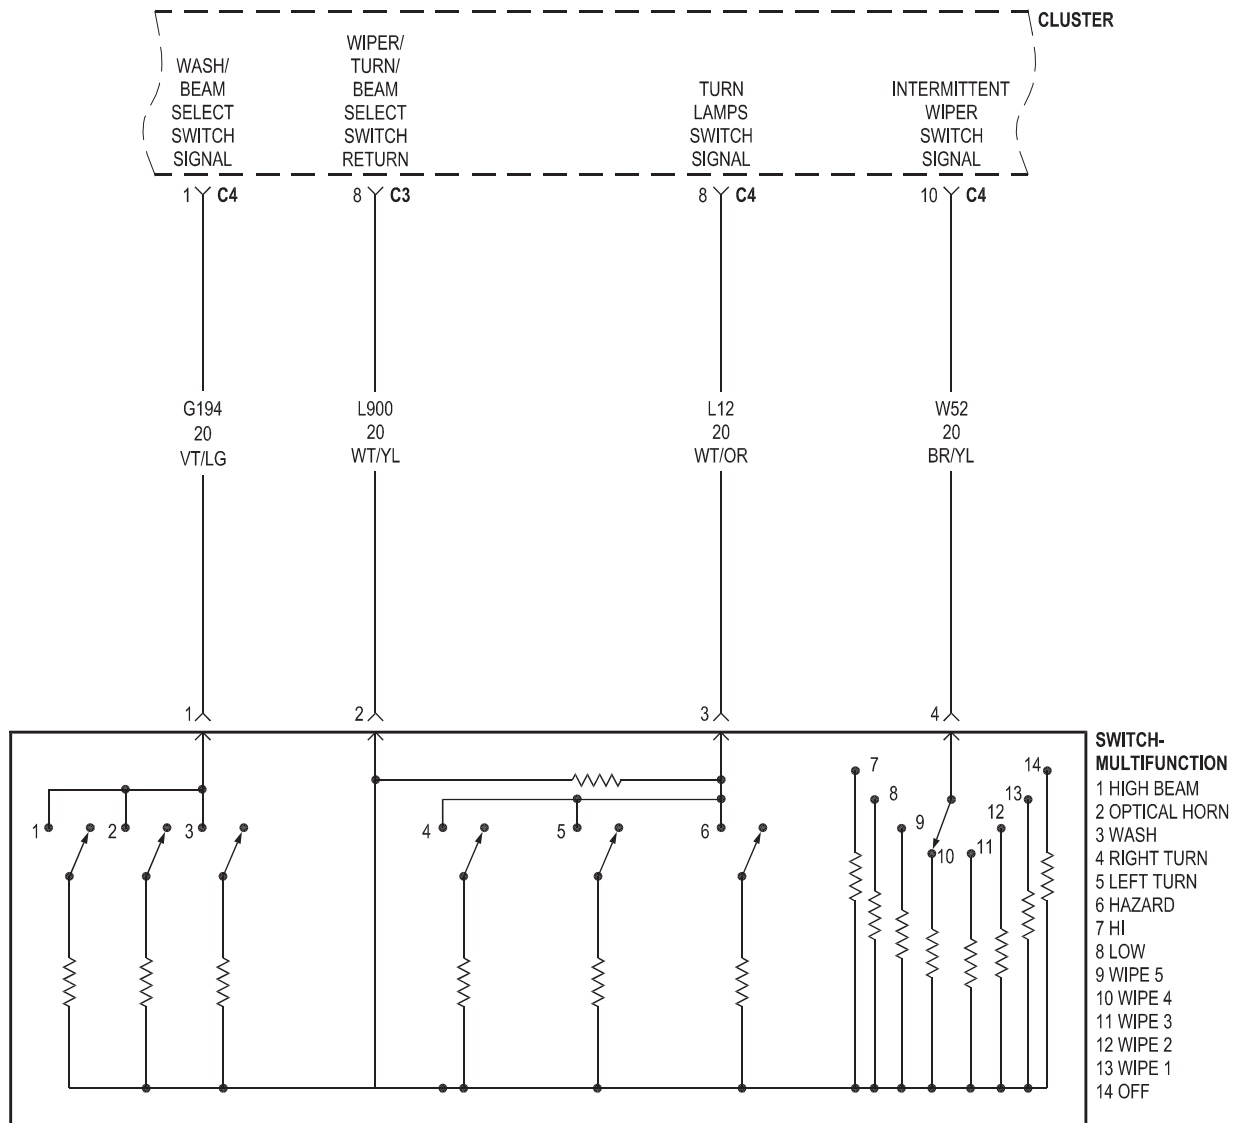



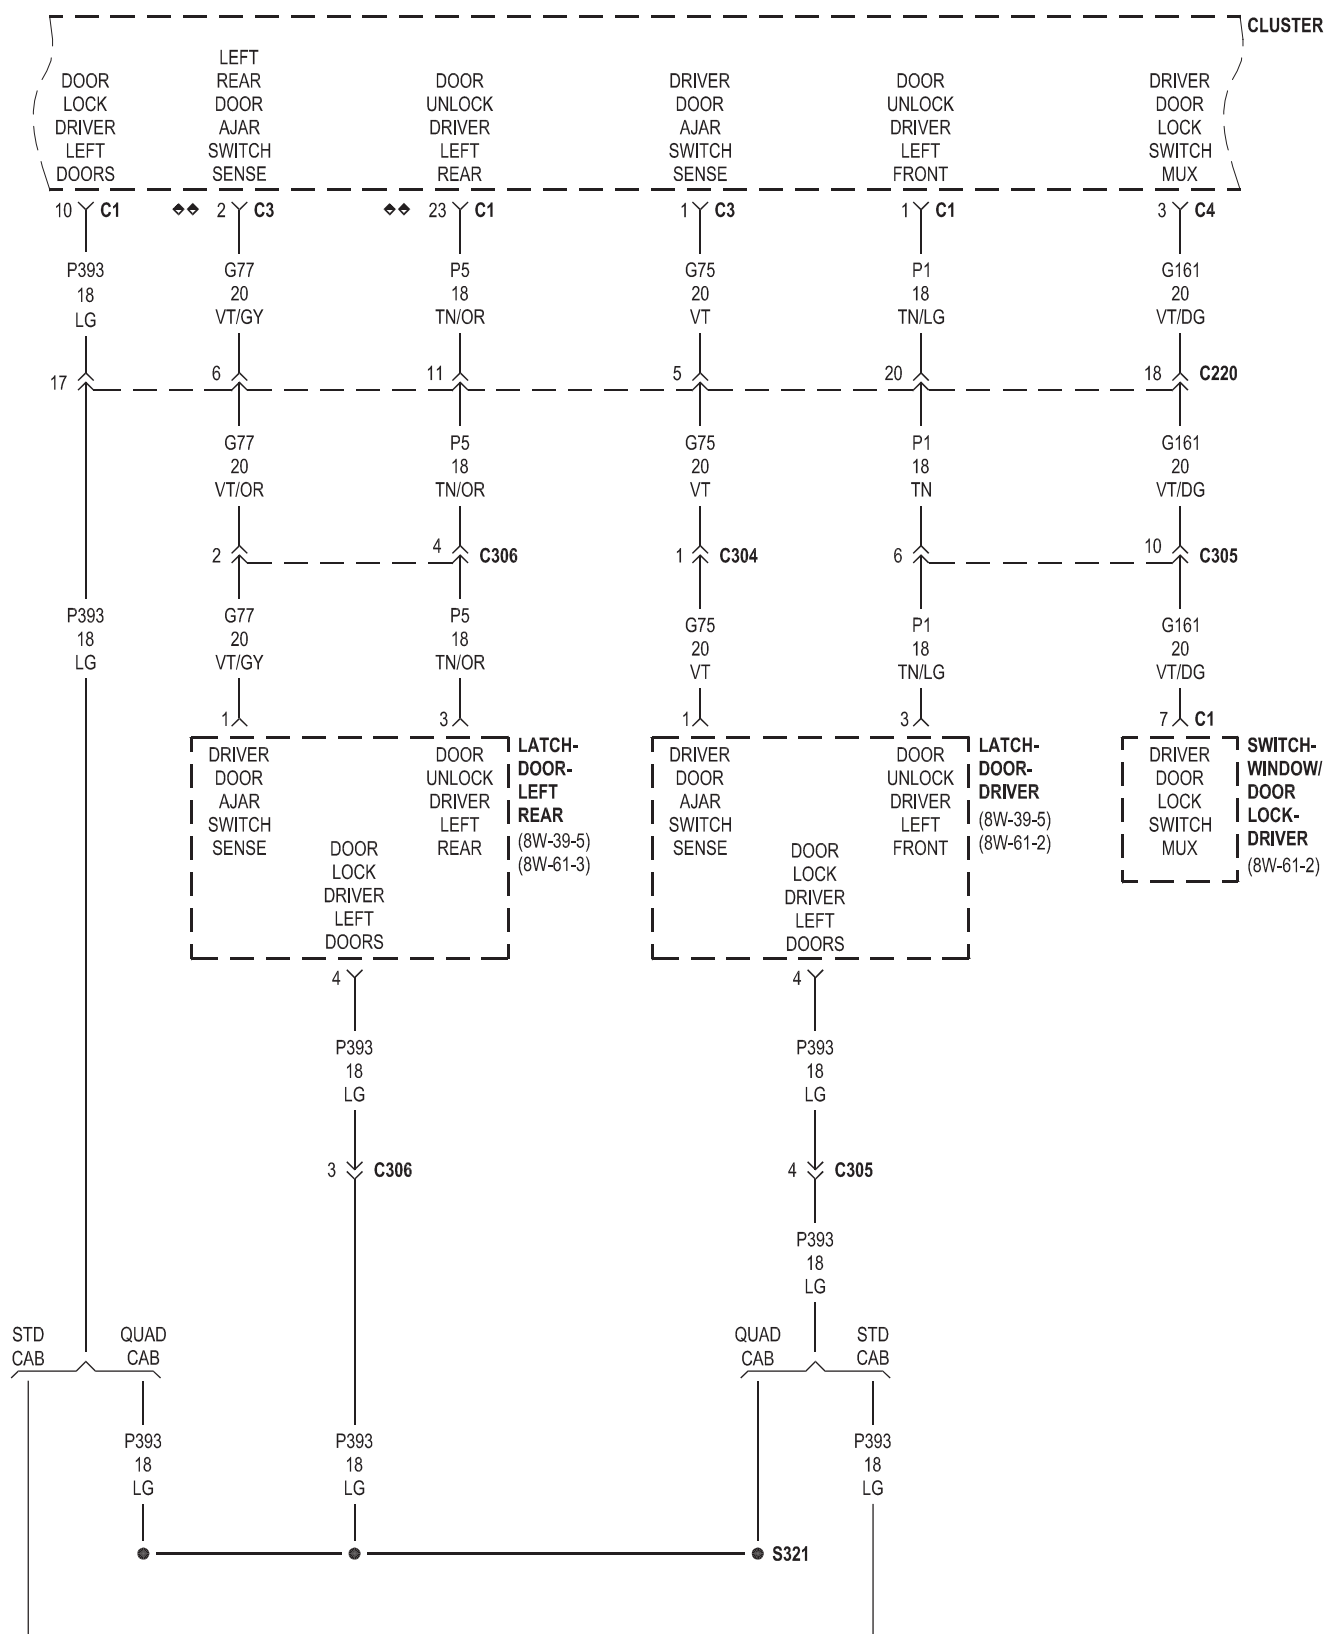

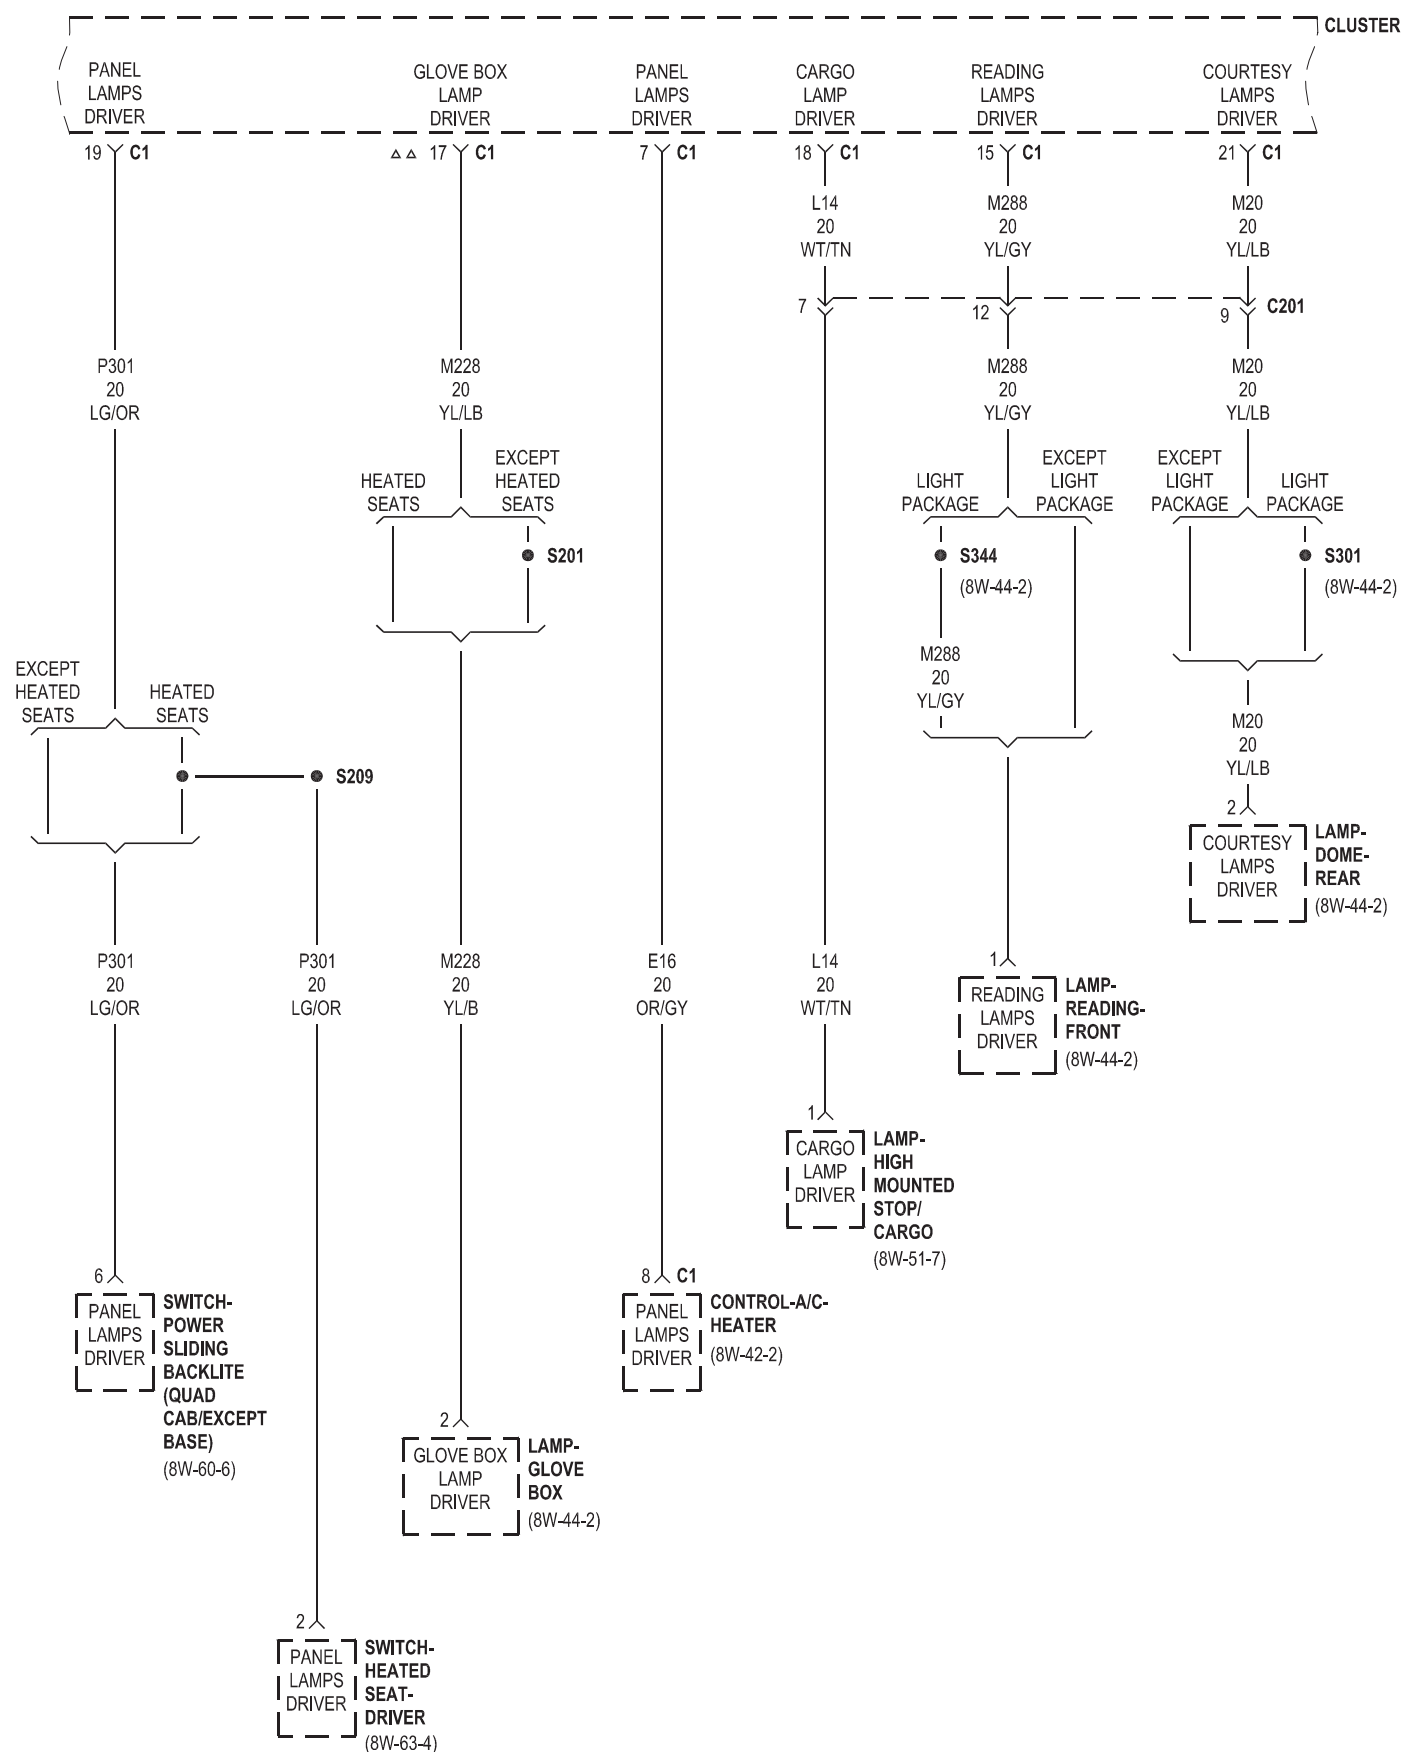





## )

