

## 8W-02 COMPONENT INDEX

<b>Component</b>	<b>Page</b>	<b>Component</b>	<b>Page</b>
Actuator-Recirculation Door . . . . .	8W-42	Lamps-Tail/Stop/Turn . . . . .	8W-51
Actuators-Blend Door . . . . .	8W-42	Lamps-Vanity . . . . .	8W-44
Actuators-Mode Door . . . . .	8W-42	Latch-Liftgate-Manual Release . . . . .	8W-61
Airbag-Squibs . . . . .	8W-43	Latch-Power Liftgate . . . . .	8W-39, 61
Airbags-Side Curtains . . . . .	8W-43	Latches-Door . . . . .	8W-61
Amplifier-Radio . . . . .	8W-47	Media System-Monitor/DVD . . . . .	8W-47
Assembly-Exhaust Gas Recirculation Valve . .	8W-30	Mini Fuses . . . . .	8W-10
Assembly-Line Pressure Sensor/Variable Force Solenoid . . . . .	8W-31	Mirror-Inside Rearview . . . . .	8W-49
Assembly-Natural Vacuum Leak Detection . .	8W-30	Mirrors-Outside Rearview . . . . .	8W-62
Assembly-Power Liftgate Drive Unit . . . . .	8W-61	Module-Antilock Brakes . . . . .	8W-35
Assembly-Shift Motor/Mode Sensor . . . . .	8W-31	Module-Brake Provision . . . . .	8W-54
Assembly-Transmission Solenoid/Pressure Switch . . . . .	8W-31	Module-Electronic Overhead . . . . .	8W-49
Assembly-Transmission Solenoid/TRS . . . . .	8W-31	Module-Front Control . . . . .	8W-13, 35
B+ Module . . . . .	8W-10	Module-Fuel Pump . . . . .	8W-30
Battery . . . . .	8W-20	Module-Hands Free . . . . .	8W-55
Booster-Active Brake . . . . .	8W-35	Module-Heated Seat . . . . .	8W-63
Capacitor-Ignition . . . . .	8W-30	Module-Integrated Power . . . . .	8W-13
Cartridge Fuses . . . . .	8W-10	Module-Memory Mirror-Driver . . . . .	8W-62
Chime-Power Liftgate . . . . .	8W-61	Module-Memory Mirror-Passenger . . . . .	8W-62
Circuit Breaker . . . . .	8W-12	Module-Occupant Classification . . . . .	8W-43
Clockspring . . . . .	8W-33, 40, 43	Module-Occupant Restraint Controller . . . . .	8W-43
Cluster . . . . .	8W-40	Module-Power Liftgate . . . . .	8W-61
Clutch-A/C Compressor . . . . .	8W-42	Module-Power-Blower Motor-Front . . . . .	8W-42
Coils-Ignition . . . . .	8W-30	Module-Powertrain Control . . . . .	8W-30, 31
Controls-A/C-Heater . . . . .	8W-42	Module-Seat Memory . . . . .	8W-63
Data Link Connector . . . . .	8W-18	Module-Sentry Key Remote Entry . . . . .	8W-39
Fan Module-Condenser Cooling . . . . .	8W-30	Motor-Adjustable Pedals . . . . .	8W-56
Fuses . . . . .	8W-10, 12, 13	Motor-Blower-Front . . . . .	8W-42
Fusible Link . . . . .	8W-20	Motor-Blower-Rear . . . . .	8W-42
Generator . . . . .	8W-20	Motor-IAC . . . . .	8W-30
Glass-Liftgate-Heated . . . . .	8W-48	Motor-Rear Window Wiper . . . . .	8W-53
Grounds . . . . .	8W-15	Motor-Sunroof . . . . .	8W-64
Heaters-Seat . . . . .	8W-63	Motor-Windshield Wiper . . . . .	8W-53
Horns . . . . .	8W-41	Motors-Seat Adjusters . . . . .	8W-63
Injectors . . . . .	8W-30	Motors-Window . . . . .	8W-60
Junction Block . . . . .	8W-12, 18	Power Distribution Center . . . . .	8W-10
Lamp-Center Bezel . . . . .	8W-44	Power Outlets . . . . .	8W-41
Lamp-High Mounted Stop . . . . .	8W-51	Pump-Auxiliary Coolant . . . . .	8W-42
Lamp-License Plate . . . . .	8W-51	Pump-Washer Windshield . . . . .	8W-53
Lamp-Liftgate . . . . .	8W-44	Radio . . . . .	8W-47
Lamp-Passenger Airbag On/Off Indicator . . .	8W-43	Receiver-Satellite . . . . .	8W-47
Lamp-Reading-Front . . . . .	8W-44	Relay-A/C Clutch . . . . .	8W-42
Lamps-Dome . . . . .	8W-44	Relay-Accessory Delay . . . . .	8W-12
Lamps-Fog . . . . .	8W-50	Relay-Adjustable Pedals . . . . .	8W-56
Lamps-Headlamp . . . . .	8W-50	Relay-Auto Shut Down . . . . .	8W-30
Lamps-Park/Turn . . . . .	8W-50	Relay-Fog Lamp . . . . .	8W-50
Lamps-Side Marker . . . . .	8W-50	Relay-Fuel Pump . . . . .	8W-30
		Relay-Horn . . . . .	8W-41
		Relay-Park Lamp . . . . .	8W-52

<b>Component</b>	<b>Page</b>
Relay-Radiator Fan High	8W-30
Relay-Radiator Fan Low	8W-30
Relay-Rear Window Defogger	8W-48
Relay-Run Remote	8W-10
Relay-Run/Start	8W-10
Relay-Starter Motor	8W-21
Relay-Stop Lamp Inhibit	8W-51, 54
Relay-Transmission Control	8W-31
Relays-Blower Motor	8W-42
Relays-Trailer Tow	8W-54
Relays-Wiper	8W-53
Resistor-Radiator Fan	8W-30
Resistors-Blower Motor	8W-42
Seat Belt-Tensioners	8W-43
Sensor-Accelerator Pedal Position	8W-30
Sensor-Adjustable Pedals	8W-56
Sensor-Ambient Air Temperature	8W-42
Sensor-Brake Fluid Level	8W-13, 35
Sensor-Camshaft Position	8W-30
Sensor-Crankshaft Position	8W-30
Sensor-Dynamics	8W-35
Sensor-Engine Coolant Temperature	8W-30
Sensor-Engine Oil Temperature	8W-30
Sensor-Evaporator Temperature	8W-42
Sensor-Front Impact-Left	8W-43
Sensor-Front Impact-Right	8W-43
Sensor-Infrared	8W-49
Sensor-Input Speed	8W-31
Sensor-Intake Air Temperature	8W-30
Sensor-Knocks	8W-30
Sensor-Liftgate Pinch-Left	8W-61
Sensor-Liftgate Pinch/Temp-Right	8W-61
Sensor-Line Pressure	8W-31
Sensor-MAP	8W-30
Sensor-Oil Pressure	8W-30
Sensor-Output Speed	8W-31
Sensor-Seat Track Position-Driver	8W-43
Sensor-Steering Angle	8W-18, 35
Sensor-Sun	8W-40
Sensor-Throttle Position	8W-30
Sensor-Transmission Range	8W-31
Sensor-Vacuum Pressure	8W-35
Sensor-Washer Fluid Level-Front Rear	8W-53

<b>Component</b>	<b>Page</b>
Sensors-Oxygen	8W-30
Sensors-Seat Weight	8W-43
Sensors-Side Impact	8W-43
Sensors-Wheel Speed	8W-35
Servo-Speed Control	8W-33
Solenoid-Brake Transmission Shift	
Interlock	8W-31
Solenoid-EVAP/Purge	8W-30
Solenoids-Multi Displacement System	8W-30
Spare	8W-12
Speakers	8W-47
Splices	8W-70
Starter	8W-21
Switch And Lamp-Glove Box	8W-44
Switch-Adjustable Pedals	8W-56
Switch-Headlamp	8W-40, 44, 50
Switch-Hood Ajar	8W-13
Switch-Horn	8W-41
Switch-Ignition	8W-10
Switch-Liftgate Ajar	8W-39
Switch-Liftgate Release PLG	8W-61
Switch-Memory Selector	8W-62
Switch-Mirror	8W-62
Switch-Multifunction	8W-53
Switch-Oil Pressure	8W-30
Switch-Parking Brake	8W-40
Switch-Seat Belt-Driver	8W-40
Switch-Stop Lamp	8W-51
Switch-Sunroof	8W-64
Switch-Sunroof/Liftgate PLG	8W-61
Switch-Tow/Haul Overdrive	8W-31
Switch-Traction Control	8W-35
Switch-Transfer Case Selector	8W-31
Switches-Heated Seat	8W-63
Switches-Power Window	8W-60
Switches-Remote Radio	8W-47
Switches-Seat	8W-63
Switches-Speed Control	8W-33
Switches-Window/Door Lock	8W-60, 61, 62
Throttle Body	8W-33
Transducer-A/C Pressure	8W-42
Wiring-Trailer Tow 4-Way	8W-54