

8W-39 VEHICLE THEFT SECURITY SYSTEM

Component	Page	Component	Page
Fuse 14	8W-39-2	Latch-Door-Right Front	8W-39-4
Fuse 16	8W-39-5	Latch-Door-Right Rear	8W-39-4
Fuse 18	8W-39-2	Latch-Power Liftgate	8W-39-4
G208	8W-39-2	Module-Front Control	8W-39-2, 5
G304	8W-39-4	Module-Integrated Power	8W-39-5
G306	8W-39-3, 4	Module-Memory Mirror-Driver	8W-39-3
Horn-No. 1	8W-39-5	Module-Memory Mirror-Passenger	8W-39-4
Horn-No. 2	8W-39-5	Module-Power Liftgate	8W-39-4
Junction Block	8W-39-2	Module-Powertrain Control	8W-39-2
Lamp-Headlamp-Left	8W-39-5	Module-Sentry Key Remote Entry	8W-39-2
Lamp-Headlamp-Right	8W-39-5	Relay-Horn	8W-39-5
Latch-Door-Left Front	8W-39-3	Switch-Liftgate Ajar	8W-39-4
Latch-Door-Left Rear	8W-39-4		









