

## 8W-61 POWER DOOR LOCKS

<b>Component</b>	<b>Page</b>
Chime-Power Liftgate . . . . .	8W-61-4
Circuit Breaker . . . . .	8W-61-2
Cluster . . . . .	8W-61-2, 3, 6, 8
Fuse 11 . . . . .	8W-61-4
G304 . . . . .	8W-61-3, 7
G306 . . . . .	8W-61-2, 3, 4, 5, 8
Junction Block . . . . .	8W-61-2, 4
Latch-Door-Left Front . . . . .	8W-61-3
Latch-Door-Left Rear . . . . .	8W-61-3
Latch-Door-Right Front . . . . .	8W-61-8
Latch-Door-Right Rear . . . . .	8W-61-8
Latch-Liftgate-Manual Release . . . . .	8W-61-3
Latch-Power Liftgate . . . . .	8W-61-6

<b>Component</b>	<b>Page</b>
Module-Front Control . . . . .	8W-61-4
Module-Memory Mirror-Driver . . . . .	8W-61-2, 3
Module-Memory Mirror-Passenger . . . . .	8W-61-2, 8
Module-Power Liftgate . . . . .	8W-61-4, 5, 6, 7
Motor-Sunroof . . . . .	8W-61-5
Power Distribution Center . . . . .	8W-61-4
Relay-Accessory Delay . . . . .	8W-61-2
Sensor-Liftgate Pinch-Left . . . . .	8W-61-6
Sensor-Liftgate Pinch/Temp-Right . . . . .	8W-61-6
Switch-Liftgate Release PLG . . . . .	8W-61-5
Switch-Sunroof/Liftgate PLG . . . . .	8W-61-5
Switch-Window/Door Lock-Driver . . . . .	8W-61-2
Switch-Window/Door Lock-Passenger . . . . .	8W-61-2













