

8W-63 POWER SEAT

Component	Page
Fuse 19	8W-63-7
Fuse 5	8W-63-2, 5, 6, 8
G207	8W-63-7
G208	8W-63-3
G306	8W-63-2, 5, 6, 8, 9
Heater-Cushion Pad-Driver	8W-63-8, 9
Heater-Cushion Pad-Passenger	8W-63-8, 9
Heater-Seat Back-Driver	8W-63-9
Heater-Seat Back-Passenger	8W-63-9
Junction Block	8W-63-2, 5, 6, 7, 8
Module-Heated Seat	8W-63-8
Module-Memory Mirror-Driver	8W-63-2
Module-Memory Mirror-Passenger	8W-63-2
Module-Seat Memory	8W-63-2, 3, 4
Motor-Adjustable Pedals	8W-63-2
Motor-Seat Adjuster-Driver Horizontal . .	8W-63-4, 5

Component	Page
Motor-Seat Adjuster-Driver Recliner . . .	8W-63-3, 5
Motor-Seat Adjuster-Front Driver	
Vertical	8W-63-4, 5
Motor-Seat Adjuster-Passenger	
Horizontal	8W-63-6
Motor-Seat Adjuster-Passenger Recliner . . .	8W-63-6
Motor-Seat Adjuster-Rear Driver	
Vertical	8W-63-4, 5
Power Distribution Center	8W-63-2, 5, 6, 8
Sensor-Adjustable Pedals	8W-63-2
Switch-Adjustable Pedals	8W-63-3
Switch-Heated Seat-Driver	8W-63-7
Switch-Heated Seat-Passenger	8W-63-7
Switch-Seat-Driver	8W-63-3, 5, 9
Switch-Seat-Passenger	8W-63-6















