


8W-13 INTEGRATED POWER MODULE

Component	Page	Component	Page
Amplifier-Radio	8W-13-19	Fuse 39	8W-13-20
Assembly-Shift Motor/Mode		Fuse 40	8W-13-20
Sensor	8W-13-18, 25, 26, 27	Fuse 42	8W-13-20
Assembly-Transmission Solenoid	8W-13-35	Fuses	8W-13-5, 6
Assembly-Transmission Solenoid/TRS	8W-13-12	Fusible Link	8W-13-7, 8
Assembly-Winch	8W-13-7	G100	8W-13-7
Auxiliary PDC Box	8W-13-8, 15	G101	8W-13-7
Backlite-Heated	8W-13-10	G102	8W-13-7
Battery	8W-13-7, 8	G104	8W-13-15, 36
Battery-Auxiliary	8W-13-7	G105	8W-13-7
Cluster	8W-13-9, 13, 19, 21, 30	G106	8W-13-36
Clutch-A/C Compressor	8W-13-33	G107	8W-13-36
Control-A/C-Heater	8W-13-9, 18	G111	8W-13-7
Data Link Connector	8W-13-13, 29	G201	8W-13-17
Drive-Fan-Radiator	8W-13-9	Generator	8W-13-7
Fuse 1	8W-13-9	Heater-Fuel	8W-13-33
Fuse 2	8W-13-9	Horn-No. 1	8W-13-36
Fuse 4	8W-13-10	Horn-No. 2	8W-13-36
Fuse 5	8W-13-9	Lamp-Backup-Left	8W-13-32
Fuse 6	8W-13-9	Lamp-Fog-Left Front	8W-13-32
Fuse 8	8W-13-10	Lamp-Headlamp-Left	8W-13-28, 31
Fuse 9	8W-13-10	Lamp-Headlamp-Right	8W-13-28, 31
Fuse 10	8W-13-11	Lamp-Park/Turn-Left Front	8W-13-14, 28
Fuse 11	8W-13-10	Lamp-Park/Turn-Right Front	8W-13-14, 28
Fuse 12	8W-13-14	Lamp-Tail Stop/Turn-Left	8W-13-29
Fuse 13	8W-13-14	Lamp-Tail Stop/Turn-Right	8W-13-29
Fuse 14	8W-13-14	Lamp-Underhood	8W-13-10
Fuse 15	8W-13-14	Media System-Monitor/DVD	8W-13-13
Fuse 16	8W-13-14	Mirror-Inside Rearview	8W-13-16, 32
Fuse 18	8W-13-15	Mirror-Outside Rearview-Driver	8W-13-10
Fuse 19	8W-13-15	Module-Anti-Lock Brakes	8W-13-9, 14, 15, 29, 30
Fuse 20	8W-13-15	Module-Axle Disconnect-Front	8W-13-22, 26
Fuse 21	8W-13-15	Module-Brake Provision	8W-13-14
Fuse 22	8W-13-17	Module-Engine Control	8W-13-16, 20, 21, 23
Fuse 23	8W-13-18	Module-Final Drive Control	8W-13-9, 10
Fuse 24	8W-13-18	Module-Fuel Pump	8W-13-23
Fuse 25	8W-13-18	Module-Hands Free	8W-13-13
Fuse 26	8W-13-18	Module-Occupant Restraint Controller	8W-13-15
Fuse 27	8W-13-18	Module-Powertrain Control	8W-13-8, 11, 12, 16, 19, 21, 22, 23, 32, 34, 35
Fuse 28	8W-13-16	Module-Sentry Key Remote Entry	8W-13-13, 17
Fuse 29	8W-13-16	Module-Totally Integrated Power	8W-13-3, 4, 7, 9, 10, 11, 12, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36
Fuse 30	8W-13-9	Module-Transmission Control	8W-13-10, 35
Fuse 31	8W-13-19	Motor-Blower	8W-13-24
Fuse 32	8W-13-15	Motor-Condenser Fan	8W-13-33
Fuse 33	8W-13-9	Motor-Windshield Wiper	8W-13-34, 36
Fuse 35	8W-13-19	Motor/Module-Sunroof	8W-13-9
Fuse 36	8W-13-19		
Fuse 37	8W-13-16		
Fuse 38	8W-13-19		


Component	Page
Port-Upfitters	8W-13-8
Power Outlet	8W-13-19
Power Outlet-Console	8W-13-9
Power Outlet-Instrument Panel	8W-13-20
Power Outlet-Lower Console	8W-13-20
Pump-Washer-Windshield	8W-13-22
Radio	8W-13-13
Receiver-Satellite	8W-13-13
Relay-Intake Air Heater	8W-13-7
Relay-Turbo Shutdown	8W-13-16
Seat Belt-Tension Reducer-Driver	8W-13-20
Sensor-Ambient Air Temperature	8W-13-28
Sensor-Brake Fluid Level	8W-13-23
Sensor-Dynamics	8W-13-9
Sensor-Prop Shaft Speed-Front	8W-13-22
Sensor-Prop Shaft Speed-Rear	8W-13-30
Sensor-Steering Angle	8W-13-16
Sensor-Transfer Case Position	8W-13-27
Sensor-Transmission Range	8W-13-11, 12, 21
Solenoid-Wastegate	8W-13-9
Starter	8W-13-7, 33

Component	Page
Switch-Adjustable Pedals	8W-13-15, 22
Switch-Backup Lamp	8W-13-31
Switch-Clutch Interlock	8W-13-11, 12
Switch-Door Lock-Passenger	8W-13-16
Switch-Heated Seat-Driver	8W-13-23
Switch-Heated Seat-Passenger	8W-13-23
Switch-Ignition	8W-13-17
Switch-Passenger Airbag On/Off	8W-13-15
Switch-Power Sliding Backlite	8W-13-34
Switch-Seat-Driver	8W-13-18
Switch-Seat-Passenger	8W-13-18
Switch-Security Hood	8W-13-28
Switch-Stop Lamp	8W-13-16, 18, 29
Switch-Transfer Case Selector	8W-13-16
Switch-Washer Fluid Level	8W-13-21
Switch-Window/Door Lock-Driver	8W-13-18, 34
Transducer-A/C Pressure	8W-13-31, 32
Wiring-Trailer Tow	8W-13-14, 15, 24
Wiring-Trailer Tow 4-Way	8W-13-14, 24
Wiring-Trailer Tow 7-Way	8W-13-15

MODULE-
TOTALLY INTEGRATED POWER
(FRONT VIEW)

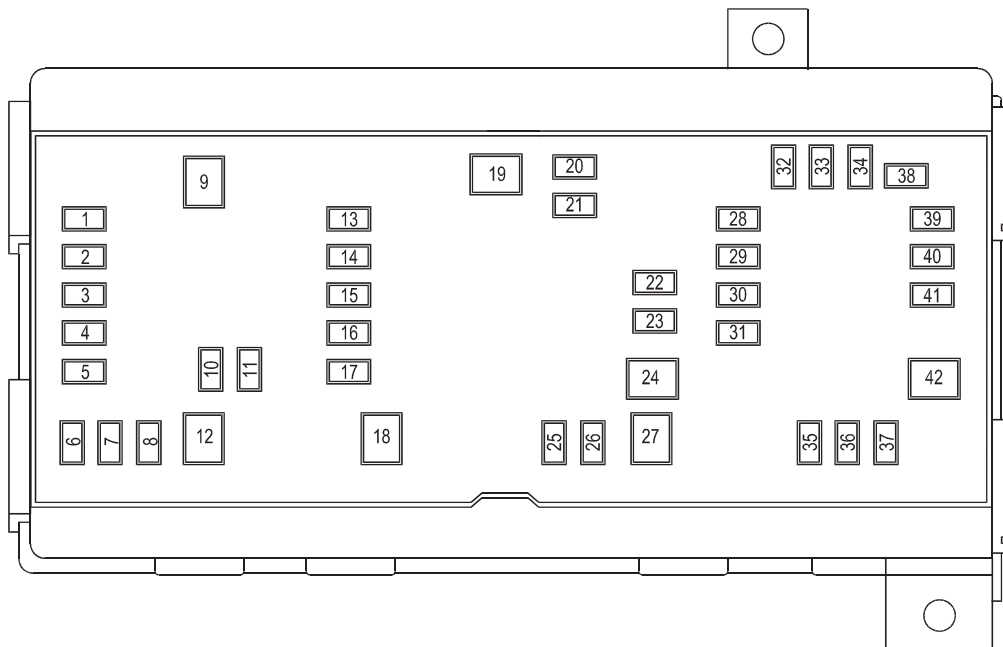

MODULE-
TOTALLY INTEGRATED POWER
(REAR VIEW)

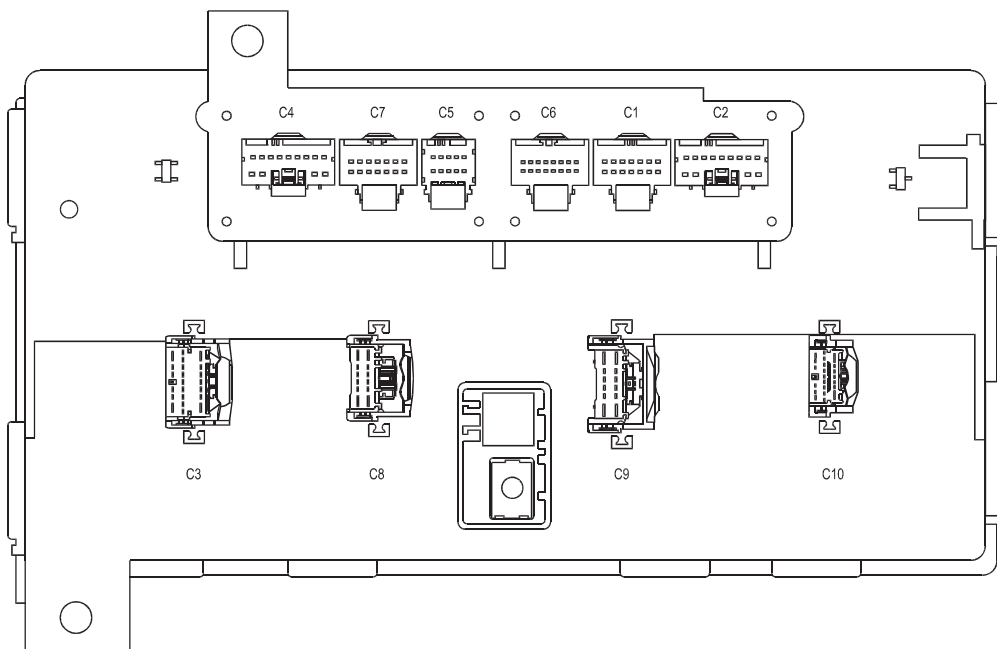

FUSES
(TIPM)

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	20A	A405 18RD/DB	FUSED B(+)
2	20A	A941 18RD	FUSED B(+)
3	-	-	-
4	20A	A104 20YL/RD	FUSED B(+)
5	20A	A310 16RD/LB ▽▽	FUSED B(+)
6	10A	A212 20RD/OR ○○	FUSED B(+)
7	-	-	-
8	10A	C16 18DB/GY ▽▽	REAR WINDOW DEFOGGER CONTROL OUTPUT
9	30A	A121 14RD/YL ▼▼▼▼	FUSED B(+)
10	5A	T41 20YL/DB	PARK/NEUTRAL POSITION SWITCH SENSE (T41)
11	20A	A114 18GY/RD	FUSED B(+)
12	30A	A400 14TN/RD ◆◆◆◆	FUSED B(+)
13	25A	A111 14DG/RD ■	FUSED B(+)
14	15A	L7 20WT/YL	FUSED PARK LAMP FEED
15	20A	L678 18BR	FUSED PARK LAMP FEED
16	15A	L70 20WT/GY	FUSED PARK LAMP FEED
17	-	-	-
18	40A	A107 12TN/RD ■	FUSED B(+)
19	30A	A100 14RD/VT ◆◆◆◆	BACKUP LAMP FEED
20	10A	F100 20PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
21	10A	F201 20PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
22	2A	A106 20LB/RD	FUSED B(+)
23	10A	A919 20RD	FUSED B(+)
24	20A	A916 16RD	FUSED B(+)
25	10A	A940 18RD	FUSED B(+)


- AWAL
- ▽▽ EXCEPT BASE
- DIESEL
- ▼▼▼▼ POWER WAGON
- ◆◆◆◆ TRAILER TOW


FUSES
(TIPM)


FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
26	20A	A103 18GY/RD	FUSED B(+)
27	40A	A210 12OR/RD	FUSED B(+)
28	10A	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
29	10A	F21 20PK/DG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
30	15A	F960 20PK/LG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
31	10A	A918 20RD ●●●●	FUSED B(+)
32	10A	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
33	10A	F921 20PK/LB	FUSED IGNITION SWITCH OUTPUT (RUN-START)
34	-	-	-
35	15A	A944 20RD	FUSED B(+)
36	25A	A116 16YL/RD	FUSED B(+)
37	15A	A118 18RD/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
38	20A	A205 18RD/OR	FUSED B(+)
39	10A	F983 20PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
40	20A	F984 18PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
41	-	-	-
42	30A	A209 10RD ○○	FUSED B(+)


○○ DIESEL


●●●● EXCEPT DIESEL MTC

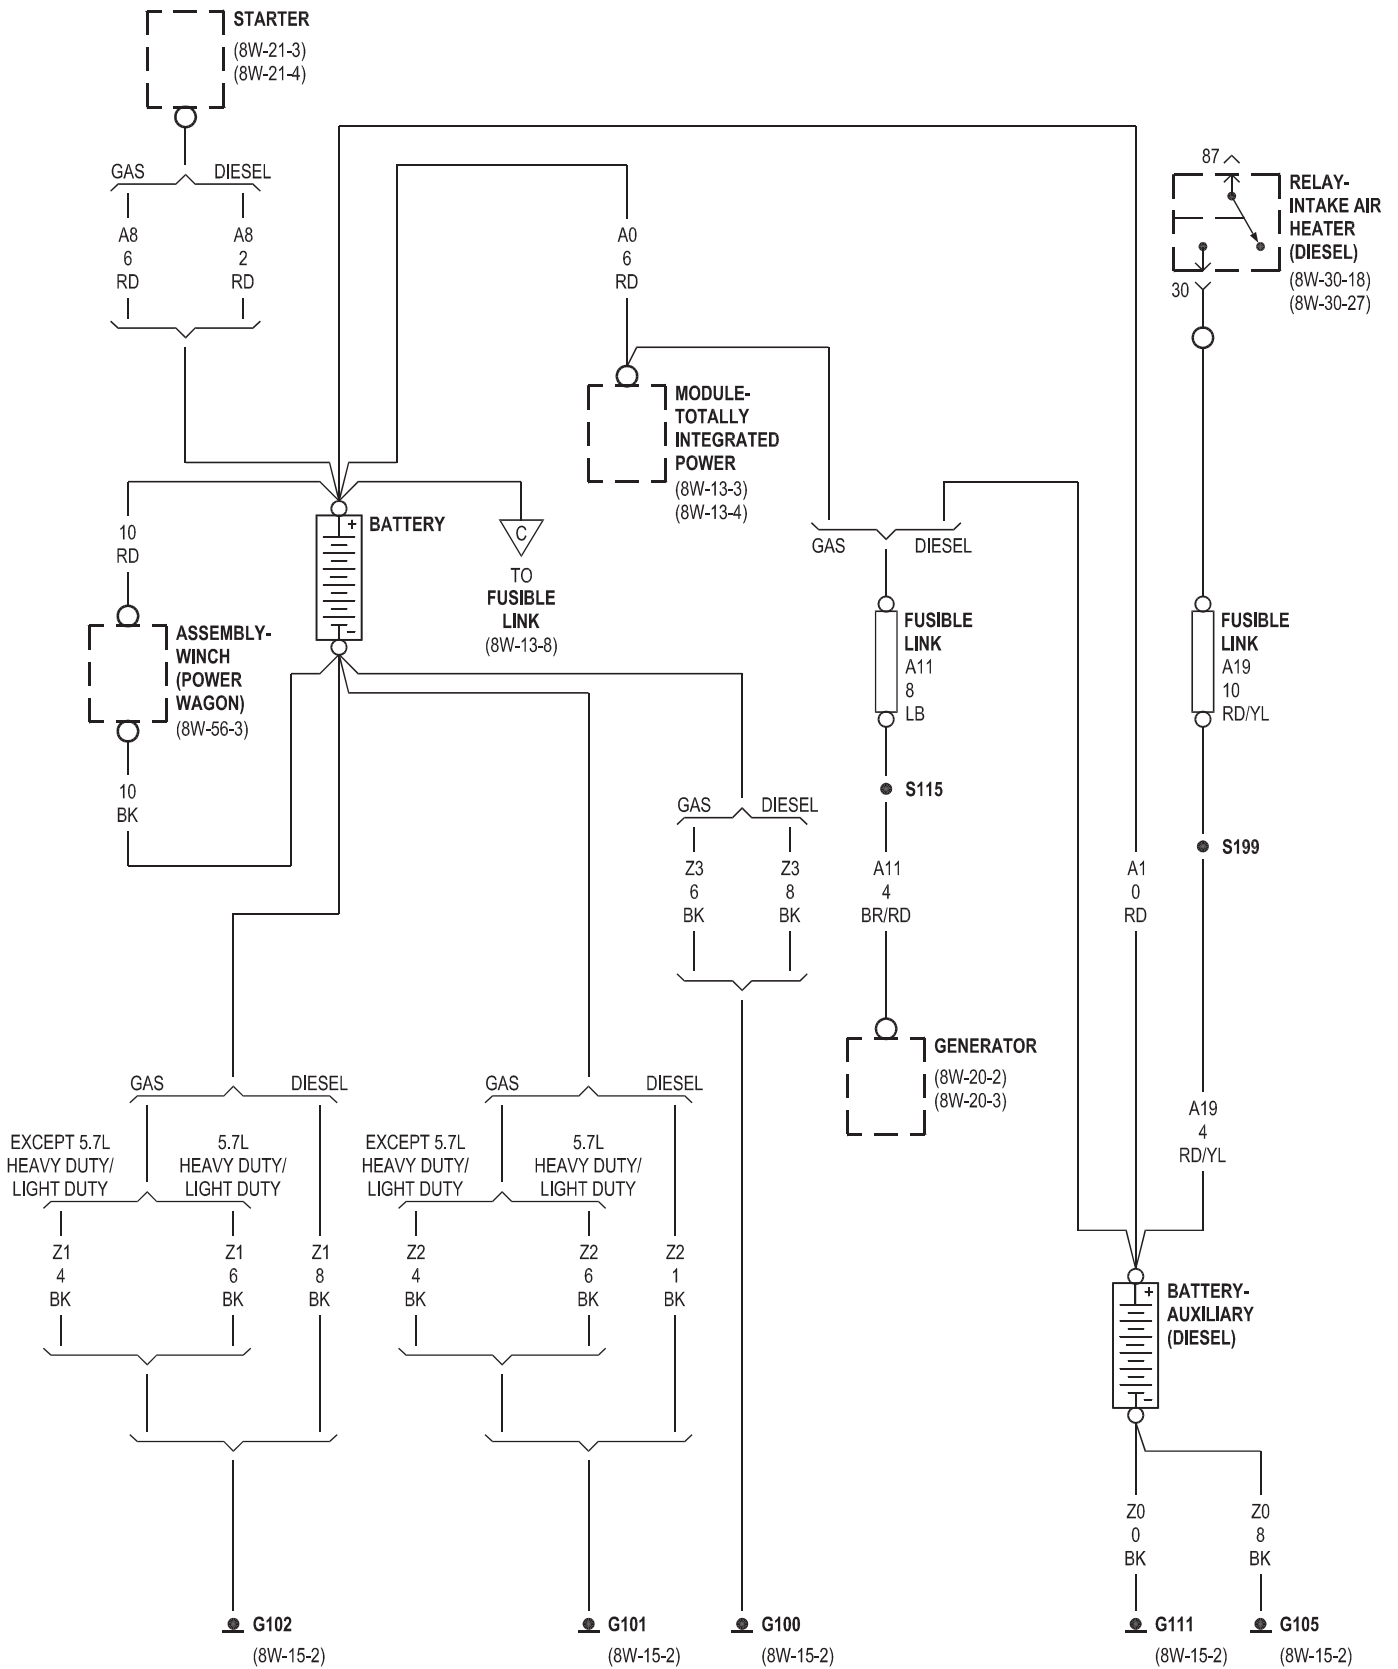


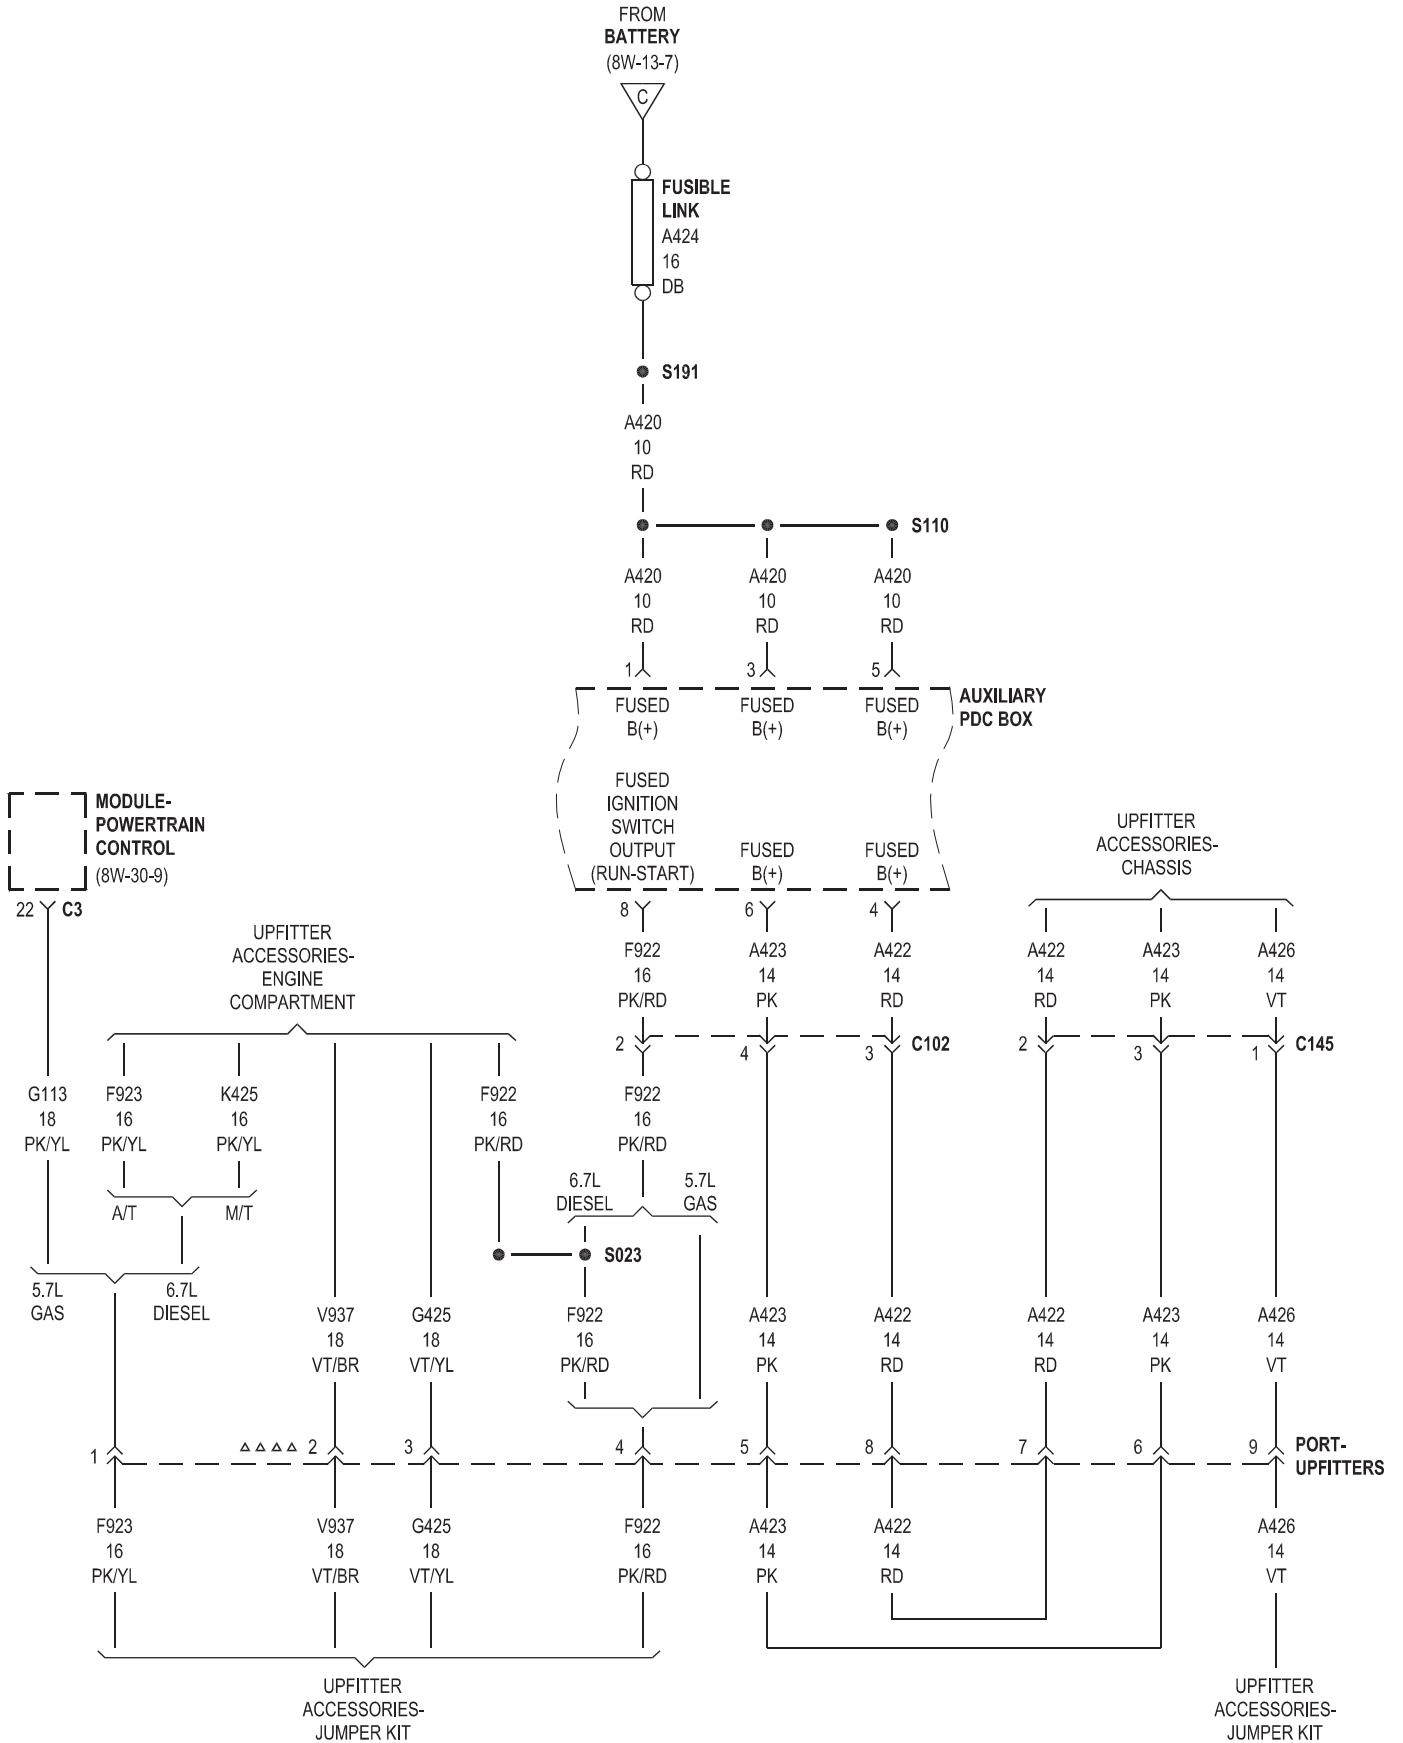

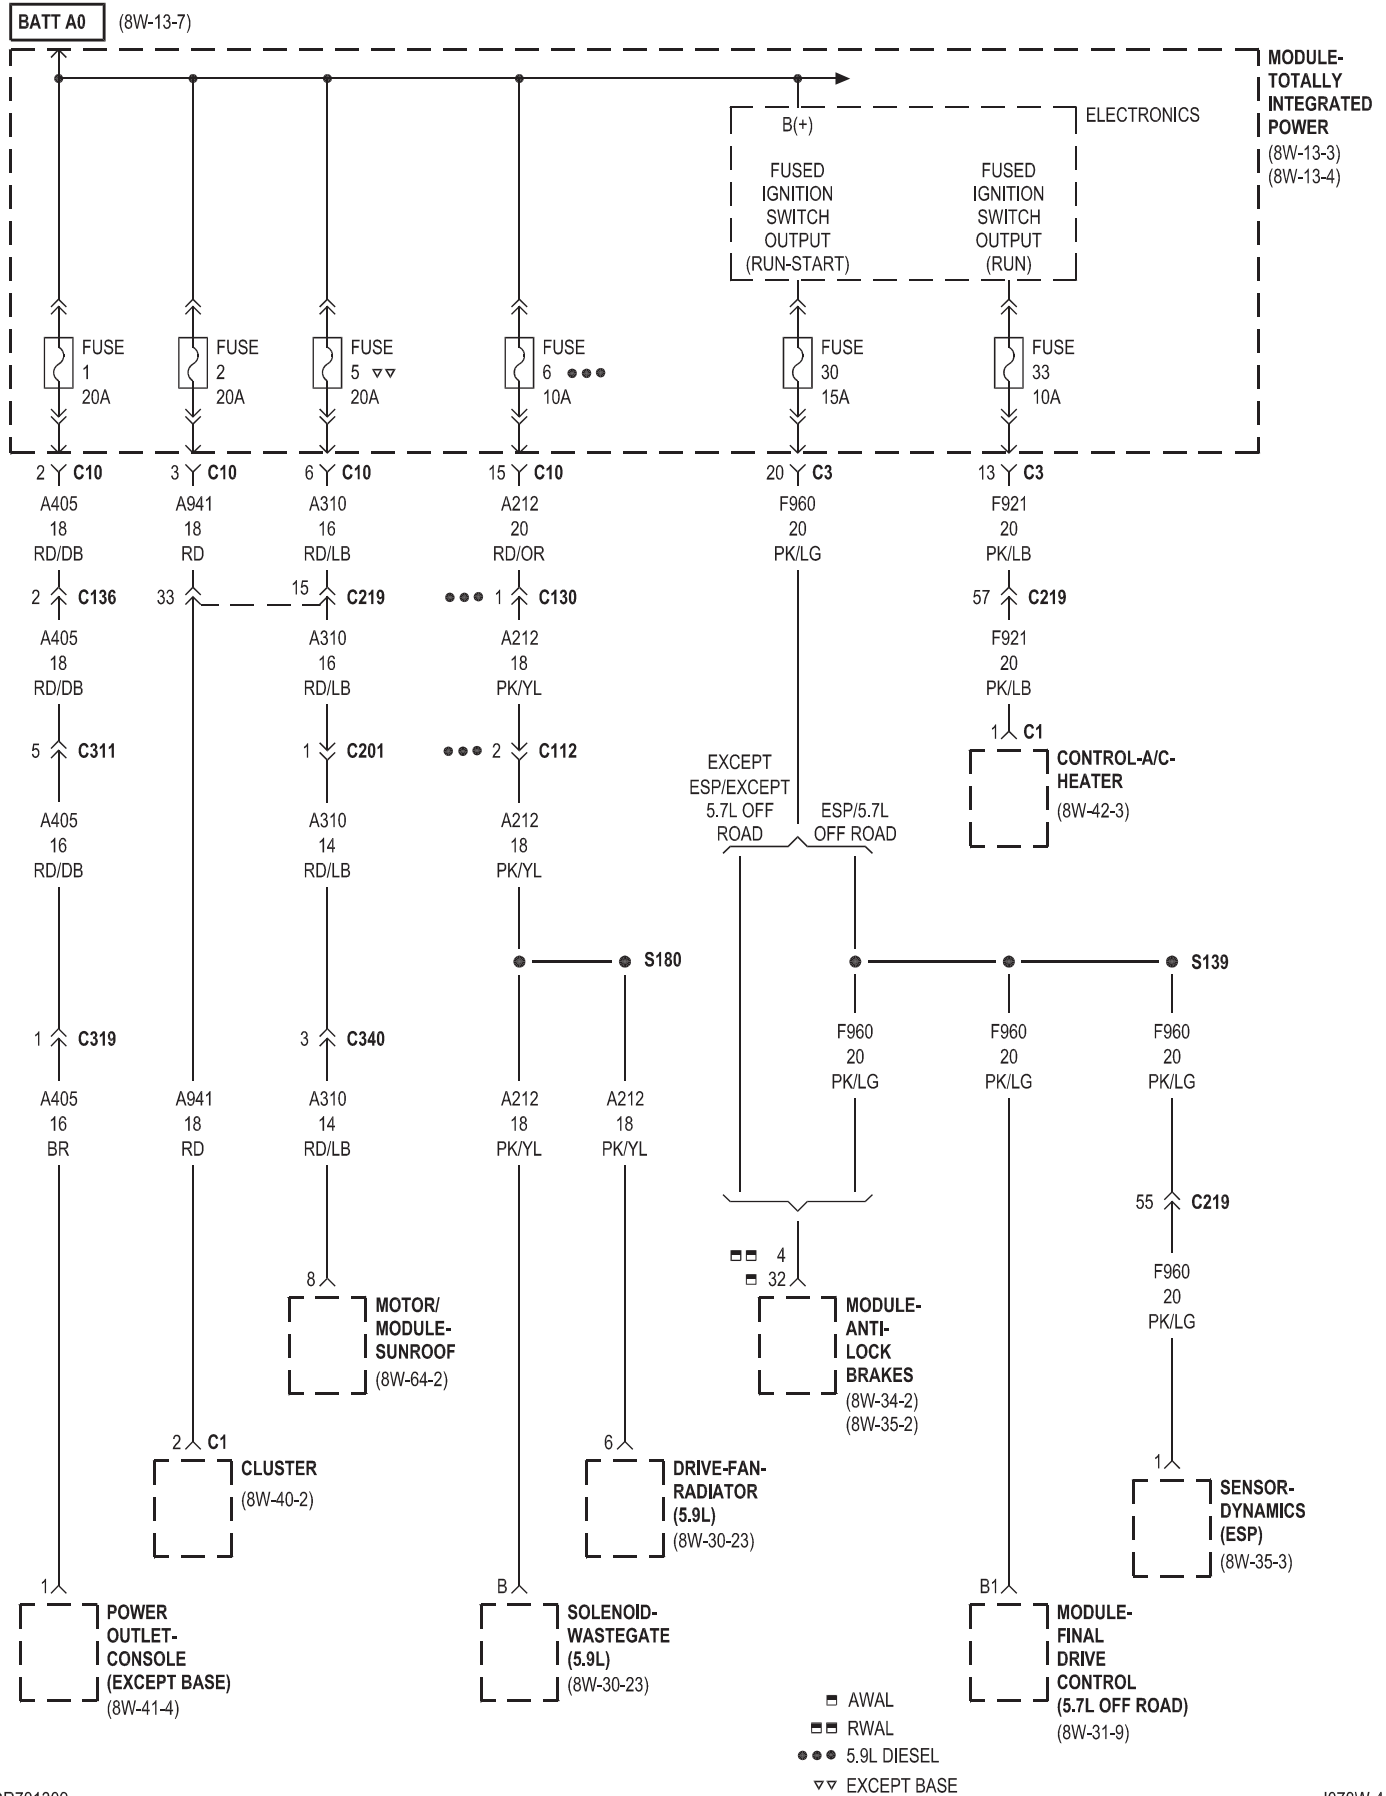

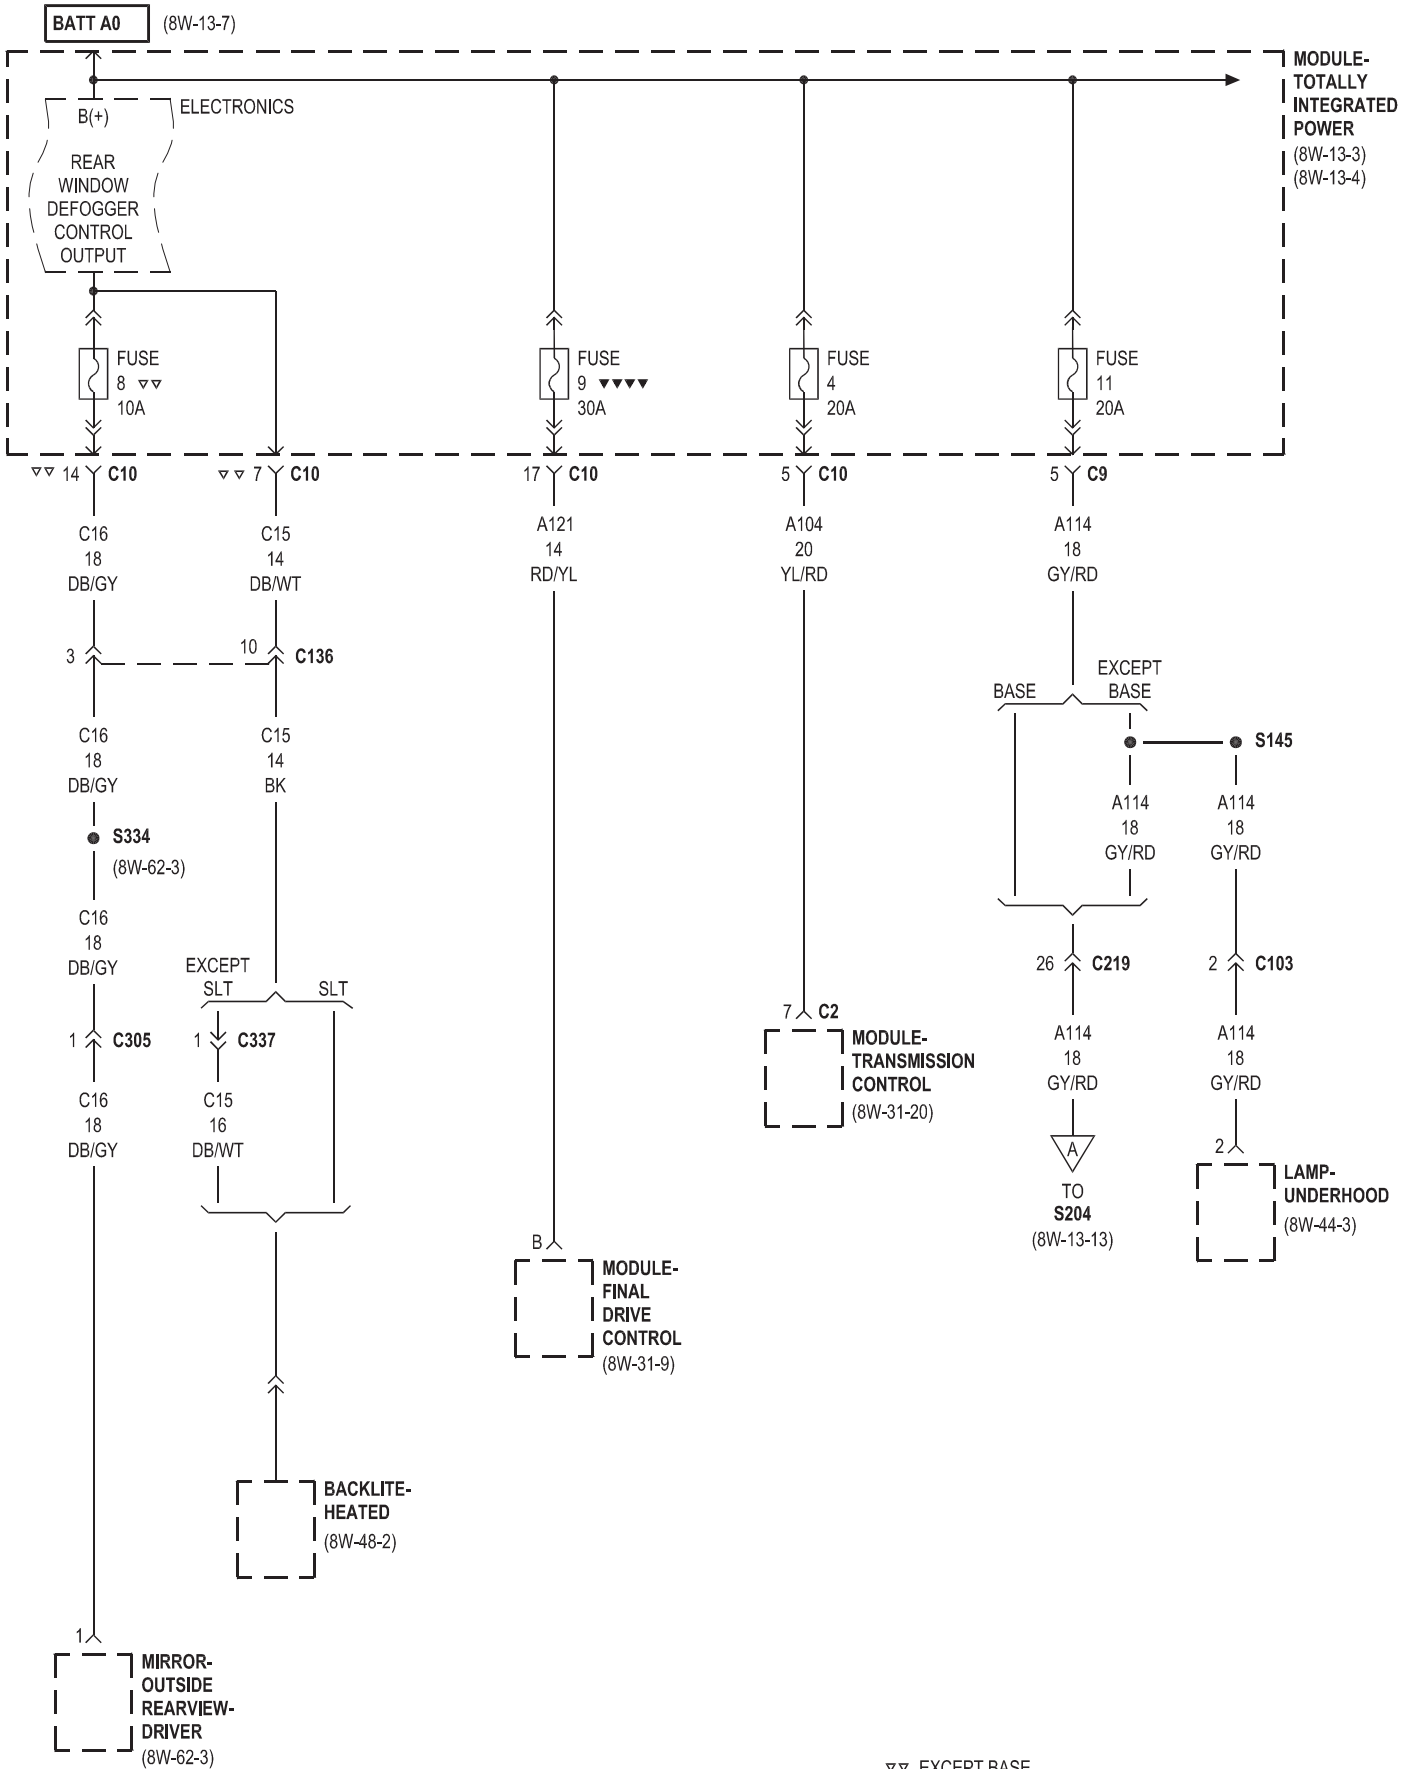


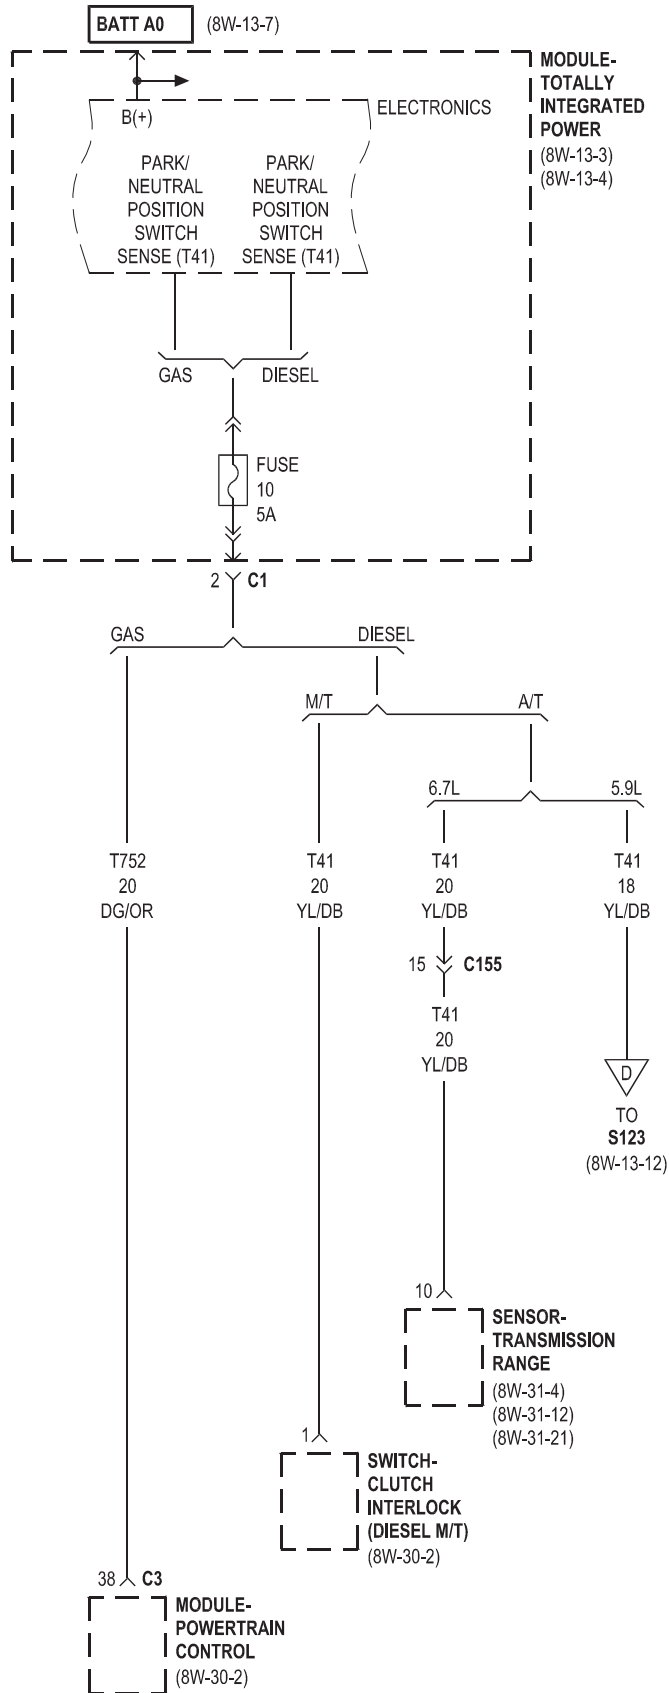


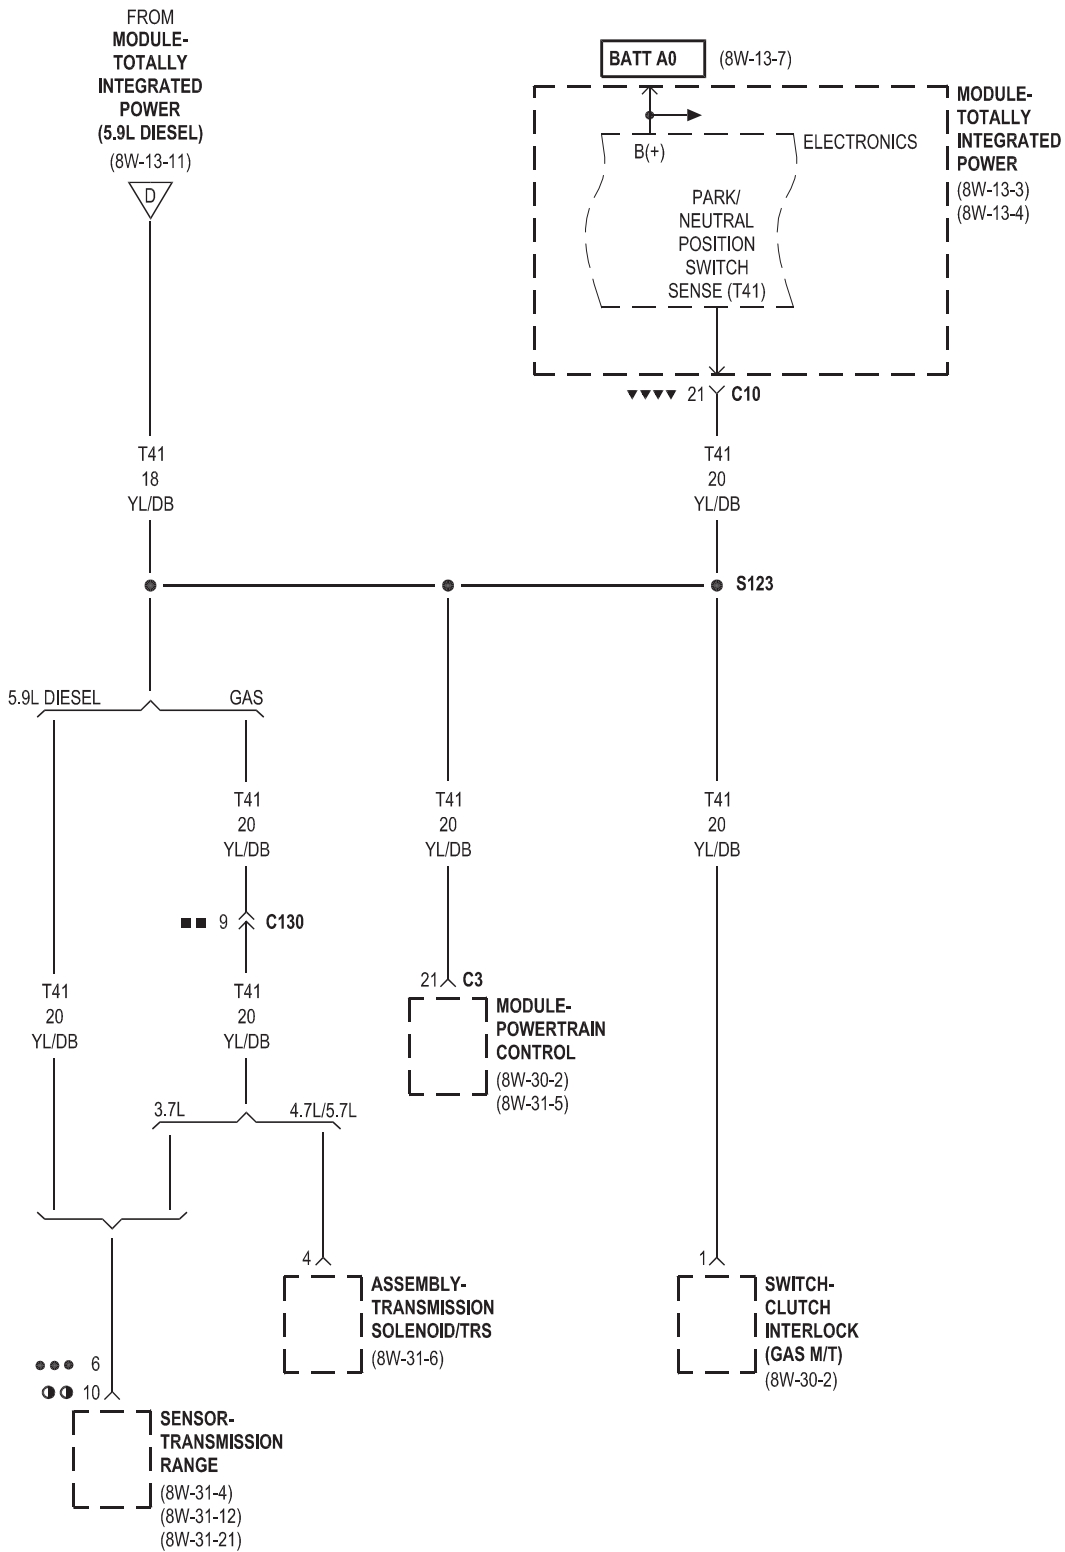



3.7L A/T
 A/T


 5.9L DIESEL
 ▼▼▼▼ POWER WAGON

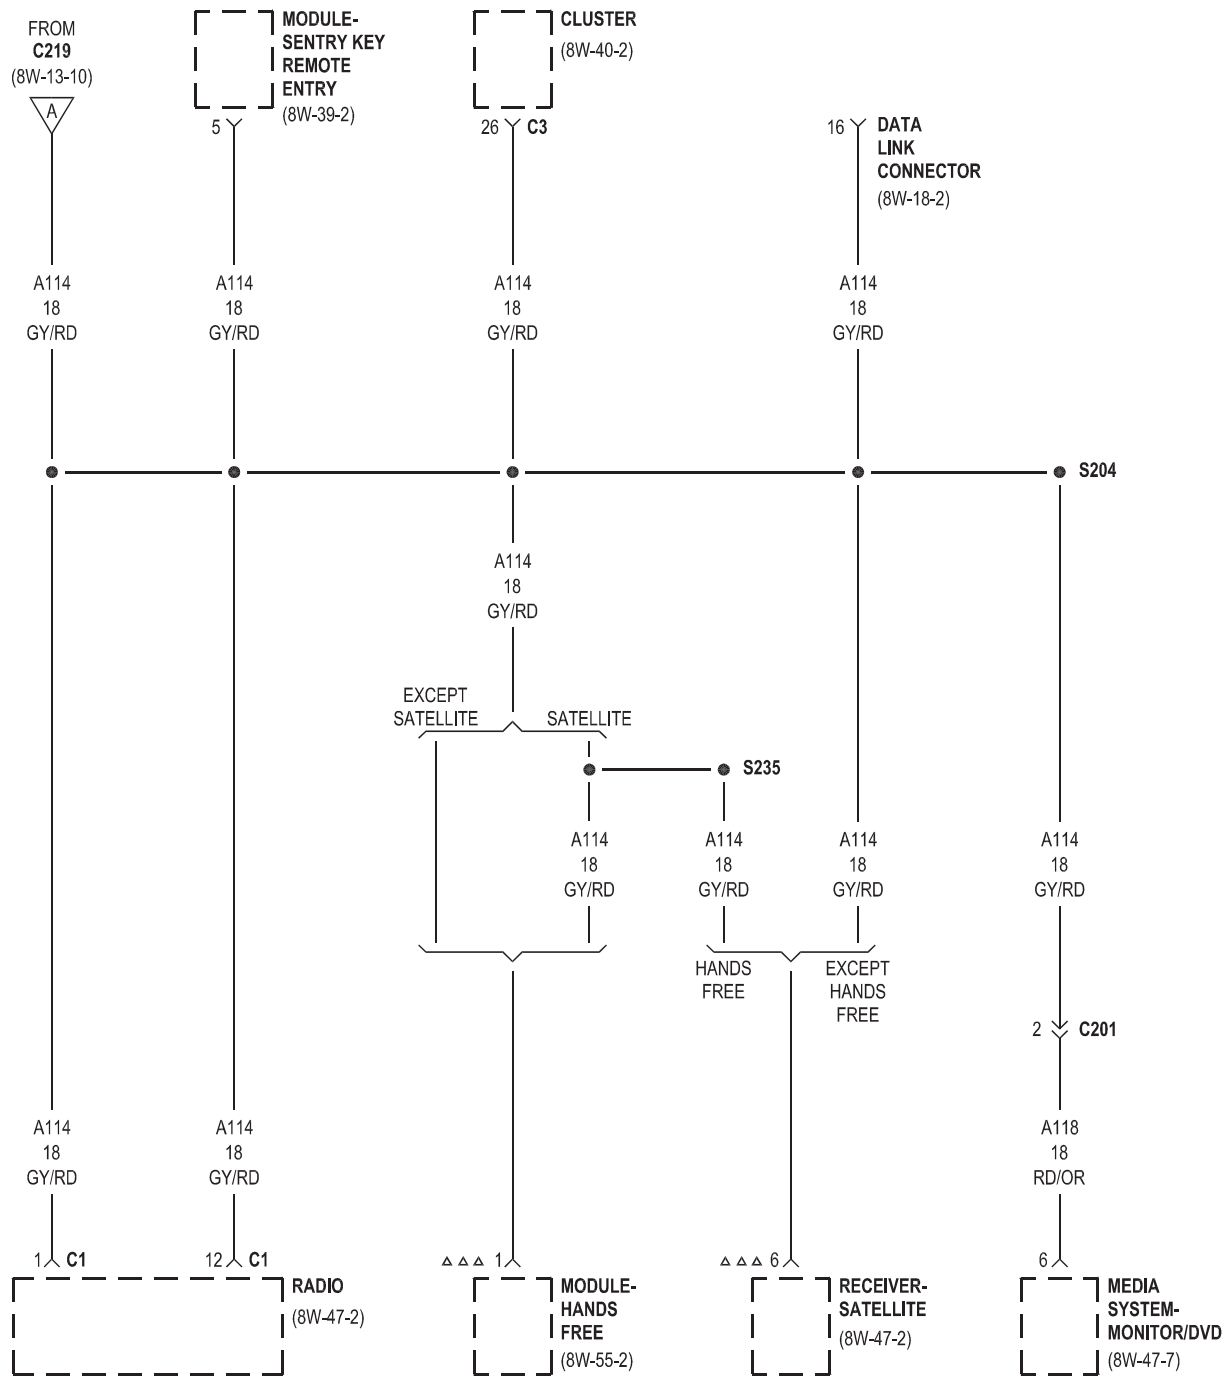


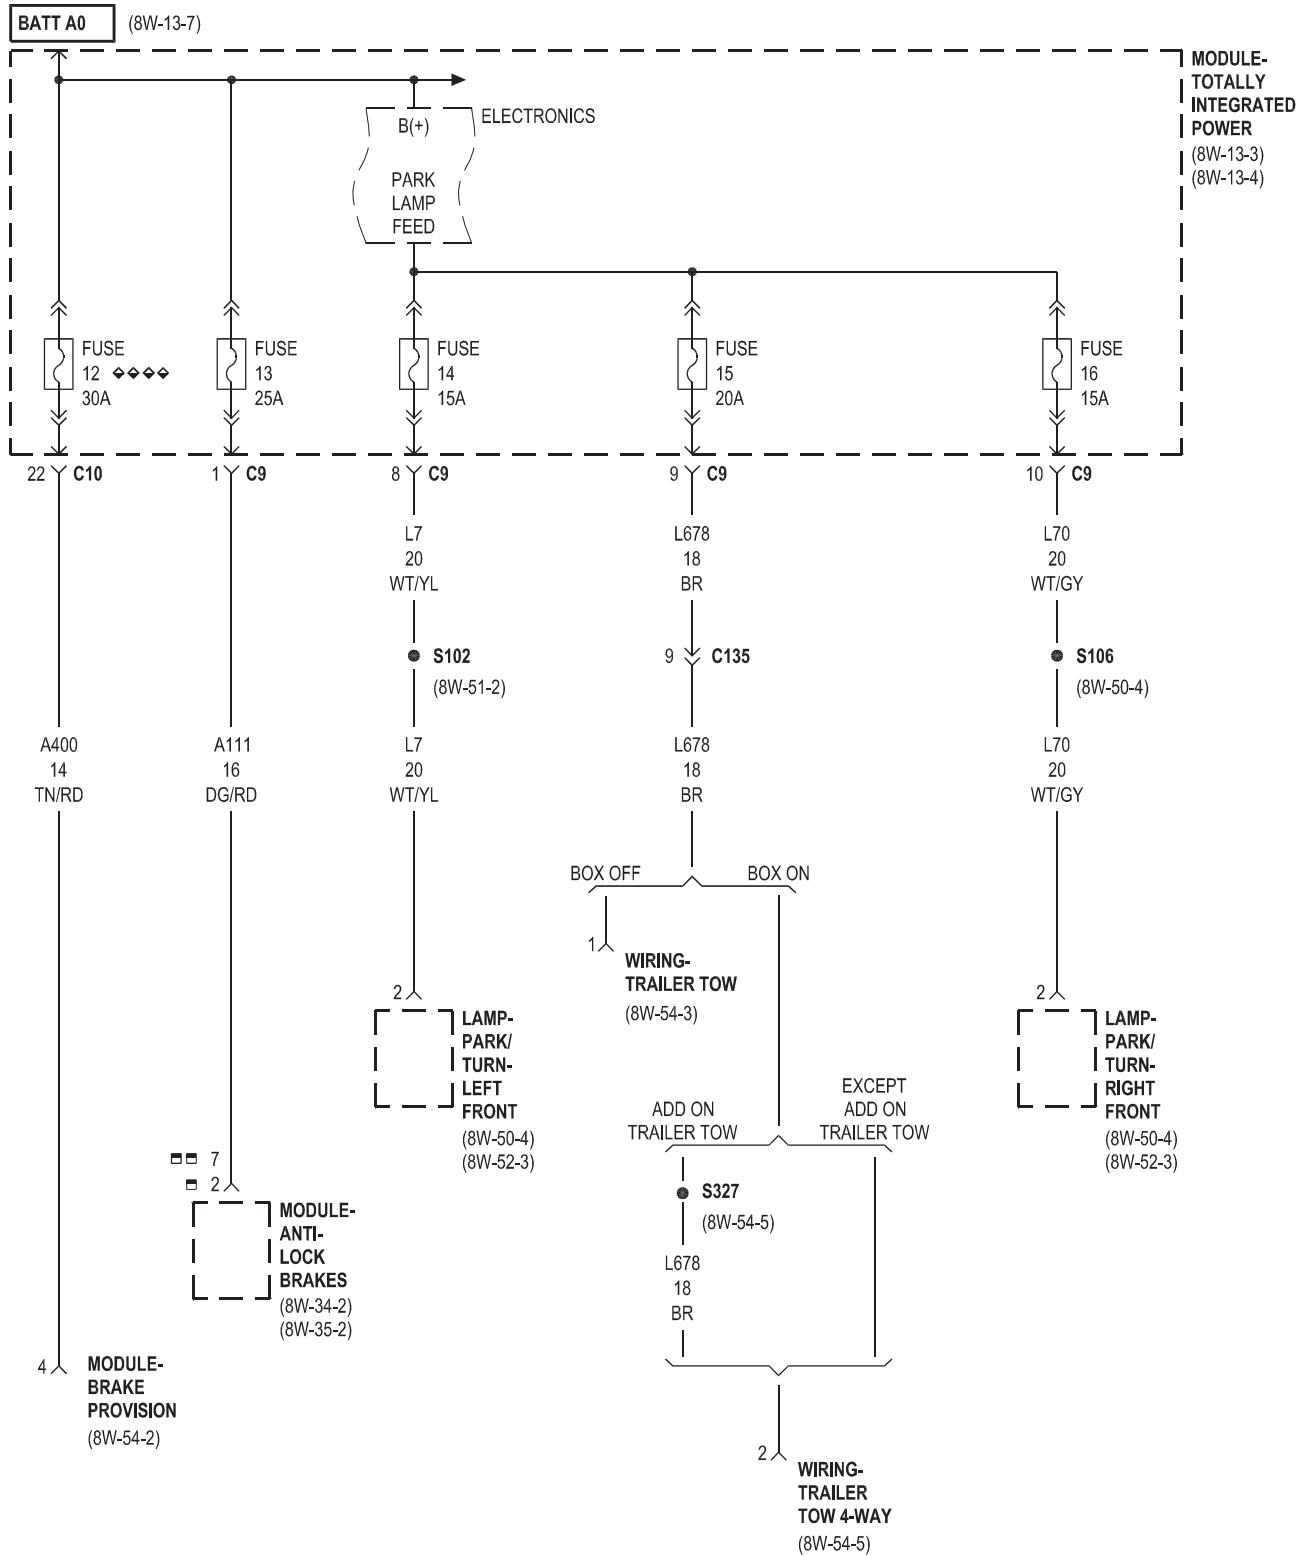


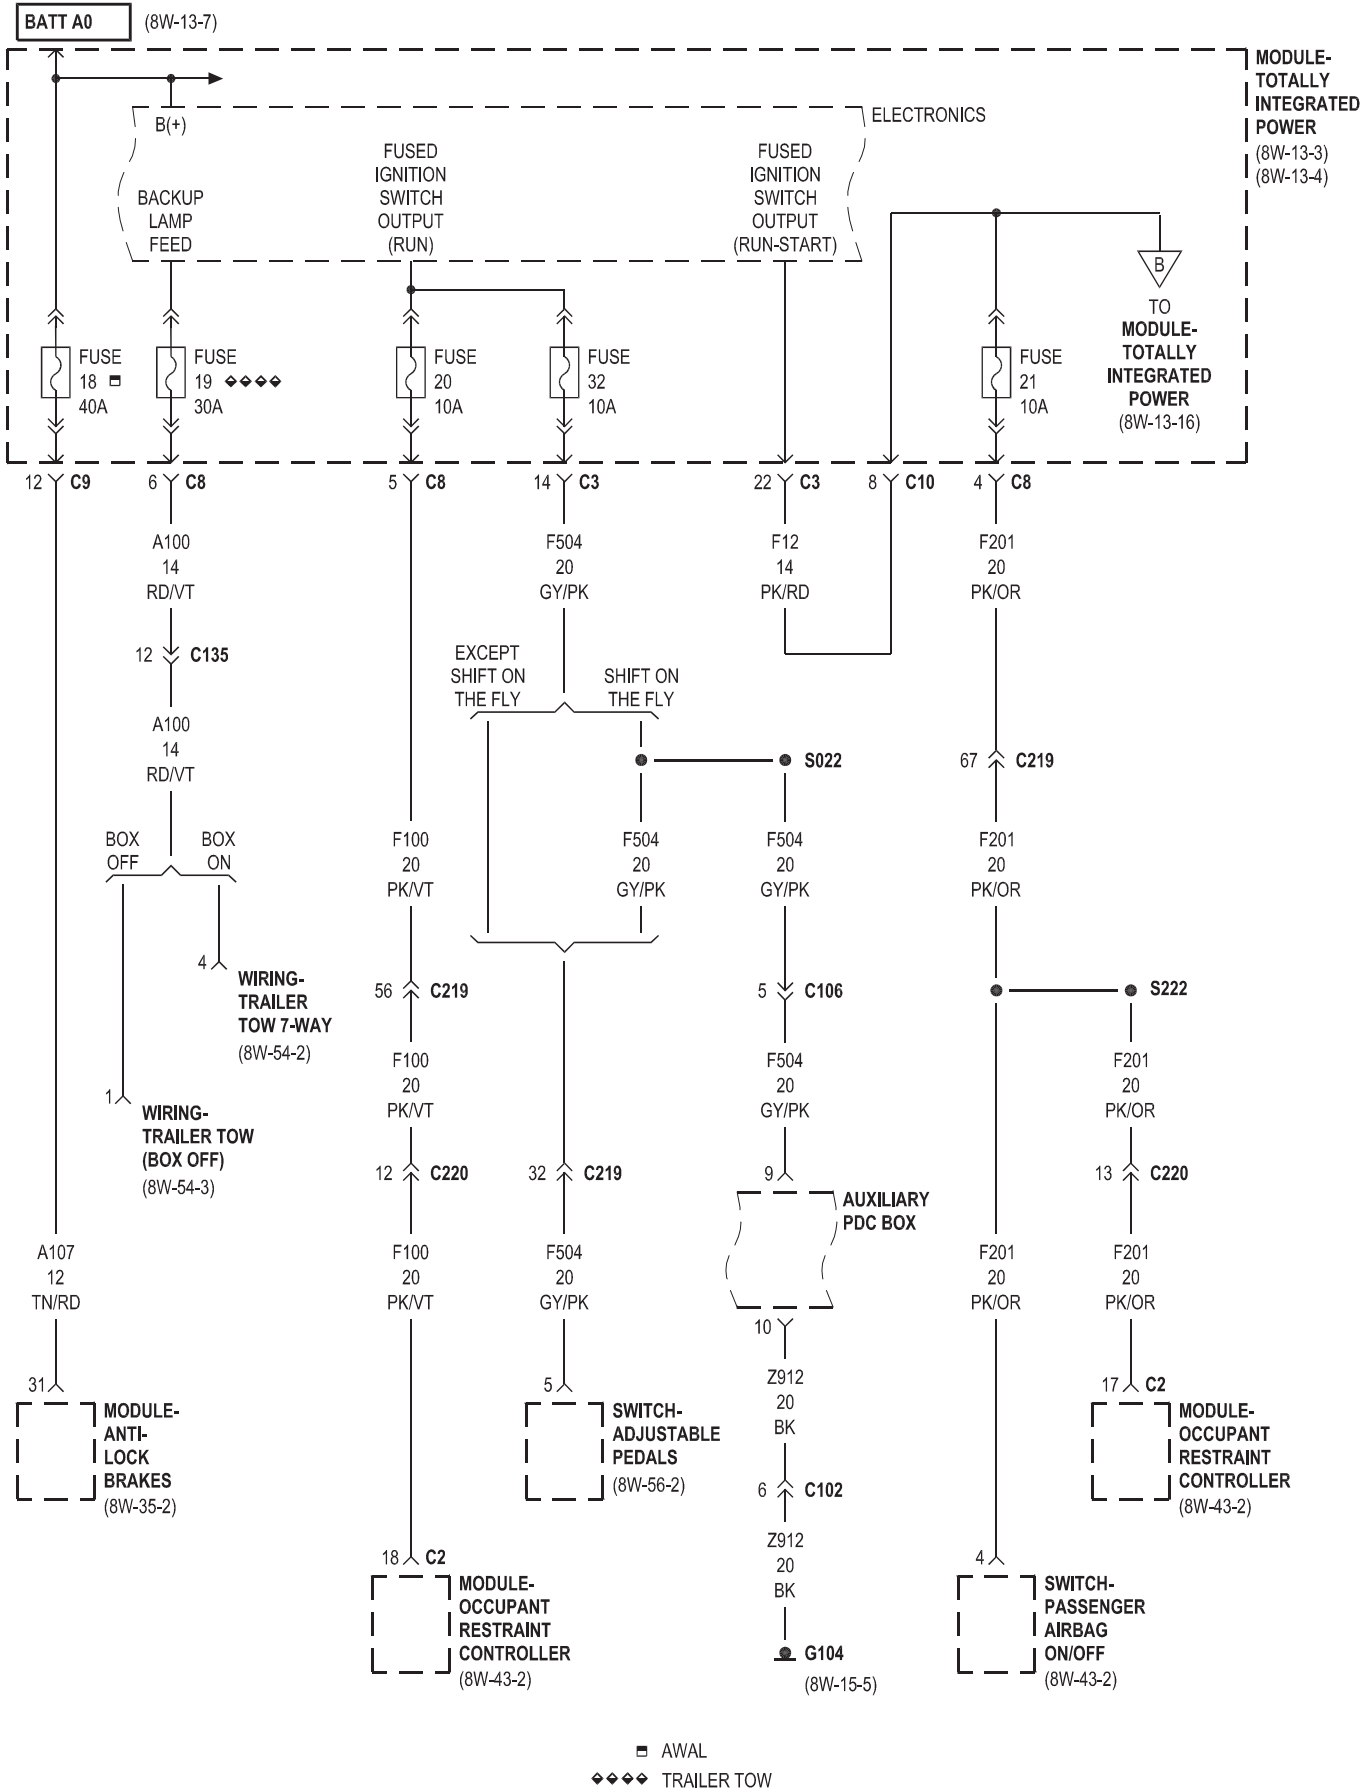


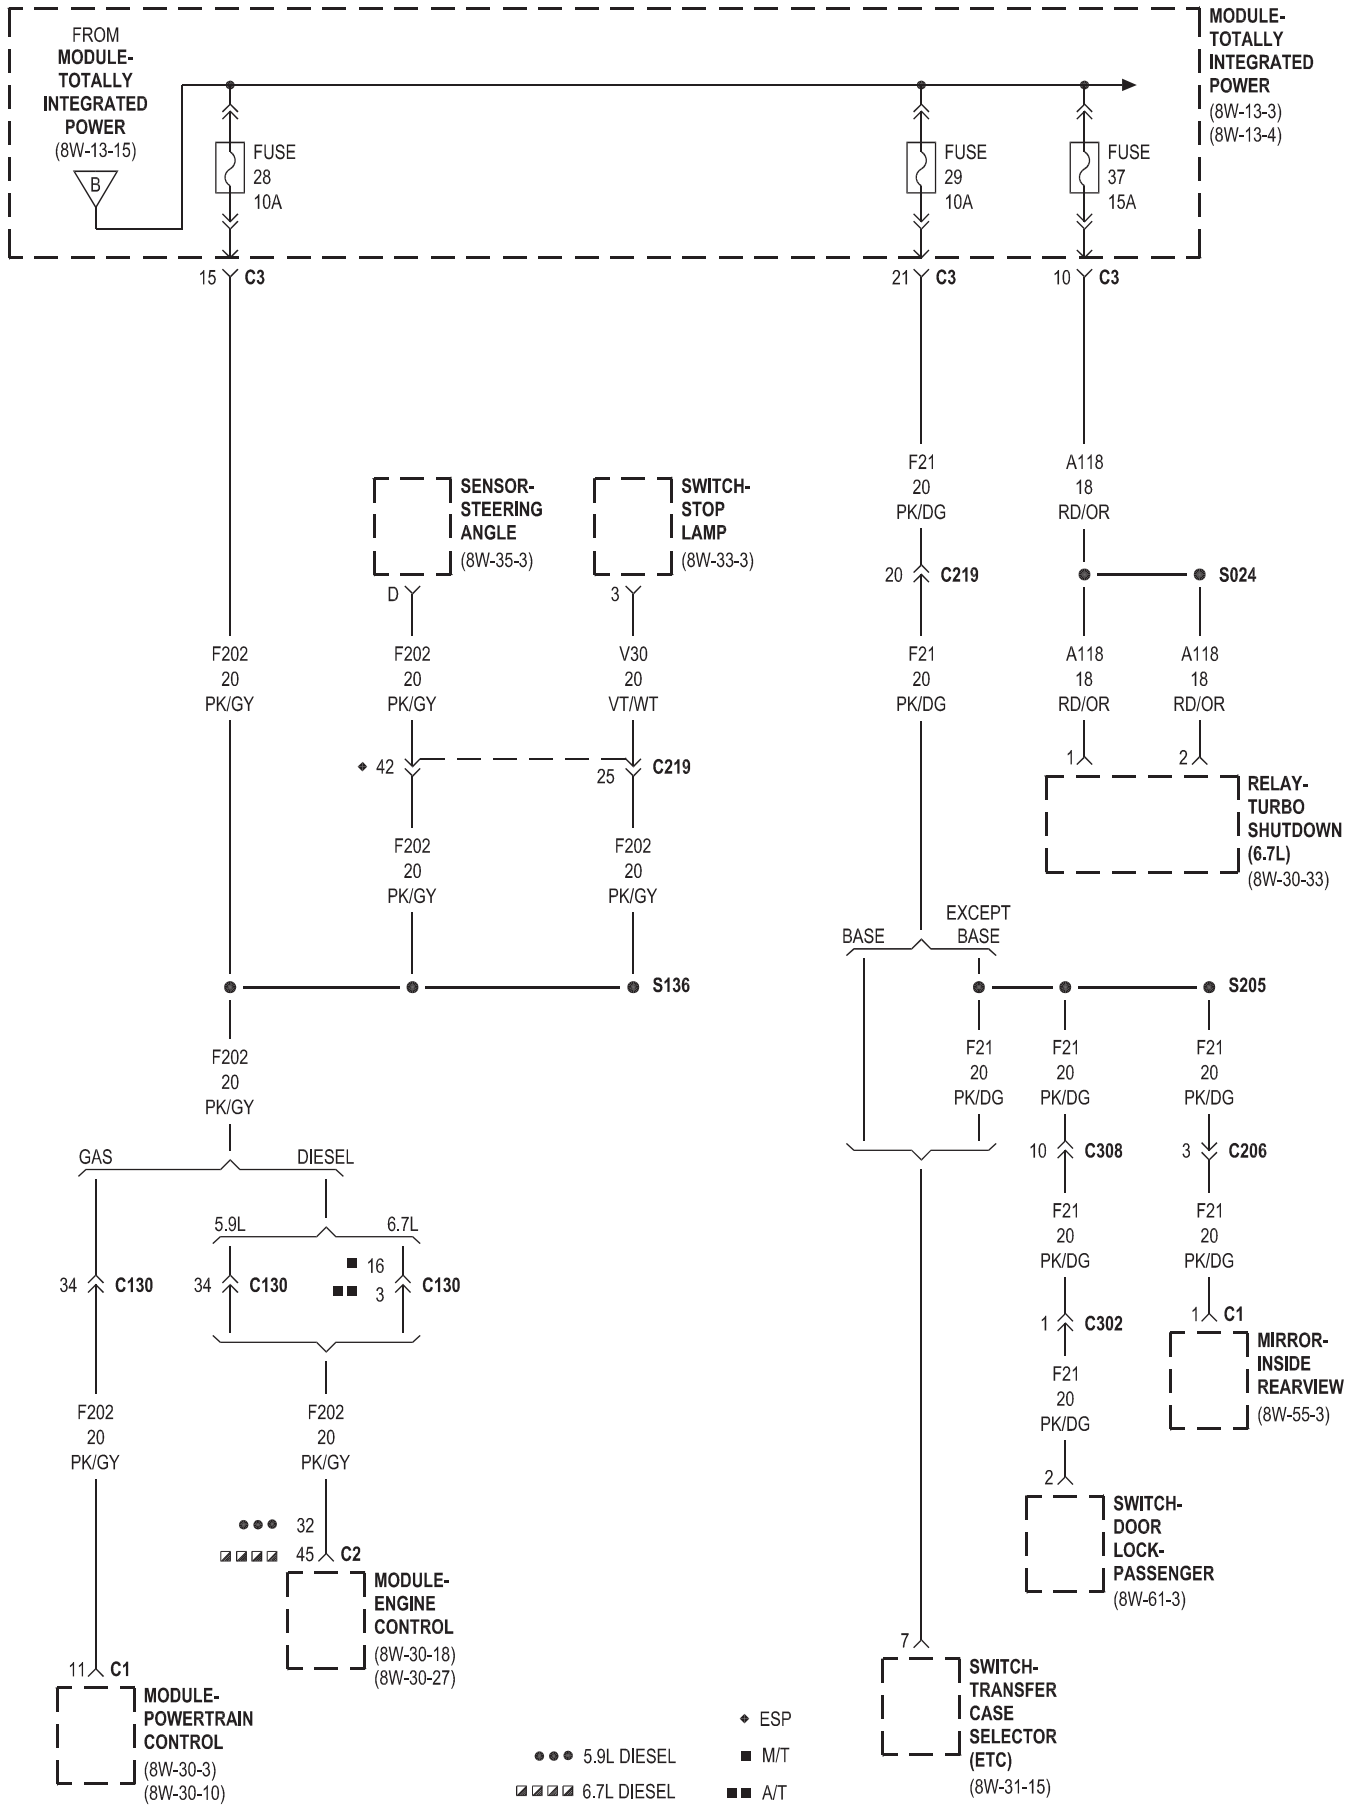


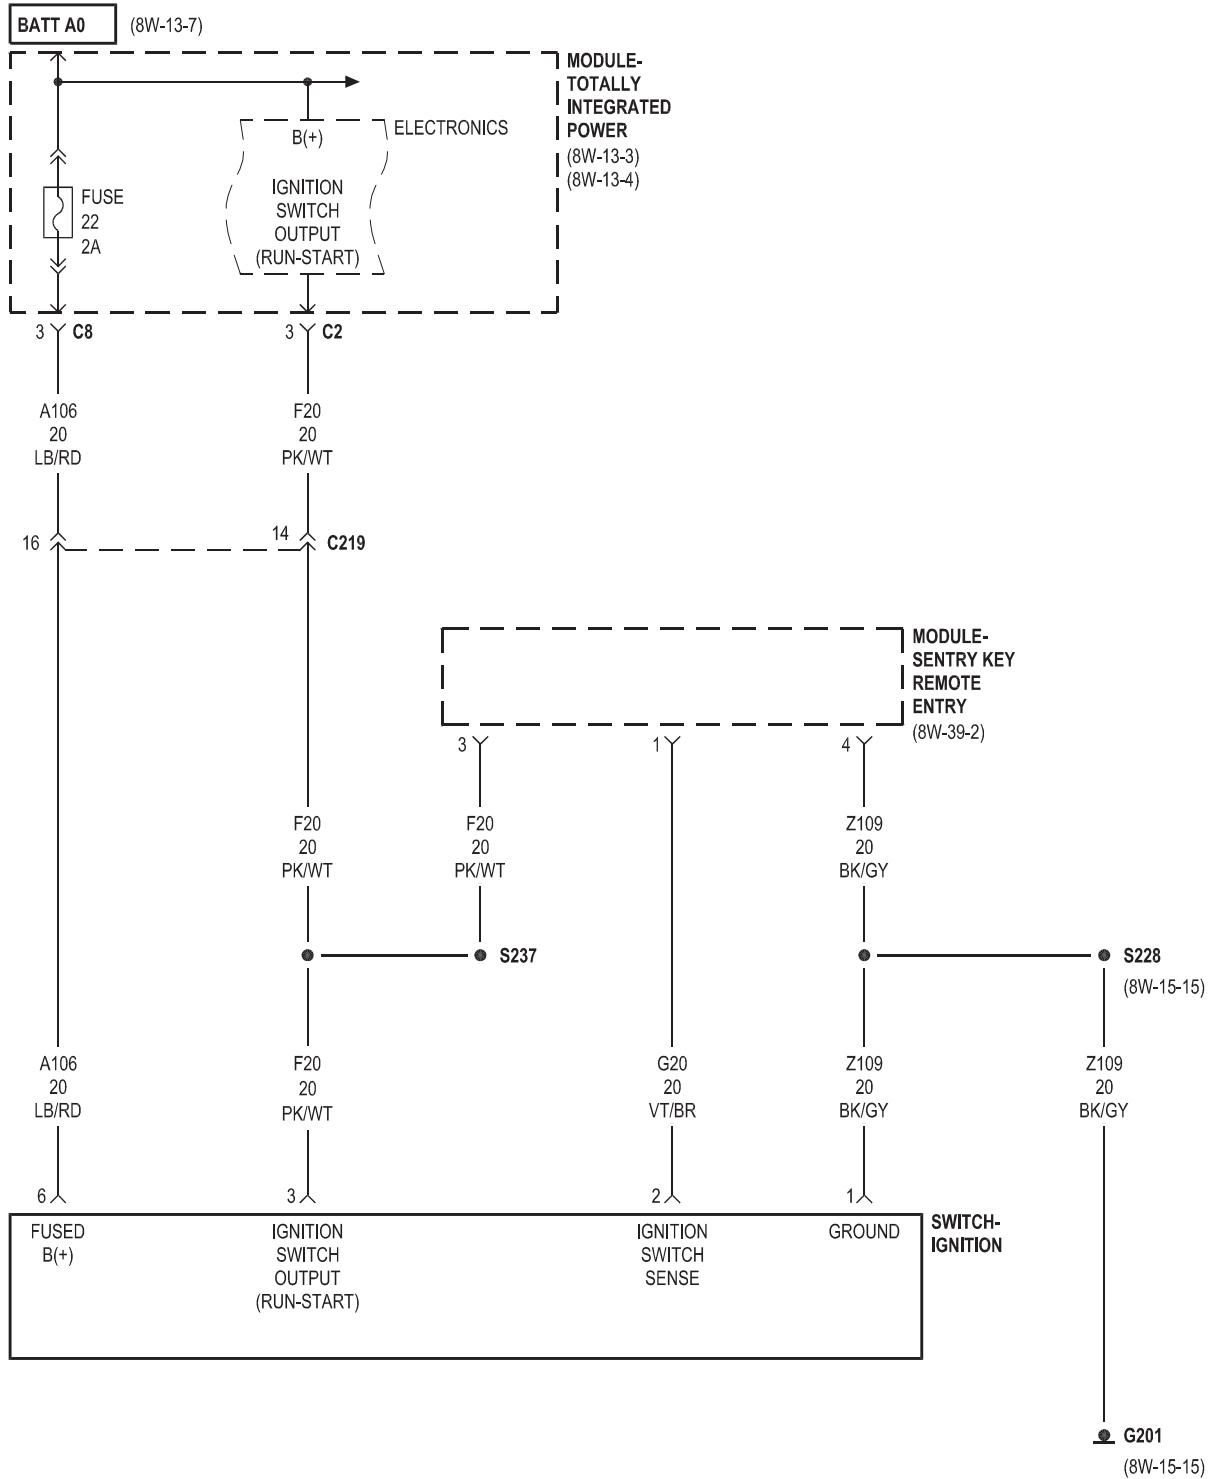


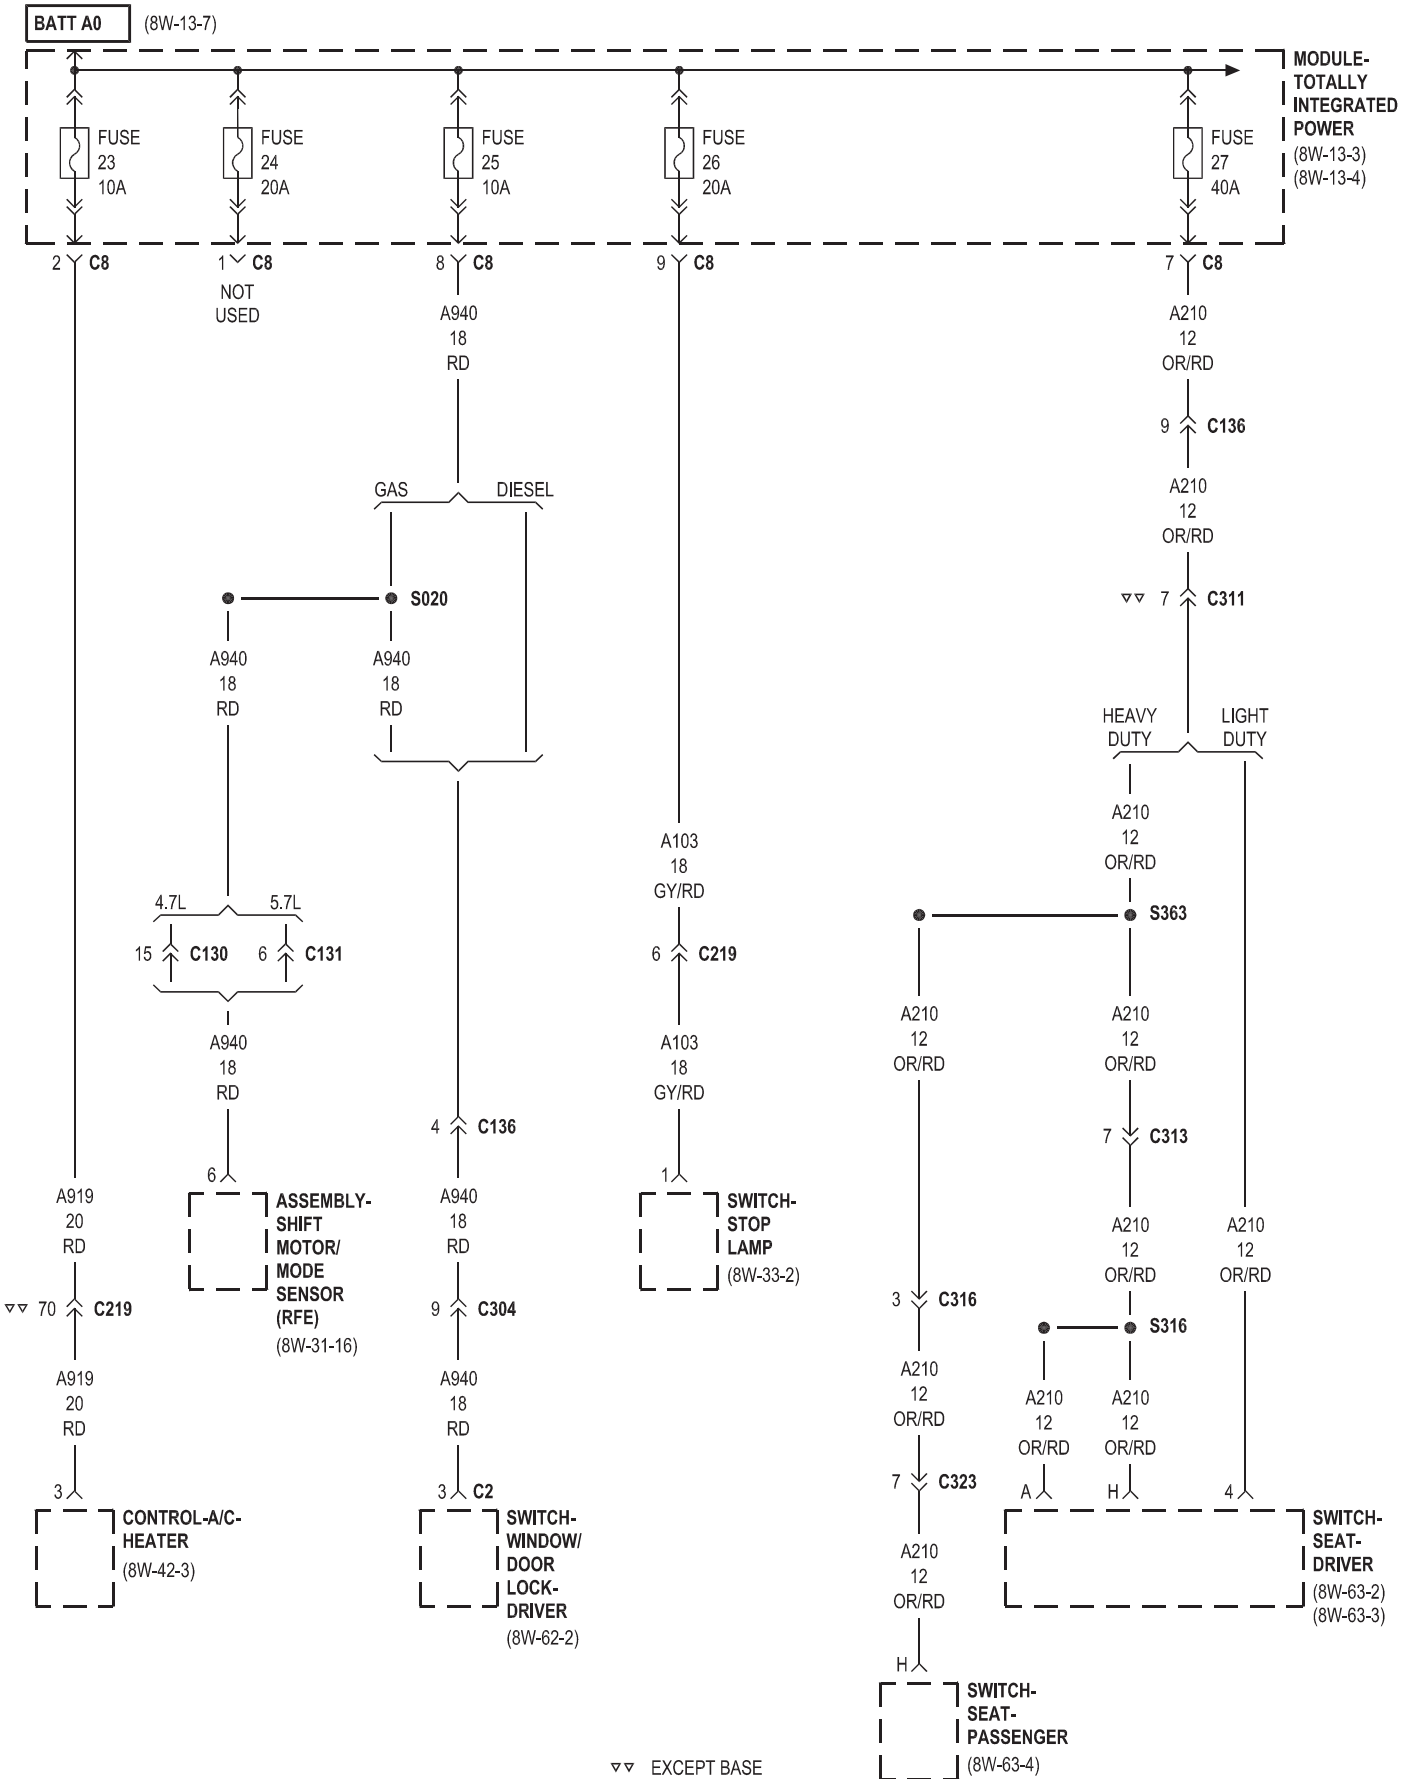


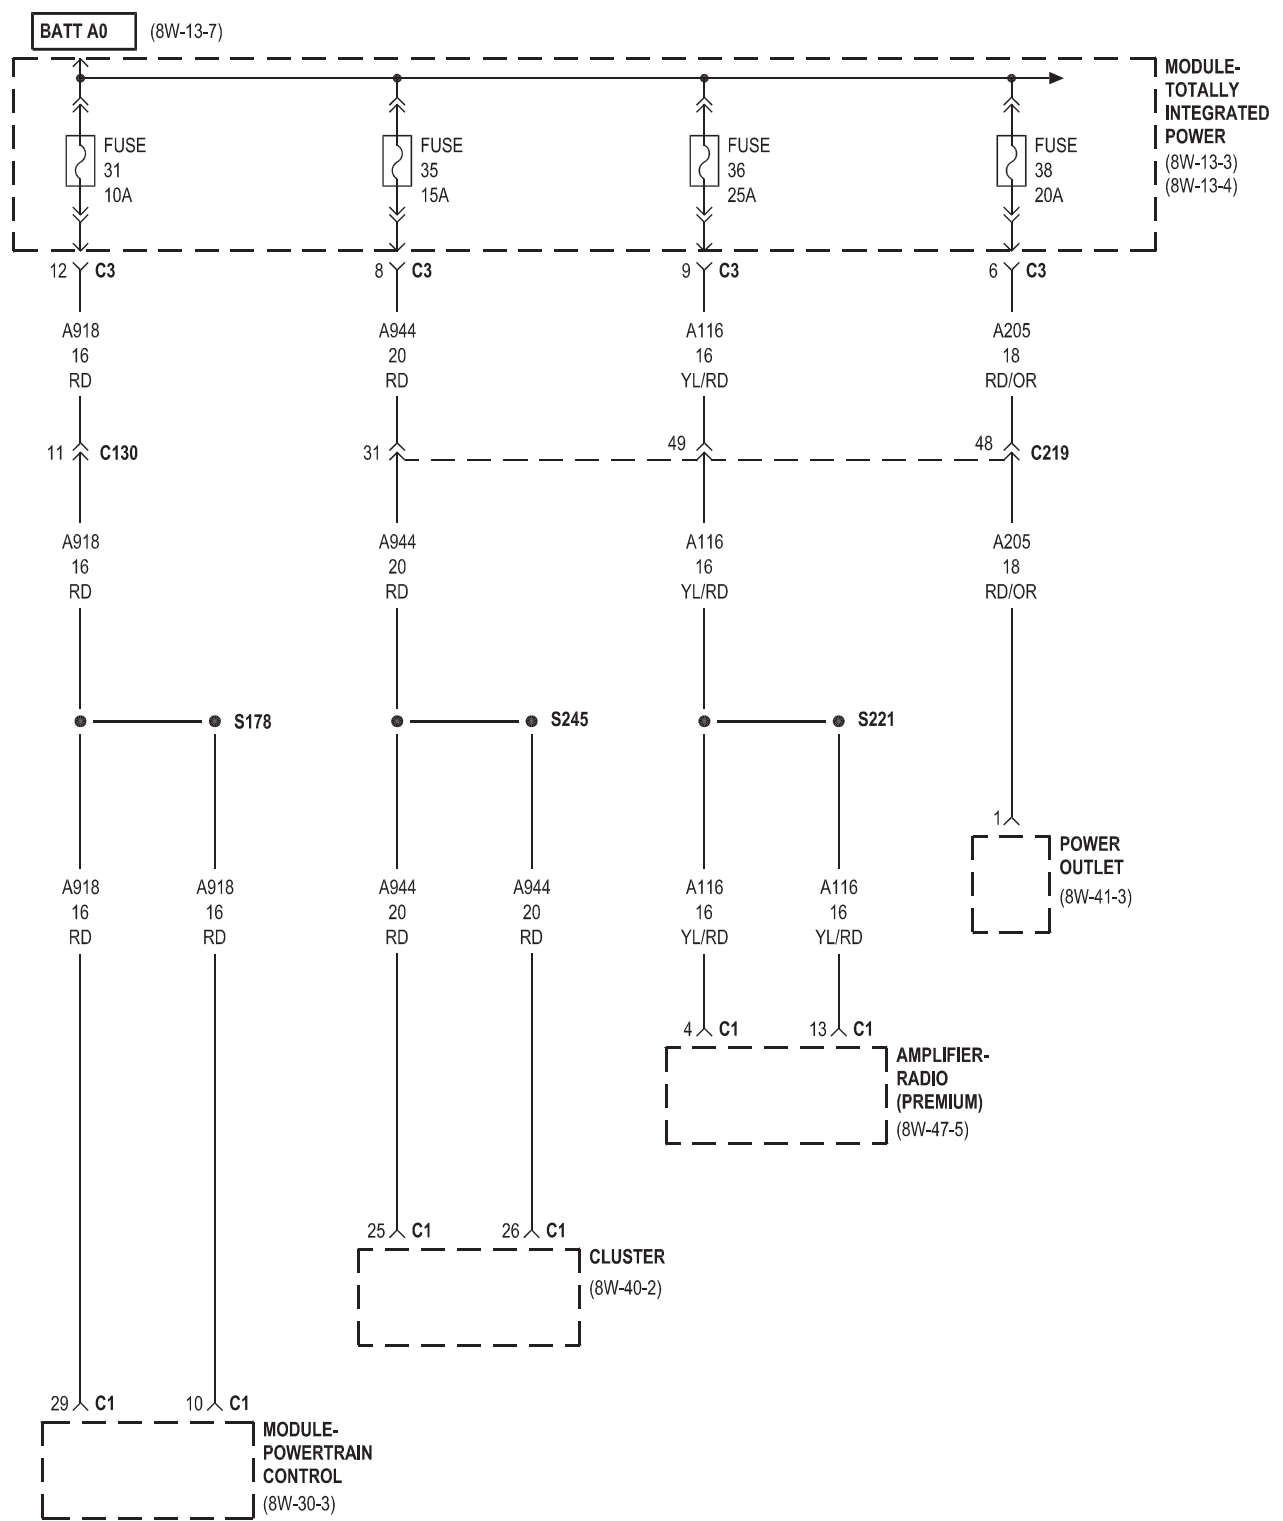

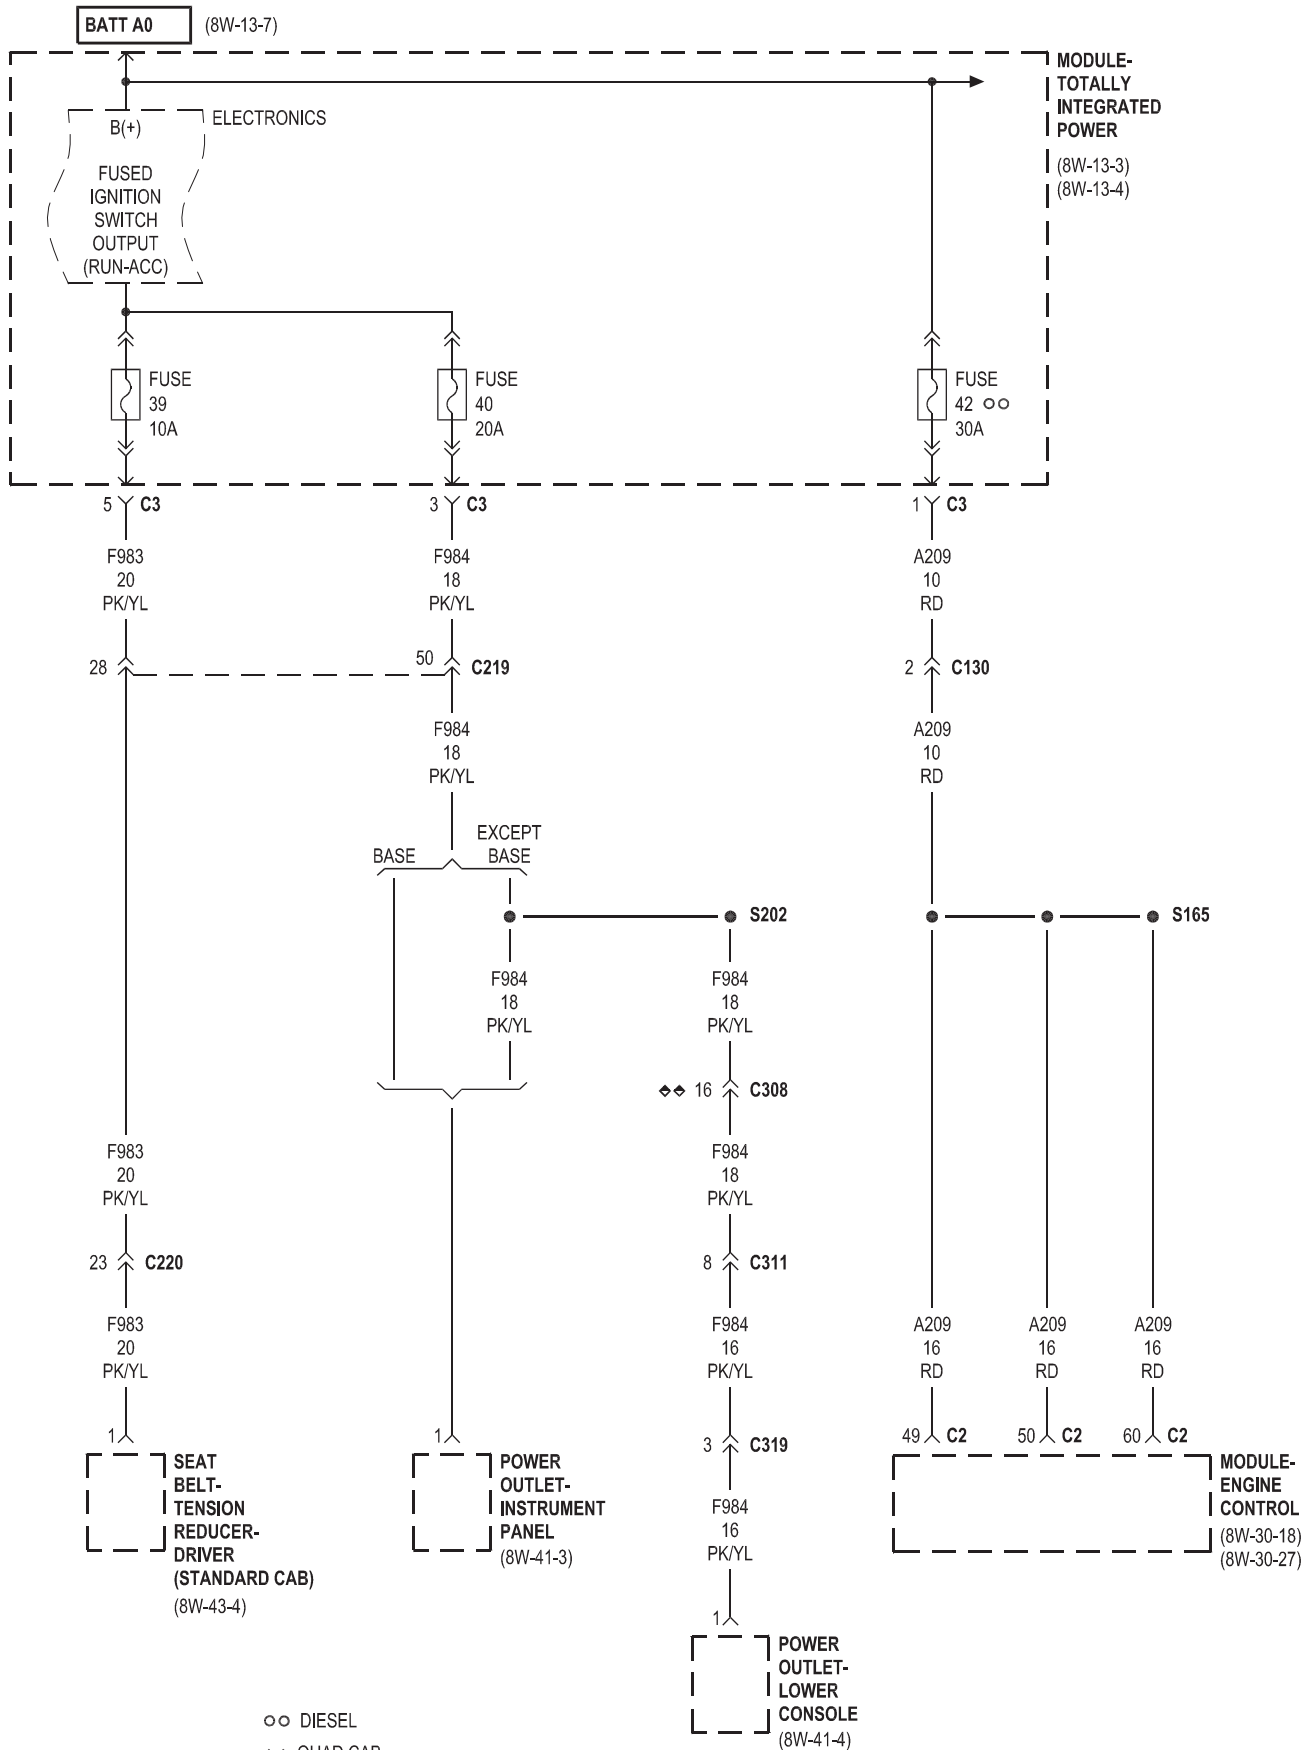


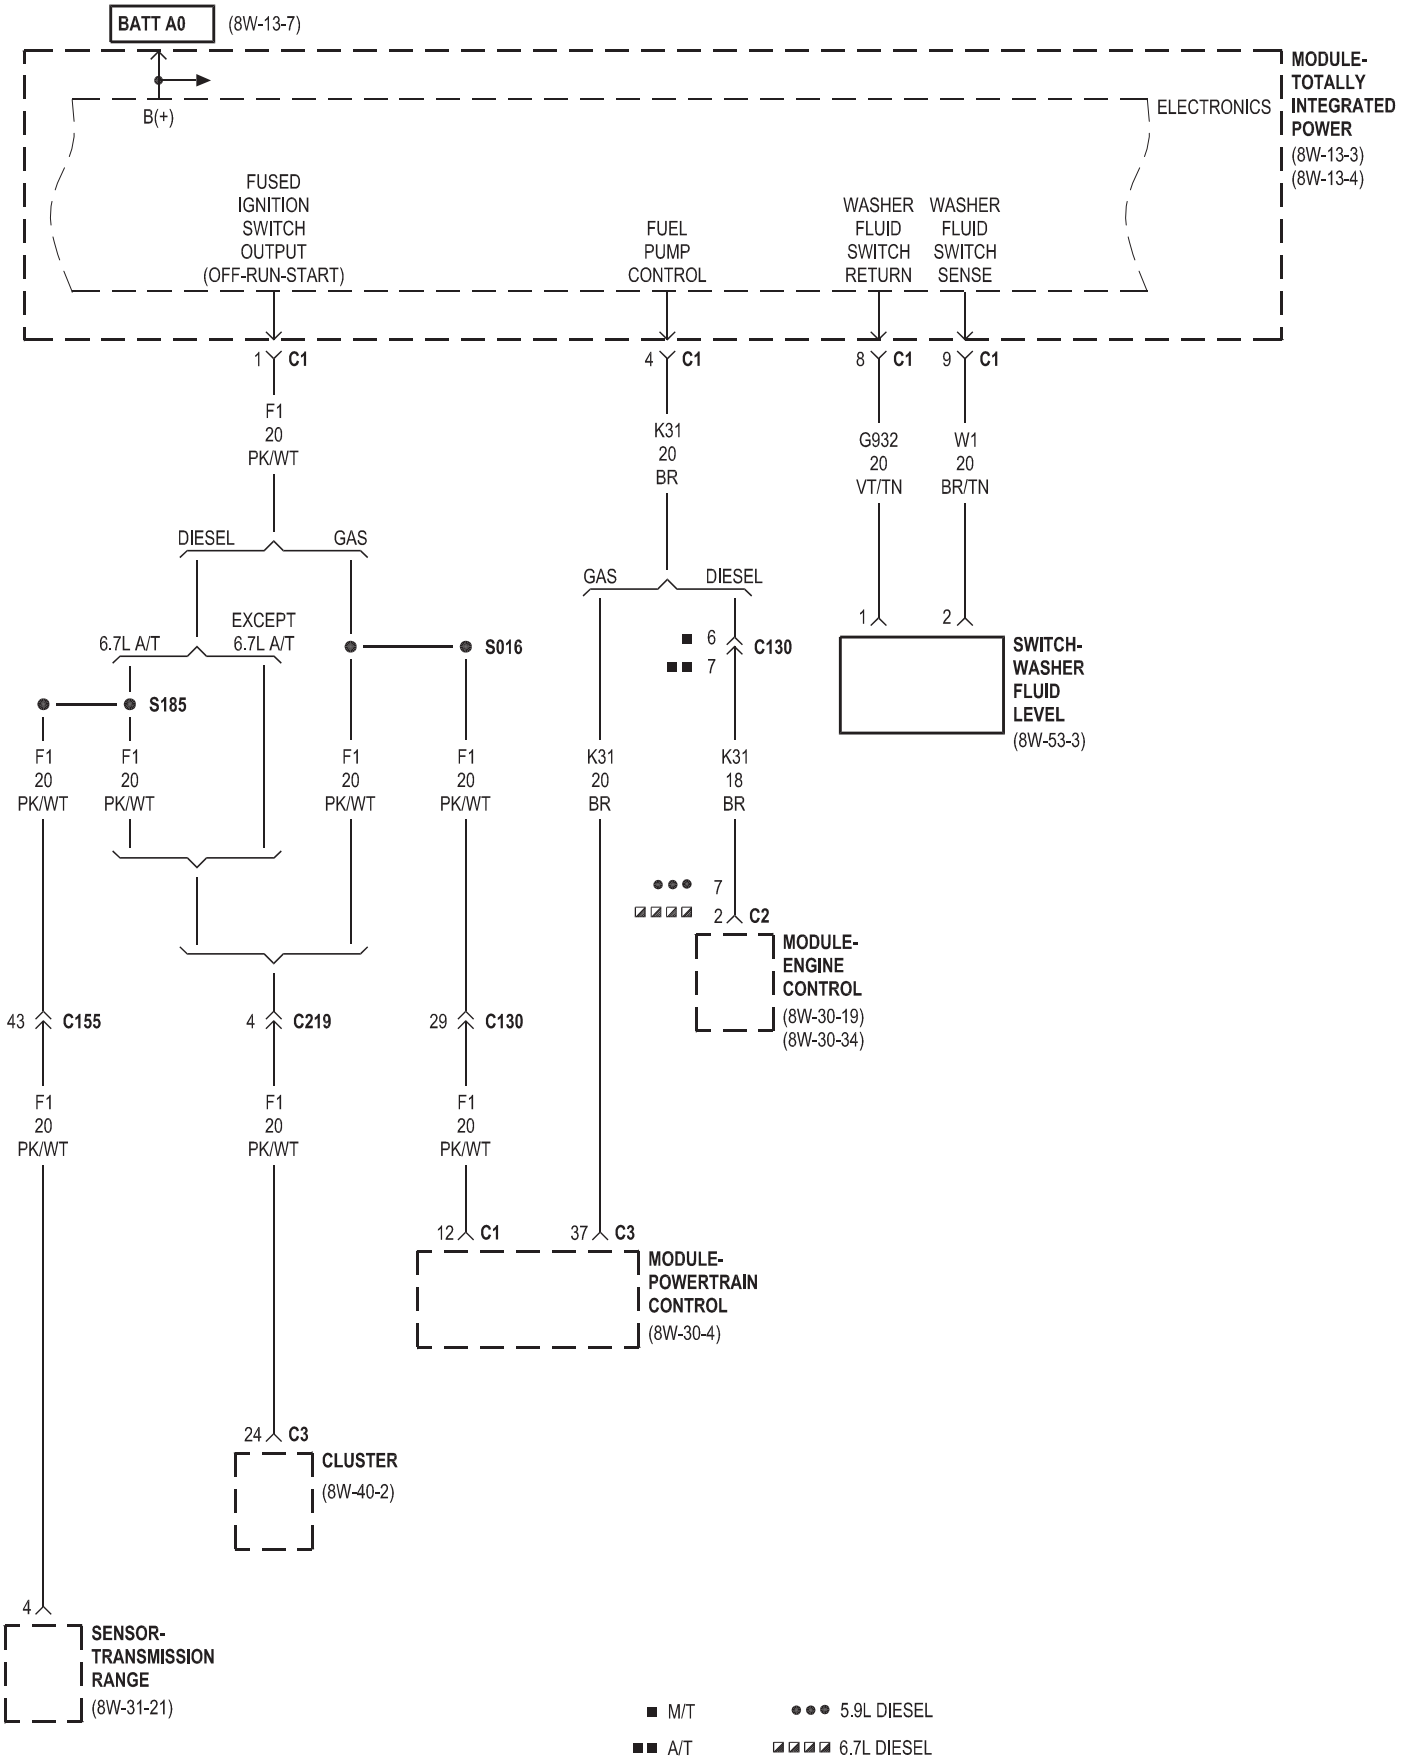


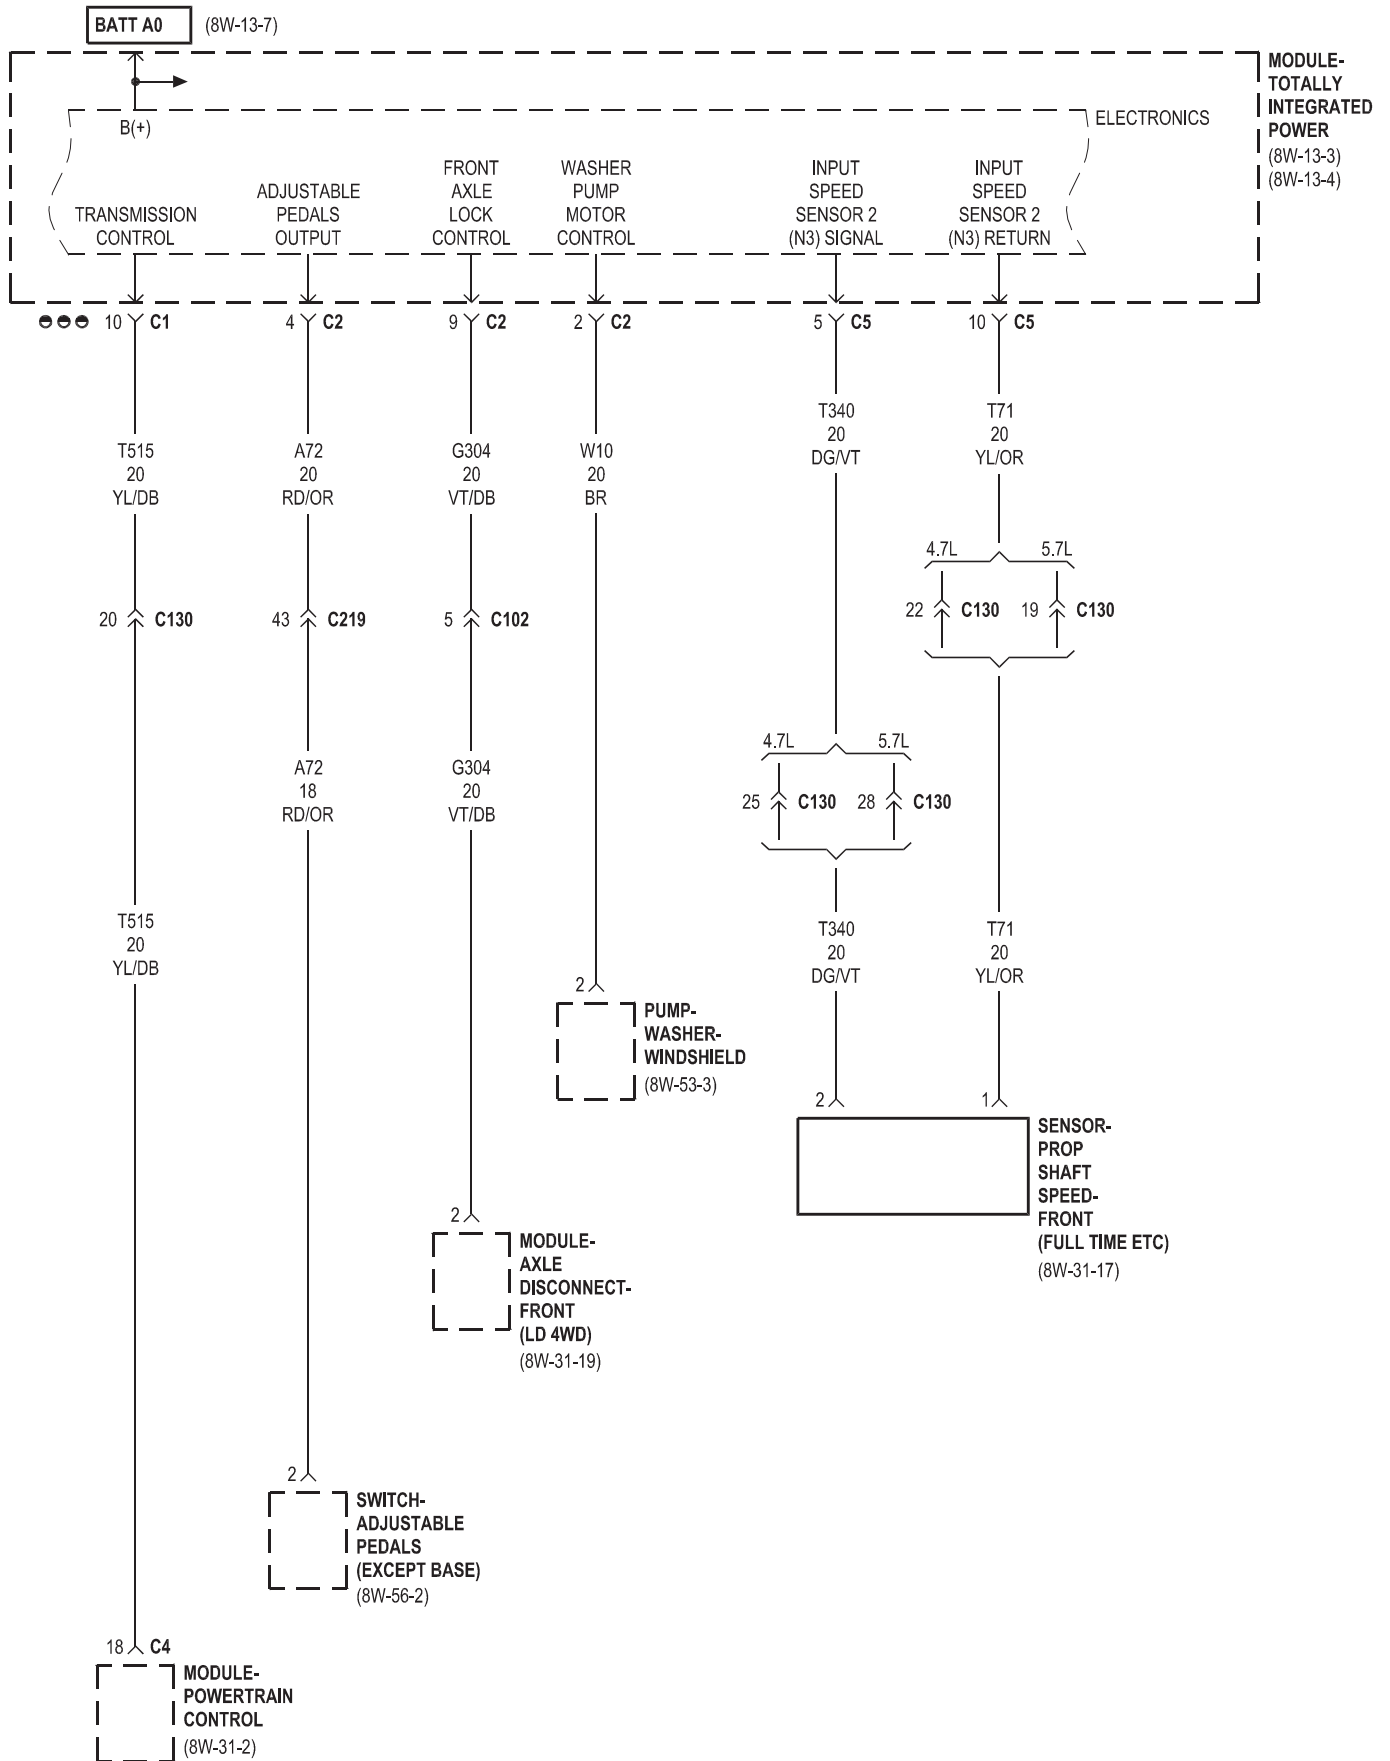


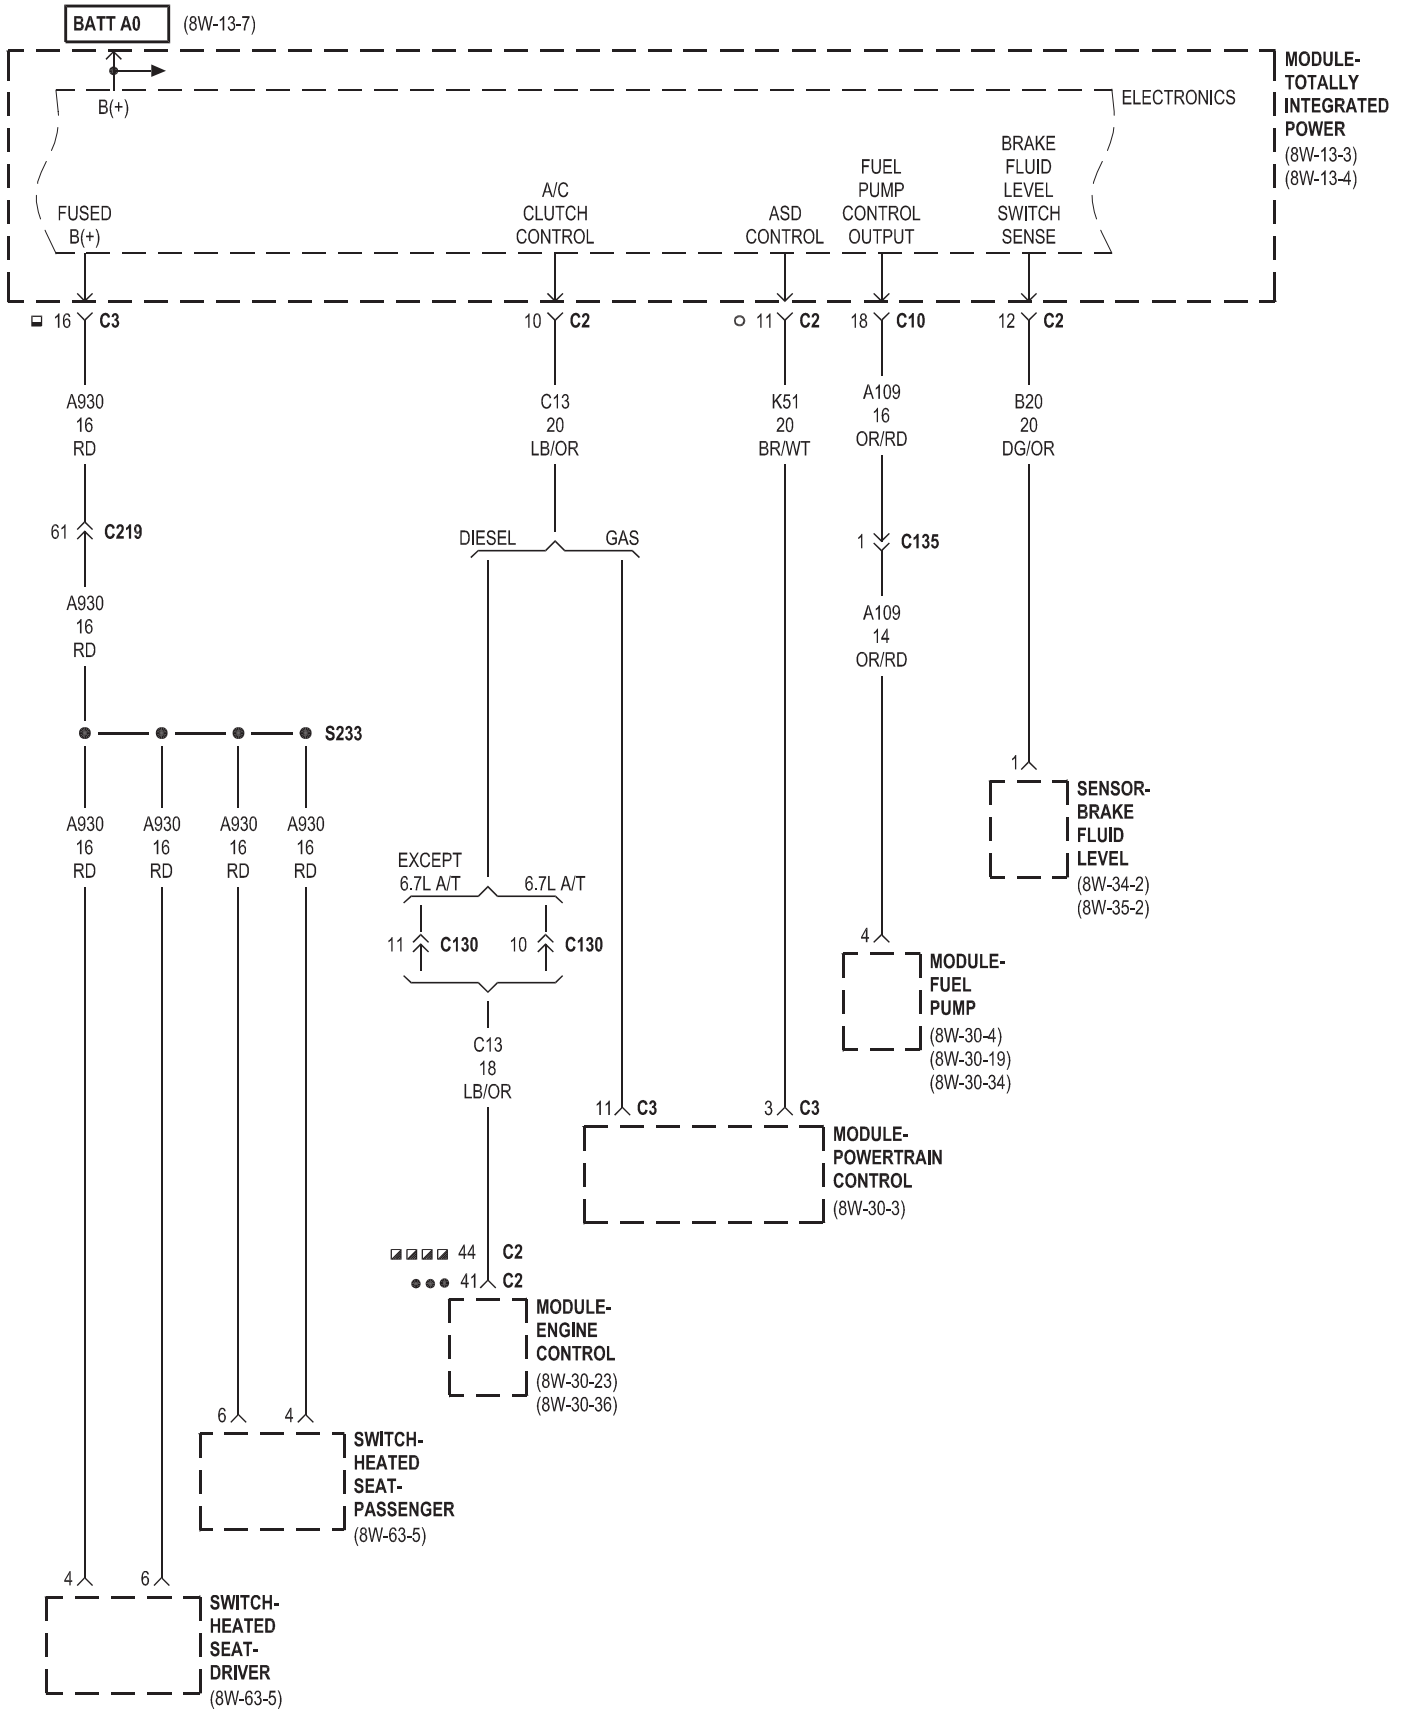



○ GAS ●●● 5.9L DIESEL
 ■ HEATED SEATS ■■■■ 6.7L DIESEL

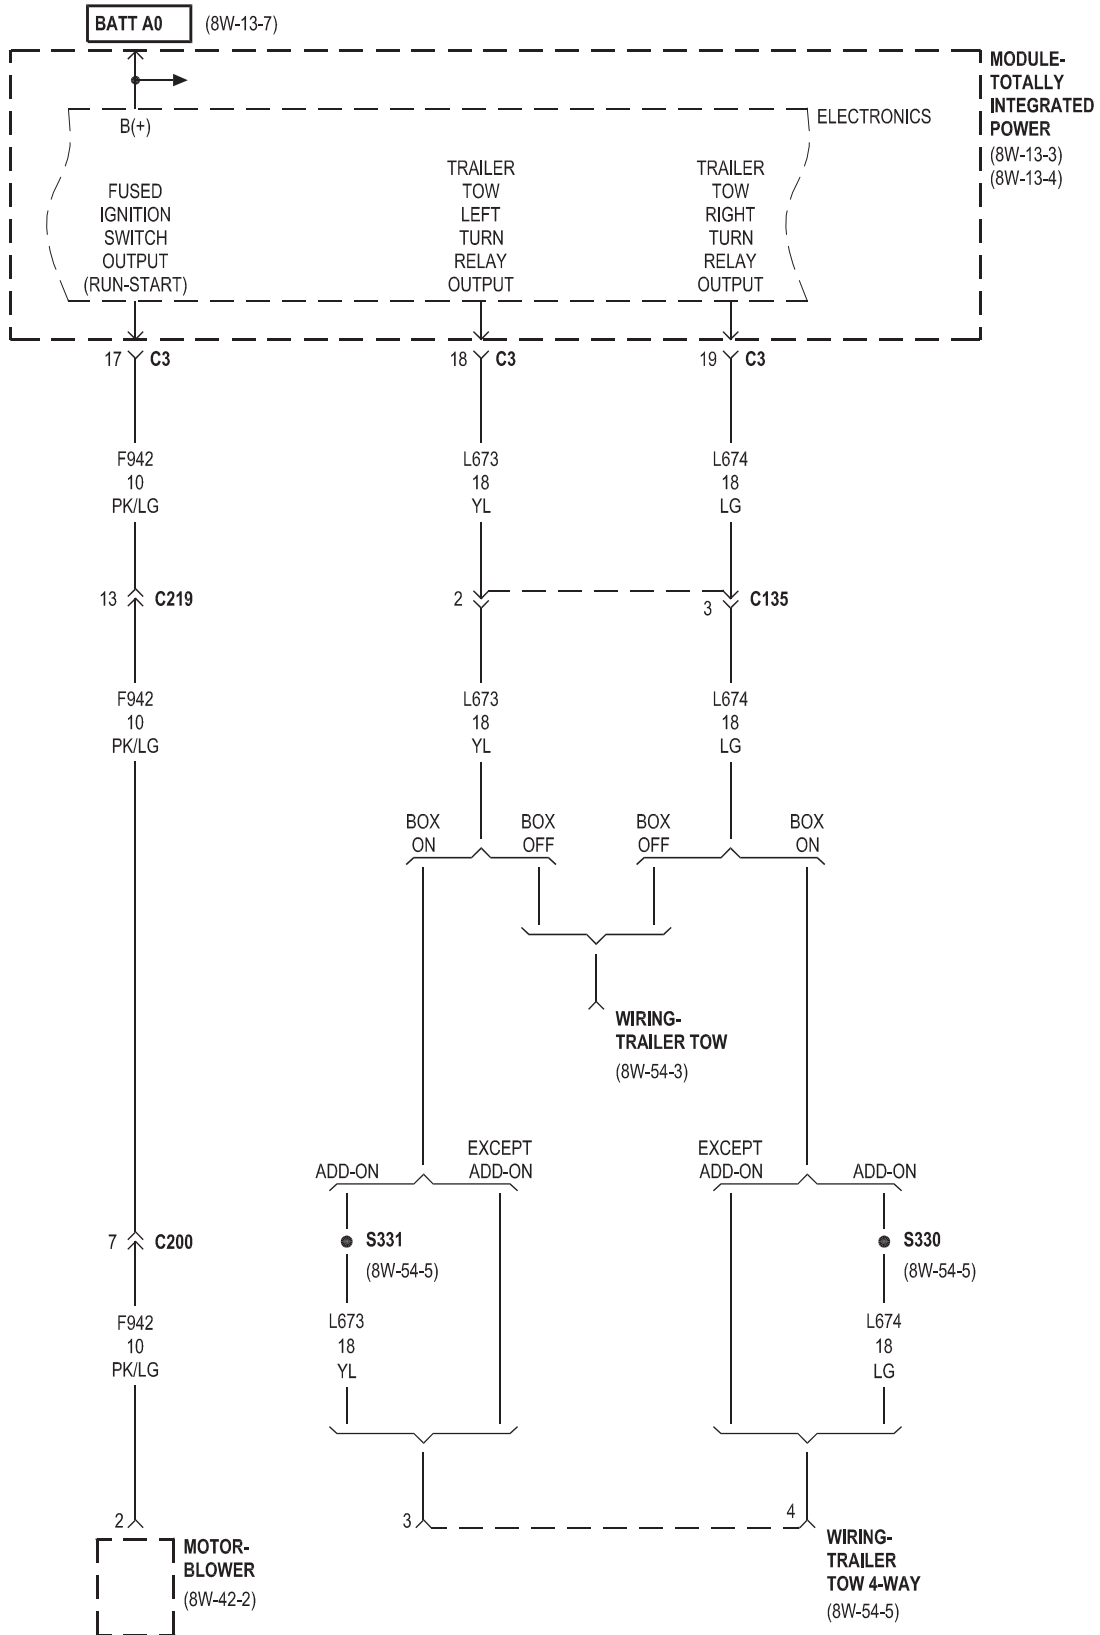


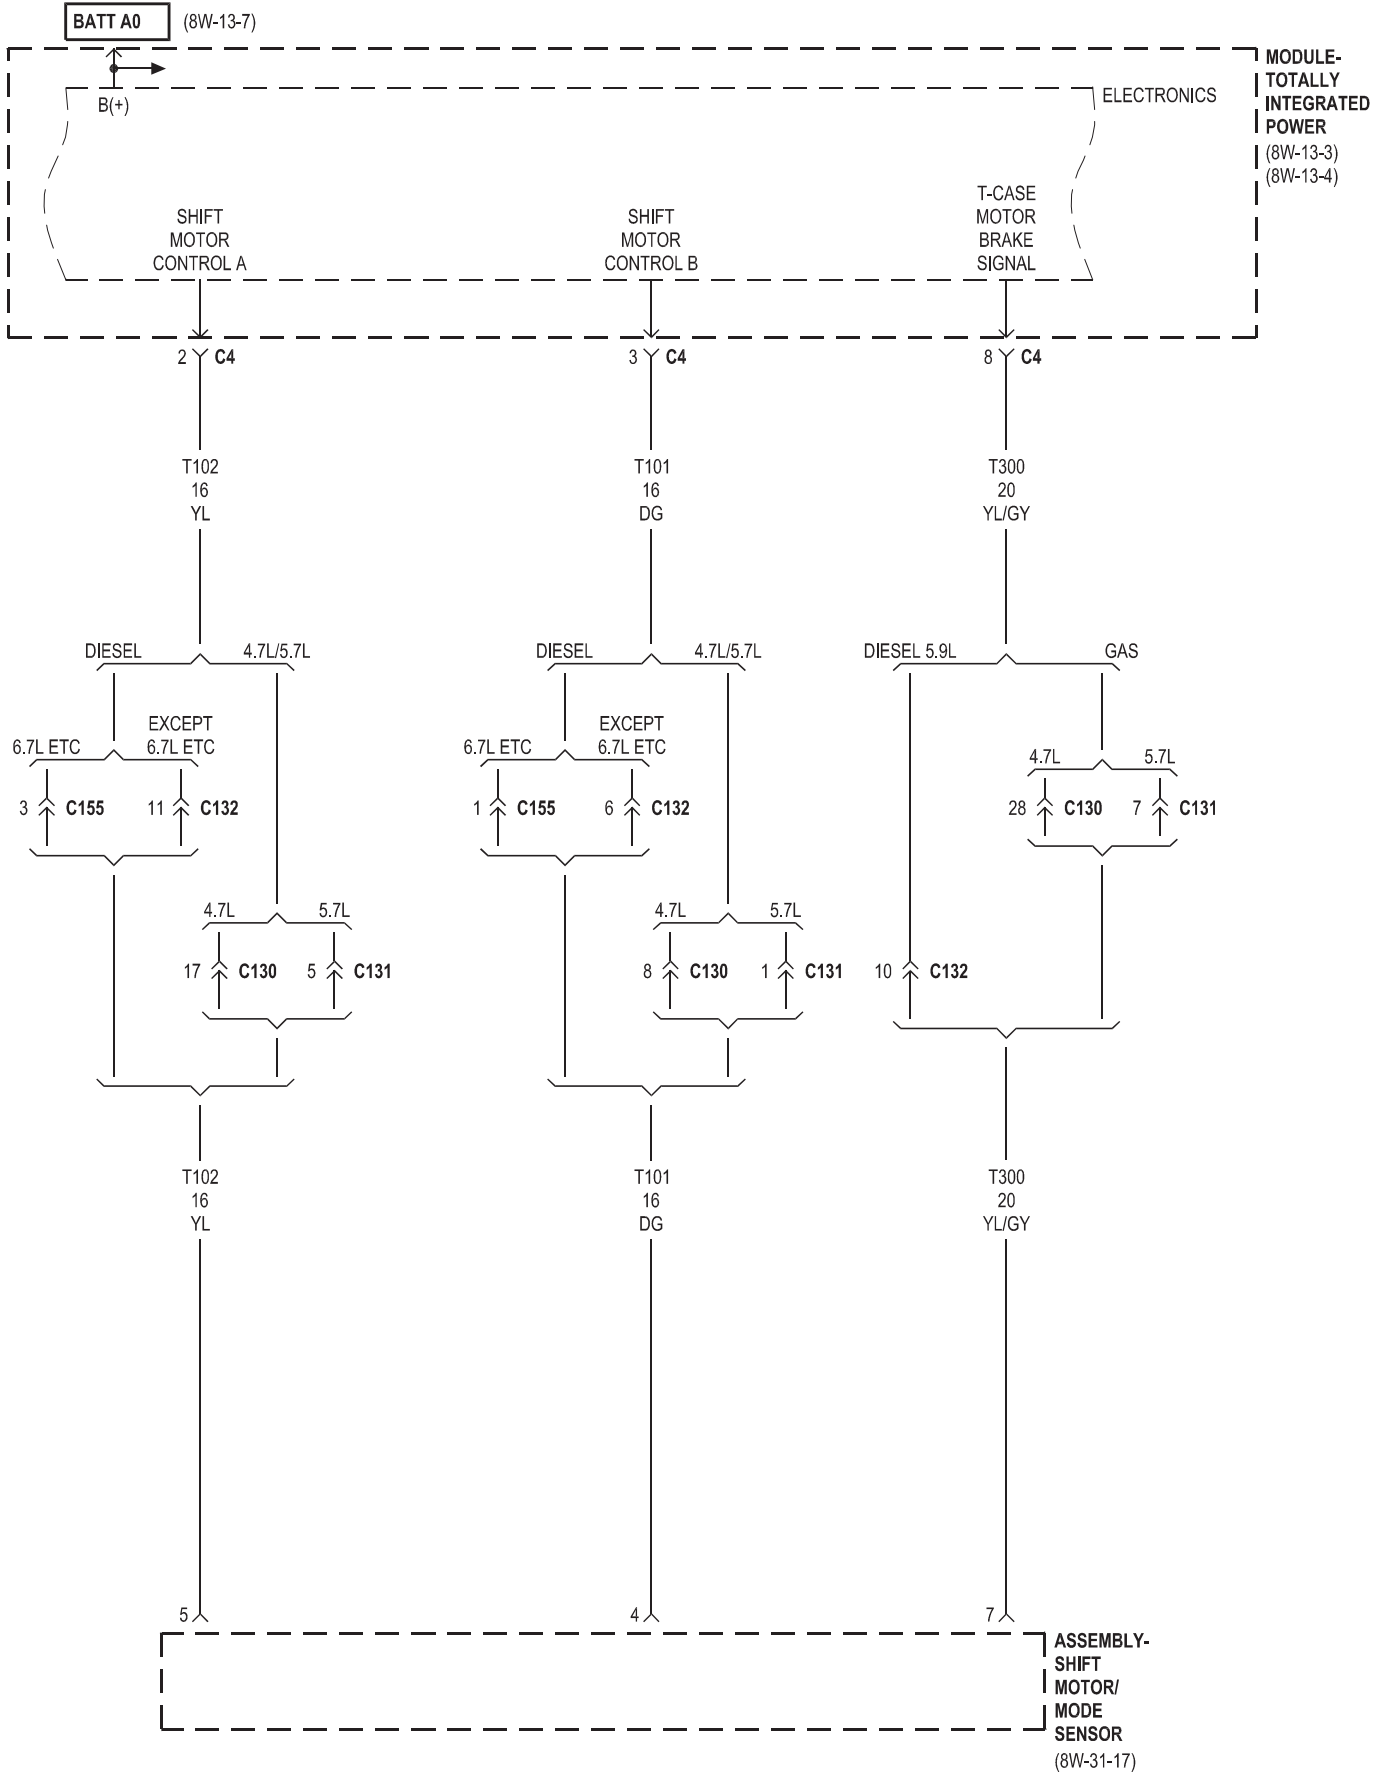

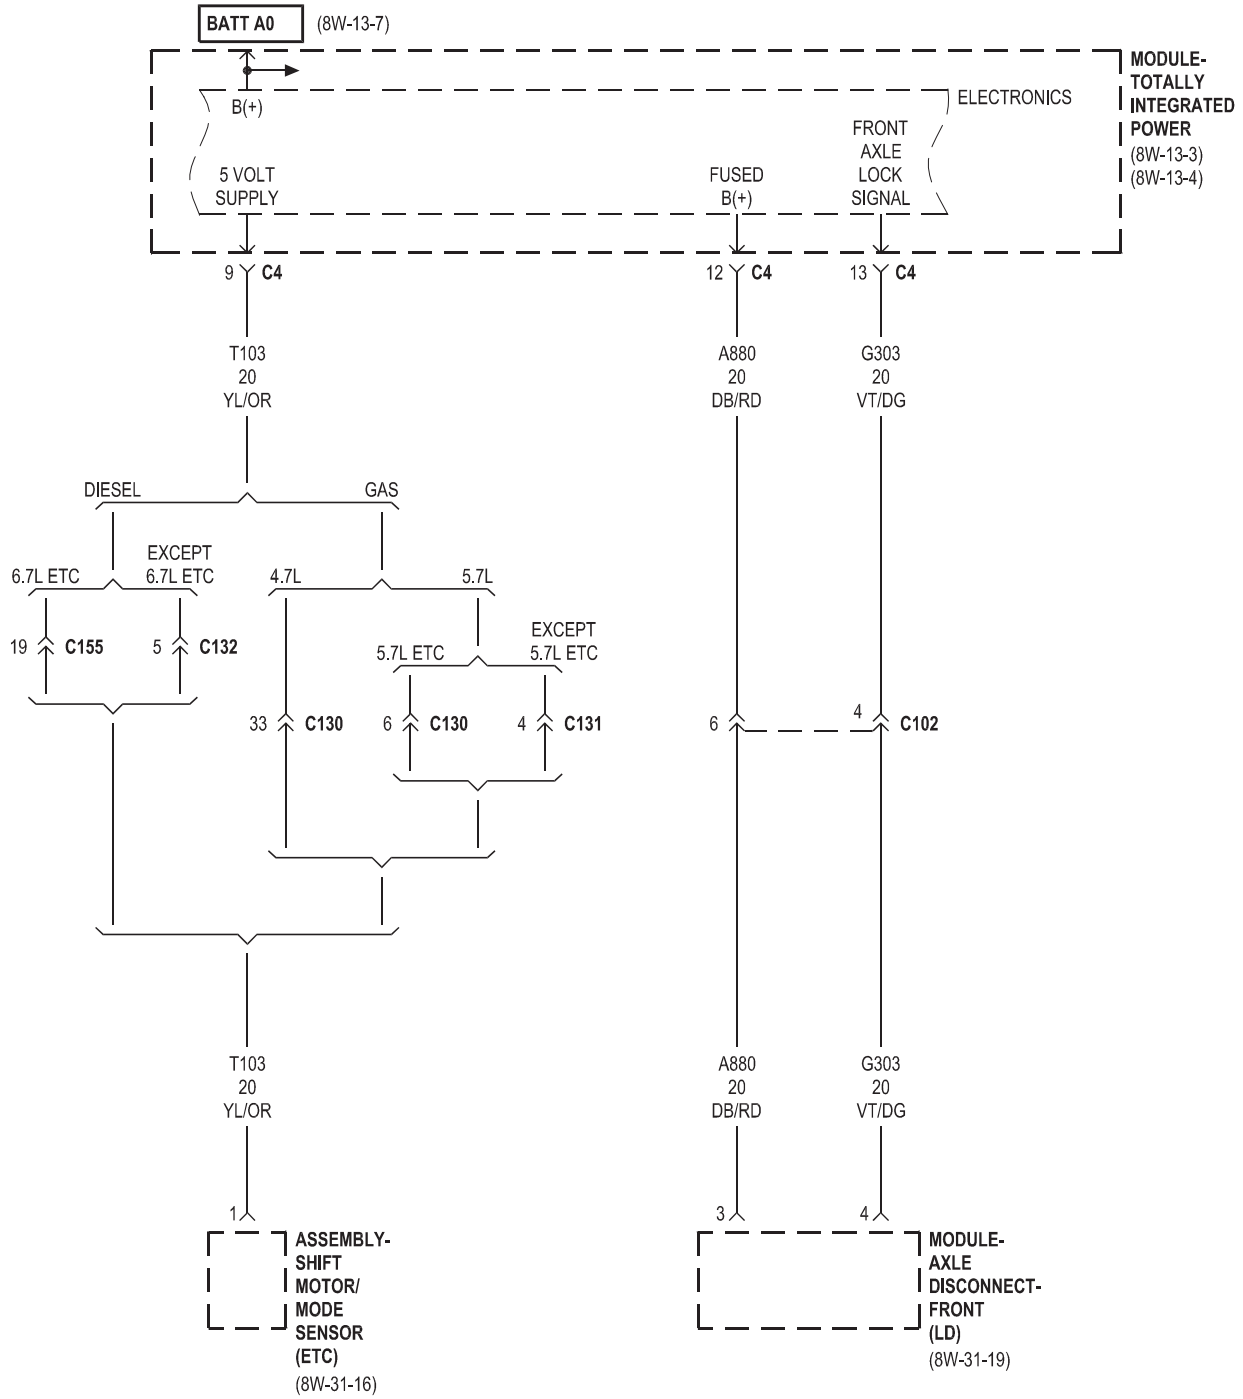

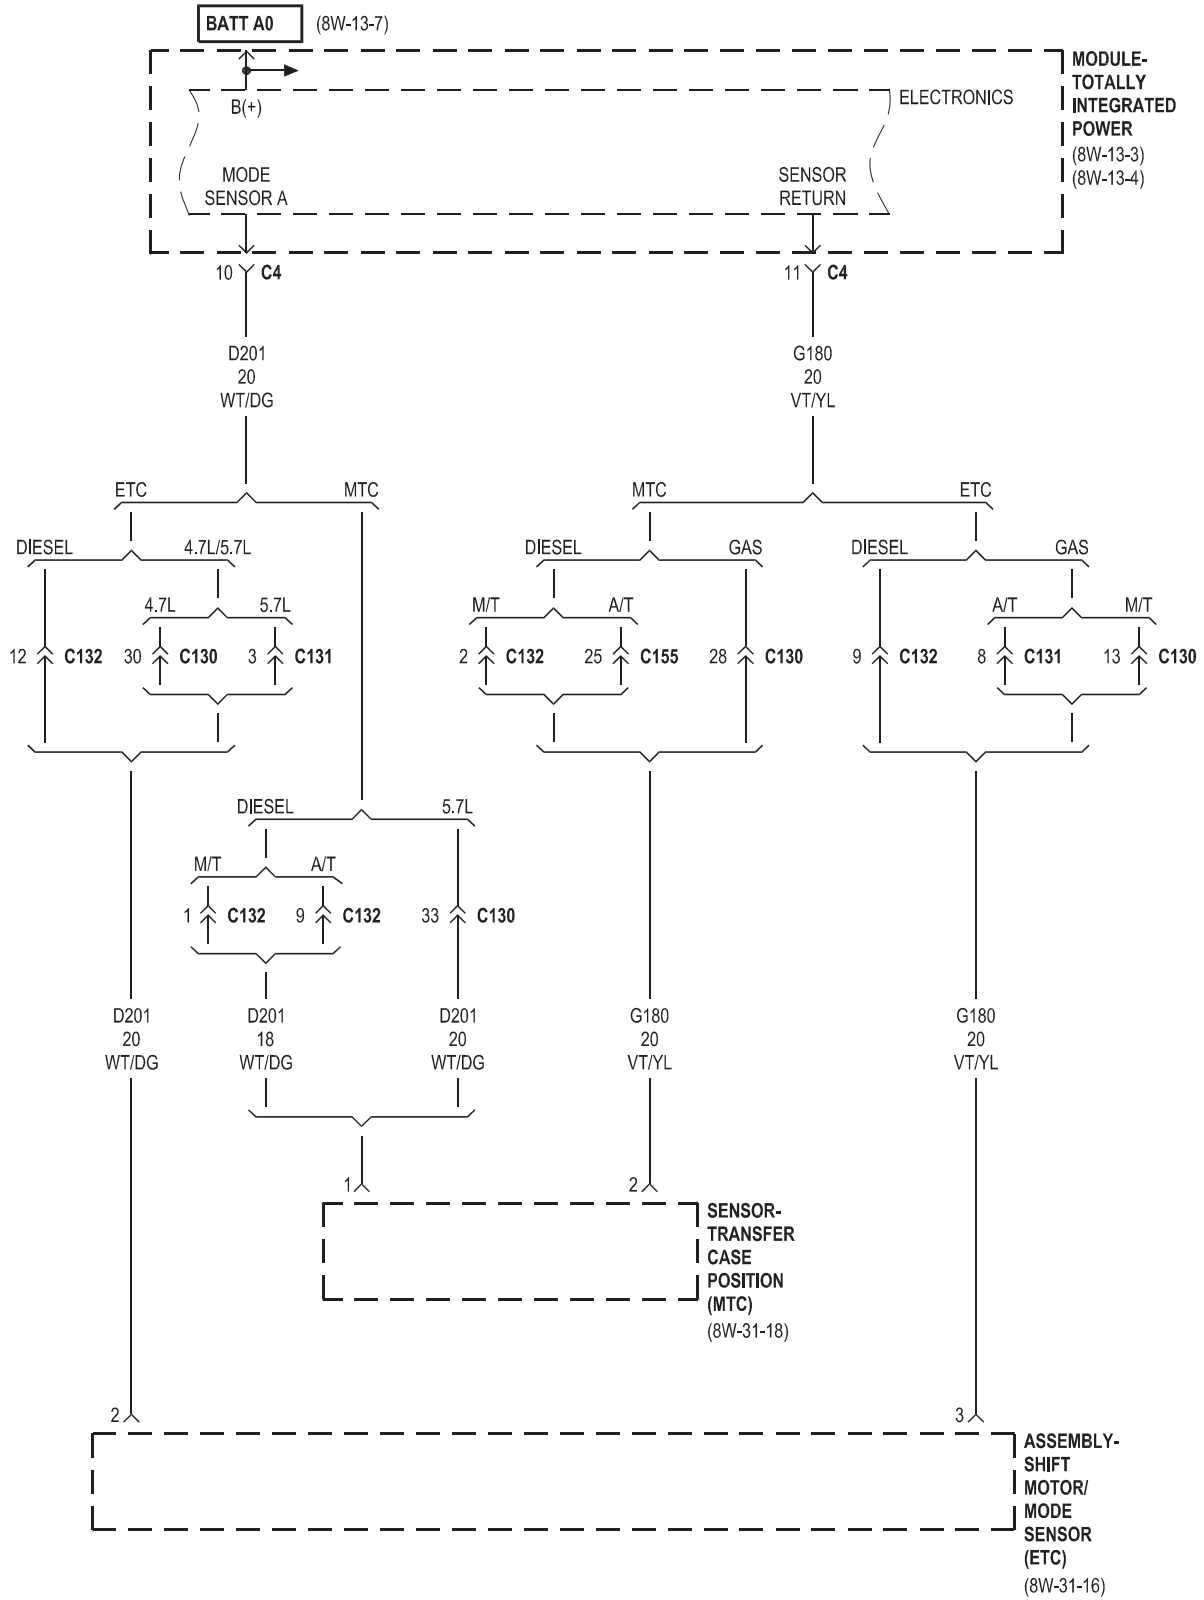


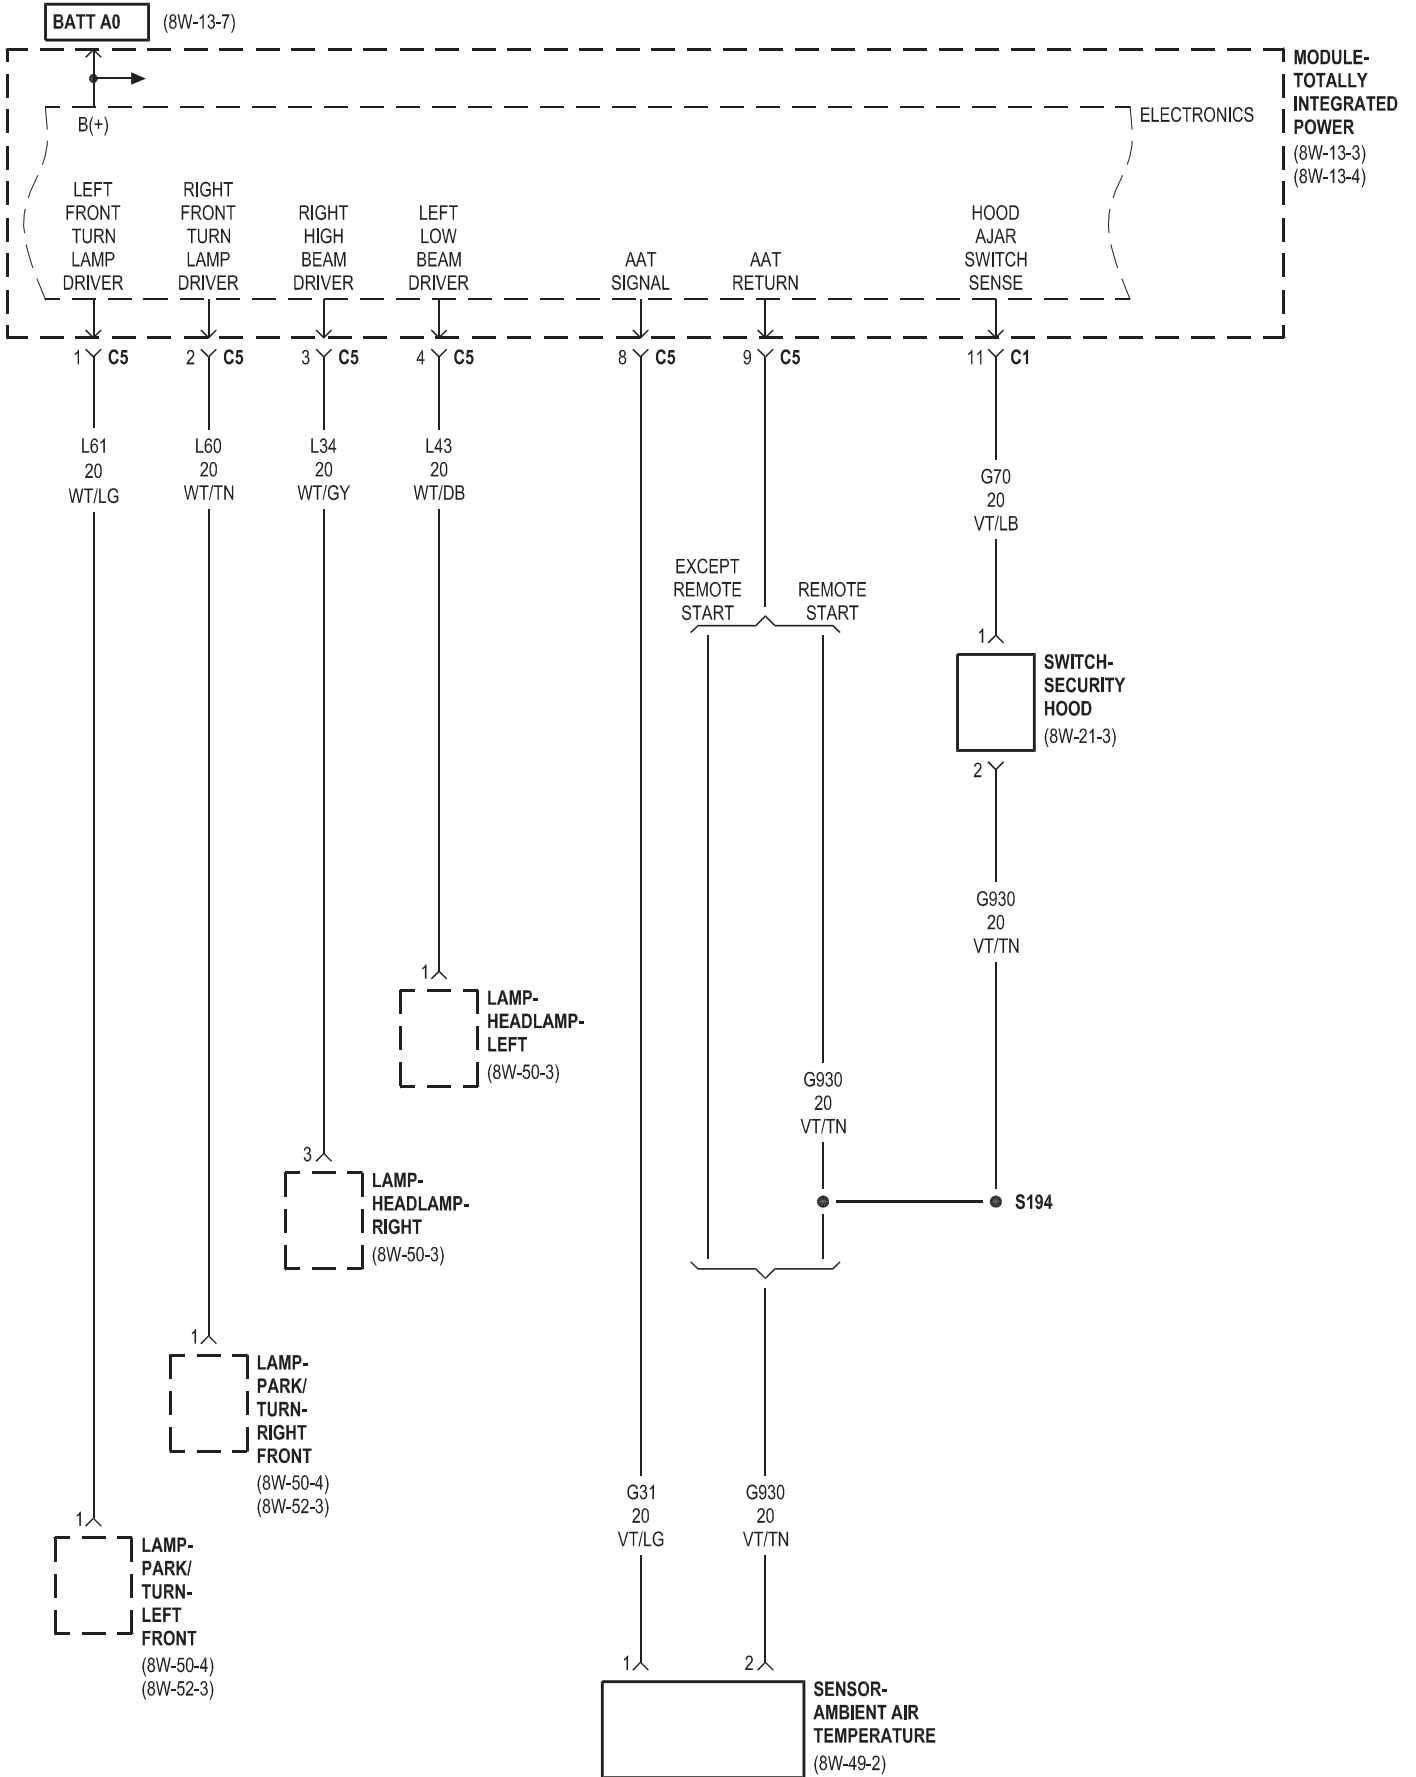

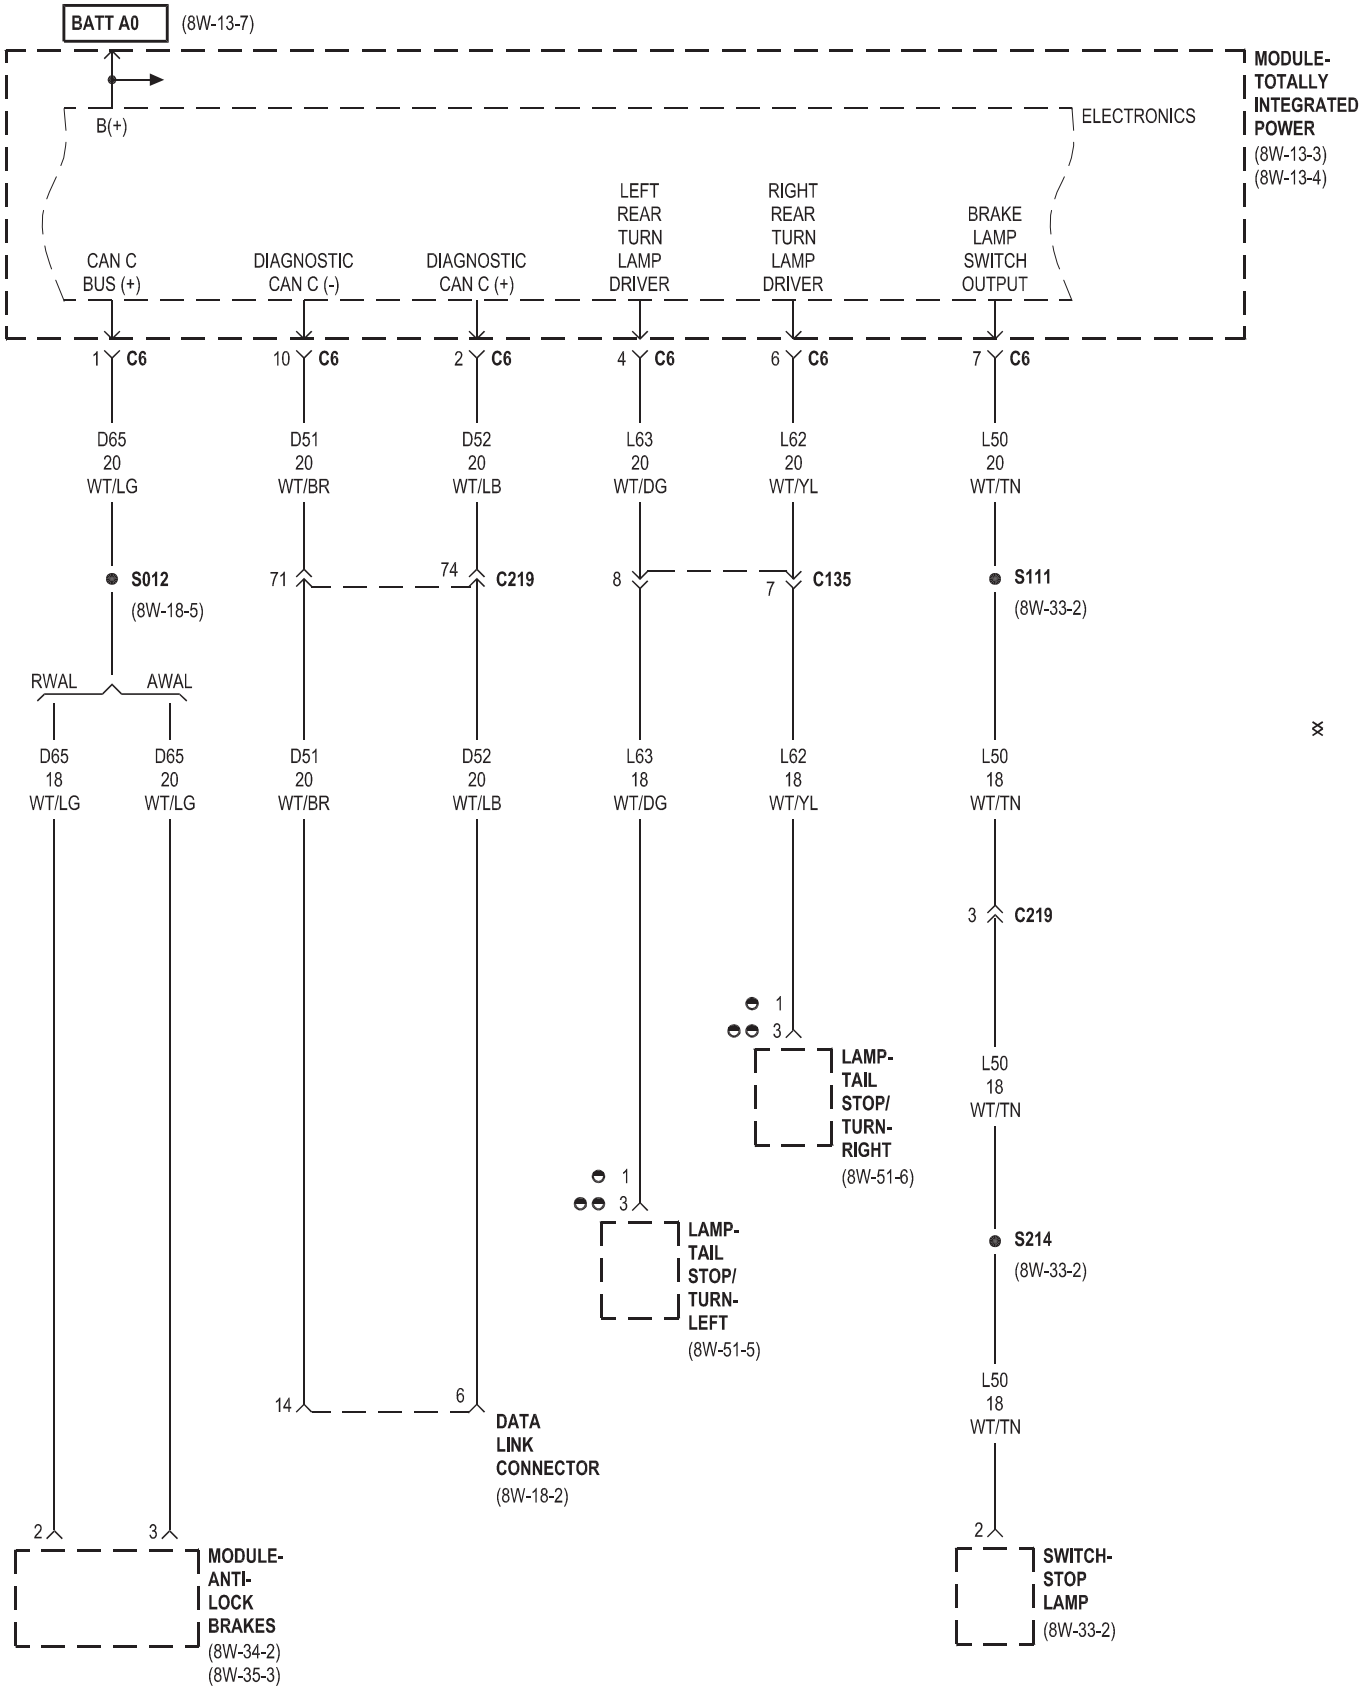


● BOX ON
●● BOX OFF

⊗ NOTE: D64, D65 CIRCUITS ARE TWISTED PAIR

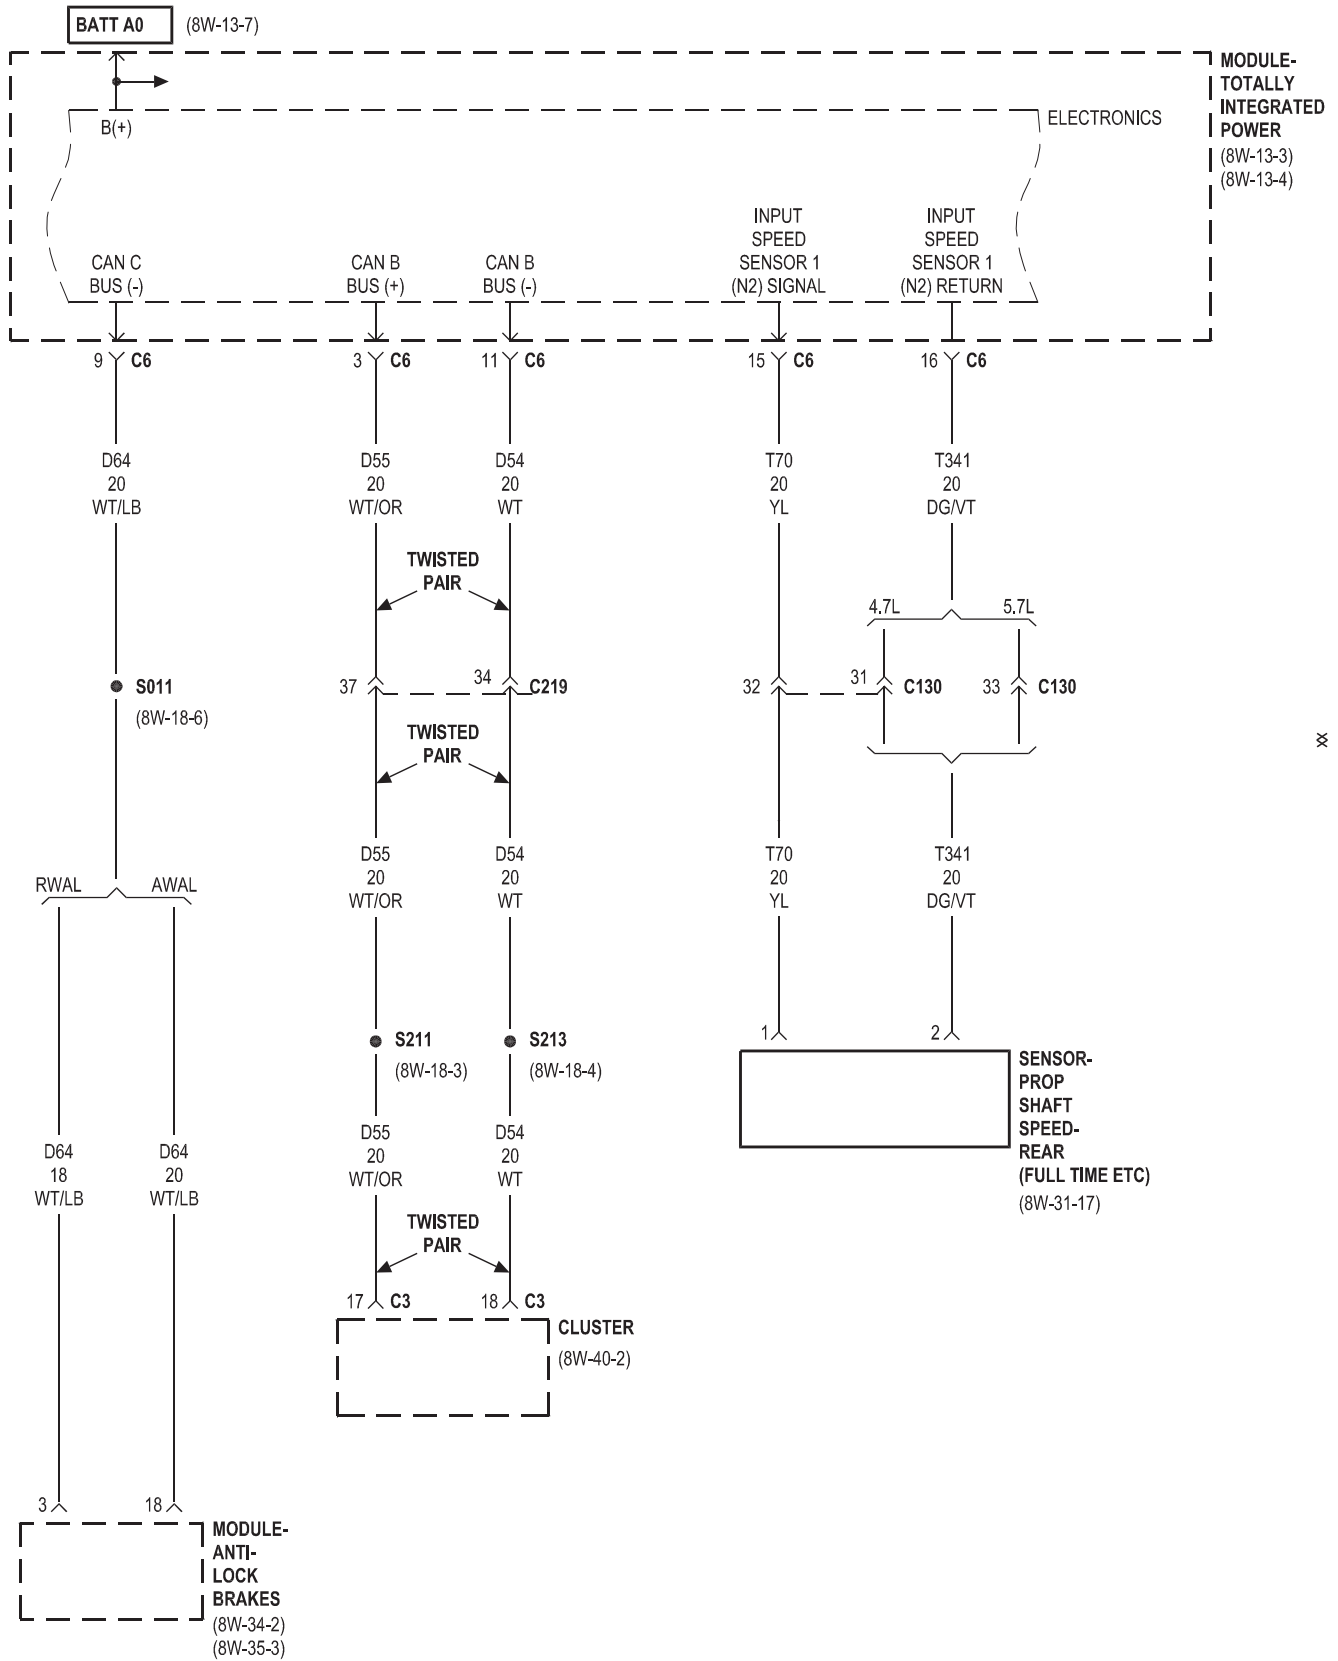



⊗


⊗ NOTE: D64, D65 CIRCUITS ARE TWISTED PAIR

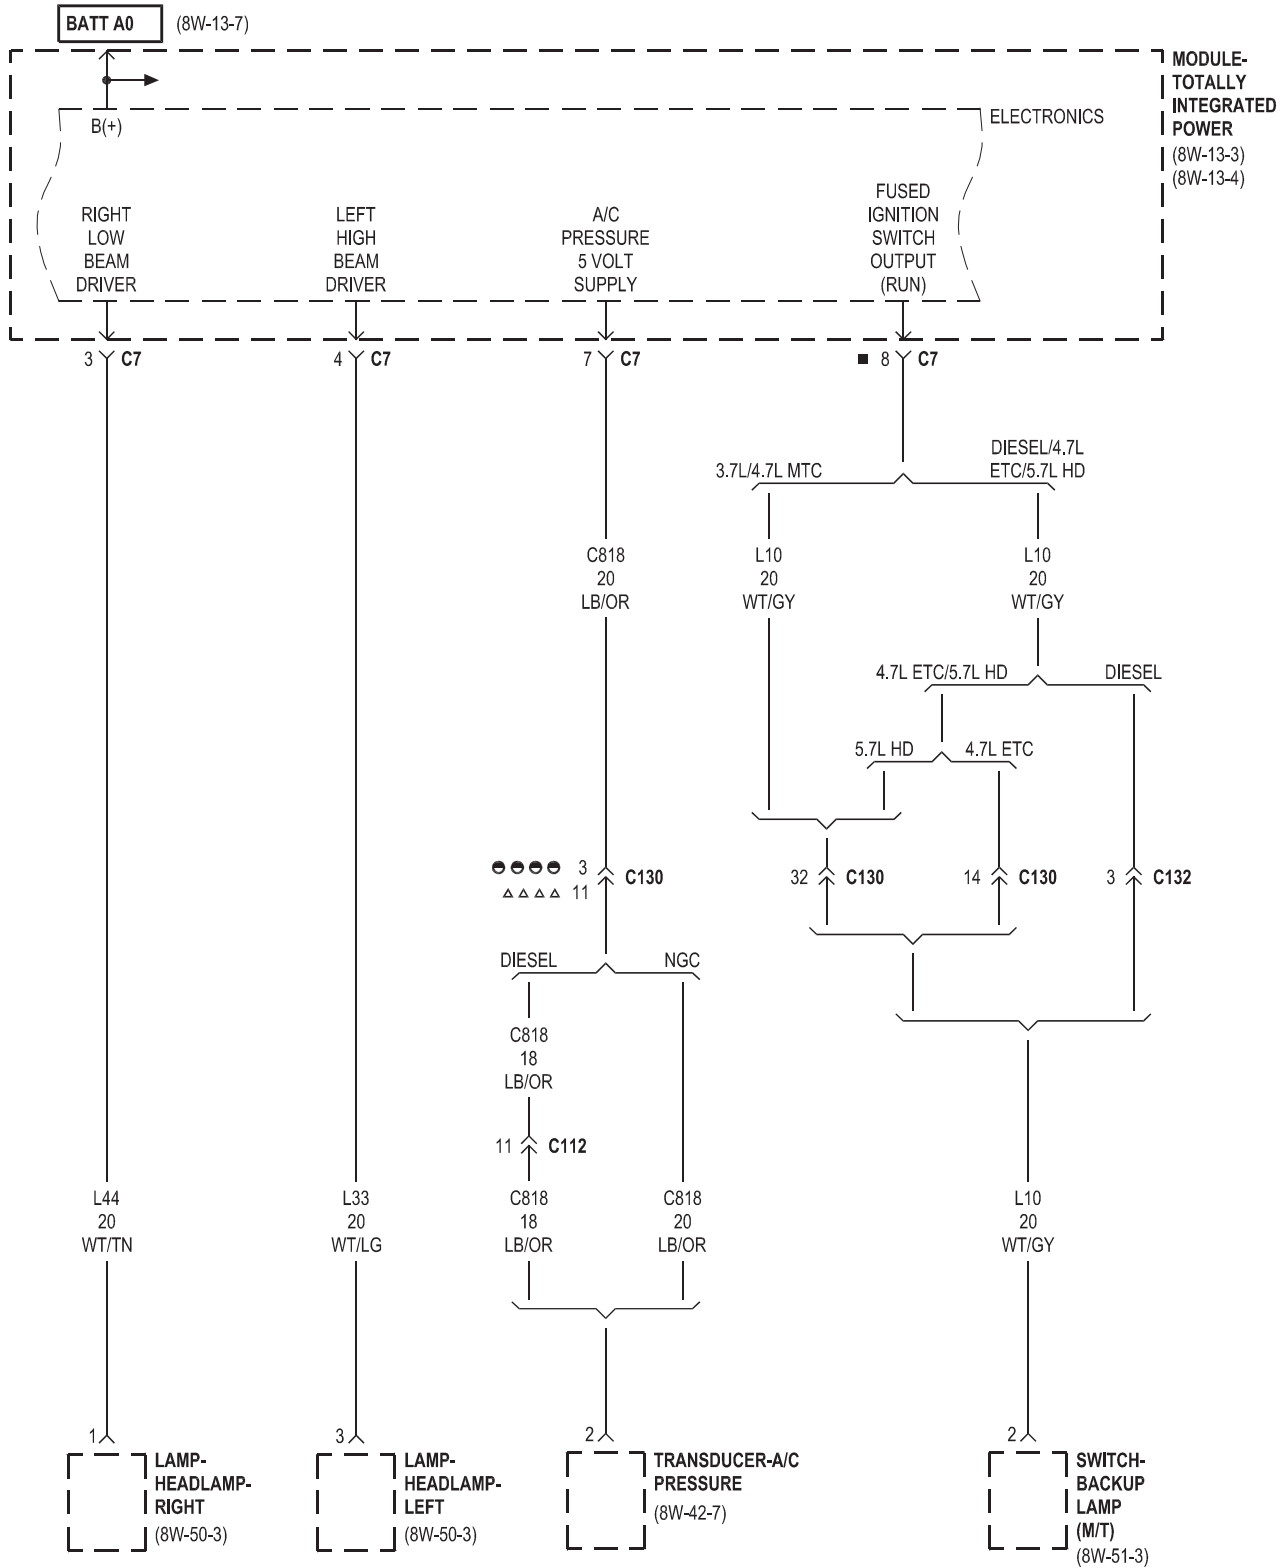

- M/T
- ▲▲▲▲ 6.7L DIESEL
- EXCEPT 6.7L DIESEL

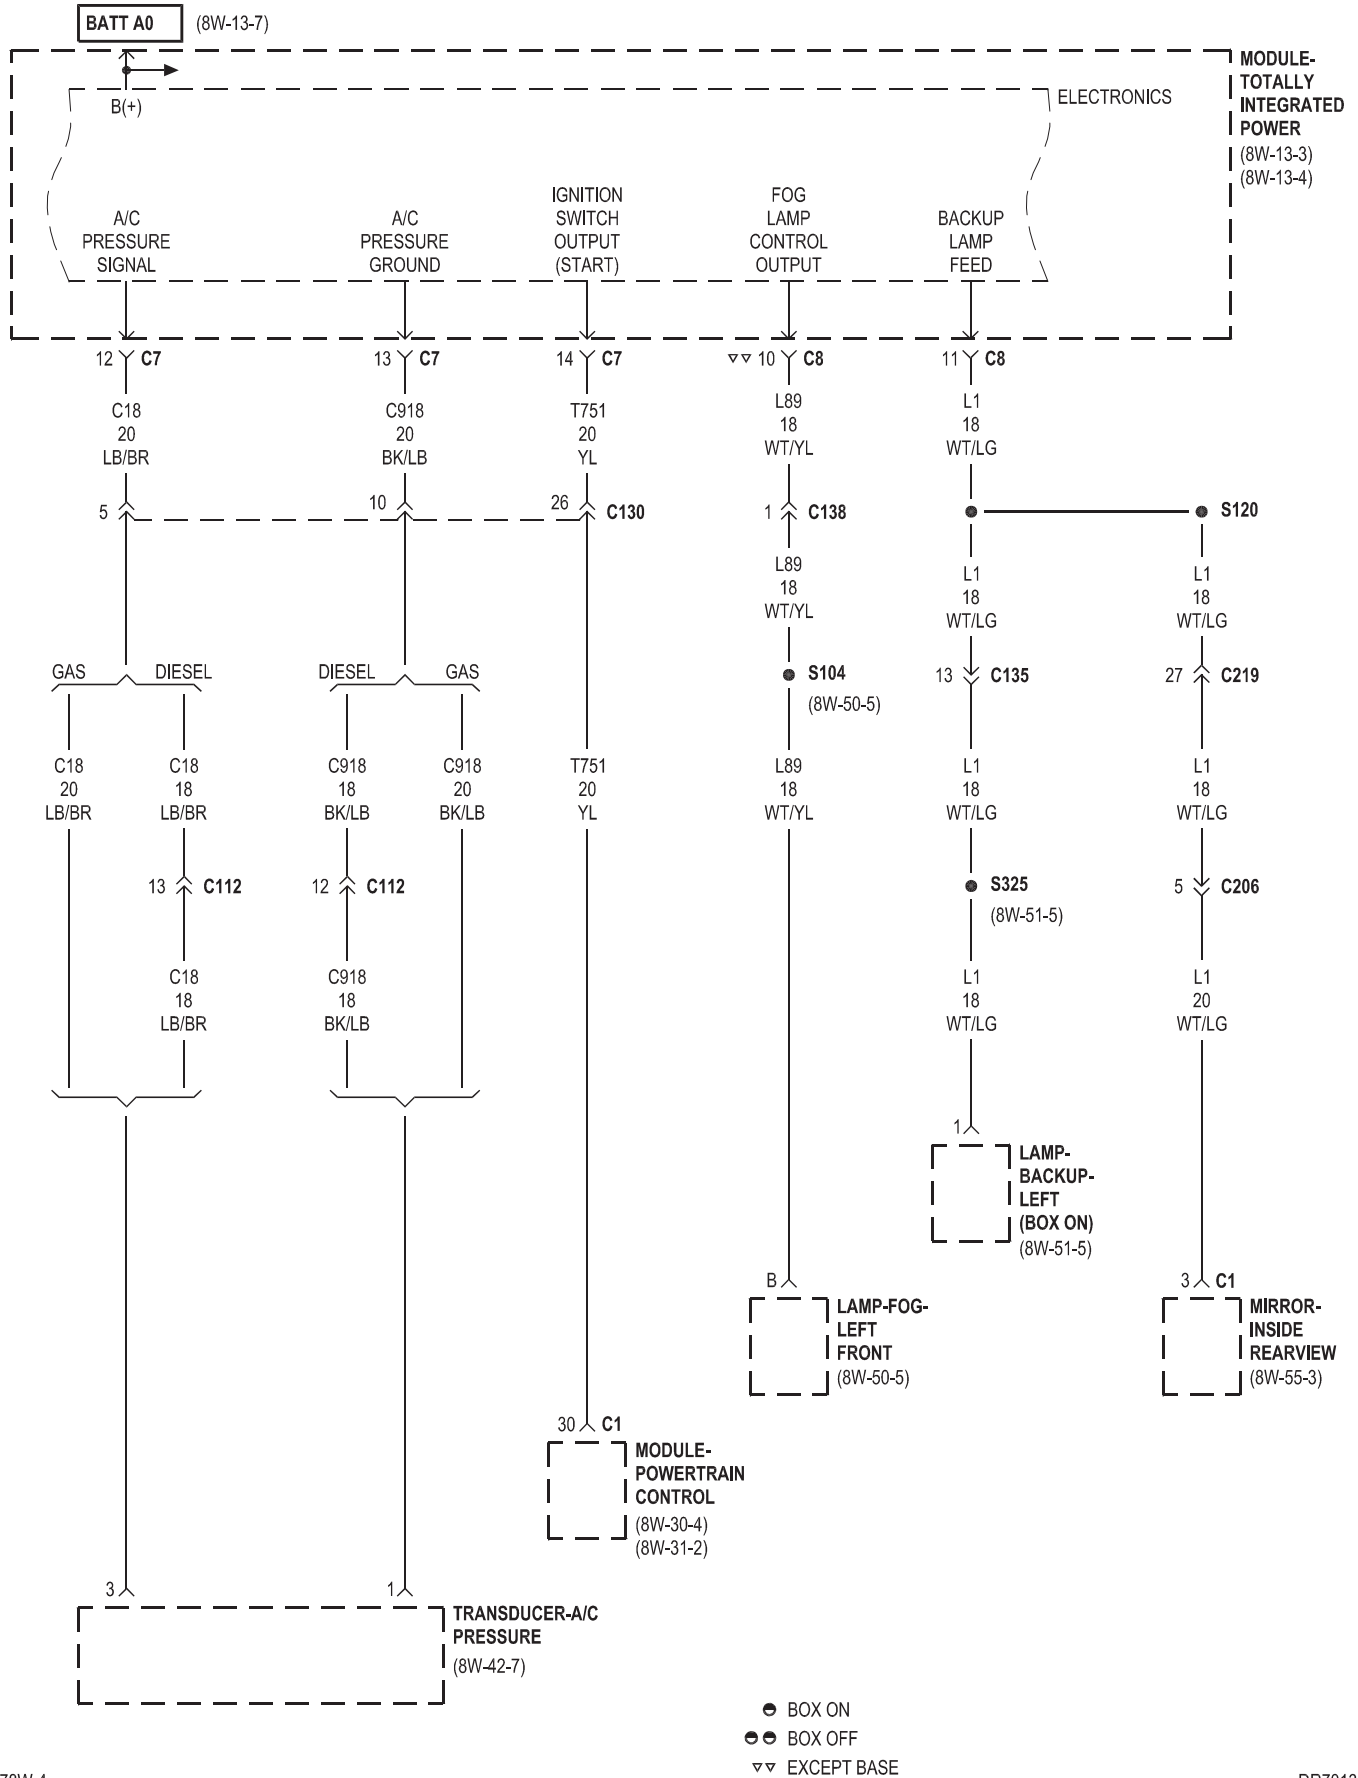

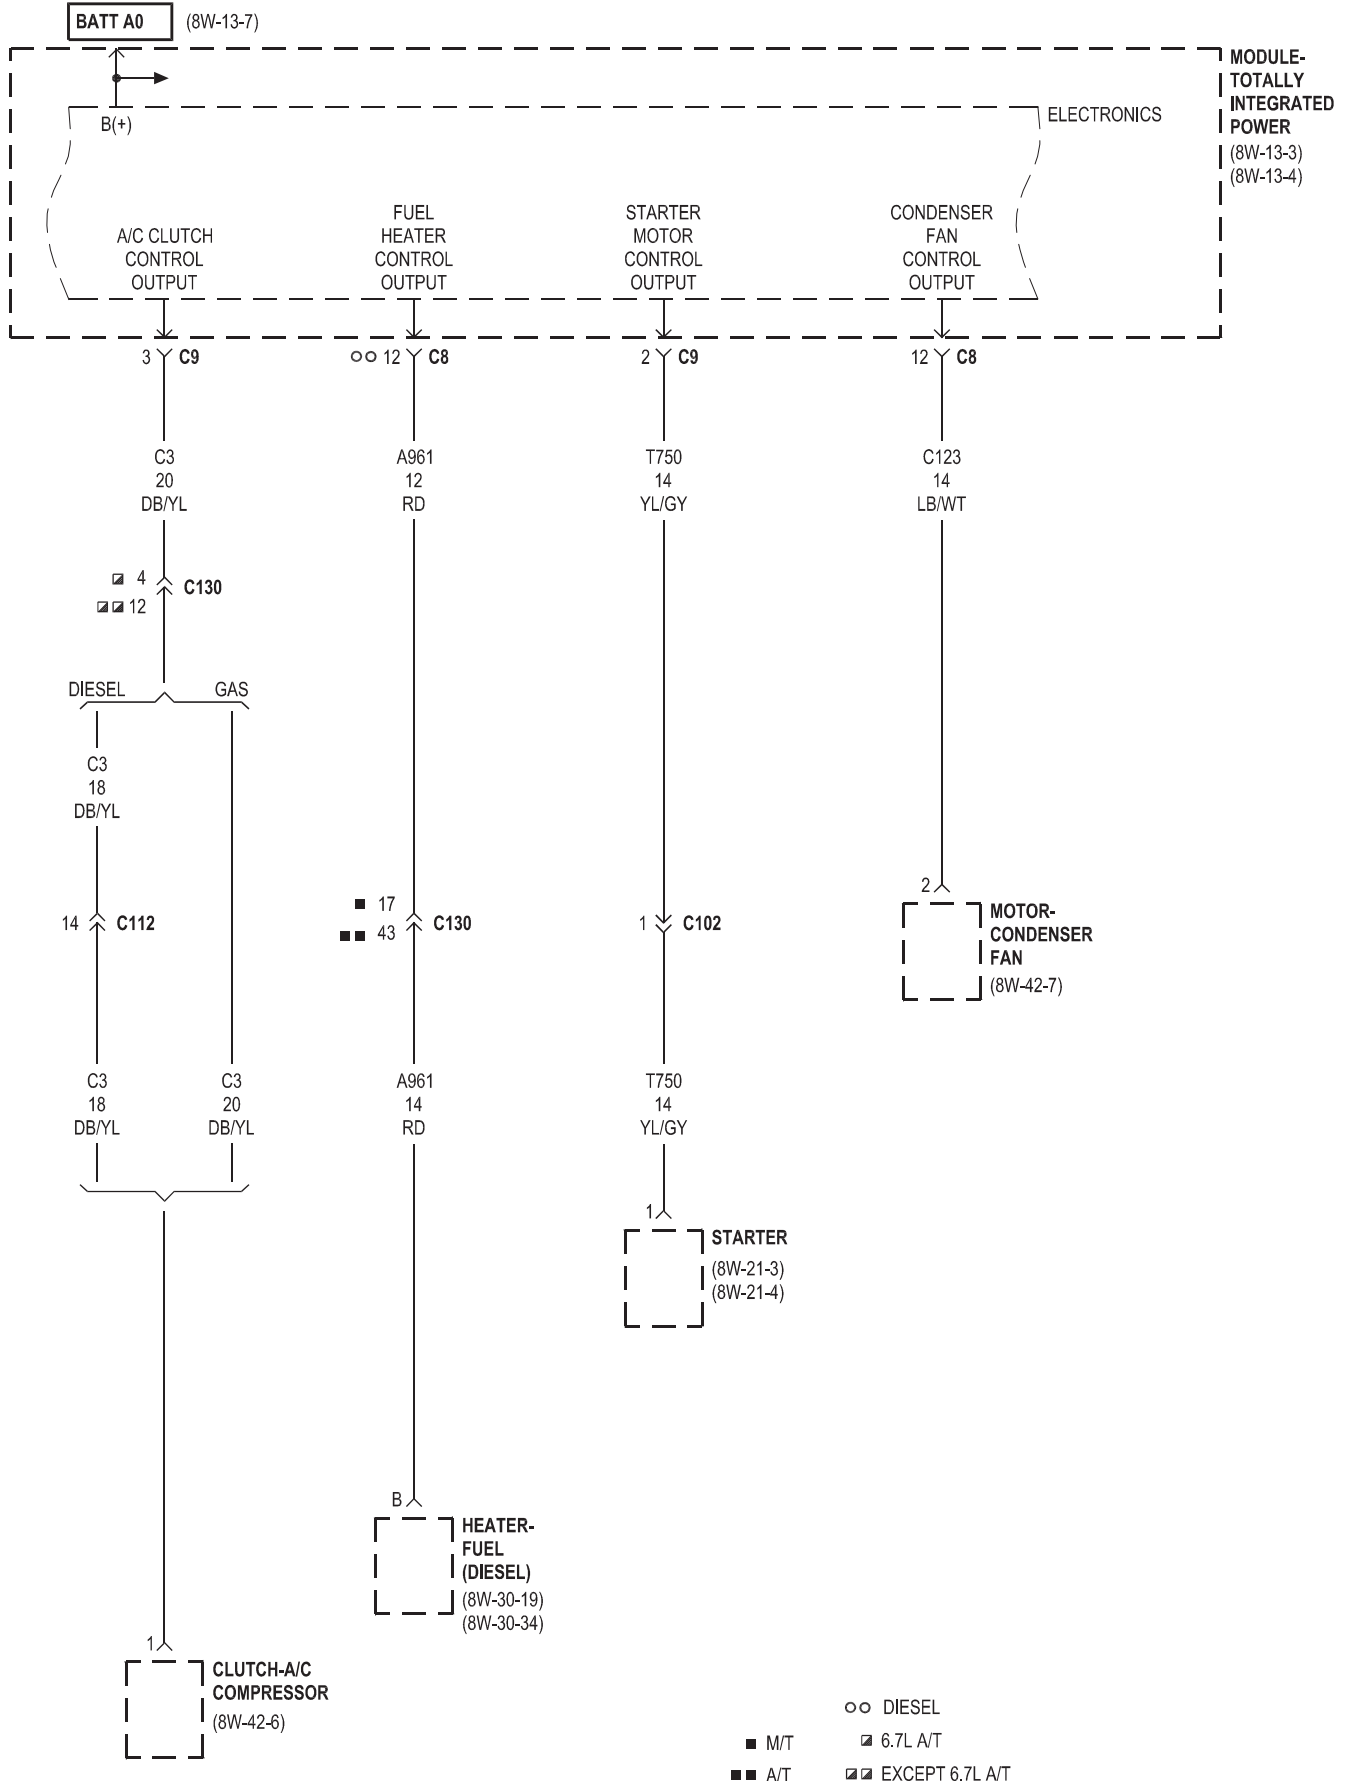

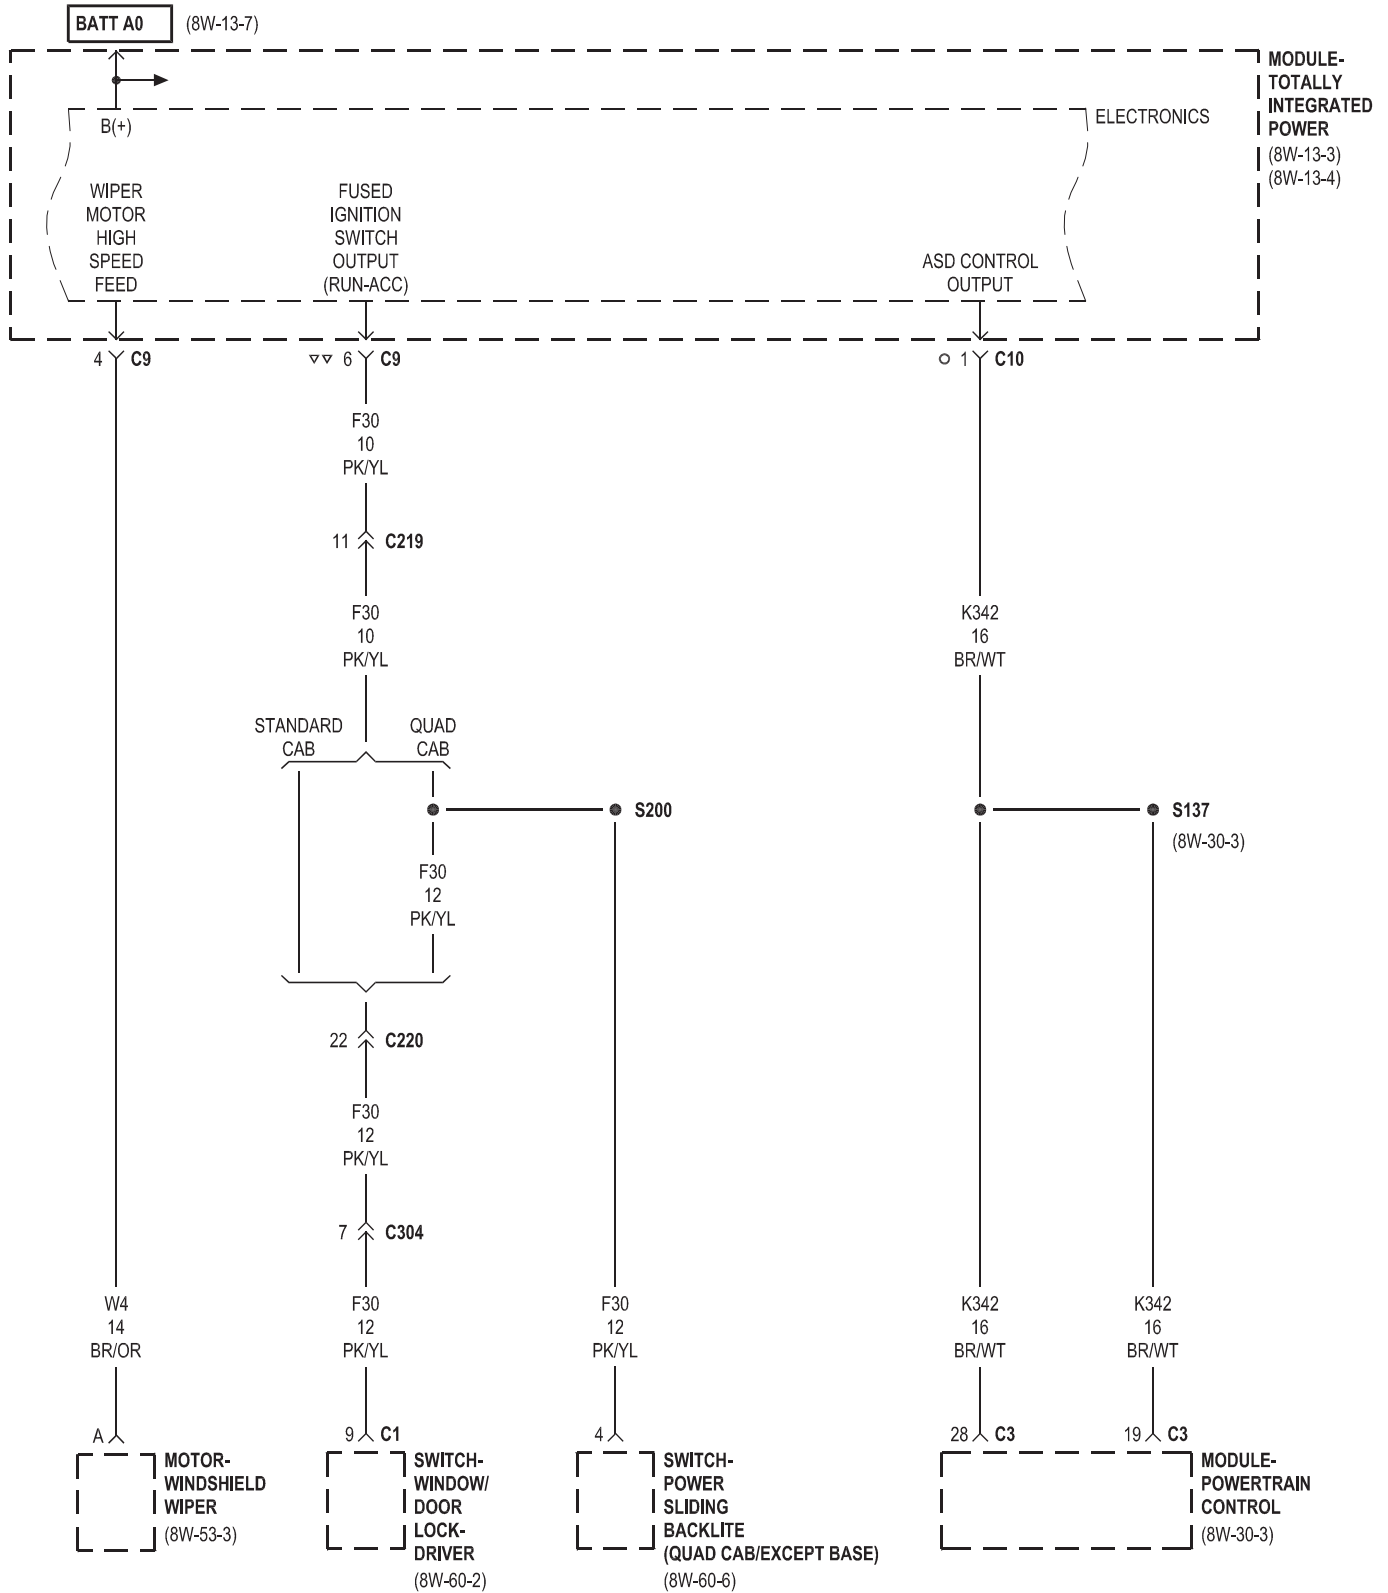

○ GAS
 ▼▼ EXCEPT BASE

A/T

