




8W-31 TRANSMISSION CONTROL SYSTEM


Component	Page	Component	Page
Assembly-Line Pressure Sensor/Variable Force Solenoid	8W-31-2, 5	Module-Engine Control	8W-31-12, 13, 14
Assembly-Shift Motor/Mode Sensor	8W-31-16, 17	Module-Final Drive Control	8W-31-9, 10, 11
Assembly-Transmission Solenoid	8W-31-13, 14, 20, 22, 23	Module-Powertrain Control	8W-31-2, 3, 4, 5, 6, 7, 8
Assembly-Transmission Solenoid/Pressure Switch	8W-31-2, 5	Module-Steering Control	8W-31-14
Assembly-Transmission Solenoid/TRS	8W-31-2, 6, 7, 8	Module-Totally Integrated Power	8W-31-2, 9, 13, 15, 16, 17, 18, 19, 20, 21
Assembly-Transmission Throttle Valve	8W-31-13, 14	Module-Transmission Control	8W-31-20, 21, 22, 23, 24
Cluster	8W-31-9, 12, 15, 19	Sensor-Input Speed	8W-31-3, 20
Data Link Connector	8W-31-24	Sensor-Line Pressure	8W-31-7
Fuse 4	8W-31-20	Sensor-Output Speed	8W-31-3, 13, 20
Fuse 9	8W-31-9	Sensor-Prop Shaft Speed-Front	8W-31-17
Fuse 10	8W-31-21	Sensor-Prop Shaft Speed-Rear	8W-31-17
Fuse 25	8W-31-16	Sensor-Transfer Case Position	8W-31-18
Fuse 29	8W-31-15	Sensor-Transmission Range	8W-31-2, 4, 12, 21
Fuse 30	8W-31-9	Sensor-Transmission Temperature	8W-31-20
G104	8W-31-9, 10, 18, 21	Solenoid-Brake Transmission Shift Interlock	8W-31-19
G106	8W-31-19, 20	Solenoid-Locker-Front	8W-31-11
G107	8W-31-2, 18	Solenoid-Locker-Rear	8W-31-11
G201	8W-31-2, 14, 15, 24	Switch-Disconnecting Stabilizer Bar	8W-31-9, 10
G203	8W-31-19	Switch-Tow/Haul Overdrive	8W-31-2, 14, 24
Module-Axle Disconnect-Front	8W-31-19	Switch-Transfer Case Selector	8W-31-15

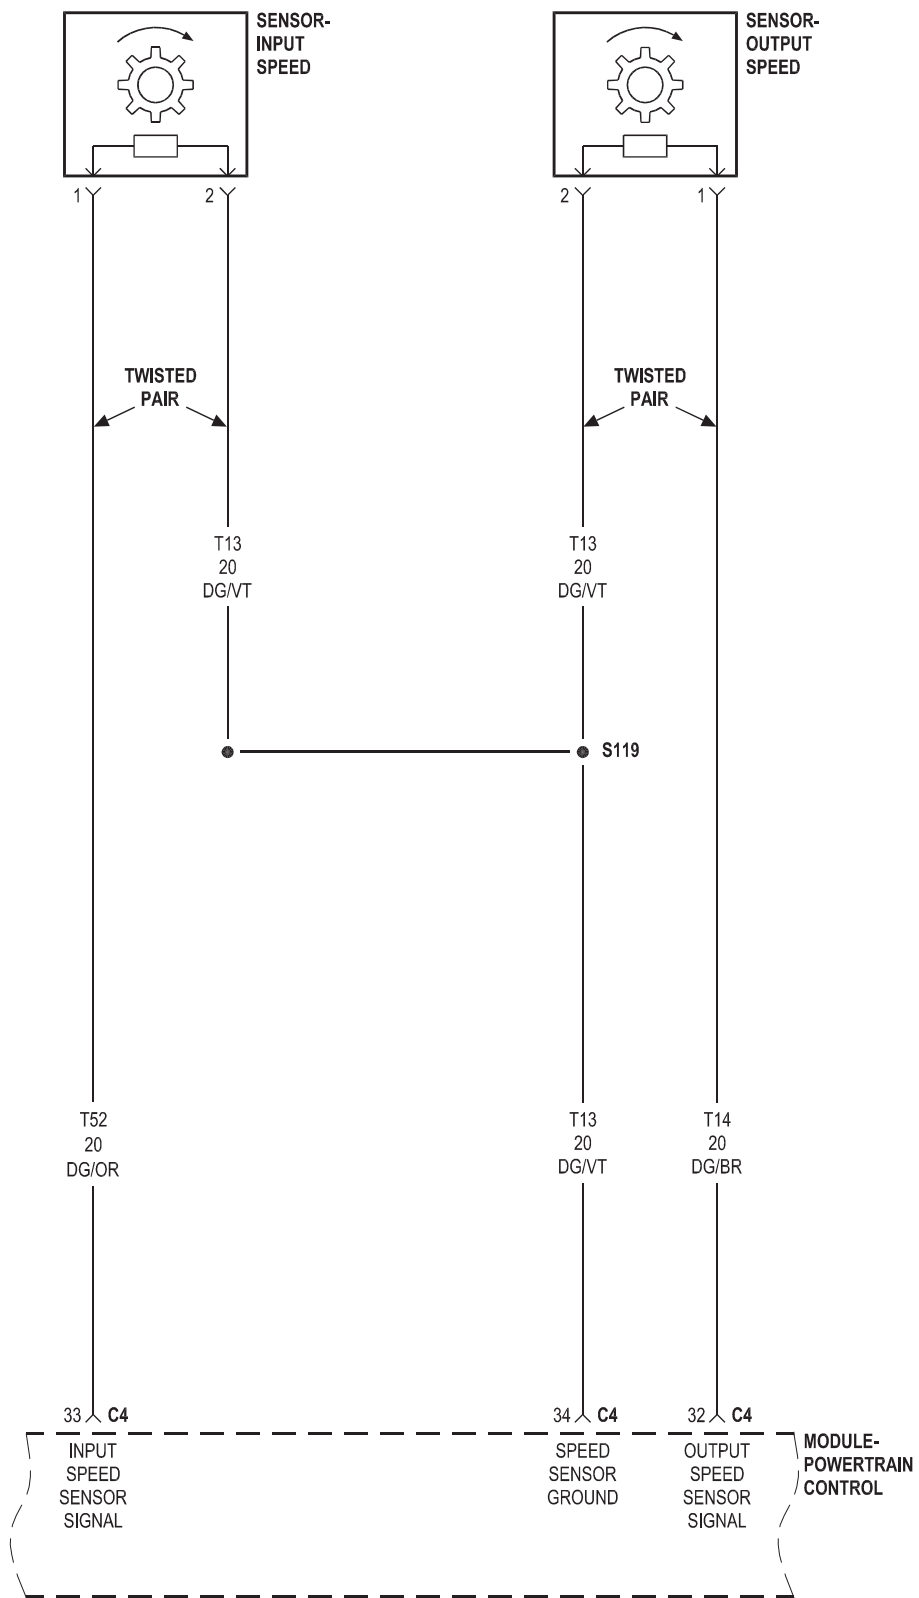



3.7L

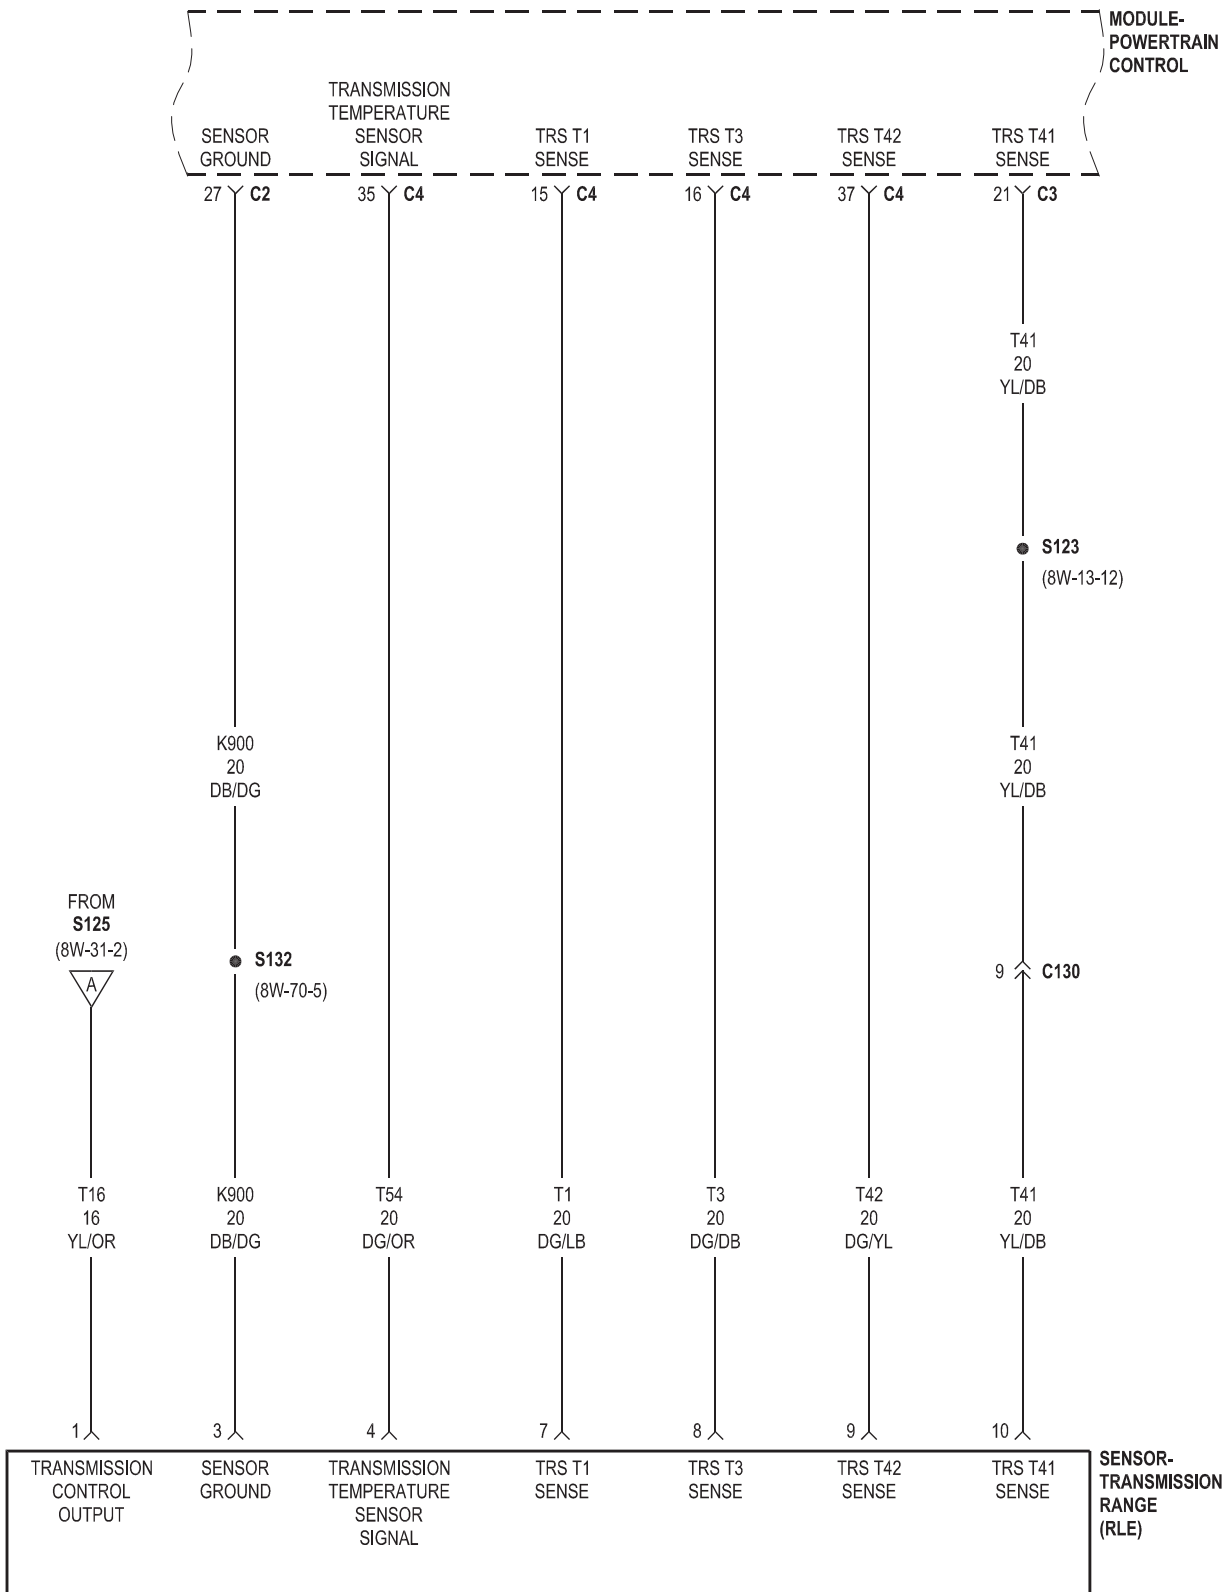


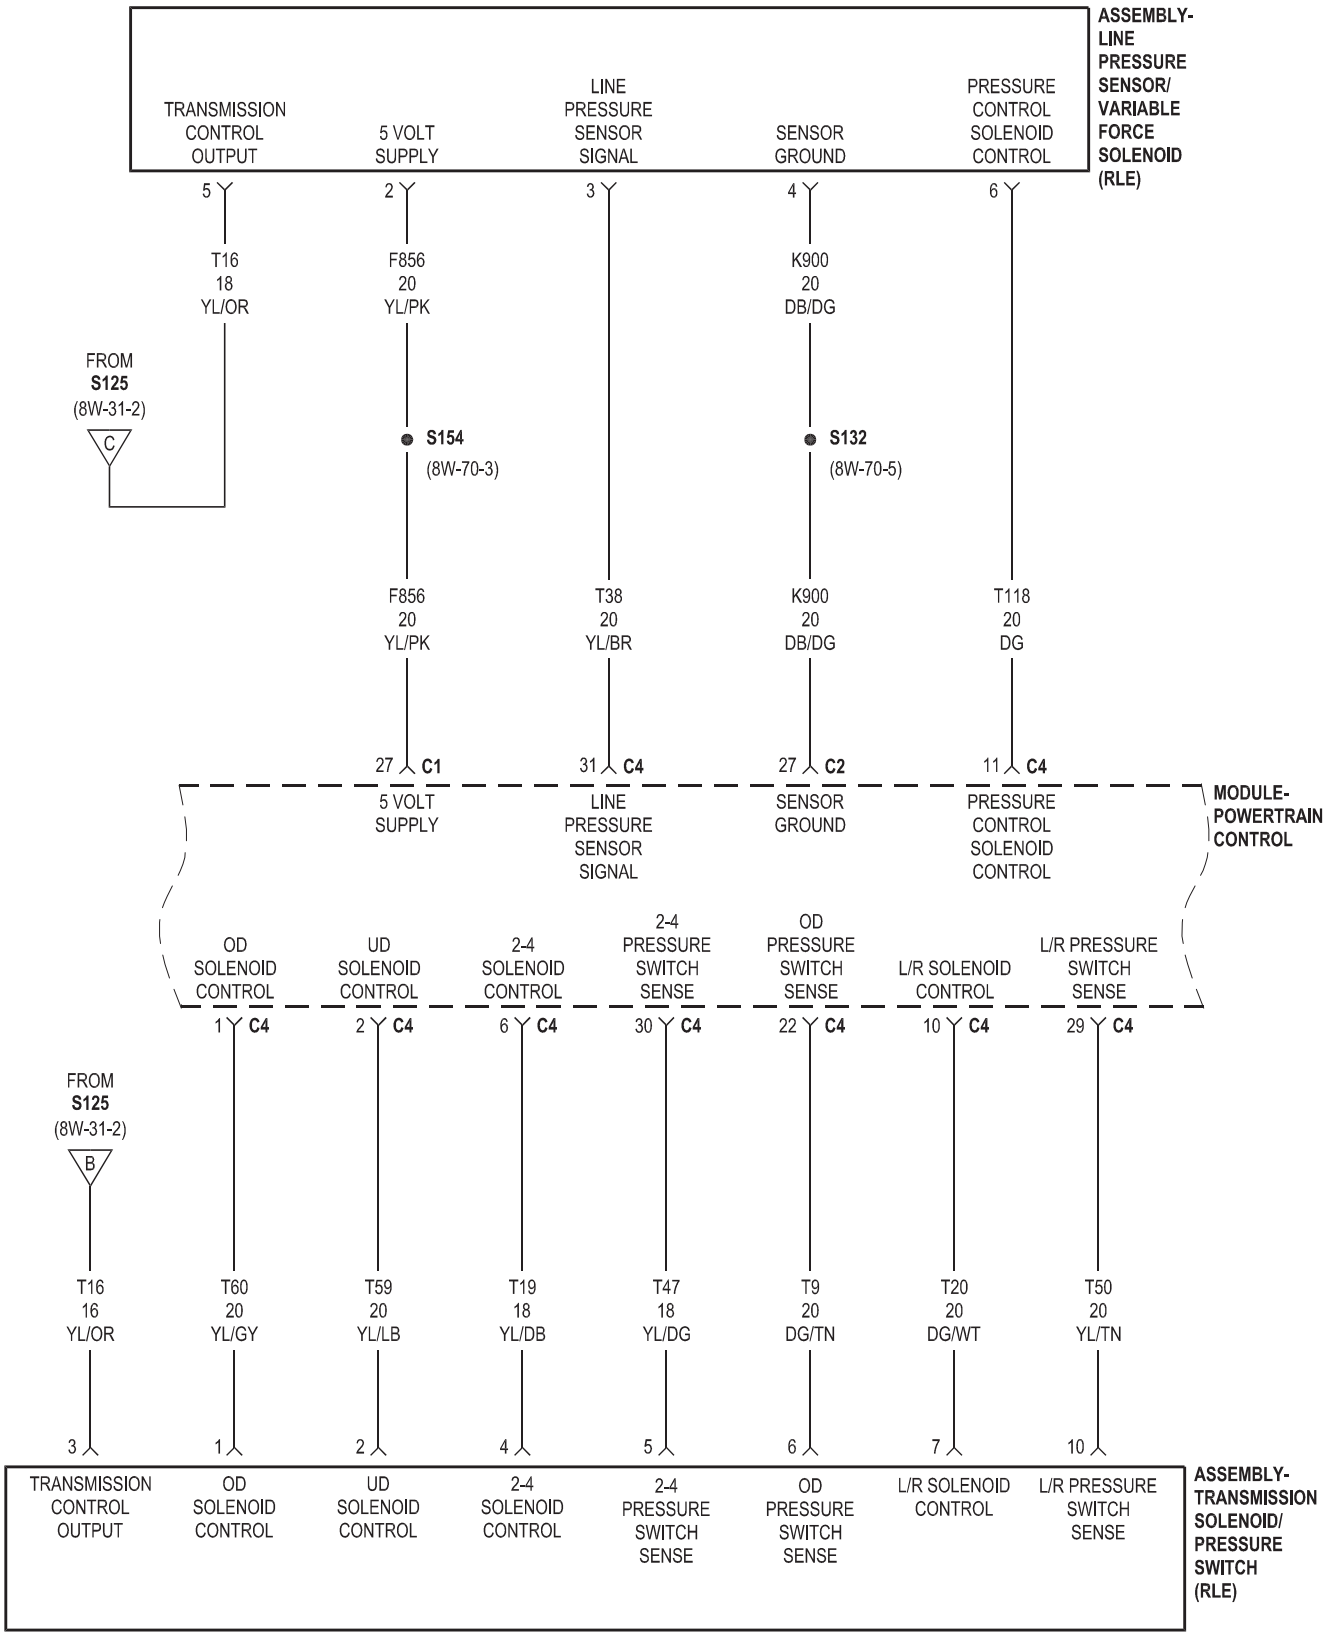


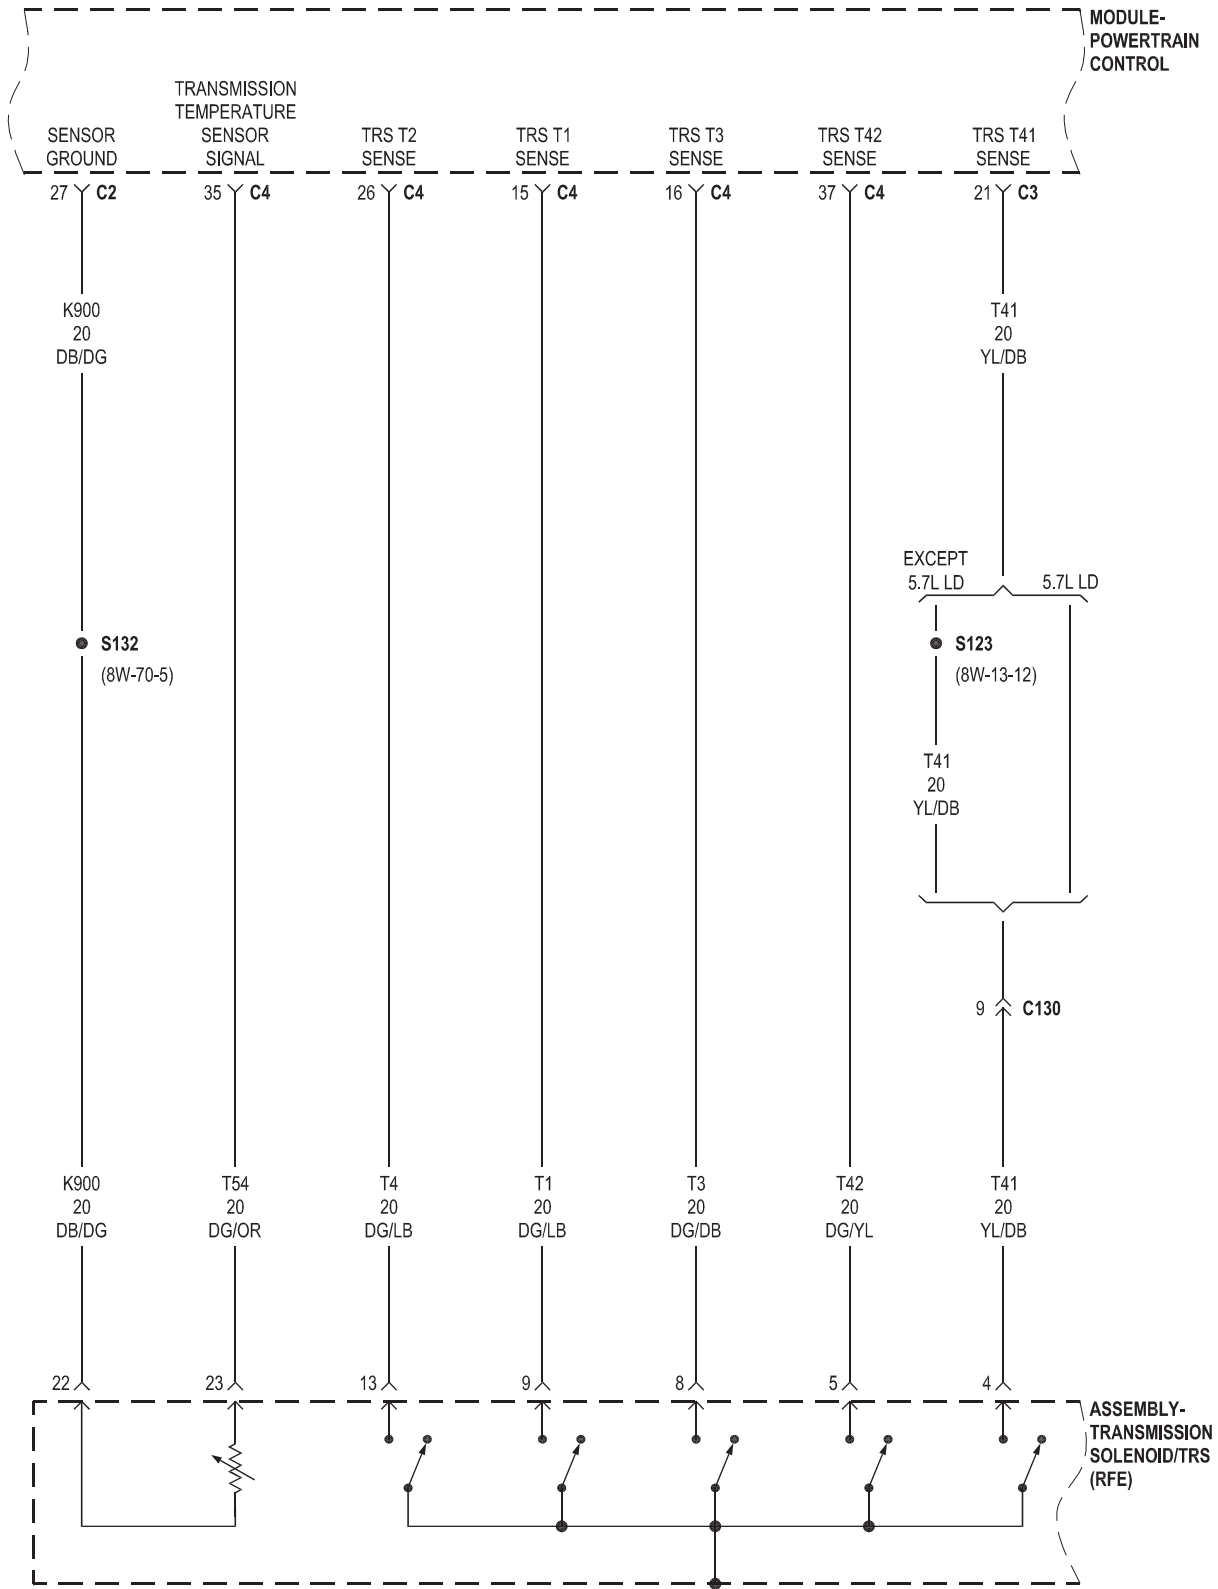

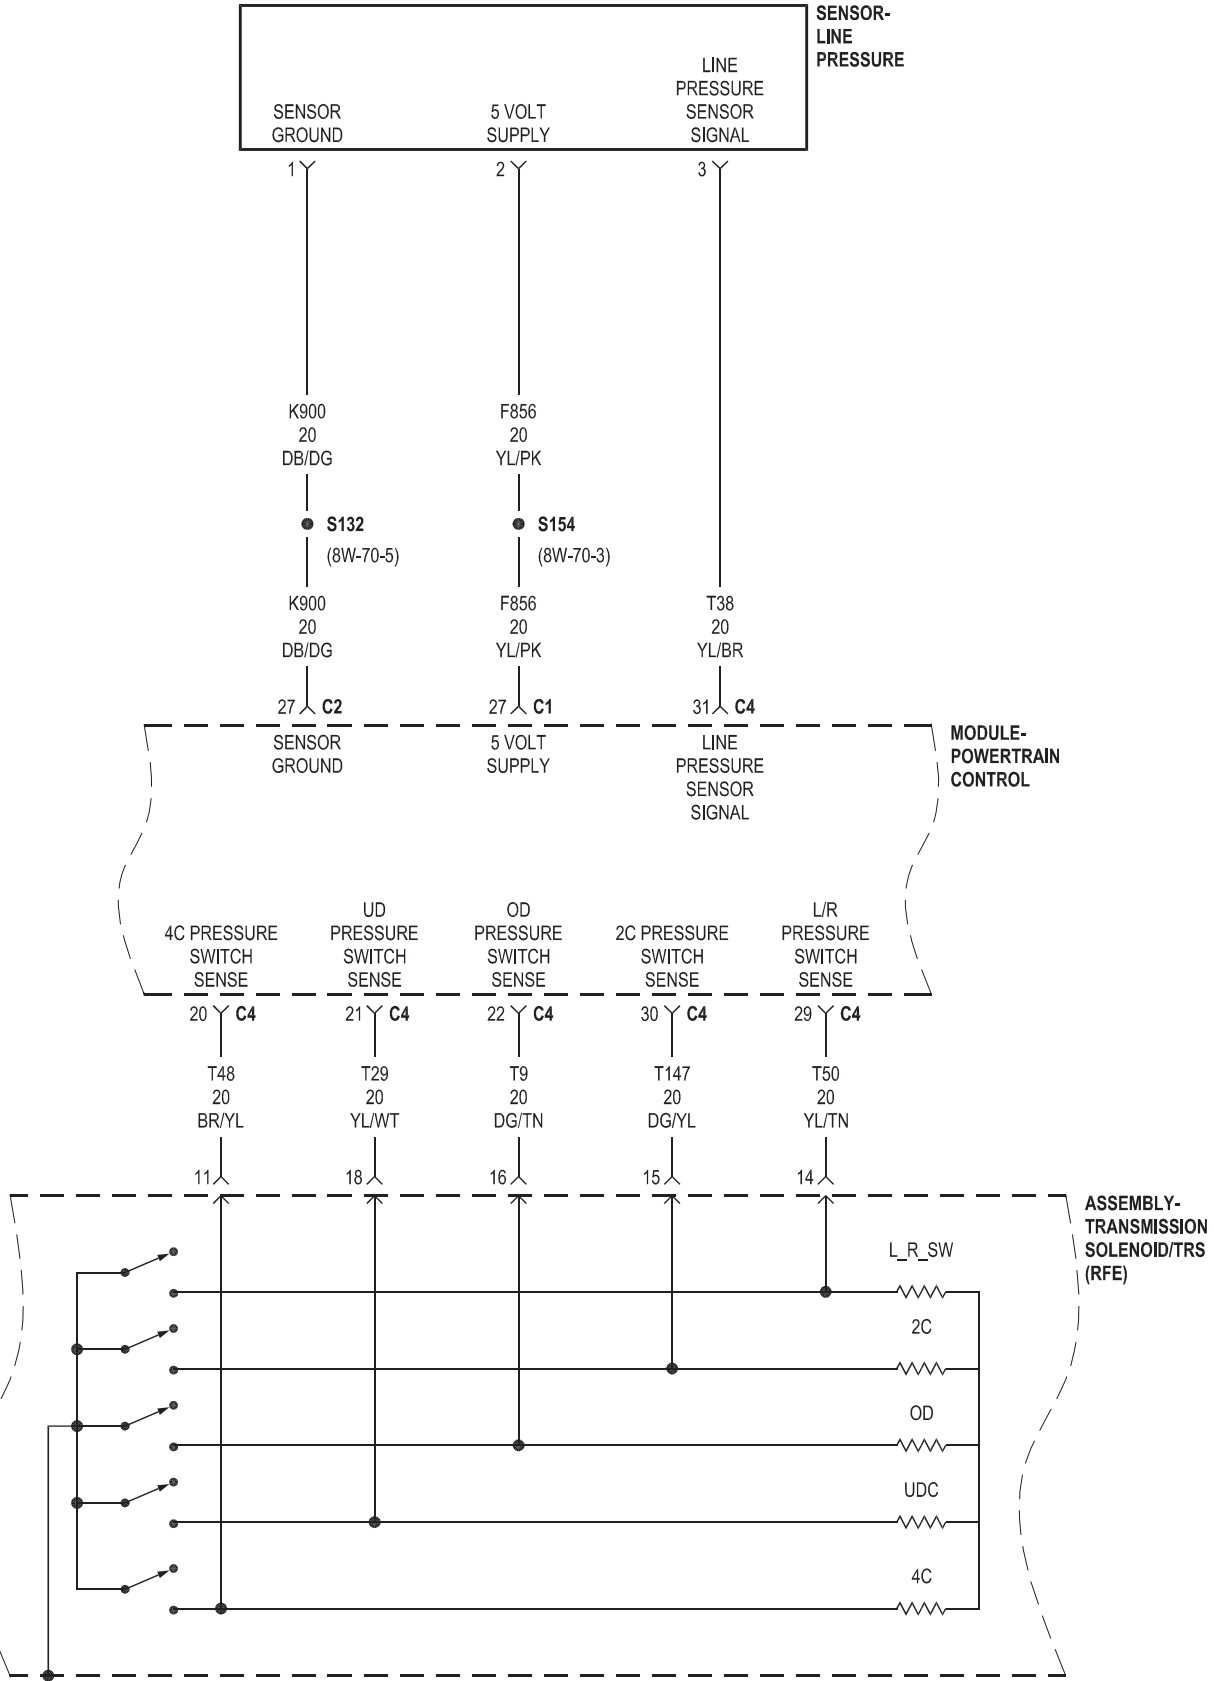


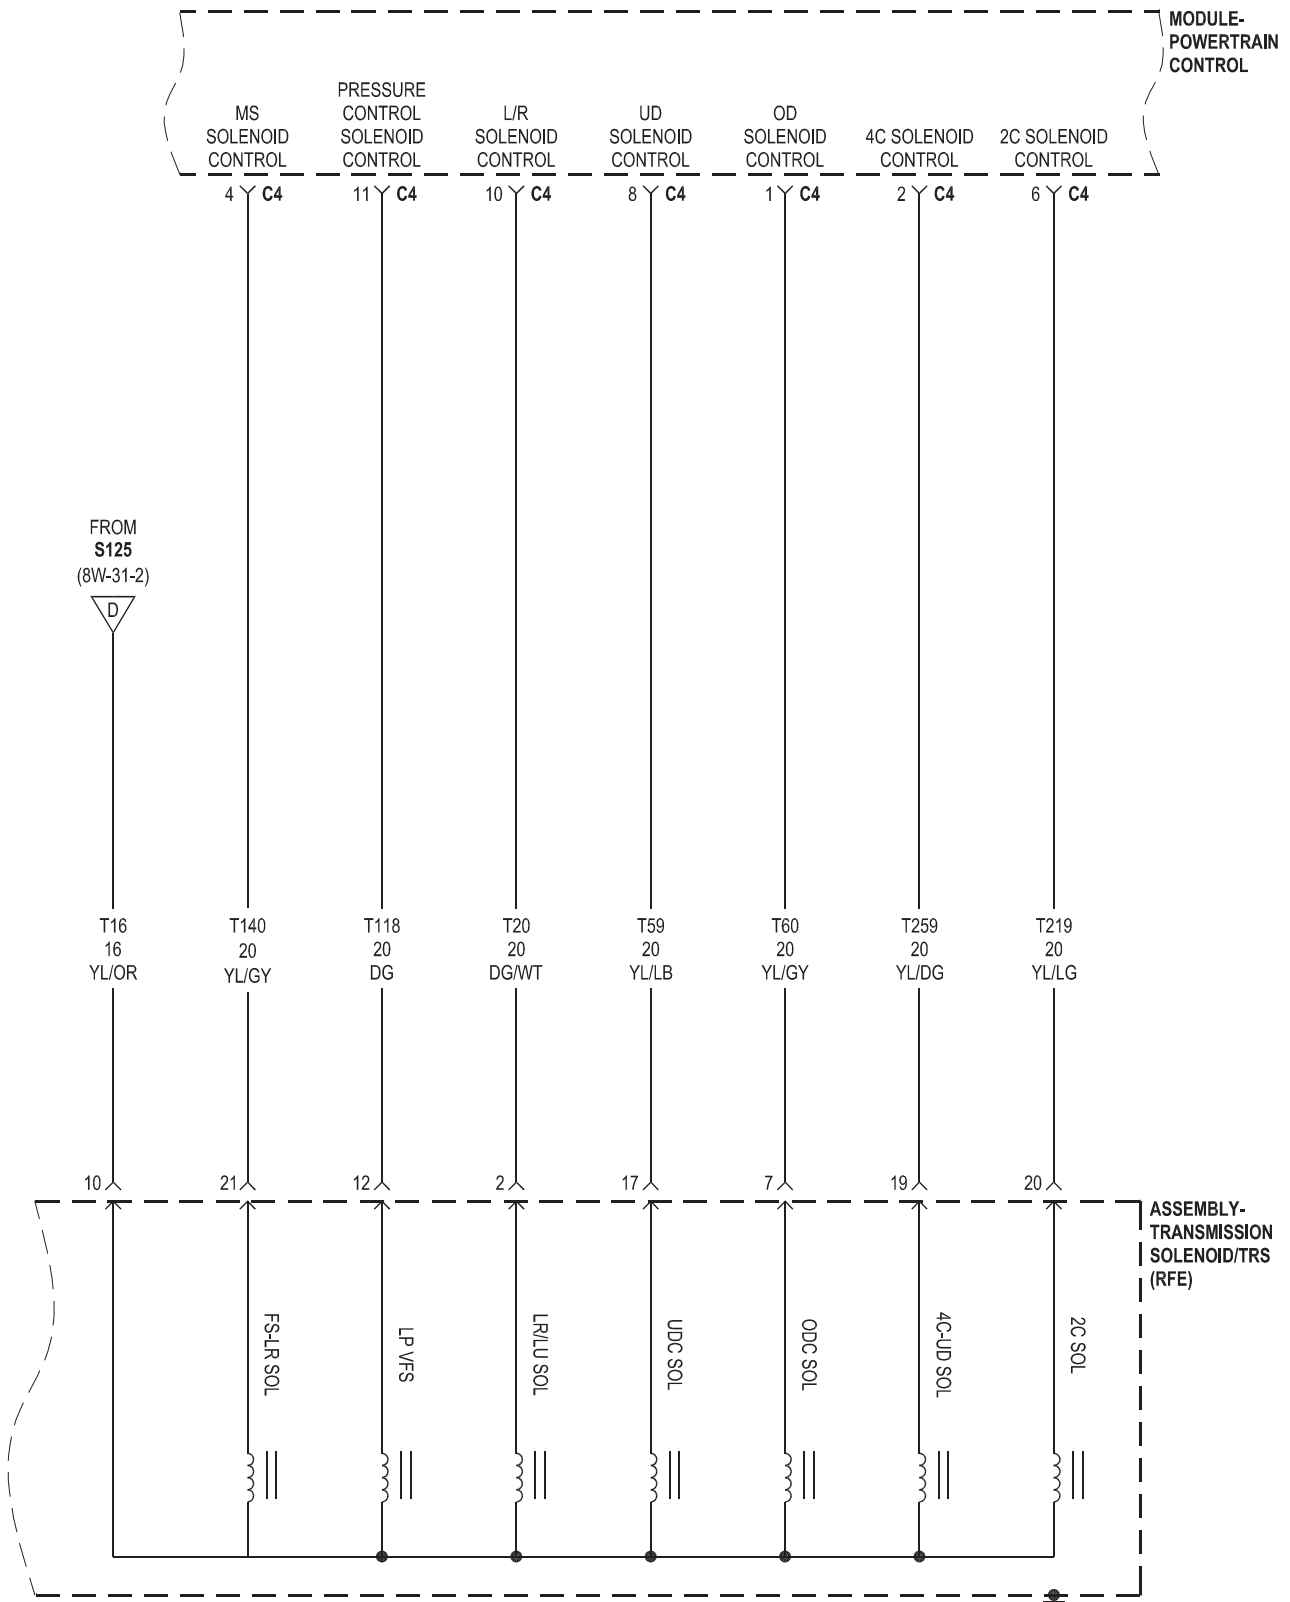


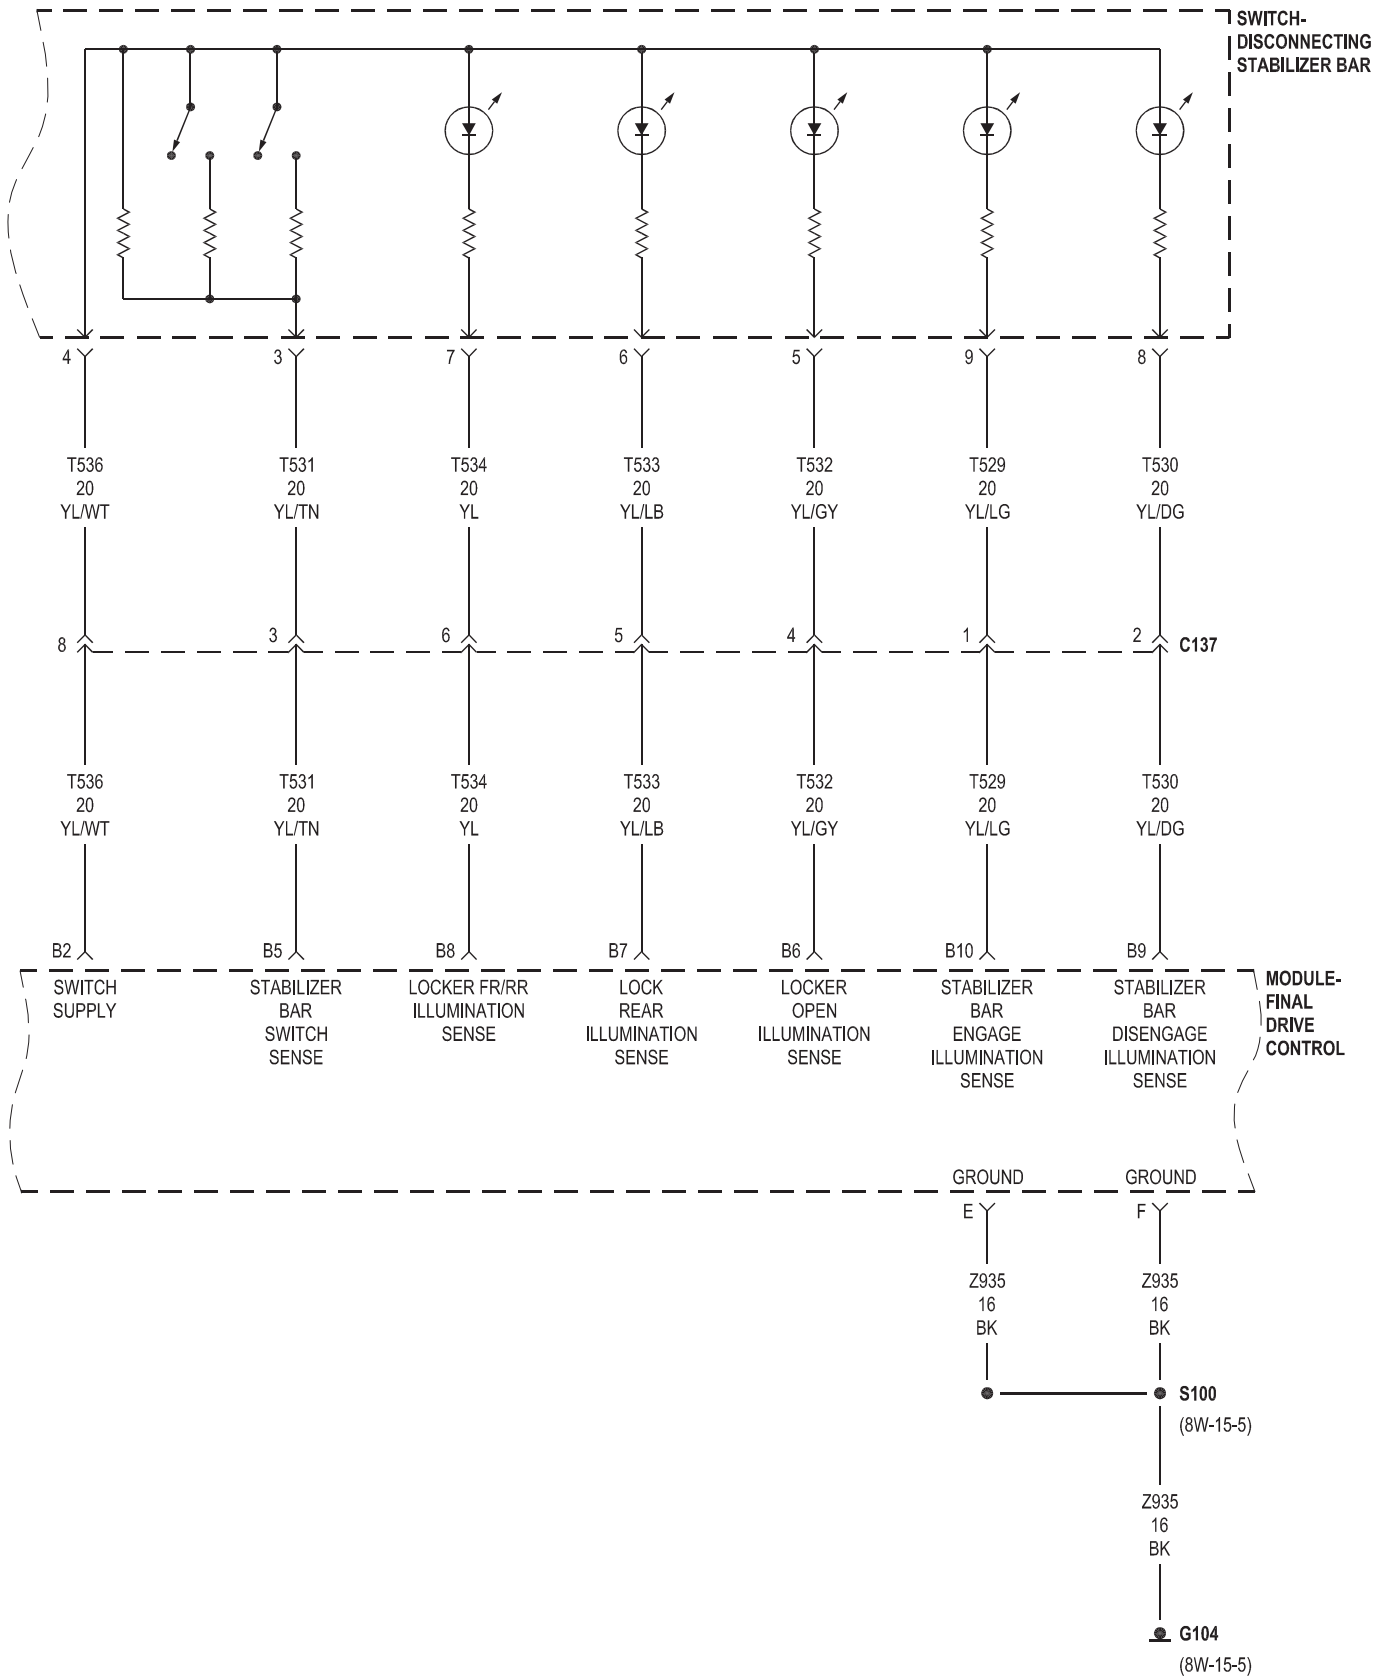


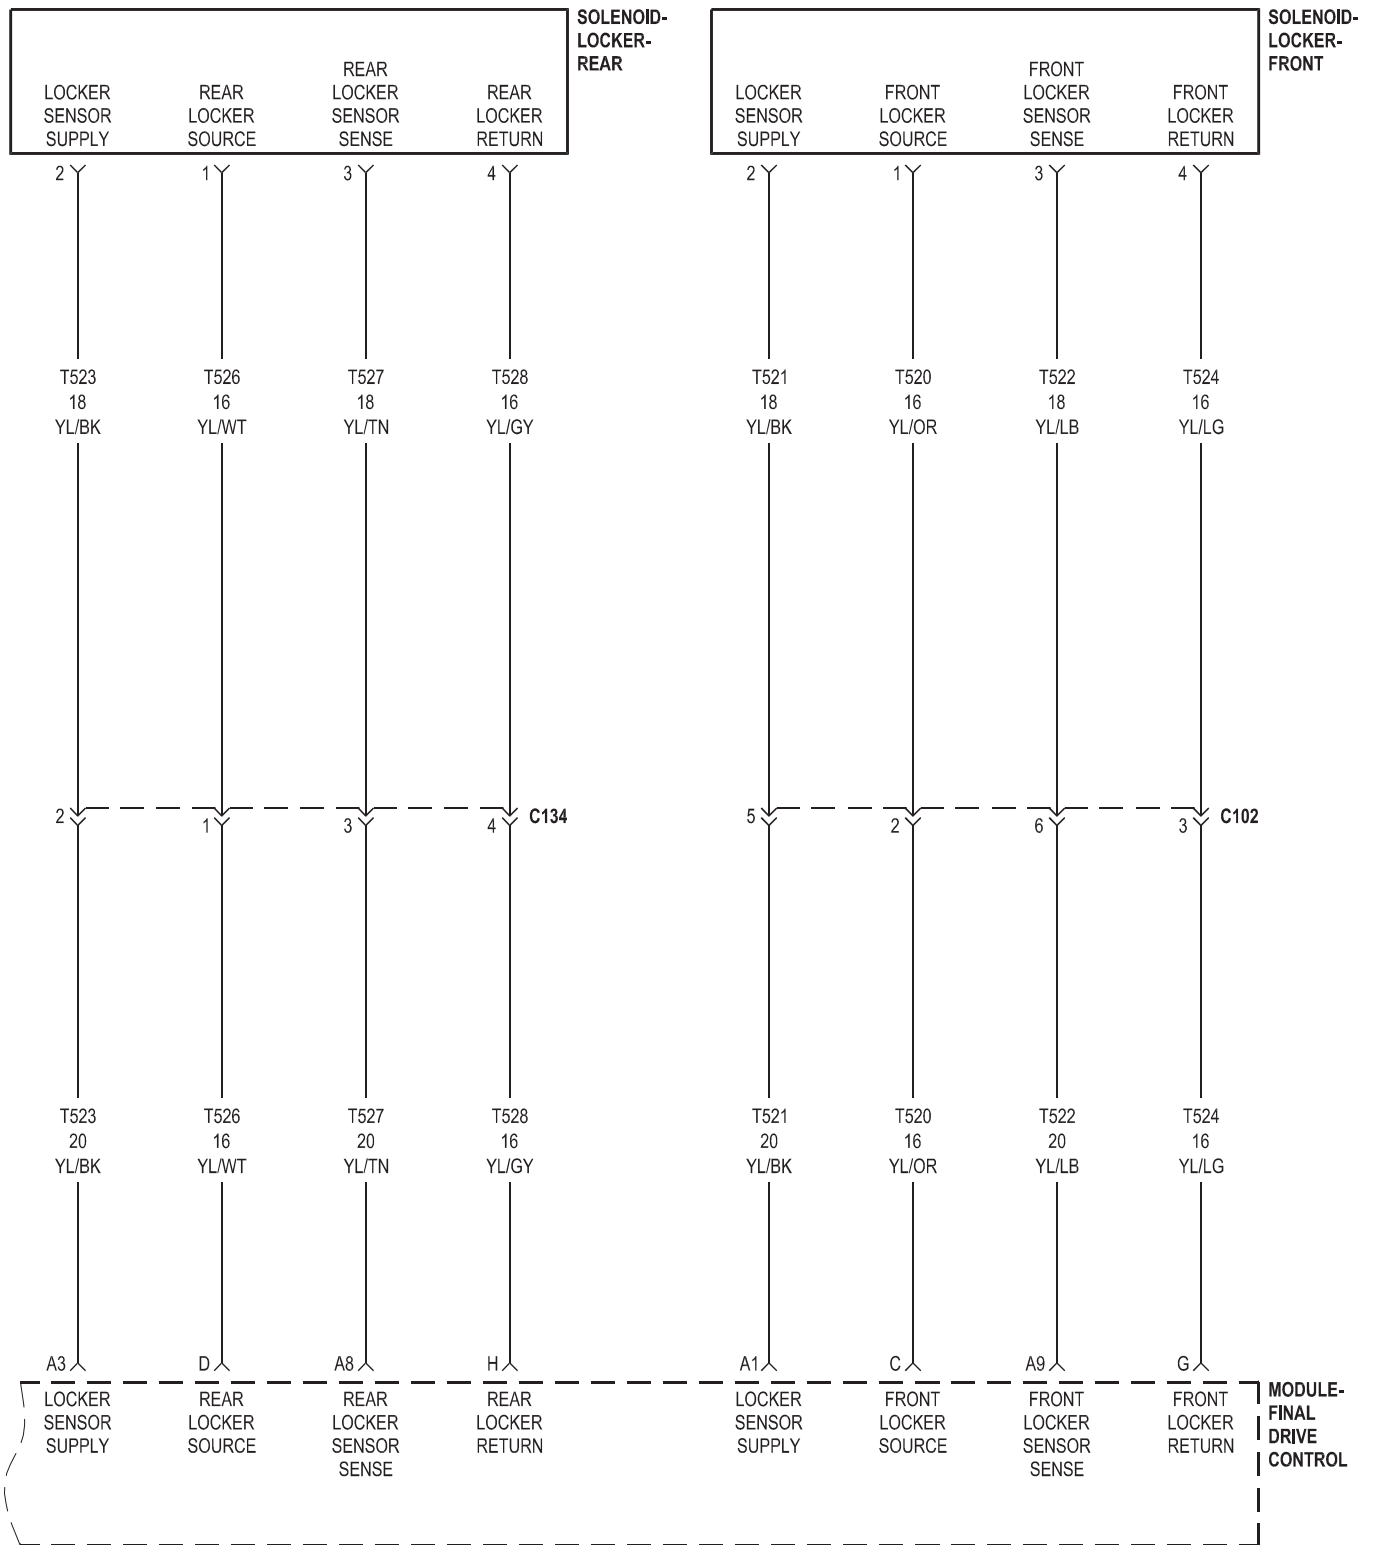



5.9L DIESEL

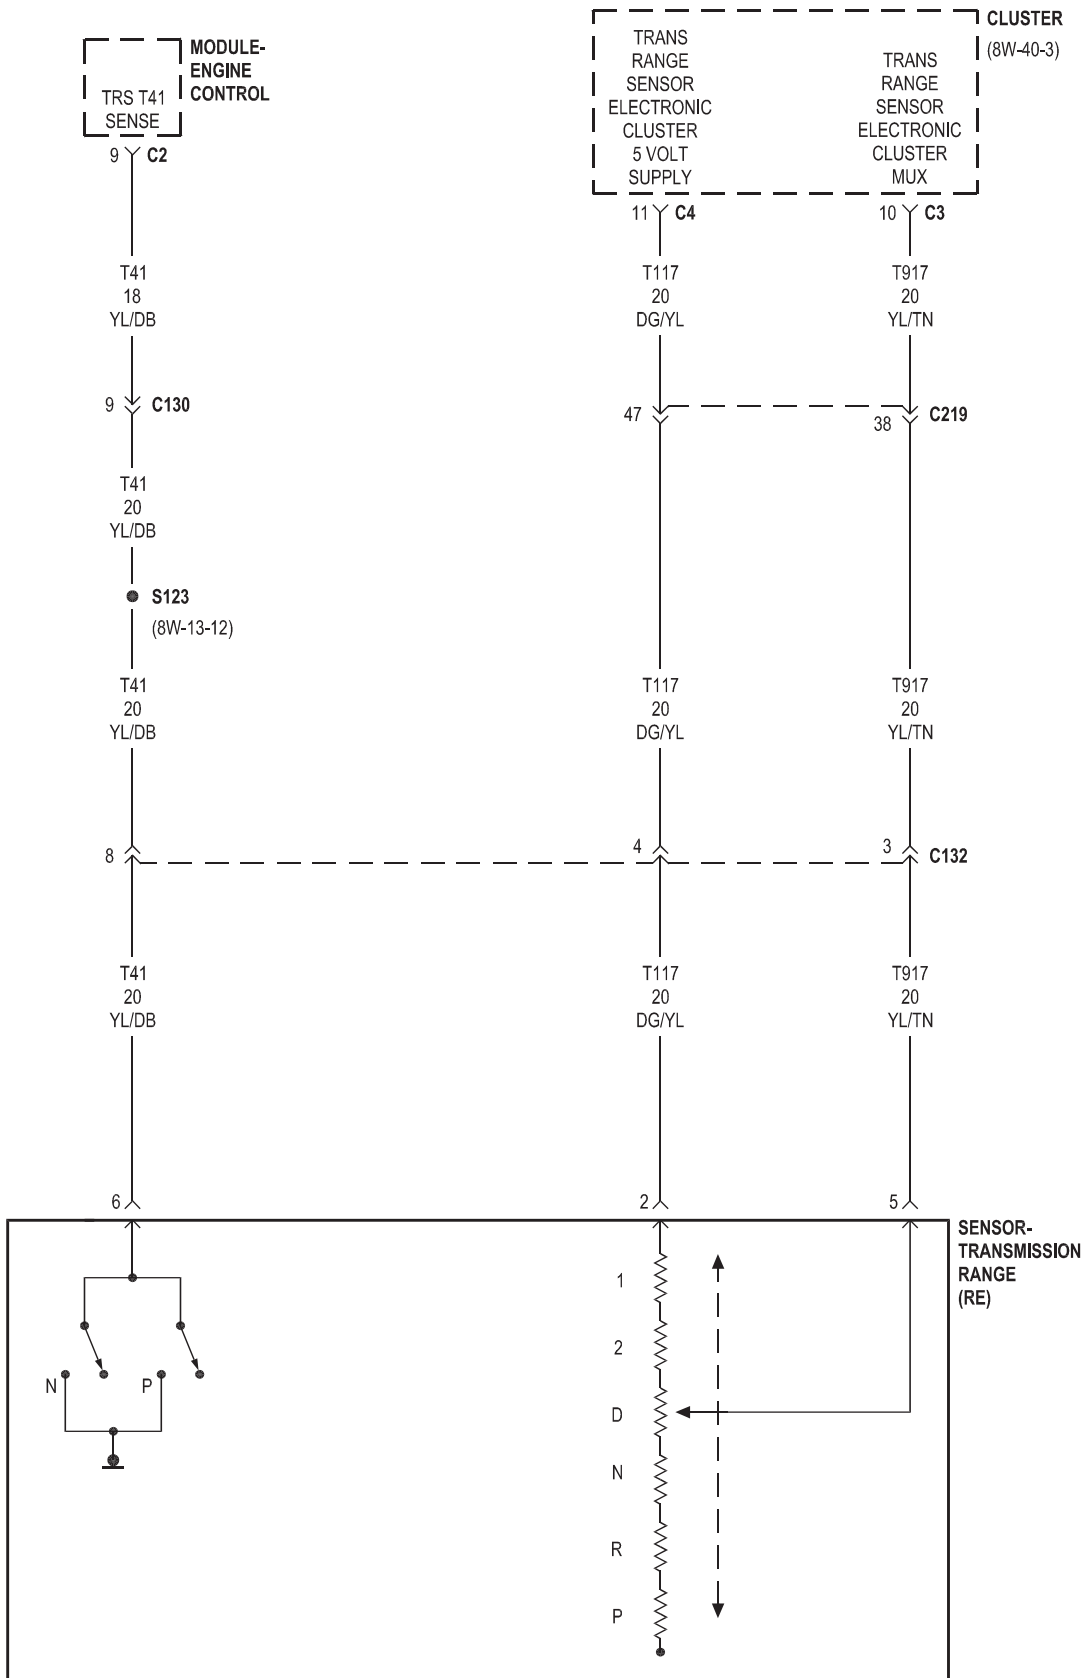

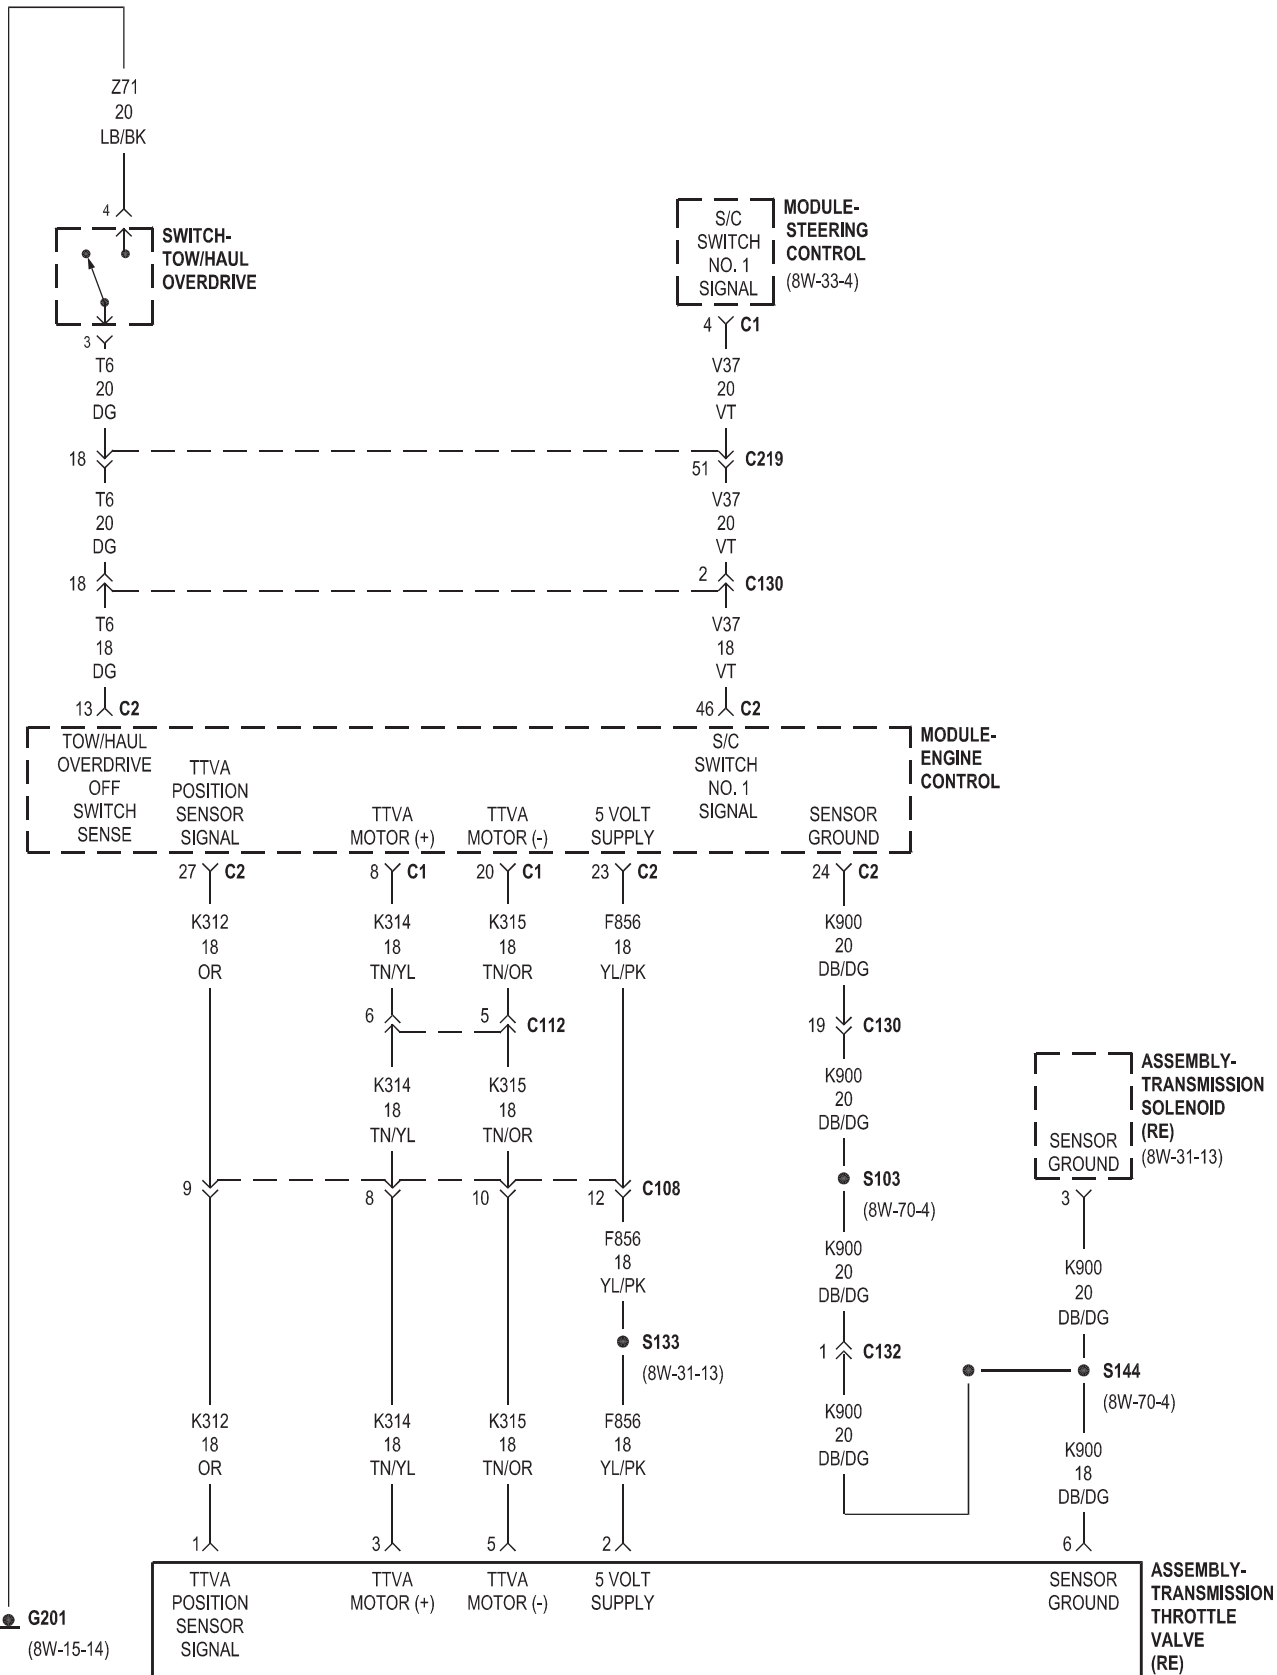


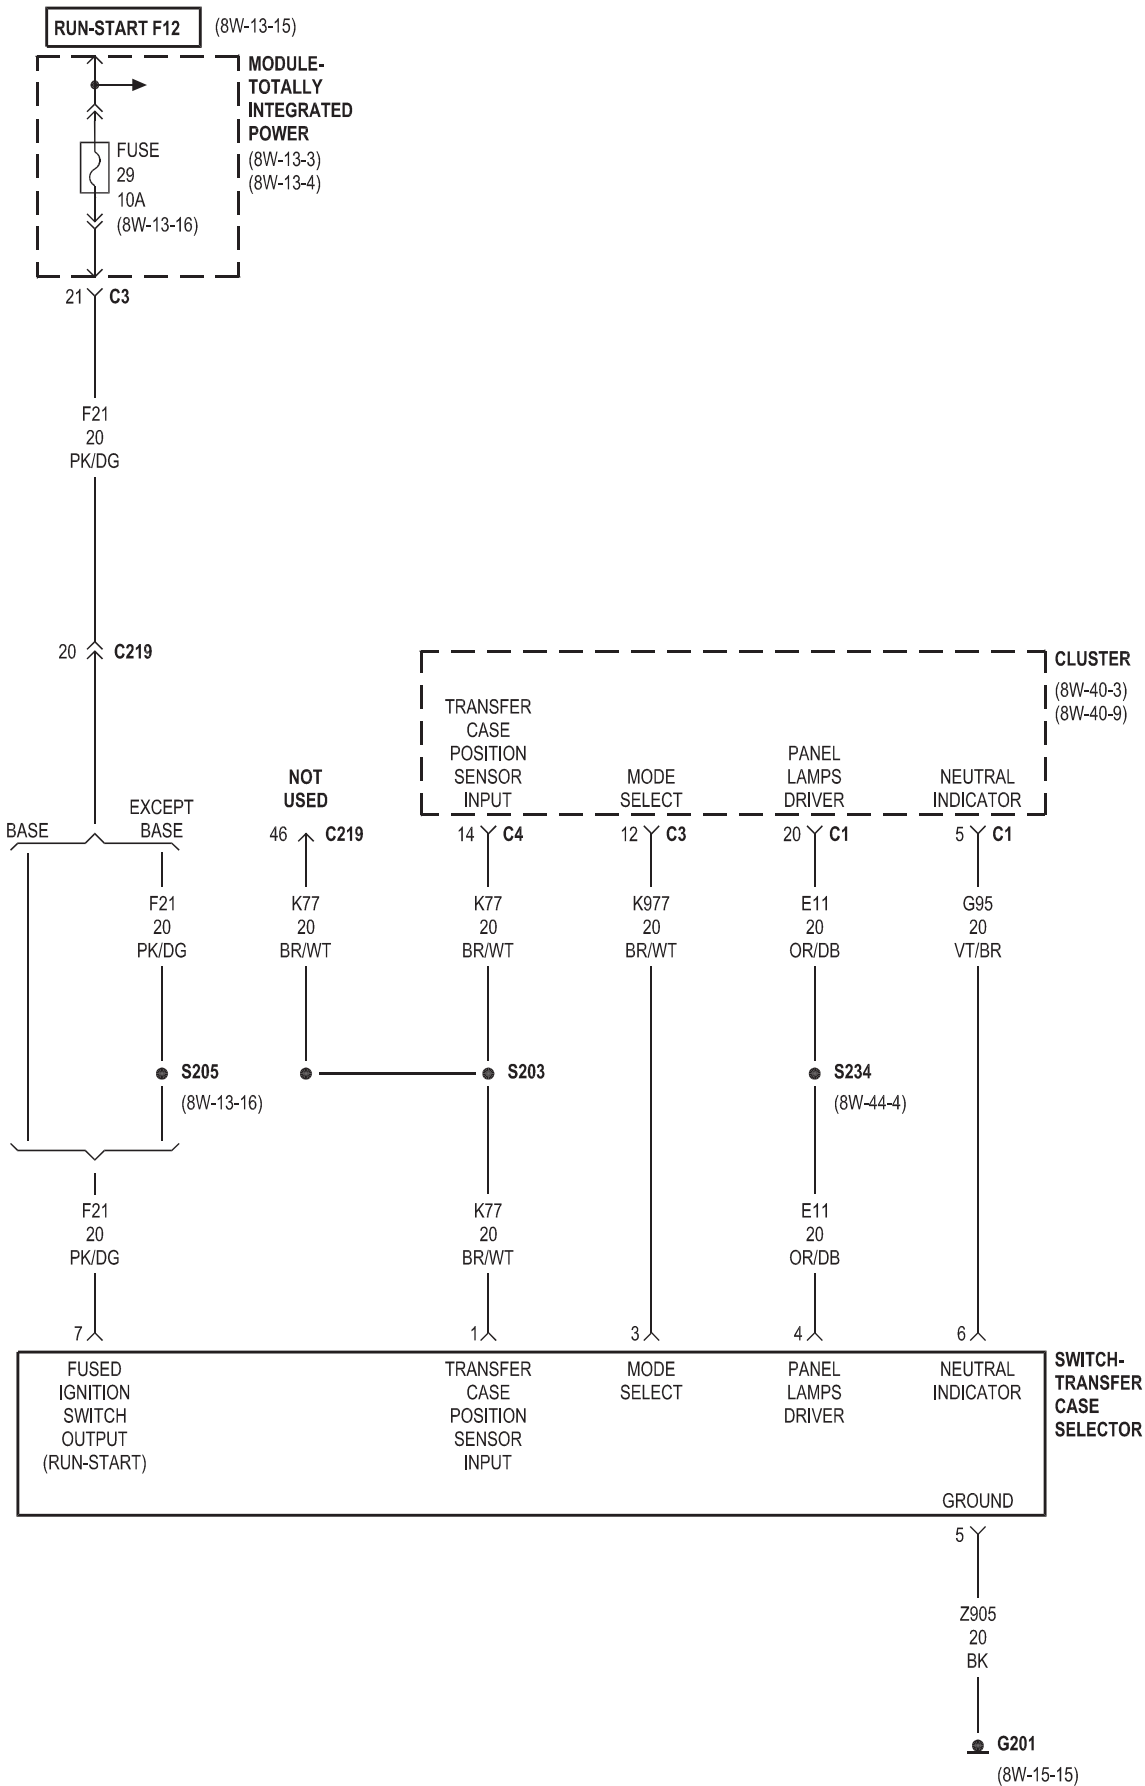

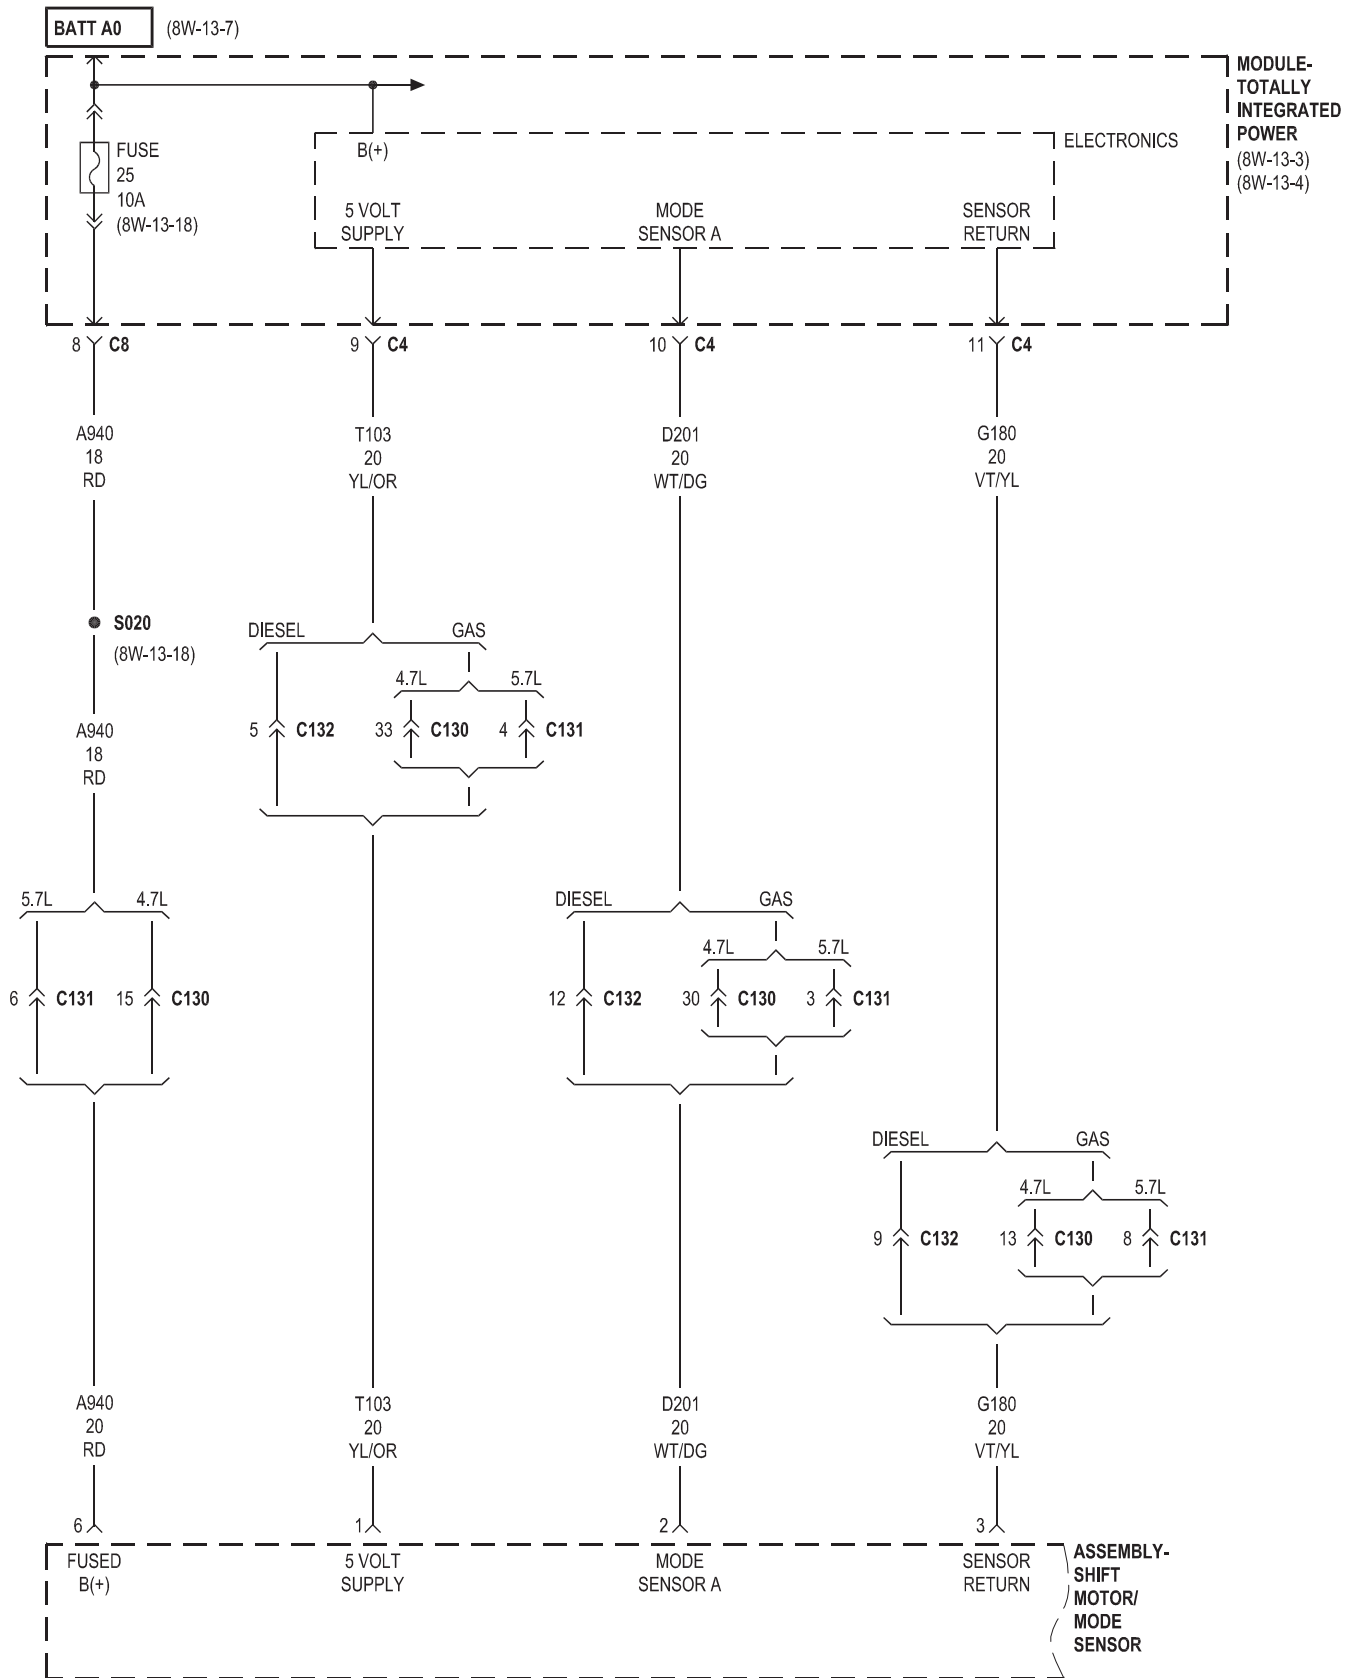

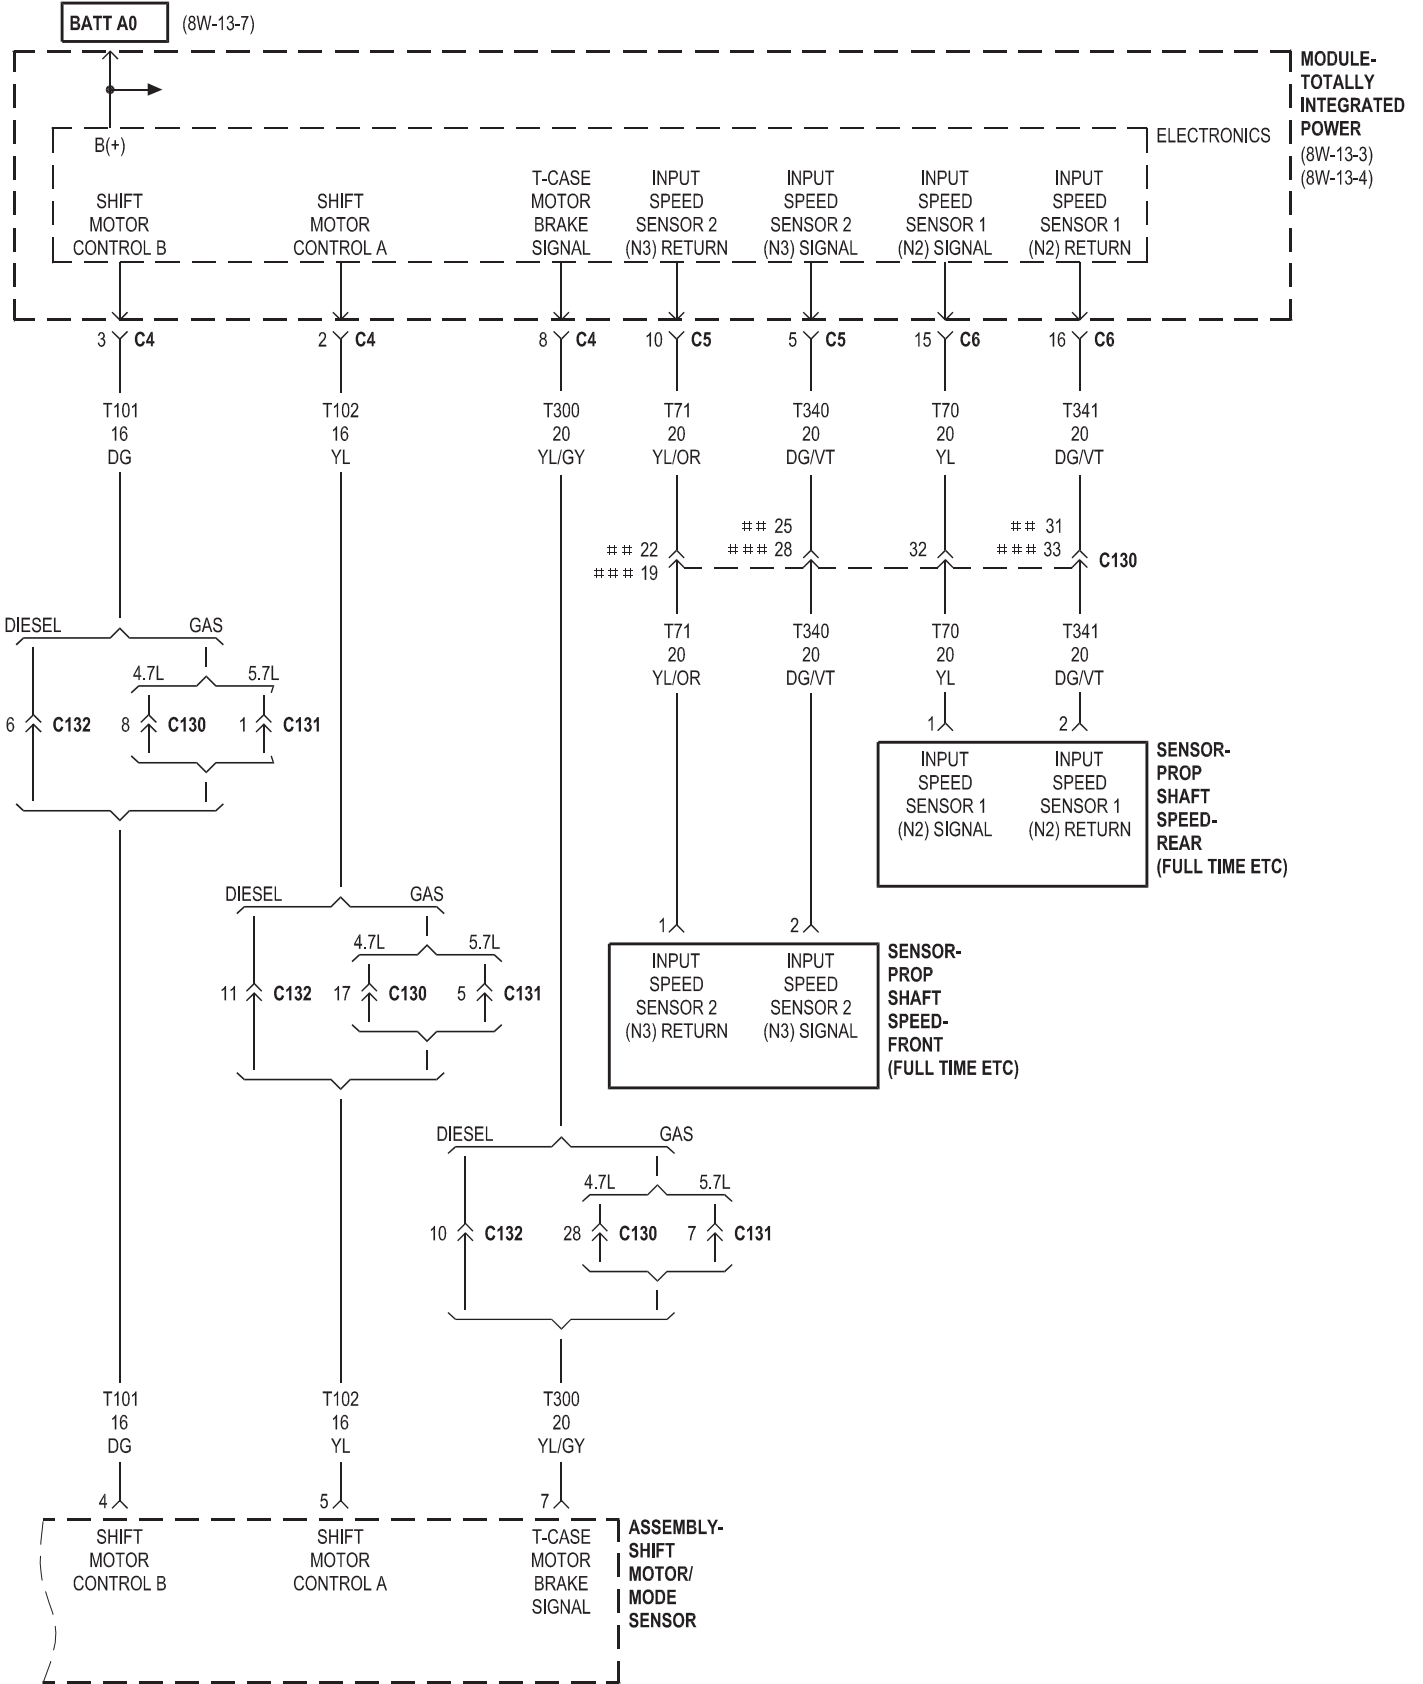

4.7L
 ### 5.7L

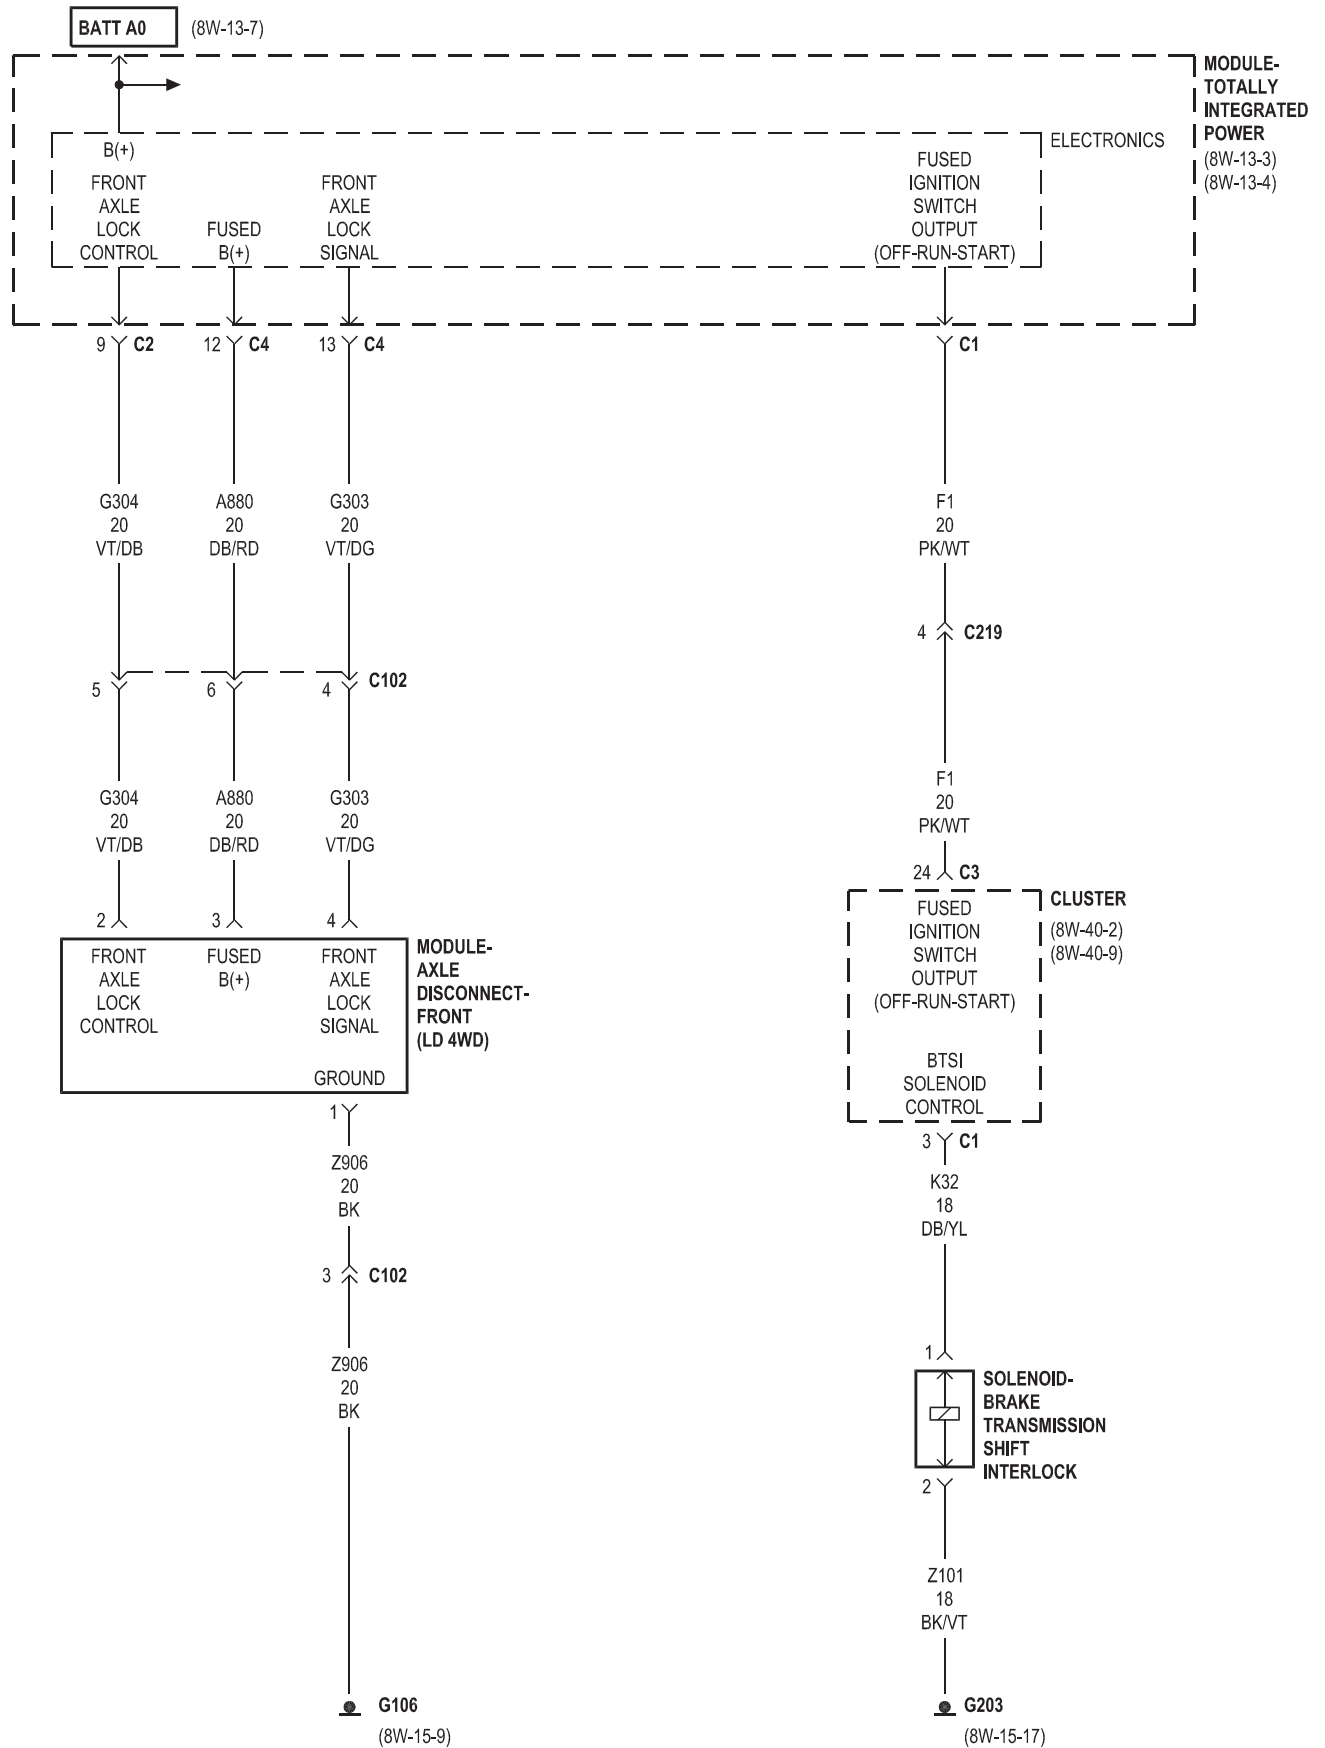

6.7L DIESEL RC

