



Switch – Power Window – Right Rear

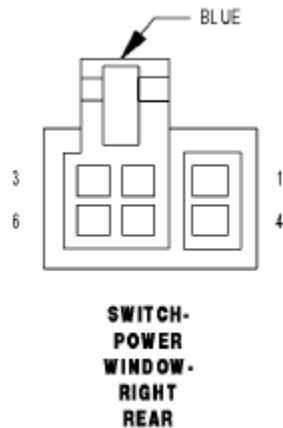

SWITCH-POWER WINDOW-RIGHT REAR - BLUE (REAR DOOR) 6 WAY

CAV	CIRCUIT	FUNCTION
1	Q112 14TN/YL	PASSENGER REAR WINDOW DRIVER (UP)
2	Q612 14OR/GY	RIGHT REAR WINDOW DRIVER (DOWN)
3	-	-
4	Q412 14OR/WT	RIGHT REAR WINDOW DRIVER (UP)
5	Q212 14TN/LB	PASSENGER REAR WINDOW DRIVER (DOWN)
6	Q15 14TN/LG	POWER WINDOW SWITCH FEED

Switch – Power Window – Left Rear

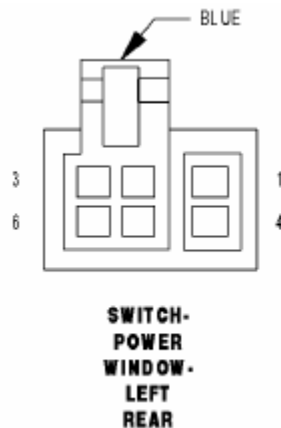

SWITCH-POWER WINDOW-LEFT REAR - BLUE (REAR DOOR) 6 WAY

CAV	CIRCUIT	FUNCTION
1	Q111 14TN/YL (EXCEPT MEGA CAB)	DRIVER REAR WINDOW DRIVER (UP)
1	Q211 14TN/LB (MEGA CAB)	DRIVER REAR WINDOW DRIVER (DOWN)
2	Q611 14OR/GY	LEFT REAR WINDOW DRIVER (DOWN)
3	-	-
4	Q411 14OR/WT	LEFT REAR WINDOW DRIVER (UP)
5	Q211 14TN/LB (EXCEPT MEGA CAB)	DRIVER REAR WINDOW DRIVER (DOWN)
5	Q111 14TN/YL (MEGA CAB)	DRIVER REAR WINDOW DRIVER (UP)
6	Q15 14OR/LB	POWER WINDOW SWITCH FEED