

## 8W-21 STARTING SYSTEM

<b>Component</b>	<b>Page</b>	<b>Component</b>	<b>Page</b>
Battery . . . . .	8W-21-3, 4	Module-Powertrain Control . . . . .	8W-21-3
Battery-Auxiliary . . . . .	8W-21-4	Module-Sentry Key Remote Entry . . . . .	8W-21-2
Fuse 10 . . . . .	8W-21-4	Module-Totally Integrated Power . . . .	8W-21-2, 3, 4
Fuse 11 . . . . .	8W-21-2	Sensor-Transmission Range . . . . .	8W-21-4
Fuse 22 . . . . .	8W-21-2	Starter . . . . .	8W-21-3, 4
G104 . . . . .	8W-21-3, 4	Switch-Clutch Interlock . . . . .	8W-21-3, 4
G201 . . . . .	8W-21-2	Switch-Ignition . . . . .	8W-21-2
Module-Engine Control . . . . .	8W-21-4	Switch-Security Hood . . . . .	8W-21-3





