


8W-40 INSTRUMENT CLUSTER

Component	Page
Cluster	8W-40-2, 3, 4, 5, 6, 7, 8, 9
Control-A/C-Heater	8W-40-8
Fuse 2	8W-40-2
Fuse 11	8W-40-2
Fuse 35	8W-40-2
G201	8W-40-2, 3
G203	8W-40-4
G303	8W-40-6
Lamp-Center Console	8W-40-8
Lamp-Dome-Rear	8W-40-8
Lamp-Glove Box	8W-40-8
Lamp-High Mounted Stop/Cargo	8W-40-8
Lamp-Reading-Front	8W-40-8
Latch-Door-Driver	8W-40-6, 7
Latch-Door-Left Rear	8W-40-7
Latch-Door-Passenger	8W-40-6
Latch-Door-Right Rear	8W-40-6
Module-Fuel Pump	8W-40-3
Module-Steering Control	8W-40-9

Component	Page
Module-Totally Integrated Power	8W-40-2
Sensor-Transmission Range	8W-40-3
Solenoid-Brake Transmission Shift Interlock	8W-40-9
Switch-Disconnecting Stabilizer Bar	8W-40-9
Switch-Door Lock-Passenger	8W-40-6
Switch-ESP	8W-40-3, 9
Switch-Exhaust Brake	8W-40-9
Switch-Headlamp	8W-40-4
Switch-Heated Seat-Driver	8W-40-8
Switch-Horn	8W-40-9
Switch-Multifunction	8W-40-5
Switch-Parking Brake	8W-40-9
Switch-Power Sliding Backlite	8W-40-8
Switch-Remote Radio-Left	8W-40-9
Switch-Remote Radio-Right	8W-40-9
Switch-Seat Belt-Driver	8W-40-4
Switch-Transfer Case Selector	8W-40-3, 9
Switch-Window/Door Lock-Driver	8W-40-7

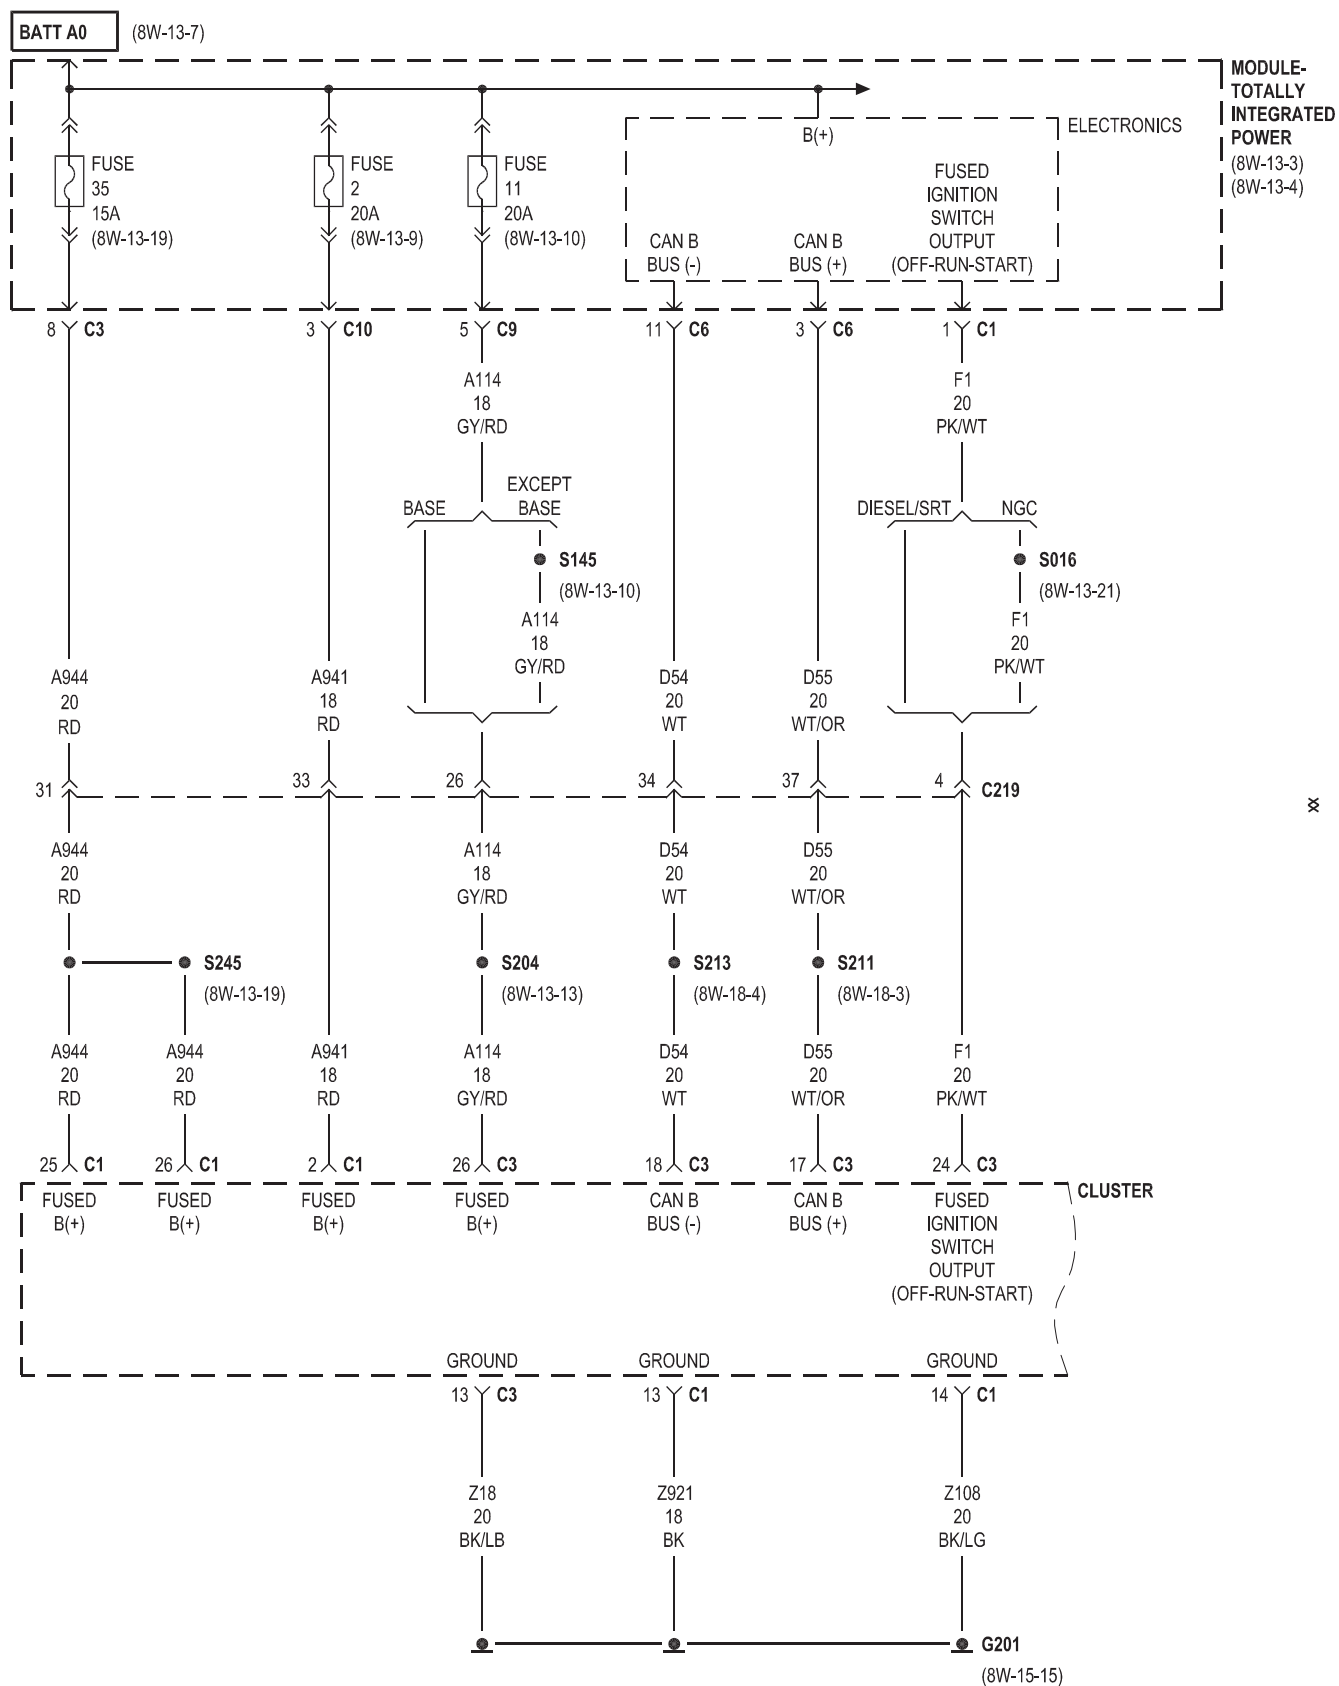

⌘ NOTE: D54, D55 CIRCUITS ARE TWISTED PAIR

