


## Assembly – EGR Valve (6.7L)

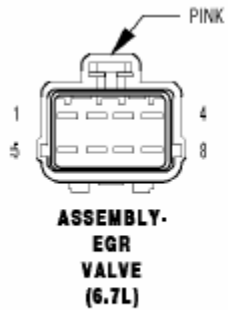

ASSEMBLY-EGR VALVE (6.7L) - PINK (ENGINE) 8 WAY

CAV	CIRCUIT	FUNCTION
1	F855 18PK/YL	5 VOLT SUPPLY
2	K687 18DB/LB	EGR SIGNAL NO. 3
3	K685 18DB	EGR SIGNAL NO. 2
4	K683 18DB/GY	EGR SIGNAL NO. 1
5	K916 18BR/OR	SENSOR GROUND
6	K686 18GY/DB	EGR CONTROL NO. 3
7	K684 18DB/YL	EGR CONTROL NO. 2
8	K682 18DB/WT	EGR CONTROL NO. 1

