


## Module – Transmission Control C3 (RC)

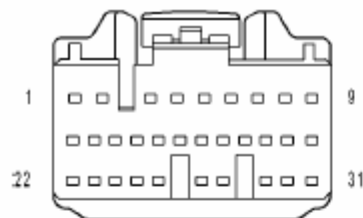

**MODULE-  
TRANSMISSION  
CONTROL C3  
(RC)**

MODULE-TRANSMISSION CONTROL C3 (RC) - (HEADLAMP AND DASH) 31 WAY

CAV	CIRCUIT	FUNCTION
1	T808 20DG/GY	TRX-SOL S1
2	-	-
3	T810 20DG/DB	TRX-SOL S3
4	-	-
5	T817 20YL/BR	TRX-LINEAR SOL 3 (+)
6	T812 20DG/TN	TRX-LINEAR SOL 1 (-)
7	T813 20DG/LG	TRX-LINEAR SOL 1 (+)
8	T815 20YL/RD	TRX-LINEAR SOL 2 (+)
9	T814 20YL/BR	TRX-LINEAR SOL 2 (-)
10	T806 20DG/WT	TRX-PRESS SW 7
11	-	-
12	-	-
13	-	-
14	-	-
15	T816 20YL/PK	TRX-LINEAR SOL 3 (-)
16	T828 20DG/DB	TRX-TRANS RANGE SW 1
17	T42 20DG/YL	TRS T42 SENSE
18	T3 20DG/DB	TRS T3 SENSE
19	T827 20DG/LB	TRX-TRANS RANGE SW DRIVE
20	T824 20YL/DB	TRX-TRANS RANGE SW PARK
21	T826 20DG/DB	TRX-TRANS RANGE SW REVERSE
22	T809 20DG/YL	TRX-SOL S2
23	-	-
24	-	-
25	-	-
26	T807 20DG/WT	TRX-PRESS SW 8
27	-	-
28	T820 20YL/WT	TORQUE CONVERTER OIL TEMPERATURE SIGNAL RETURN
29	T825 20DG/YL	TRX-TRANS RANGE SW NEUTRAL
30	T821 20YL/GY	TRX-LINEAR SOL 4 (+)
31	T818 20YL/OR	TRX-LINEAR SOL 4 (-)