


Switch – Power Window – Passenger

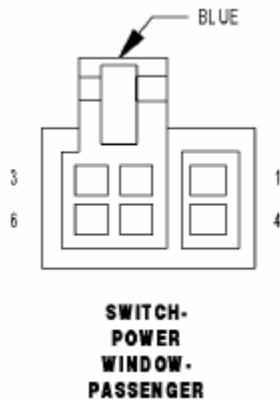

SWITCH-POWER WINDOW-PASSENGER - BLUE (FRONT DOOR) 6 WAY

CAV	CIRCUIT	FUNCTION
1	Q12 120R/BR	RIGHT FRONT WINDOW DRIVER (UP)
2	Q26 120R/GY	MASTER WINDOW SWITCH RIGHT FRONT (DOWN)
3	-	-
4	Q16 120R/TN	MASTER WINDOW SWITCH RIGHT FRONT (UP)
5	Q22 120R/VT	RIGHT FRONT WINDOW DRIVER (DOWN)
6	Q15 120R/LB	POWER WINDOW SWITCH FEED

