

8W-21 STARTING SYSTEM

Component	Page
Battery	8W-21-3
Fuse 14	8W-21-2
Fuse 39	8W-21-3
G103	8W-21-2
G105	8W-21-3
G106	8W-21-3
G200	8W-21-2
Module-Front Control	8W-21-2, 3

Component	Page
Module-Integrated Power	8W-21-2, 3
Module-Powertrain Control	8W-21-2, 3
Module-Sentry Key Remote Entry	8W-21-2
Relay-Starter	8W-21-3
Starter	8W-21-3
Switch-Hood Ajar	8W-21-2
Switch-Ignition	8W-21-2



