


## 8W-30 FUEL/IGNITION SYSTEM


<b>Component</b>	<b>Page</b>	<b>Component</b>	<b>Page</b>
Assembly-EGR Valve . . . . .	8W-30-7, 8	Module-Integrated Power . . . . .	8W-30-2, 3
Assembly-Transmission Solenoid/TRS . . . .	8W-30-8	Module-Powertrain	
Clockspring . . . . .	8W-30-6	Control . . . . .	8W-30-2, 3, 4, 5, 6, 7, 8, 9, 10
Cluster . . . . .	8W-30-4	Motor-IAC . . . . .	8W-30-6
Coil-Ignition-No. 1 . . . . .	8W-30-5	Relay-A/C Clutch . . . . .	8W-30-2
Coil-Ignition-No. 2 . . . . .	8W-30-5	Relay-Auto Shut Down . . . . .	8W-30-3
Coil-Ignition-No. 3 . . . . .	8W-30-5	Relay-Fuel Pump . . . . .	8W-30-2
Coil-Ignition-No. 4 . . . . .	8W-30-5	Relay-Starter . . . . .	8W-30-2
Coil-Ignition-No. 5 . . . . .	8W-30-5	Sensor-Accelerator Pedal Position . . . . .	8W-30-10
Coil-Ignition-No. 6 . . . . .	8W-30-5	Sensor-Ambient Air Temperature . . . . .	8W-30-6
Coil-Ignition-No. 7 . . . . .	8W-30-5	Sensor-Camshaft Position . . . . .	8W-30-7
Coil-Ignition-No. 8 . . . . .	8W-30-5	Sensor-Crankshaft Position . . . . .	8W-30-7
Fuse 7 . . . . .	8W-30-2	Sensor-Engine Coolant Temperature . . . . .	8W-30-8
Fuse 18 . . . . .	8W-30-2	Sensor-Intake Air Temperature . . . . .	8W-30-7
Fuse 24 . . . . .	8W-30-2	Sensor-Knock . . . . .	8W-30-7
Fuse 33 . . . . .	8W-30-3	Sensor-Knock No. 1 . . . . .	8W-30-10
Fuse 37 . . . . .	8W-30-2	Sensor-Knock No. 2 . . . . .	8W-30-10
G100 . . . . .	8W-30-4	Sensor-MAP . . . . .	8W-30-7
G107 . . . . .	8W-30-2	Sensor-Oxygen-Left Front . . . . .	8W-30-9
G108 . . . . .	8W-30-8, 9	Sensor-Oxygen-Left Rear . . . . .	8W-30-9
Generator . . . . .	8W-30-3	Sensor-Oxygen-Right Front . . . . .	8W-30-9
Injector-Fuel-No. 1 . . . . .	8W-30-5	Sensor-Oxygen-Right Rear . . . . .	8W-30-9
Injector-Fuel-No. 2 . . . . .	8W-30-5	Sensor-Throttle Position . . . . .	8W-30-7
Injector-Fuel-No. 3 . . . . .	8W-30-5	Sensor-Transmission Range . . . . .	8W-30-8
Injector-Fuel-No. 4 . . . . .	8W-30-5	Sensor-Wheel Speed-ABS-Rear . . . . .	8W-30-6
Injector-Fuel-No. 5 . . . . .	8W-30-5	Servo-Speed Control . . . . .	8W-30-3
Injector-Fuel-No. 6 . . . . .	8W-30-5	Solenoid-EVAP/Purge . . . . .	8W-30-3
Injector-Fuel-No. 7 . . . . .	8W-30-5	Switch-Clutch Interlock . . . . .	8W-30-8
Injector-Fuel-No. 8 . . . . .	8W-30-5	Switch-EVAP System Monitor . . . . .	8W-30-4
Module-Anti-Lock Brakes . . . . .	8W-30-6	Switch-Oil Pressure . . . . .	8W-30-6
Module-Front Control . . . . .	8W-30-3, 6	Switch-Stop Lamp . . . . .	8W-30-6
Module-Fuel Pump . . . . .	8W-30-2, 4	Throttle Body . . . . .	8W-30-10

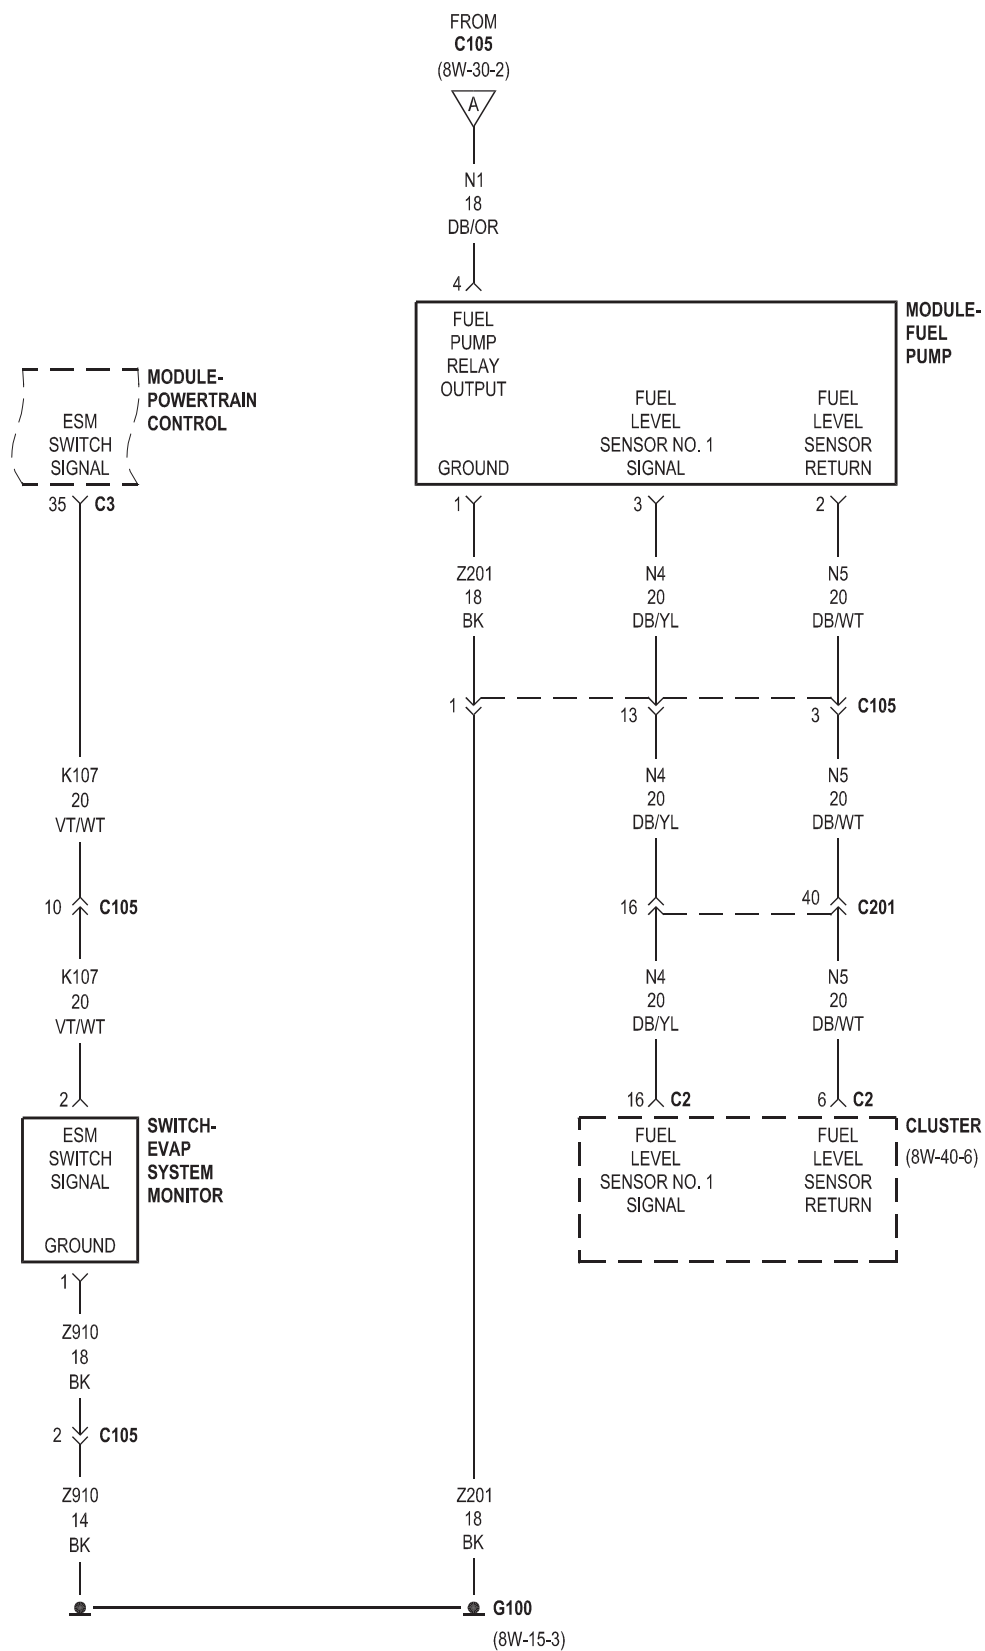










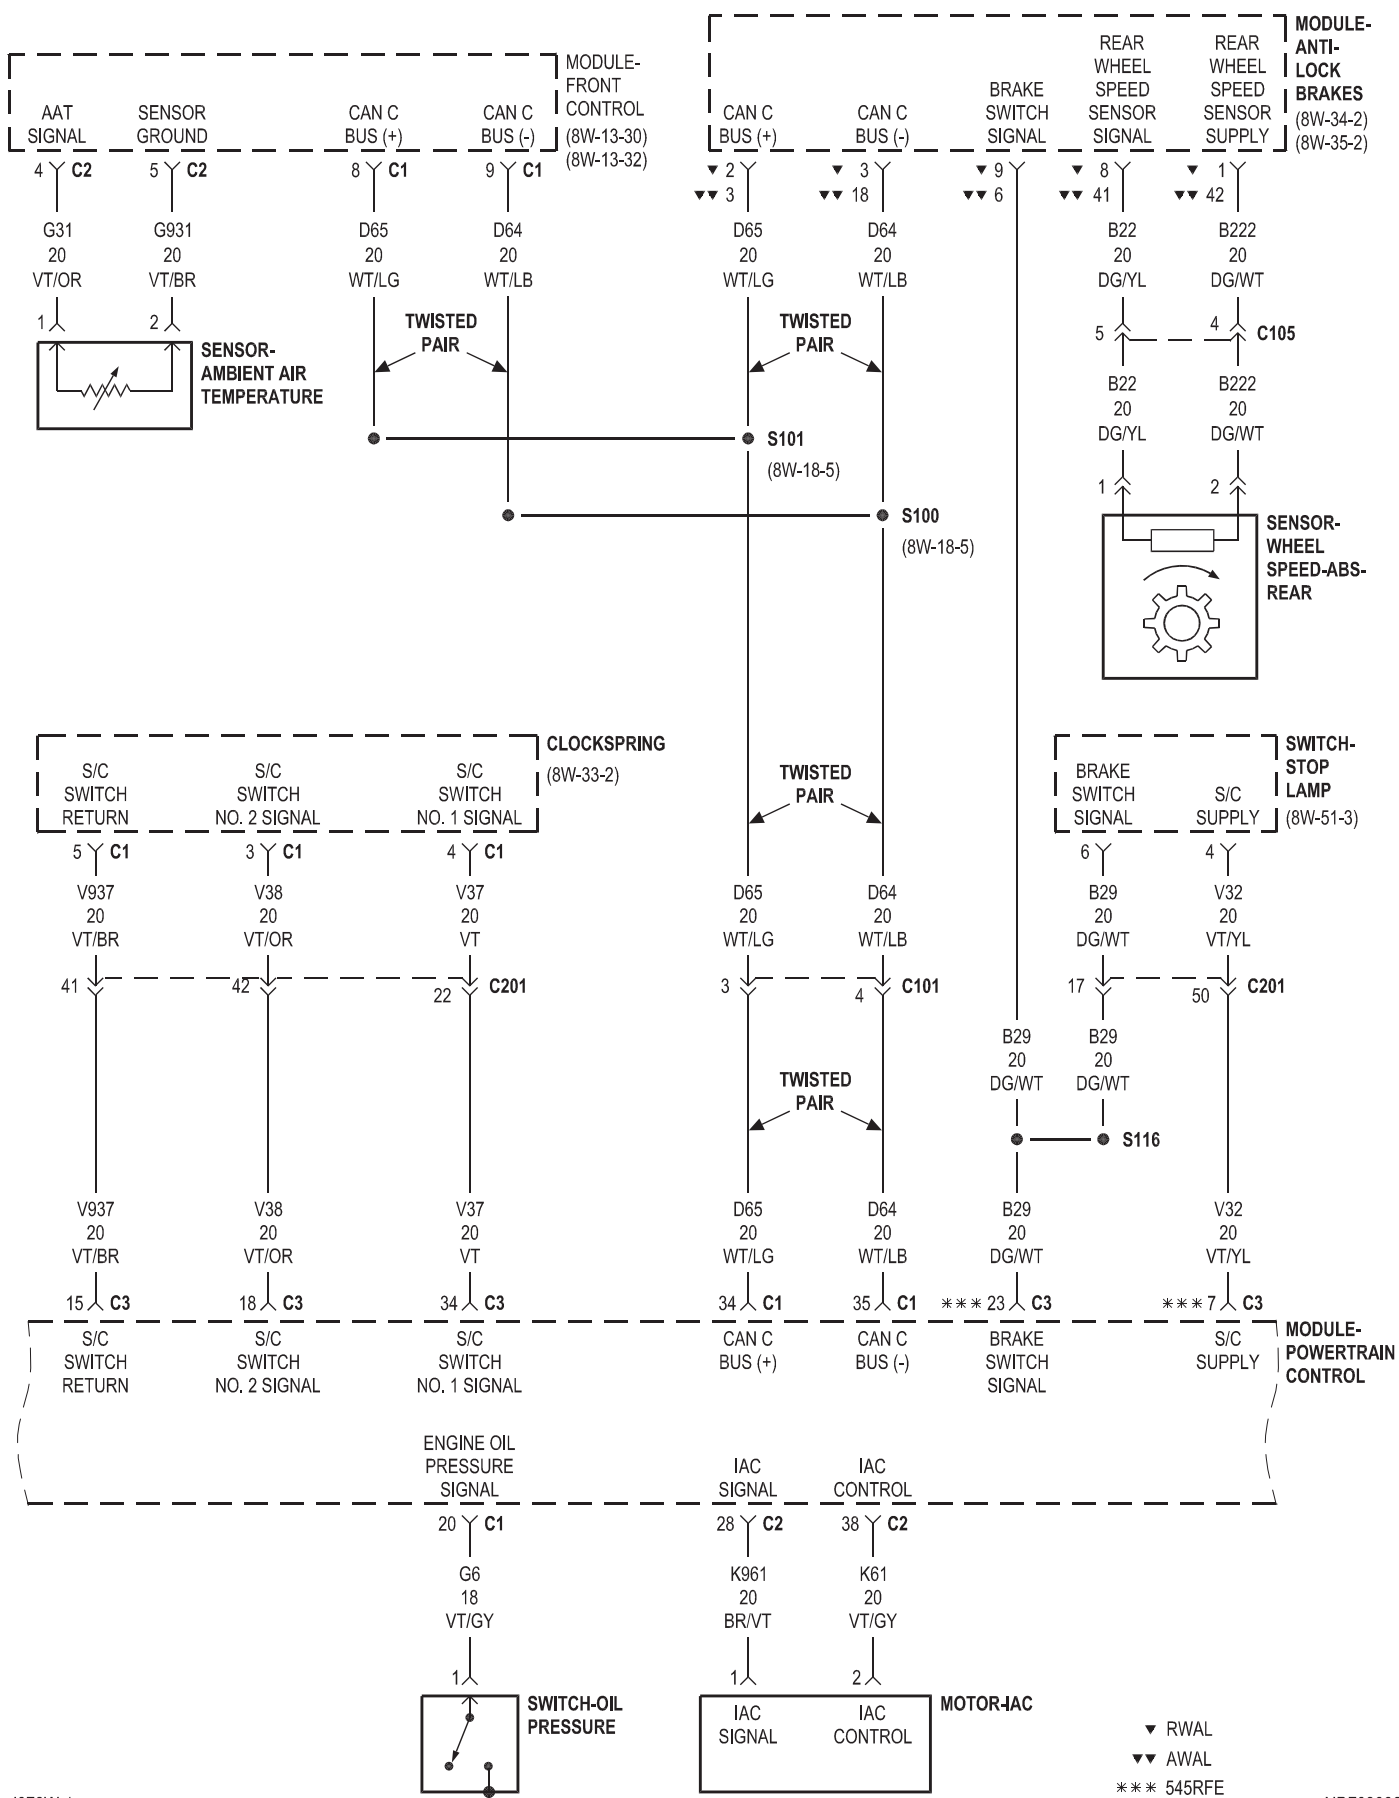

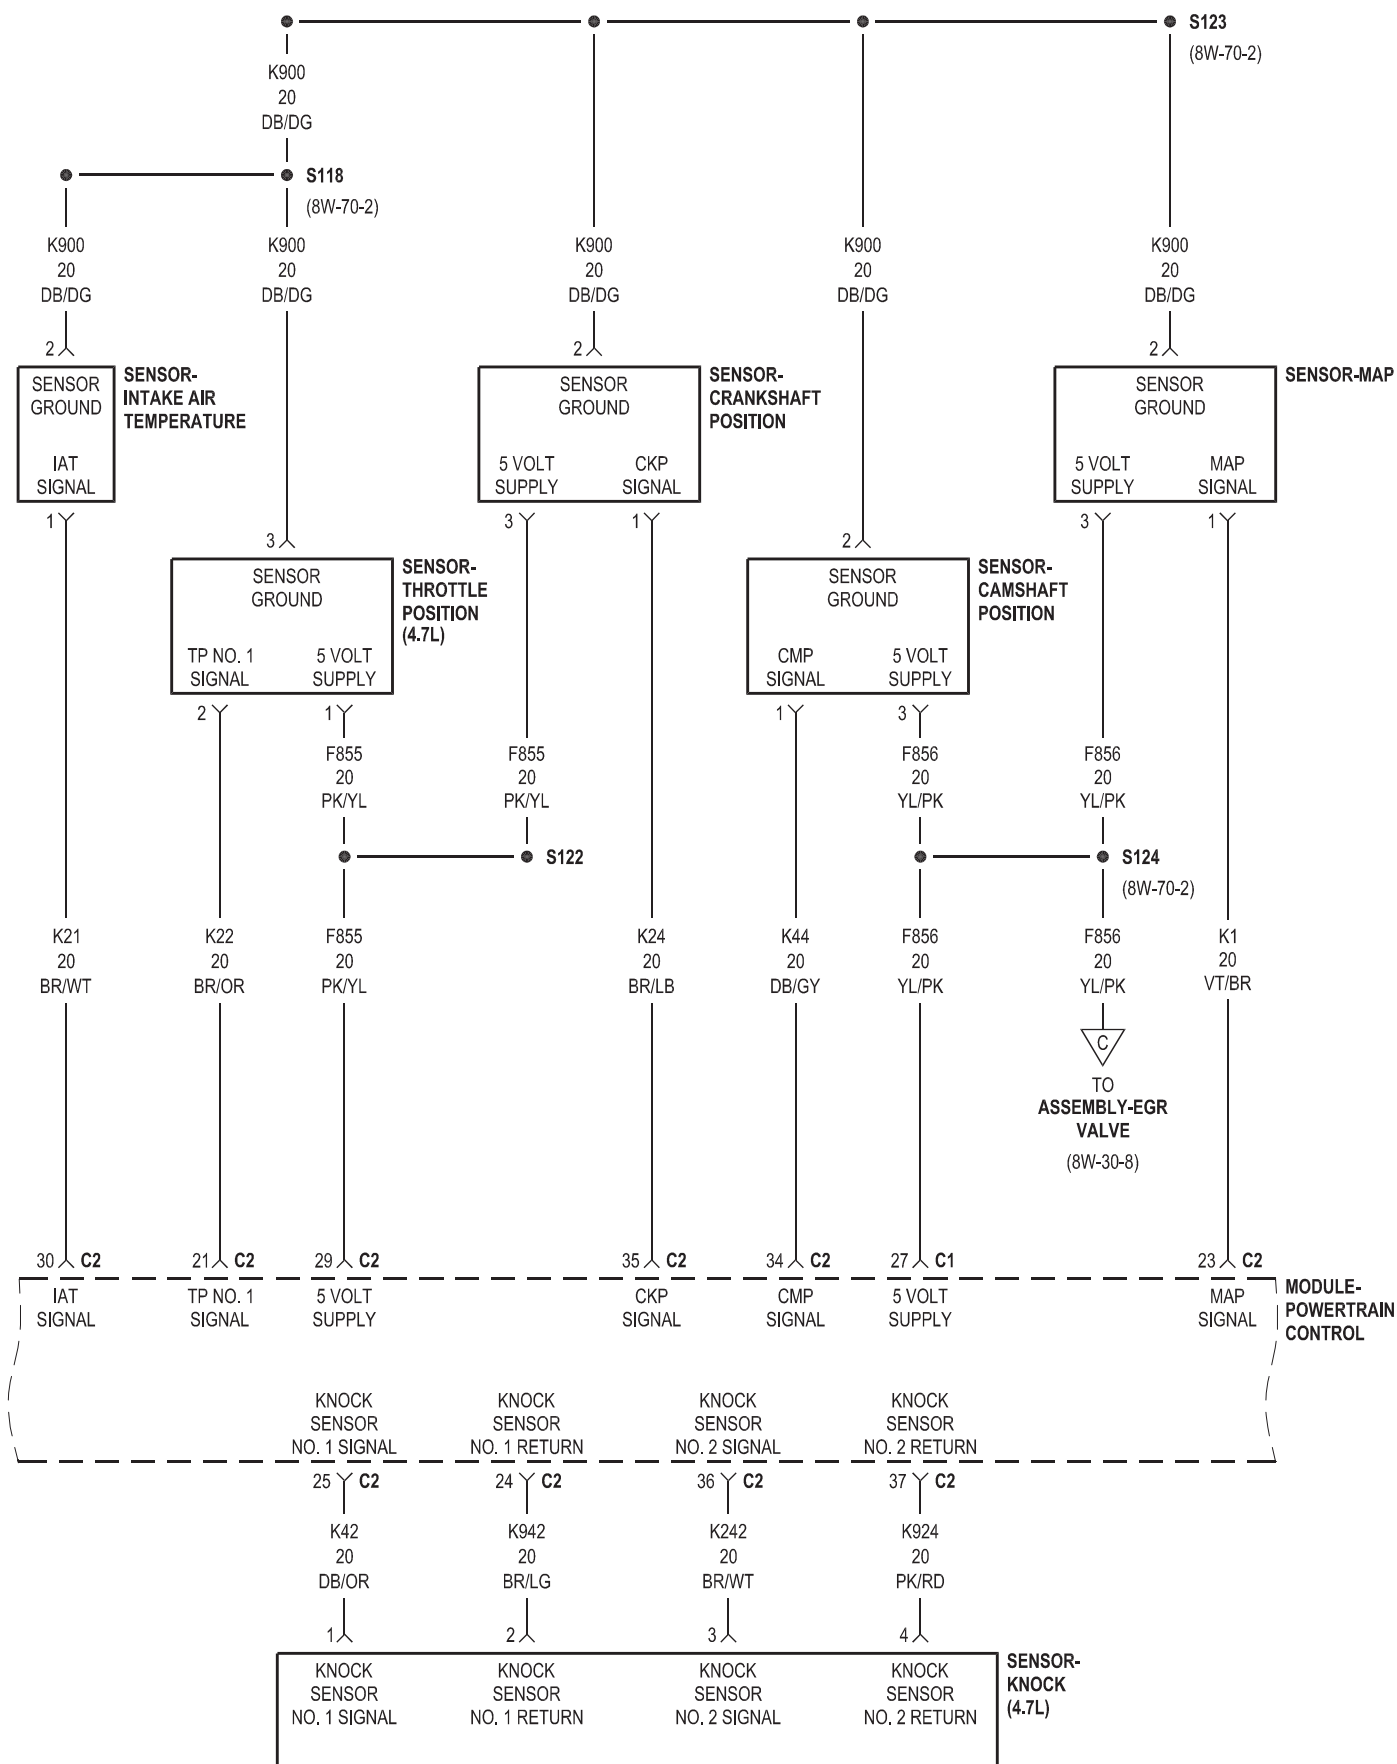

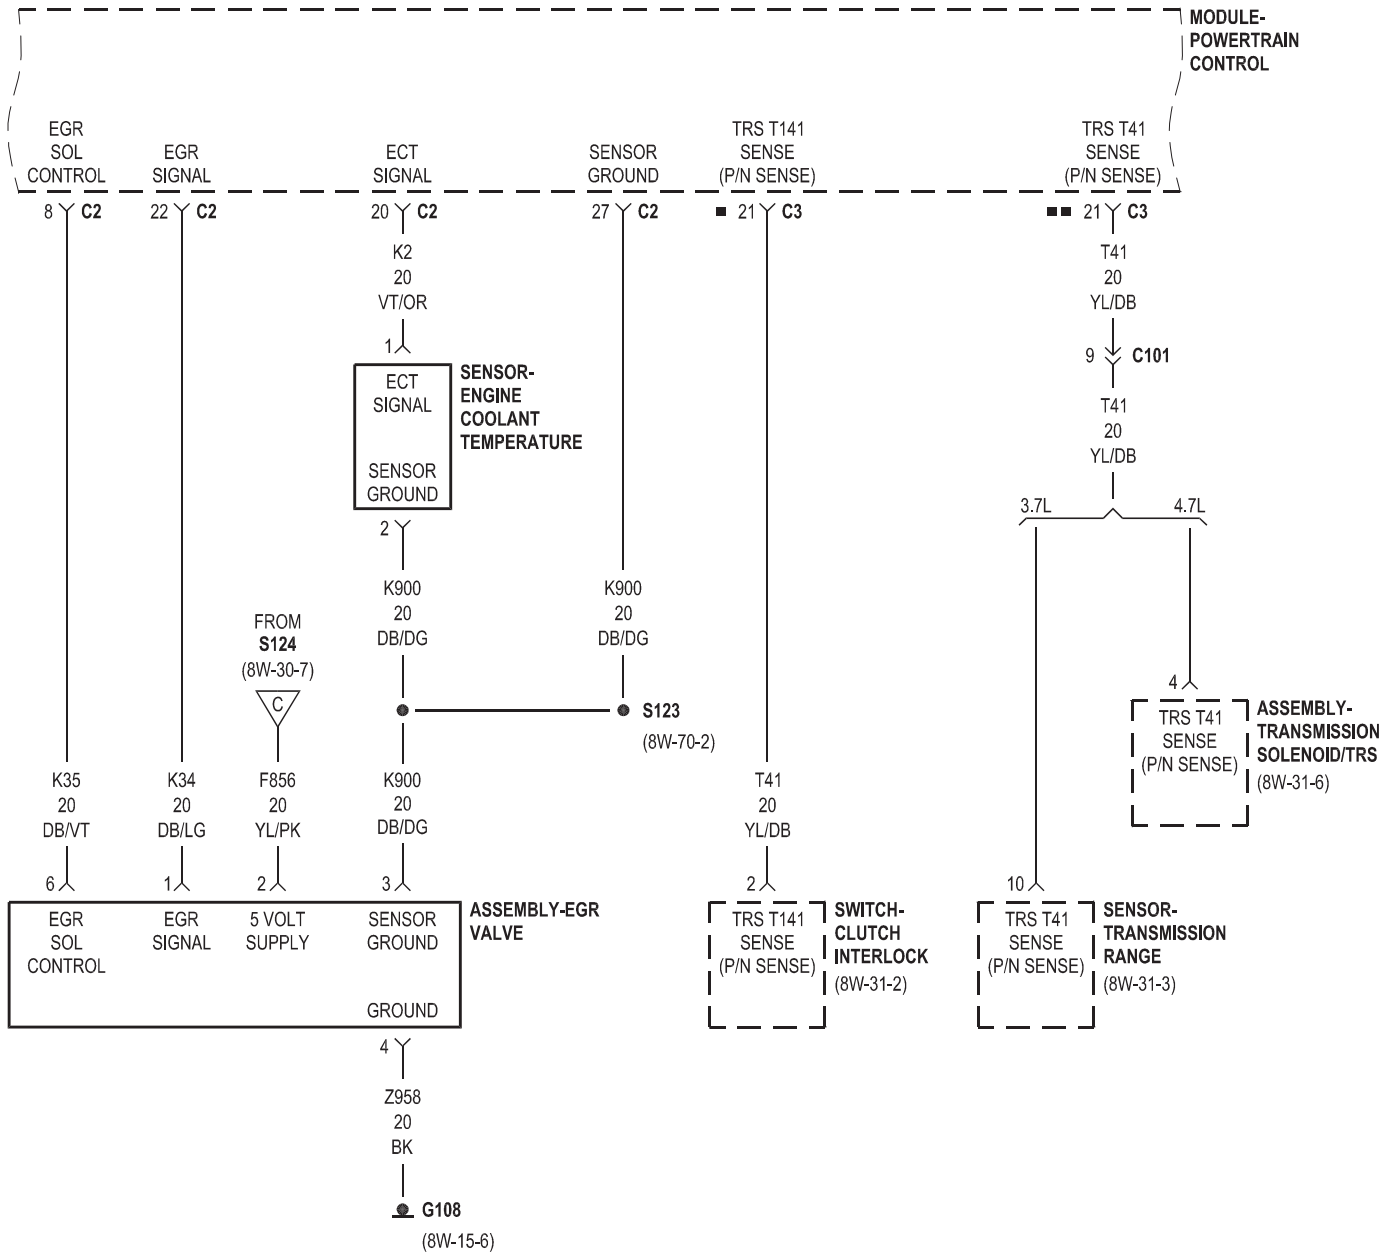



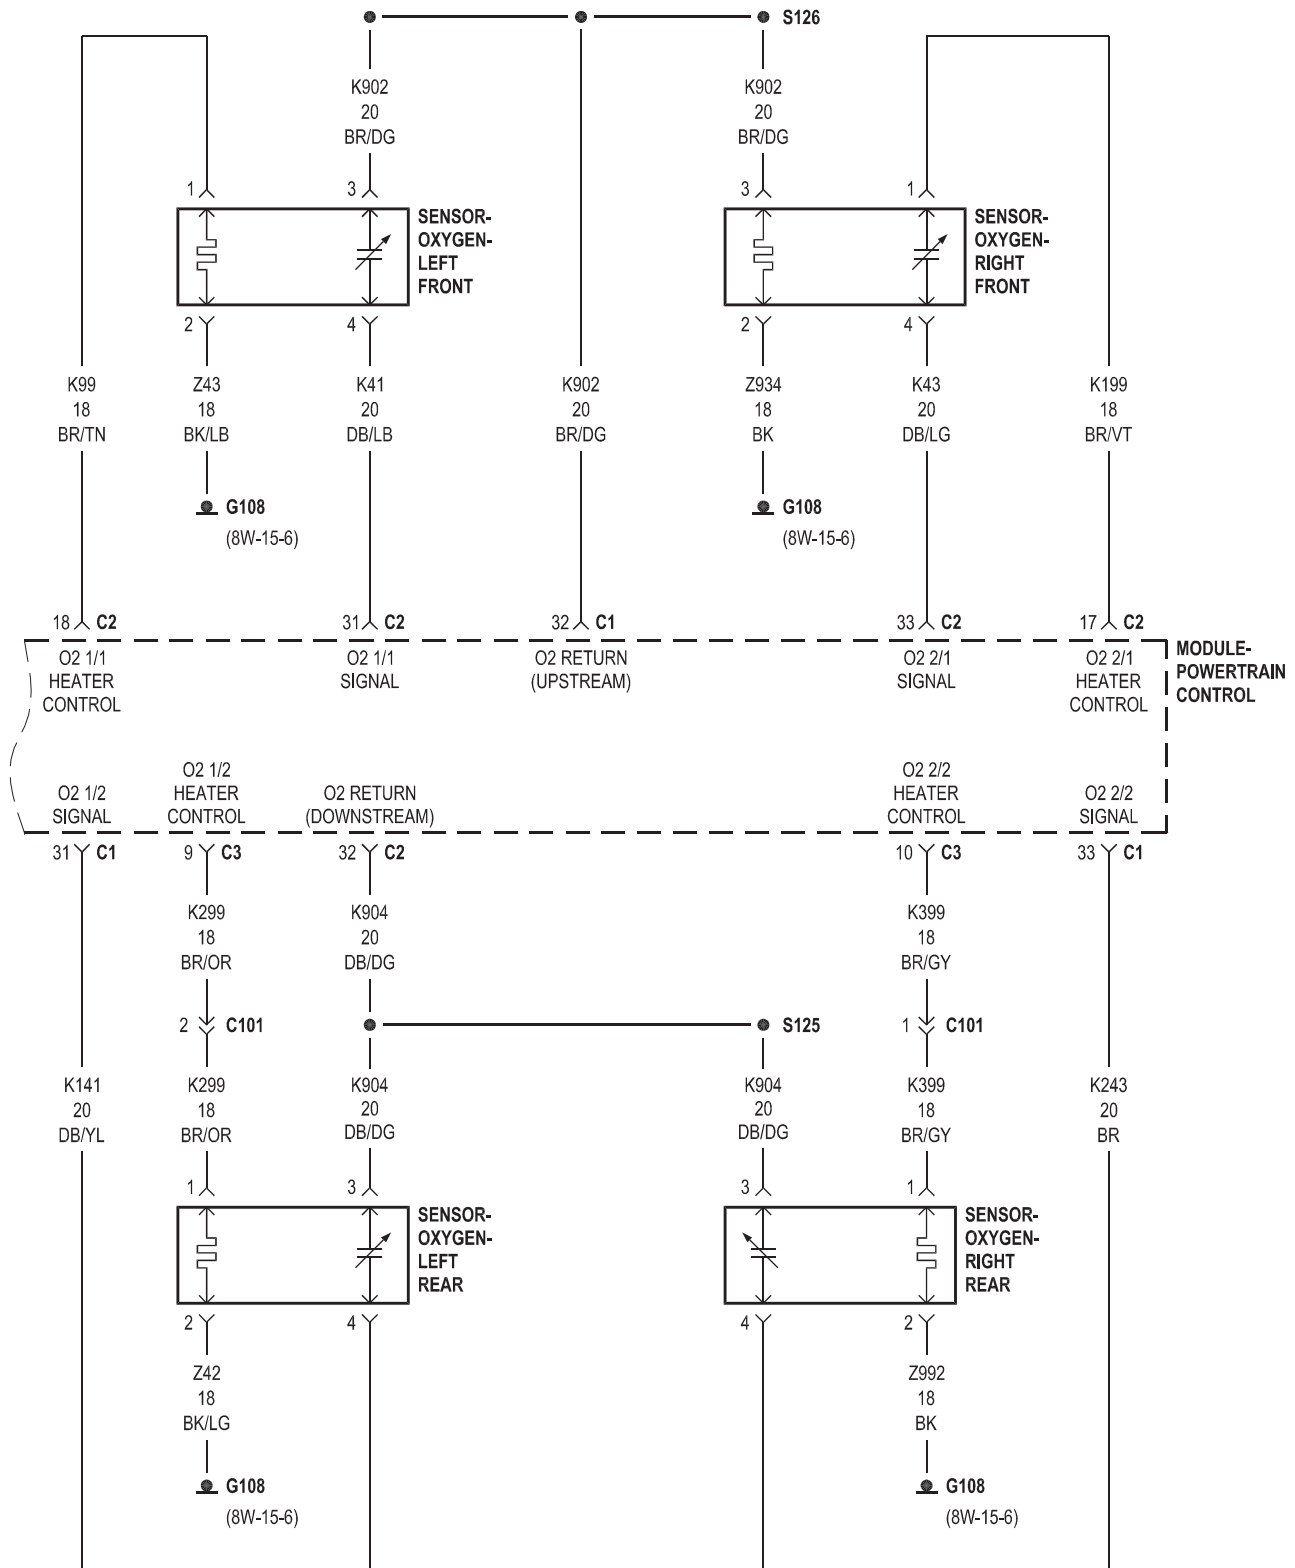

## 3.7L

