

8W-43 OCCUPANT RESTRAINT SYSTEM

Component	Page
Airbag-Driver Squib 1	8W-43-3
Airbag-Driver Squib 2	8W-43-3
Airbag-Passenger Squib	8W-43-3
Airbag-Side Curtain-Left	8W-43-4
Airbag-Side Curtain-Right	8W-43-4
Clockspring	8W-43-3
Cluster	8W-43-2
Fuse 46	8W-43-2
Fuse 57	8W-43-2
G300	8W-43-2
G301	8W-43-2
Lamp-Passenger Airbag On/Off Indicator . .	8W-43-2
Module-Front Control	8W-43-2

Component	Page
Module-Integrated Power	8W-43-2
Module-Occupant Restraint	
Controller	8W-43-2, 3, 4
Seat Belt-Tensioner-Driver	8W-43-3
Seat Belt-Tensioner-Passenger	8W-43-3
Sensor-Front Impact-Left	8W-43-3
Sensor-Front Impact-Right	8W-43-3
Sensor-Seat Track Position-Driver	8W-43-4
Sensor-Side Impact-Left 1	8W-43-4
Sensor-Side Impact-Right 1	8W-43-4
Switch-Passenger Airbag On/Off	8W-43-2
Switch-Seat Belt-Driver	8W-43-2





