


8W - 56 CONVENIENCE SYSTEMS

Component	Page
Adjustable Pedals Motor	8W-56-2, 3
Adjustable Pedals Relay	8W-56-2
Adjustable Pedals Sensor	8W-56-3
Adjustable Pedals Switch	8W-56-2
Driver Heated Seat Module	8W-56-3
Front Control Module	8W-56-2, 4
Fuse 14	8W-56-2
Fuse 18	8W-56-2
Fuse 22	8W-56-3
G200	8W-56-2
G300	8W-56-3
G302	8W-56-4
Ignition Switch	8W-56-4

Component	Page
Integrated Power Module	8W-56-2, 3, 4
Left Sliding Door Control Module	8W-56-2
Memory Seat/Mirror/Adjustable Pedals Module	8W-56-2, 3
Park Assist Display	8W-56-4
Park Assist Module	8W-56-4, 5, 6
Park Assist Sensor No. 7	8W-56-5, 6
Park Assist Sensor No. 8	8W-56-5, 6
Park Assist Sensor No. 9	8W-56-5, 6
Park Assist Sensor No. 10	8W-56-5, 6
Power Seat Circuit Breaker	8W-56-3
Sentry Key Remote Entry Module	8W-56-4

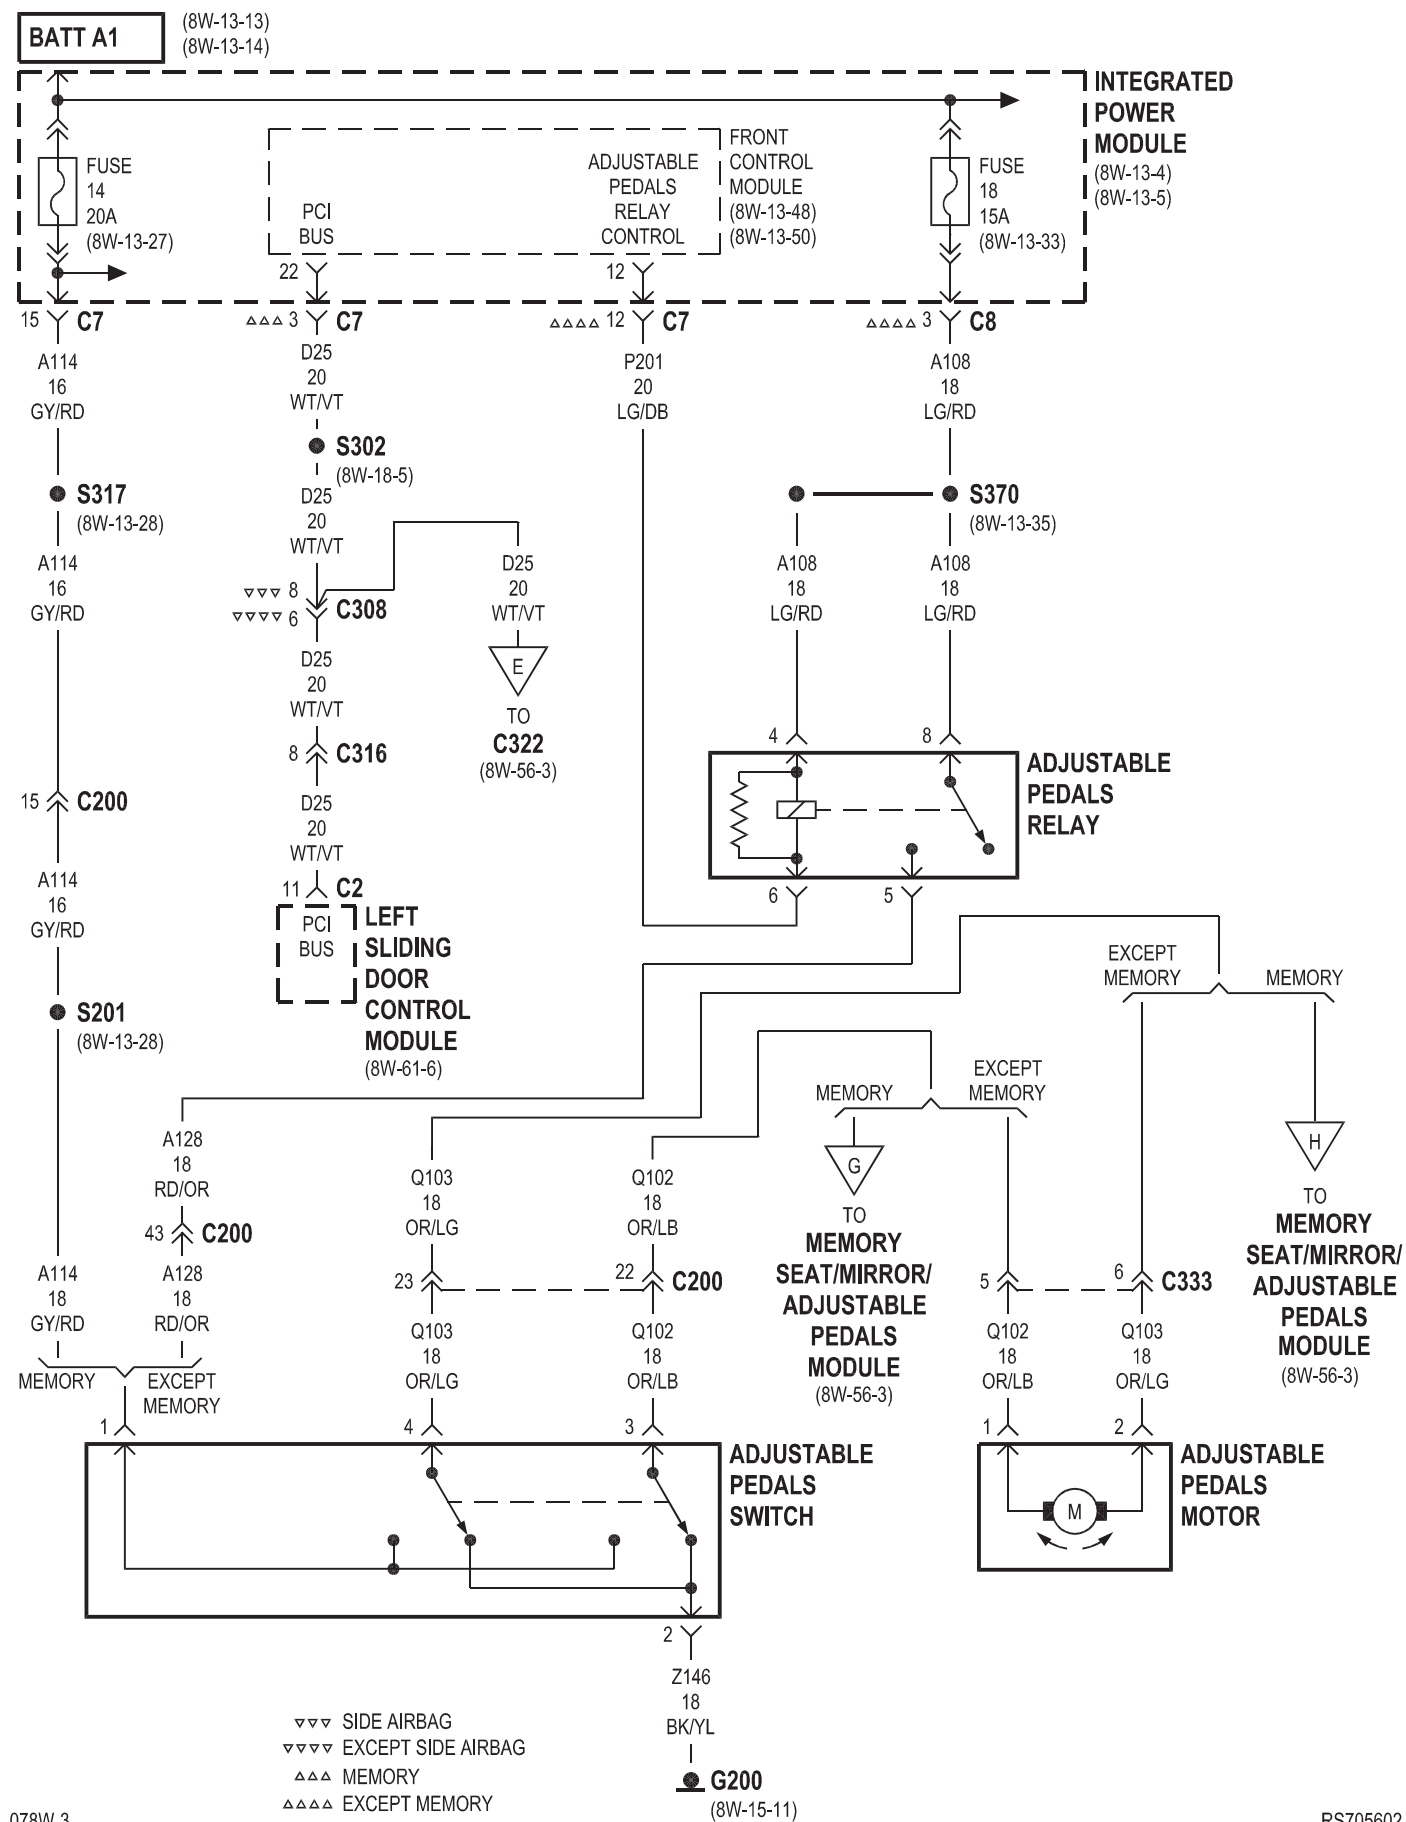

ADJUSTABLE PEDALS/MEMORY/EXCEPT EXPORT

