

## 8W - 44 INTERIOR LIGHTING

<b>Component</b>	<b>Page</b>
A/C-Heater Control . . . . .	8W-44-8
Accessory Relay . . . . .	8W-44-4
Auto Temp Control . . . . .	8W-44-8
Body Control Module . . .	8W-44-2, 3, 4, 5, 7, 8, 9, 10
Driver Door Courtesy Lamp . . . . .	8W-44-2
Floor Console Lamp . . . . .	8W-44-4, 5
Floor Console Power Outlet . . . . .	8W-44-4
Front Control Module . . . . .	8W-44-4
Front Reading Lamps/Switch . . . . .	8W-44-2, 4, 5
Fuse 6 . . . . .	8W-44-4
G200 . . . . .	8W-44-7, 8
G300 . . . . .	8W-44-2, 8
G301 . . . . .	8W-44-2, 3, 5, 6
G302 . . . . .	8W-44-4
G303 . . . . .	8W-44-9, 10
Headlamp Switch . . . . .	8W-44-3
Instrument Cluster . . . . .	8W-44-7

<b>Component</b>	<b>Page</b>
Instrument Panel Switch Bank . . . . .	8W-44-7
Integrated Power Module . . . . .	8W-44-4
Left Liftgate Flood Lamp . . . . .	8W-44-9, 10
Left Mid Reading Lamp . . . . .	8W-44-3
Left Rear Reading Lamp . . . . .	8W-44-3
Left Visor/Vanity Lamp . . . . .	8W-44-5, 6
Overhead Console . . . . .	8W-44-5
Passenger Door Courtesy Lamp . . . . .	8W-44-2
Radio . . . . .	8W-44-7
Rear Auto Temp Control Switch . . . . .	8W-44-8
Rear Blower Rear Control Switch . . . . .	8W-44-8
Rear Dome Lamp . . . . .	8W-44-3, 5
Rear Power Outlet . . . . .	8W-44-4
Right Liftgate Flood Lamp . . . . .	8W-44-9, 10
Right Mid Reading Lamp . . . . .	8W-44-3
Right Rear Reading Lamp . . . . .	8W-44-3, 4
Right Visor/Vanity Lamp . . . . .	8W-44-5, 6



















