

8W - 20 CHARGING SYSTEM

Component	Page	Component	Page
Auto Shut Down Relay	8W-20-2	Fusible Link	8W-20-2, 4
Battery	8W-20-2, 4	G100	8W-20-2, 4
Battery Temperature Sensor	8W-20-4	G101	8W-20-2, 3, 4
ECM/PCM Relay	8W-20-4	Generator	8W-20-2, 3, 4
Engine Control Module	8W-20-4	Integrated Power Module	8W-20-2, 4
Fuse 16	8W-20-2, 4	Powertrain Control Module	8W-20-2, 3
Fuse 17	8W-20-2	Starter Motor	8W-20-2, 4





