

8W-13 INTEGRATED POWER MODULE


Component	Page
Amplifier-Radio.....	8W-13-23
Assembly-Shift Motor/Mode Sensor.....	8W-13-22
Assembly-Transmission Solenoid.....	8W-13-38
Assembly-Transmission Solenoid/TRS.....	8W-13-11, 15
Assembly-Winch.....	8W-13-7
Auxiliary PDC Box.....	8W-13-8
Backlite-Heated.....	8W-13-10
Battery.....	8W-13-7, 8
Battery-Auxiliary.....	8W-13-7
Cluster.....	8W-13-9, 16, 23, 25, 33
Clutch-A/C Compressor.....	8W-13-36
Control-A/C-Heater.....	8W-13-9, 22
Data Link Connector.....	8W-13-16
Drive-Fan-Radiator.....	8W-13-9
Fuse 1.....	8W-13-9
Fuse 2.....	8W-13-9
Fuse 4.....	8W-13-10
Fuse 5.....	8W-13-9
Fuse 6.....	8W-13-9
Fuse 8.....	8W-13-10
Fuse 9.....	8W-13-10
Fuse 10.....	8W-13-11, 15
Fuse 11.....	8W-13-10
Fuse 12.....	8W-13-17
Fuse 13.....	8W-13-17
Fuse 14.....	8W-13-17
Fuse 15.....	8W-13-17
Fuse 16.....	8W-13-17
Fuse 18.....	8W-13-18
Fuse 19.....	8W-13-18
Fuse 20.....	8W-13-18
Fuse 21.....	8W-13-18
Fuse 22.....	8W-13-21
Fuse 23.....	8W-13-22
Fuse 24.....	8W-13-22
Fuse 25.....	8W-13-22
Fuse 26.....	8W-13-22
Fuse 27.....	8W-13-22
Fuse 28.....	8W-13-20
Fuse 29.....	8W-13-20
Fuse 30.....	8W-13-9
Fuse 31.....	8W-13-23
Fuse 32.....	8W-13-19
Fuse 33.....	8W-13-9
Fuse 35.....	8W-13-23
Fuse 36.....	8W-13-23
Fuse 37.....	8W-13-20
Fuse 38.....	8W-13-23

Component	Page
Fuse 39.....	8W-13-24
Fuse 40.....	8W-13-24
Fuse 42.....	8W-13-24
Fuses.....	8W-13-5, 6
Fusible Link.....	8W-13-7, 8
G100.....	8W-13-7
G101.....	8W-13-7
G102.....	8W-13-7
G104.....	8W-13-39
G105.....	8W-13-7
G106.....	8W-13-19, 39
G107.....	8W-13-39
G111.....	8W-13-7
G201.....	8W-13-21
Generator.....	8W-13-7
Heater-Fuel.....	8W-13-36
Horn-No.1.....	8W-13-39
Horn-No.2.....	8W-13-39
Lamp-Backup-Left.....	8W-13-35
Lamp-Fog-Left Front.....	8W-13-35
Lamp-Headlamp-Left.....	8W-13-34
Lamp-Headlamp-Right.....	8W-13-34
Lamp-Park/Turn-Left Front.....	8W-13-17
Lamp-Park/Turn-Right Front.....	8W-13-17
Lamp-Tail Stop/Turn-Left.....	8W-13-32
Lamp-Tail Stop/Turn-Right.....	8W-13-32
Lamp-Underhood.....	8W-13-10
Media Systems-Monitor/DVD.....	8W-13-16
Mirror-Inside Rearview.....	8W-13-20
Mirror-Outside Rearview-Driver.....	8W-13-10
Module-Anti-Lock Brakes.....	8W-13-17, 18, 33
Module-Axle Disconnect-Front.....	8W-13-26, 30
Module-Brake Provision.....	8W-13-19
Module-Engine Control.....	8W-13-15, 20, 24
Module-Final Drive Control.....	8W-13-9, 10
Module-Fuel Pump.....	8W-13-27
Module-Hands Free.....	8W-13-16
Module-Occupant Restraint Controller.....	8W-13-18
Module-Powertrain Control.....	8W-13-8, 11, 15, 20, 23, 25, 26, 27, 35
Module-Sentry Key Remote Entry.....	8W-13-16, 21
Module-Totally Integrated Power.....	8W-13-9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38,
Module-Transmission Control.....	8W-13-8, 10, 38
Motor-Blower.....	8W-13-28
Motor-Condenser Fan.....	8W-13-36
Motor-Windshield Wiper.....	8W-13-37, 39


Component	Page
Motor/Module-Sunroof.....	8W-13-9
Port-Upfitters.....	8W-13-8
Power Outlet.....	8W-13-23
Power Outlet-Console.....	8W-13-9
Power Outlet-Instrument Panel.....	8W-13-24
Pump-Washer-Windshield.....	8W-13-26
Radio.....	8W-13-16
Receiver-Satellite.....	8W-13-16
Relay-Intake Air Heater.....	8W-13-7
Seat Belt-Tension Reducer-Driver.....	8W-13-24
Sensor-Ambient Air Temperature.....	8W-13-31
Sensor-Brake Fluid Level.....	8W-13-27
Sensor-Dynamics.....	8W-13-9
Sensor-Prop Shaft Speed-Front.....	8W-13-26
Sensor-Prop Shaft Speed-Rear.....	8W-13-33
Sensor-Steering Angle.....	8W-13-20
Sensor-Transfer Case Position.....	8W-13-12, 13, 14
Sensor-Transmission Range.....	8W-13-11, 15
Solenoid-Wastegate.....	8W-13-9
Starter.....	8W-13-7, 36

Component	Page
Switch-Adjustable Pedals.....	8W-13-19, 26
Switch-Backup Lamp.....	8W-13-34
Switch-Clutch Interlock.....	8W-13-8, 11, 15
Switch-Door Lock-Passenger.....	8W-13-20
Switch-Heated Seat-Driver.....	8W-13-27
Switch-Heated Seat-Passenger.....	8W-13-27
Switch-Ignition.....	8W-13-21
Switch-Passenger Airbag On/Off.....	8W-13-18
Switch-Power Sliding Backlite.....	8W-13-37
Switch-Seat Driver.....	8W-13-22
Switch-Seat Passenger.....	8W-13-22
Switch-Stop Lamp.....	8W-13-8, 20, 22
Switch-Transfer Case Selector.....	8W-13-20
Switch-Washer Fluid Level.....	8W-13-25
Switch-Window/Door Lock-Driver.....	8W-13-18, 34, 37
Transducer-A/C Pressure.....	8W-13-34, 35
Wiring-Trailer Tow.....	8W-13-17, 18, 28
Wiring-Trailer Tow 4-Way.....	8W-13-17, 28
Wiring-Trailer Tow 7-Way.....	8W-13-18

MODULE-
TOTALLY INTEGRATED POWER
(FRONT VIEW)

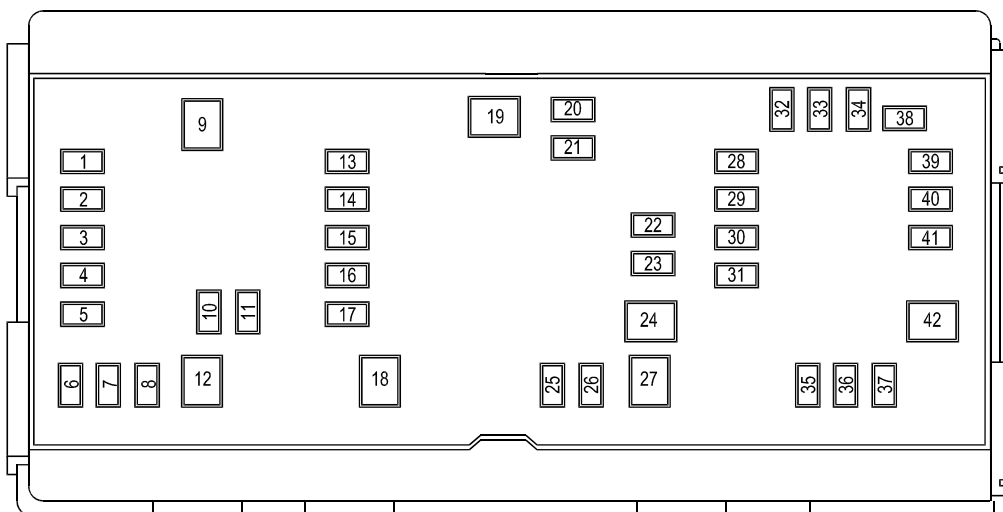

MODULE-
TOTALLY INTEGRATED POWER
(REAR VIEW)

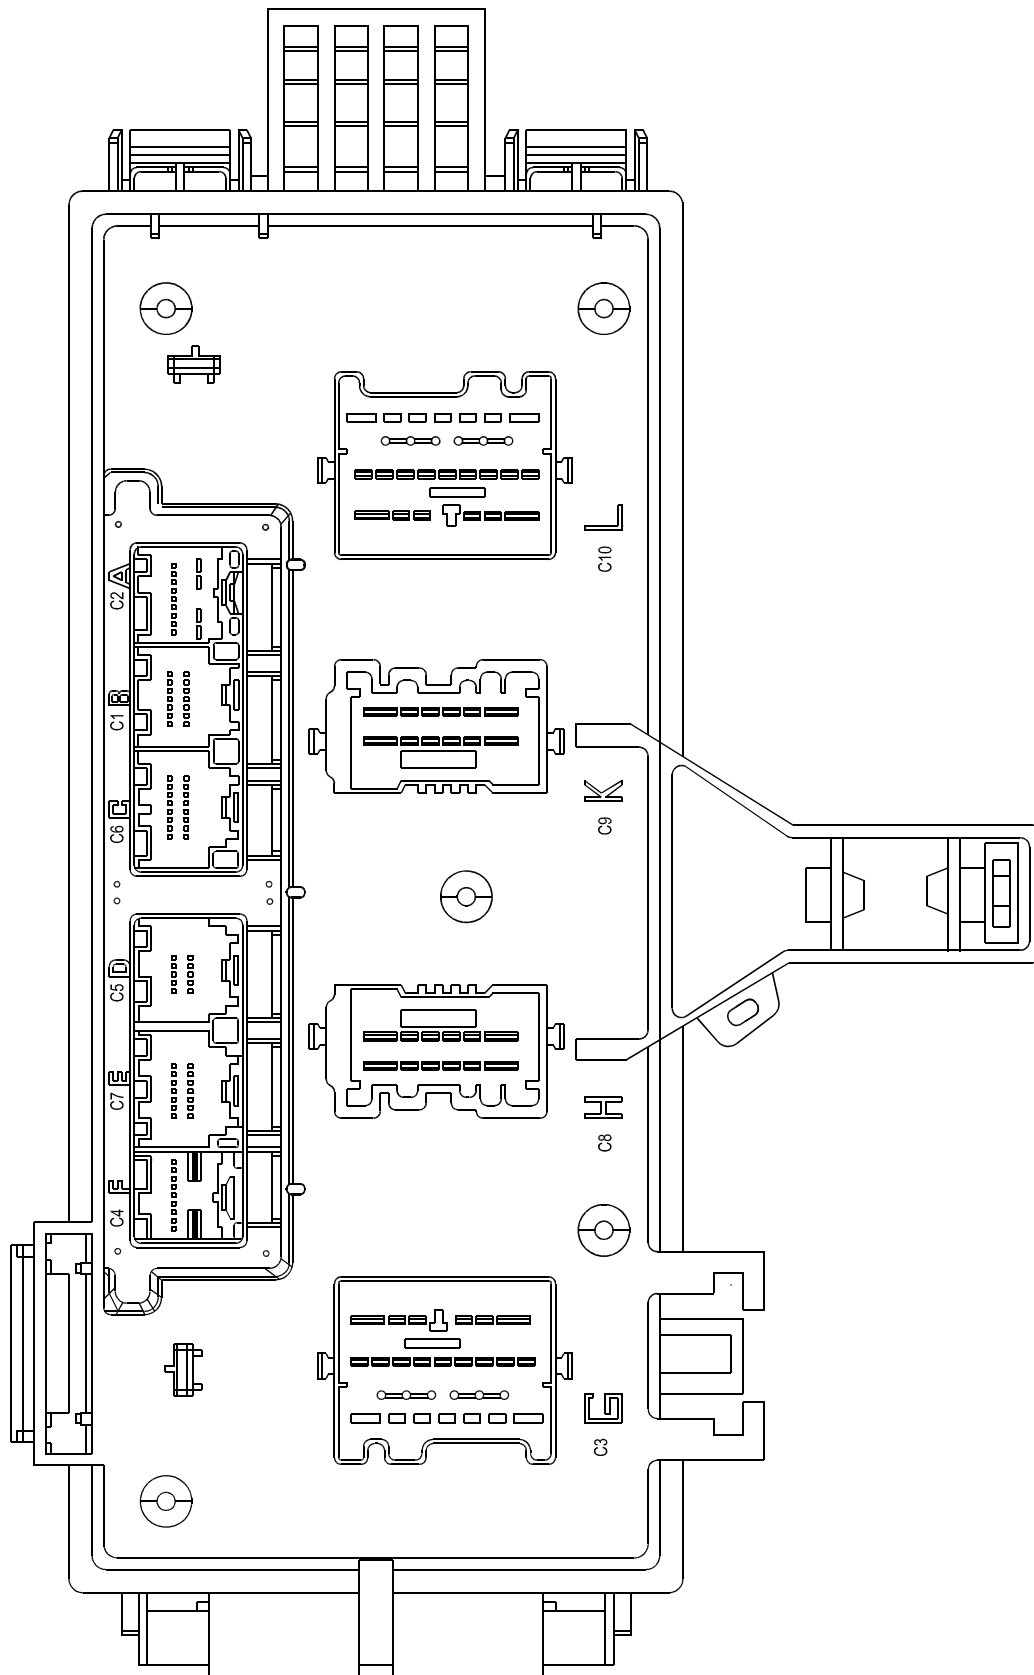

FUSES
(TIPM)

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	20A	A405 18RD/DB	FUSED B(+)
2	20A	A941 18RD	FUSED B(+)
3	-	-	-
4	15A	A104 20YL/RD	FUSED B(+)
5	20A	A310 16RD/LB ▽▽	FUSED B(+)
6	10A	A212 20RD/OR ○○	FUSED B(+)
7	-	-	-
8	10A	C16 18DB/GY ▽▽	HEATED MIRROR CONTROL OUTPUT
9	30A	A121 14RD/YL ▼▼▼▼	FUSED B(+)
10	5A	T41 20YL/DB	TRS T41 SENSE
11	20A	A114 18GY/RD	FUSED B(+)
12	30A	A400 14TN/RD ◆◆◆◆	FUSED B(+)
13	25A	A111 14DG/RD ■	FUSED B(+)
14	15A	L7 20WT/YL	FUSED PARK LAMP FEED
15	20A	L678 18BR	FUSED PARK LAMP FEED
16	15A	L70 20WT/GY	FUSED PARK LAMP FEED
17	-	-	-
18	40A	A107 12TN/RD ■	FUSED B(+)
19	30A	A100 14RD/VT ◆◆◆◆	FUSED B(+)
20	10A	F100 20PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
21	10A	F201 20PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
22	2A	A106 20LB/RD	FUSED B(+)
23	10A	A919 20RD	FUSED B(+)
24	20A	A916 16RD	FUSED B(+)
25	10A	A940 18RD	FUSED B(+)


- AWAL
- ▽▽ EXCEPT BASE
- DIESEL
- ▼▼▼▼ POWER WAGON
- ◆◆◆◆ TRAILER TOW


FUSES
(TIPM)


FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
26	20A	A103 18GY/RD	FUSED B(+)
27	40A	A210 12OR/RD	FUSED B(+)
28	10A	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
29	10A	F21 20PK/DG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
30	15A	F960 20PK/LG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
31	10A	A918 16RD ●●●●	FUSED B(+)
32	10A	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
33	10A	F921 16PK/LB	FUSED IGNITION SWITCH OUTPUT (RUN)
34	-	-	-
35	15A	A944 20RD	FUSED B(+)
36	25A	A116 16YL/RD	FUSED B(+)
37	15A	A118 18RD/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
38	25A	A205 18RD/OR	FUSED B(+)
39	10A	F983 20PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
40	20A	F984 18PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
41	-	-	-
42	30A	A209 10RD ○○	FUSED B(+)


○○ DIESEL


●●●● EXCEPT DIESEL MTC

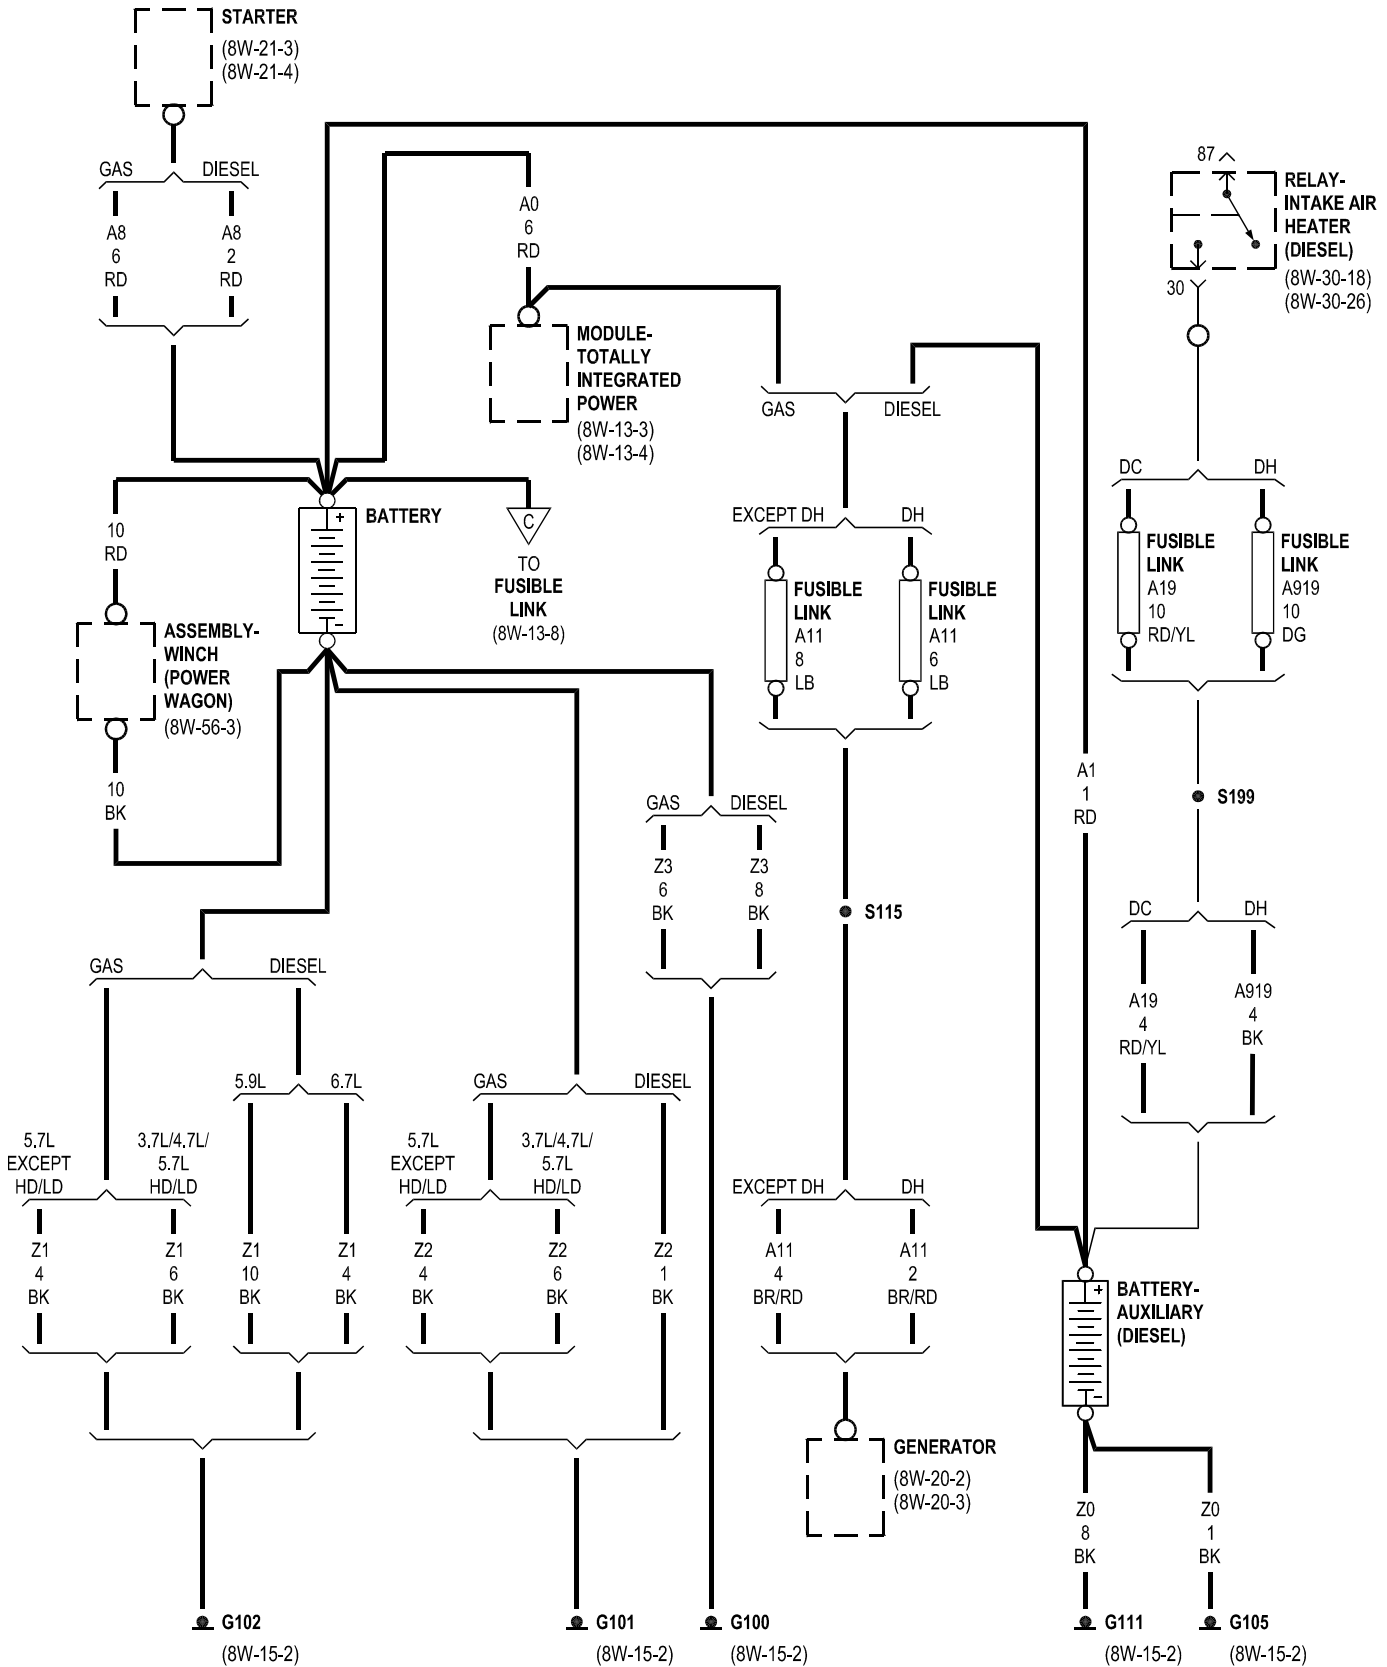

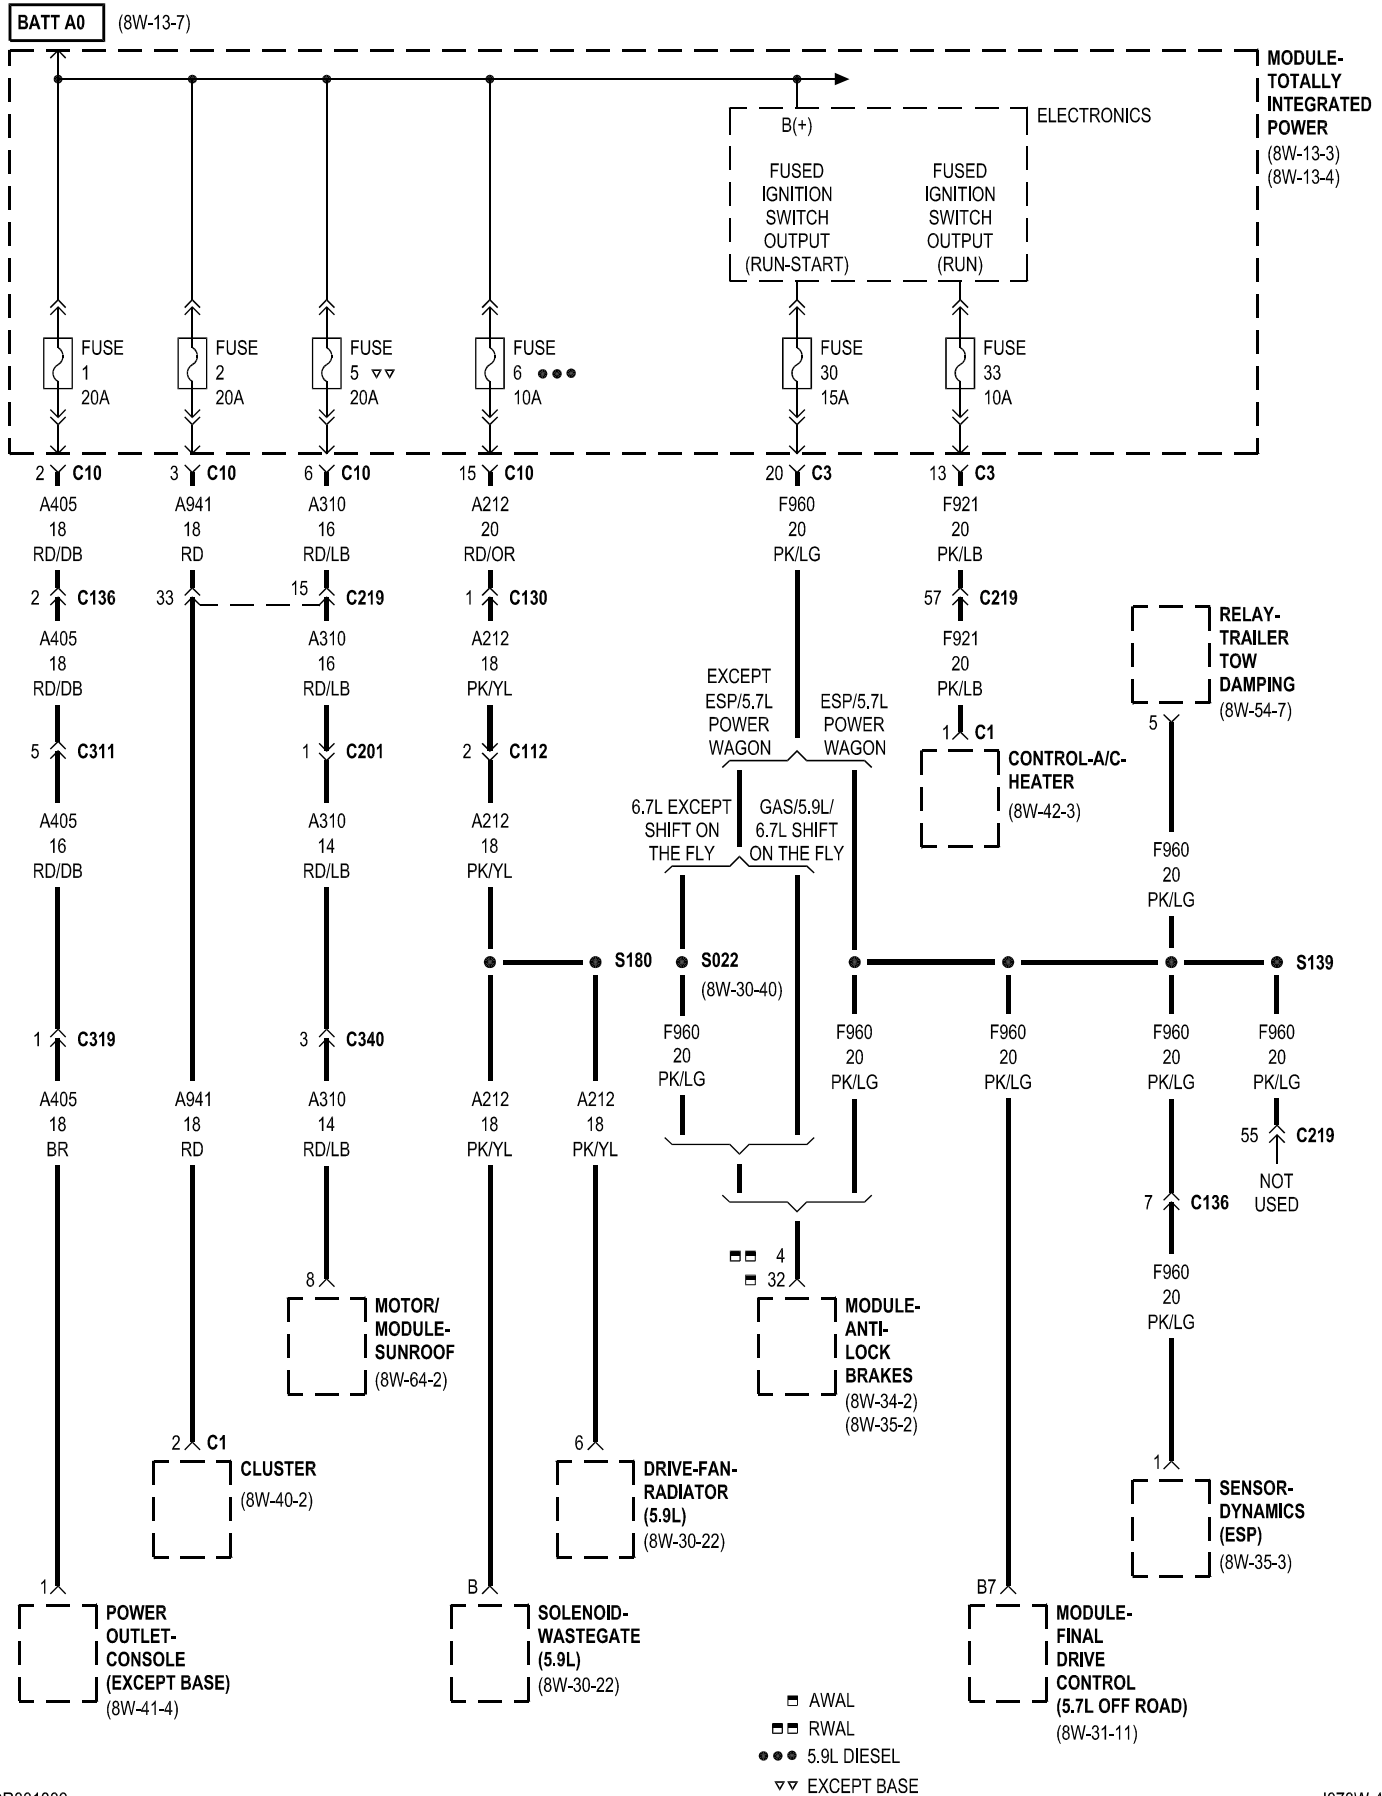


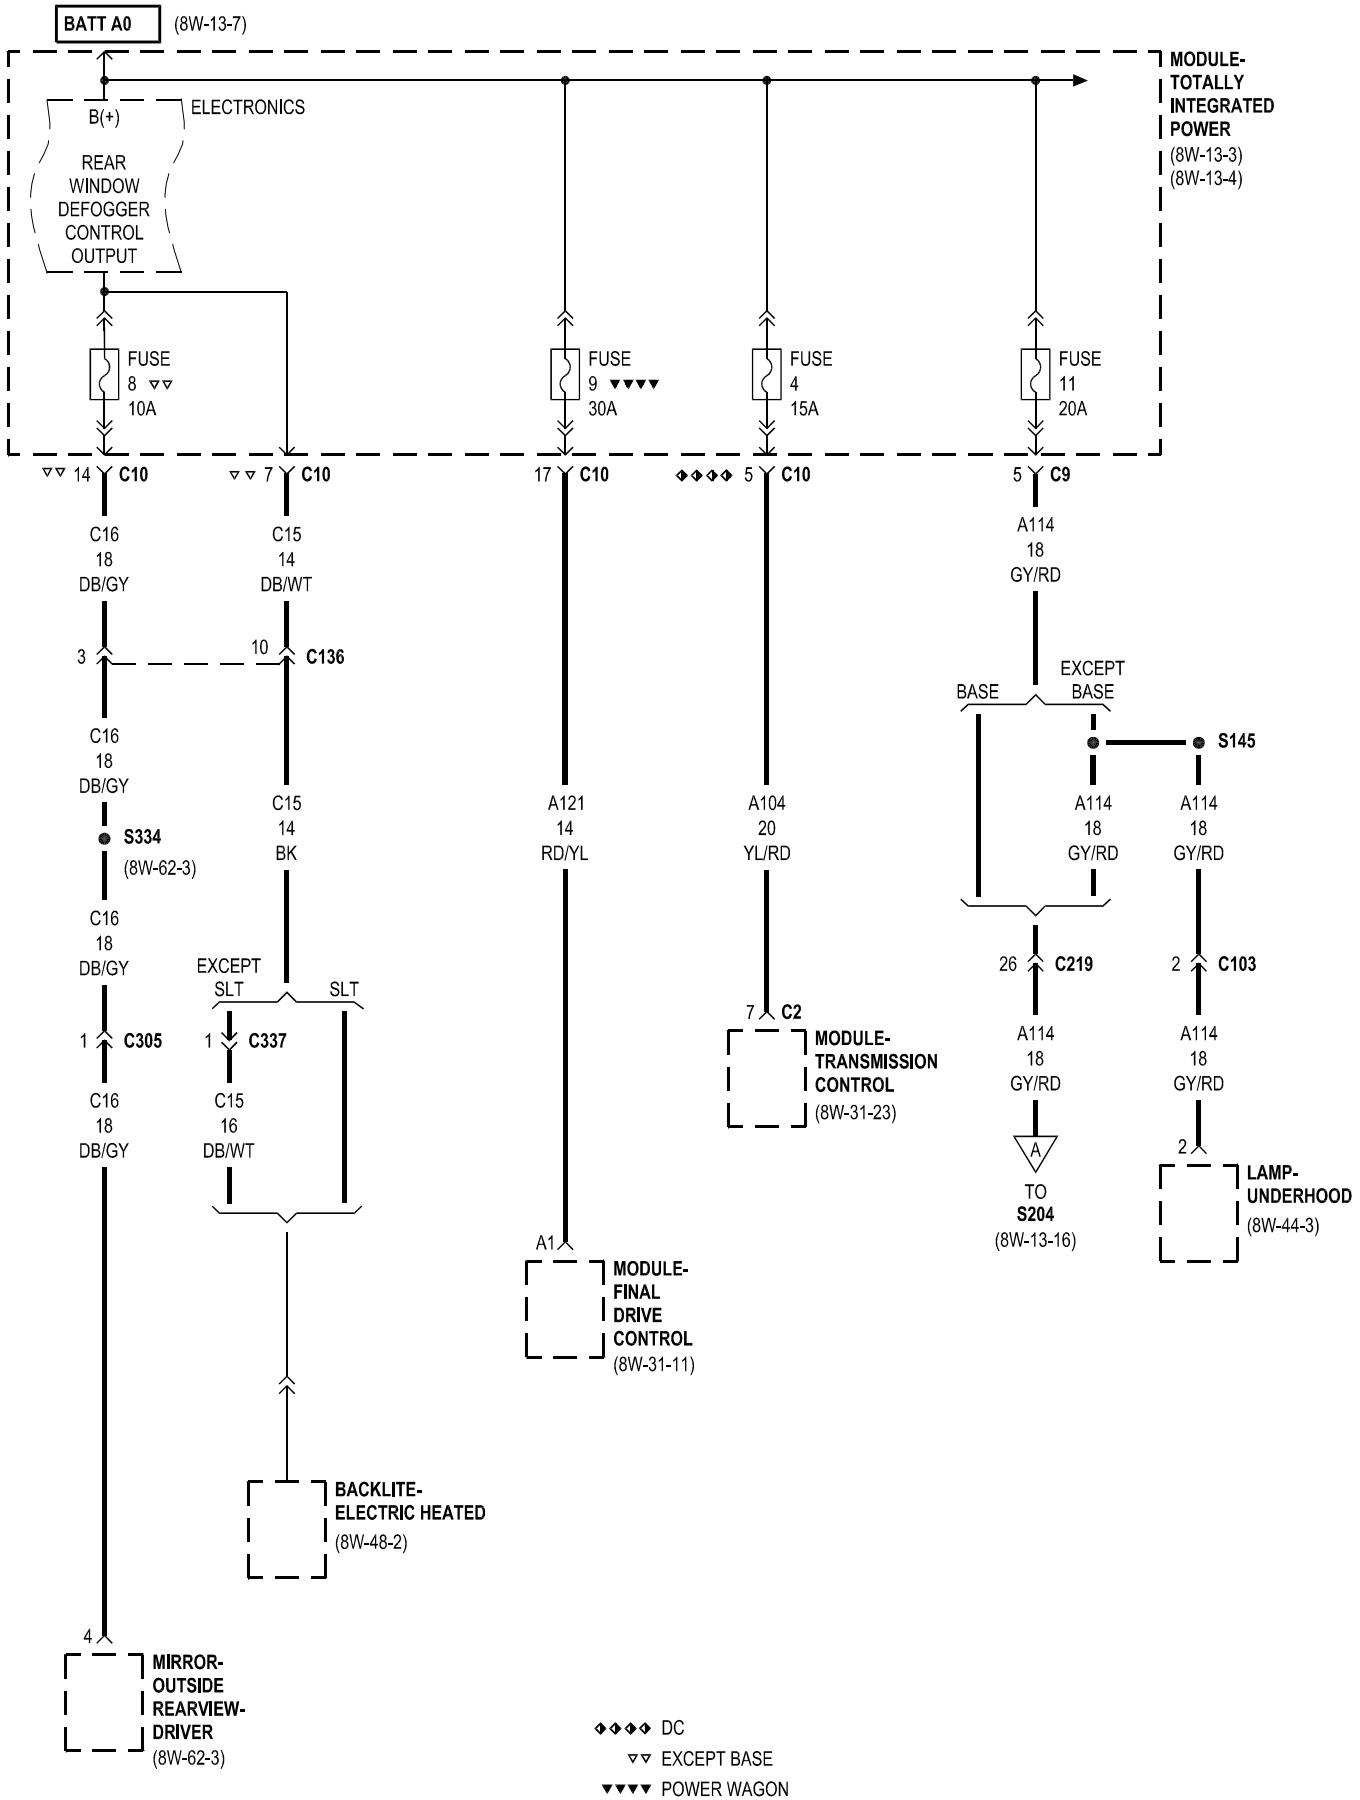


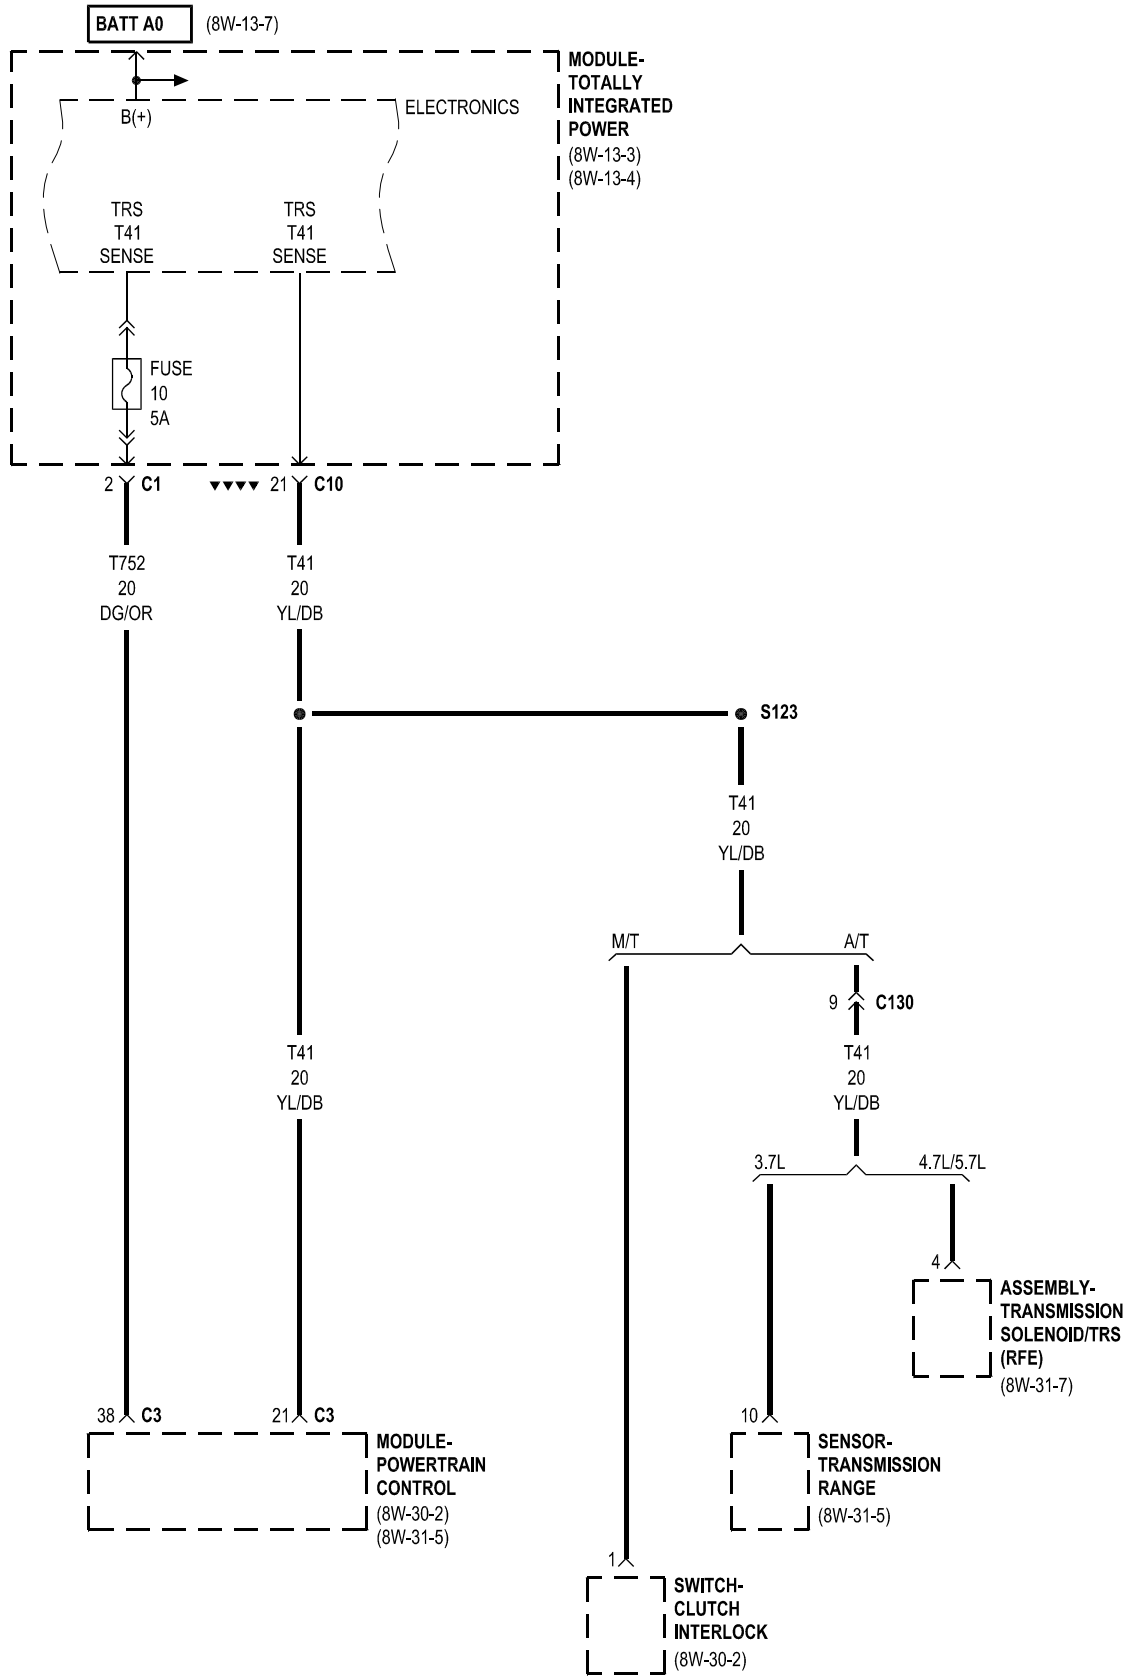


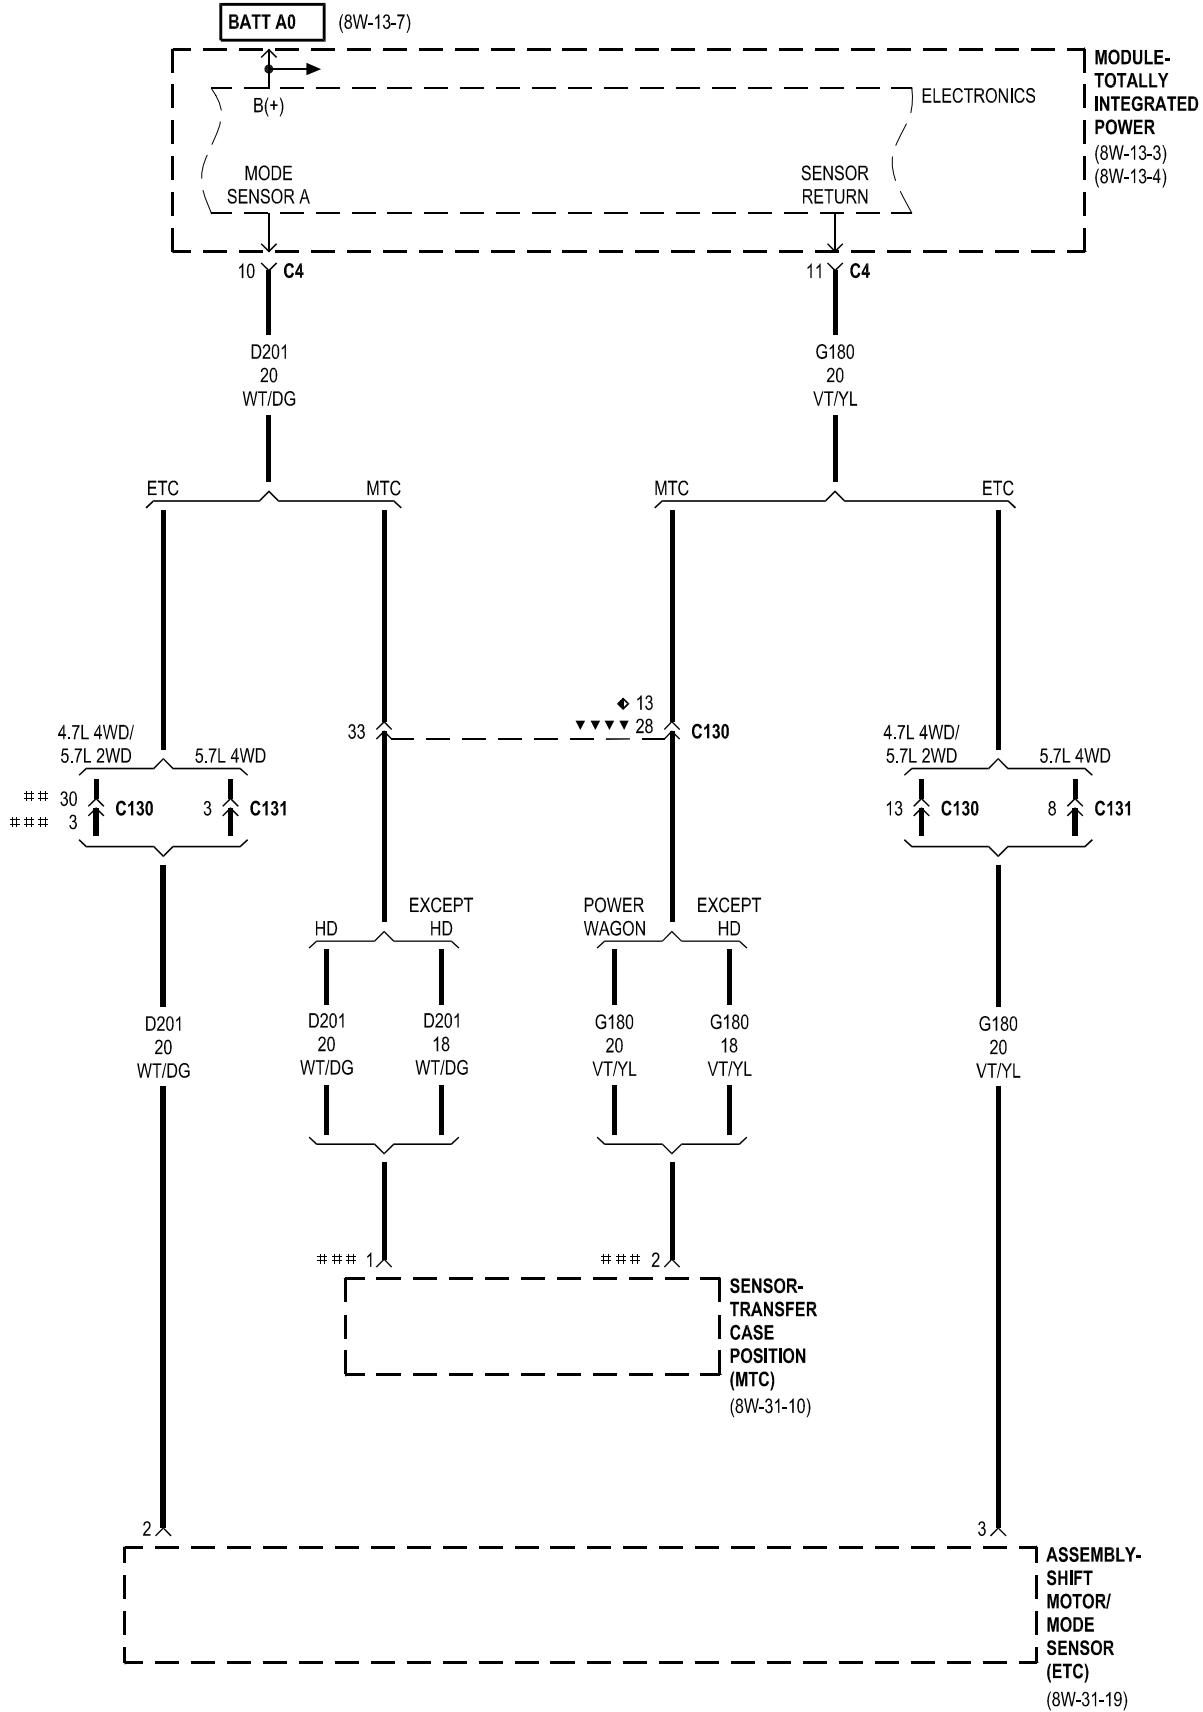



◆ EXCEPT HD ## 4.7L
 ▼▼▼▼ POWER WAGON ### 5.7L

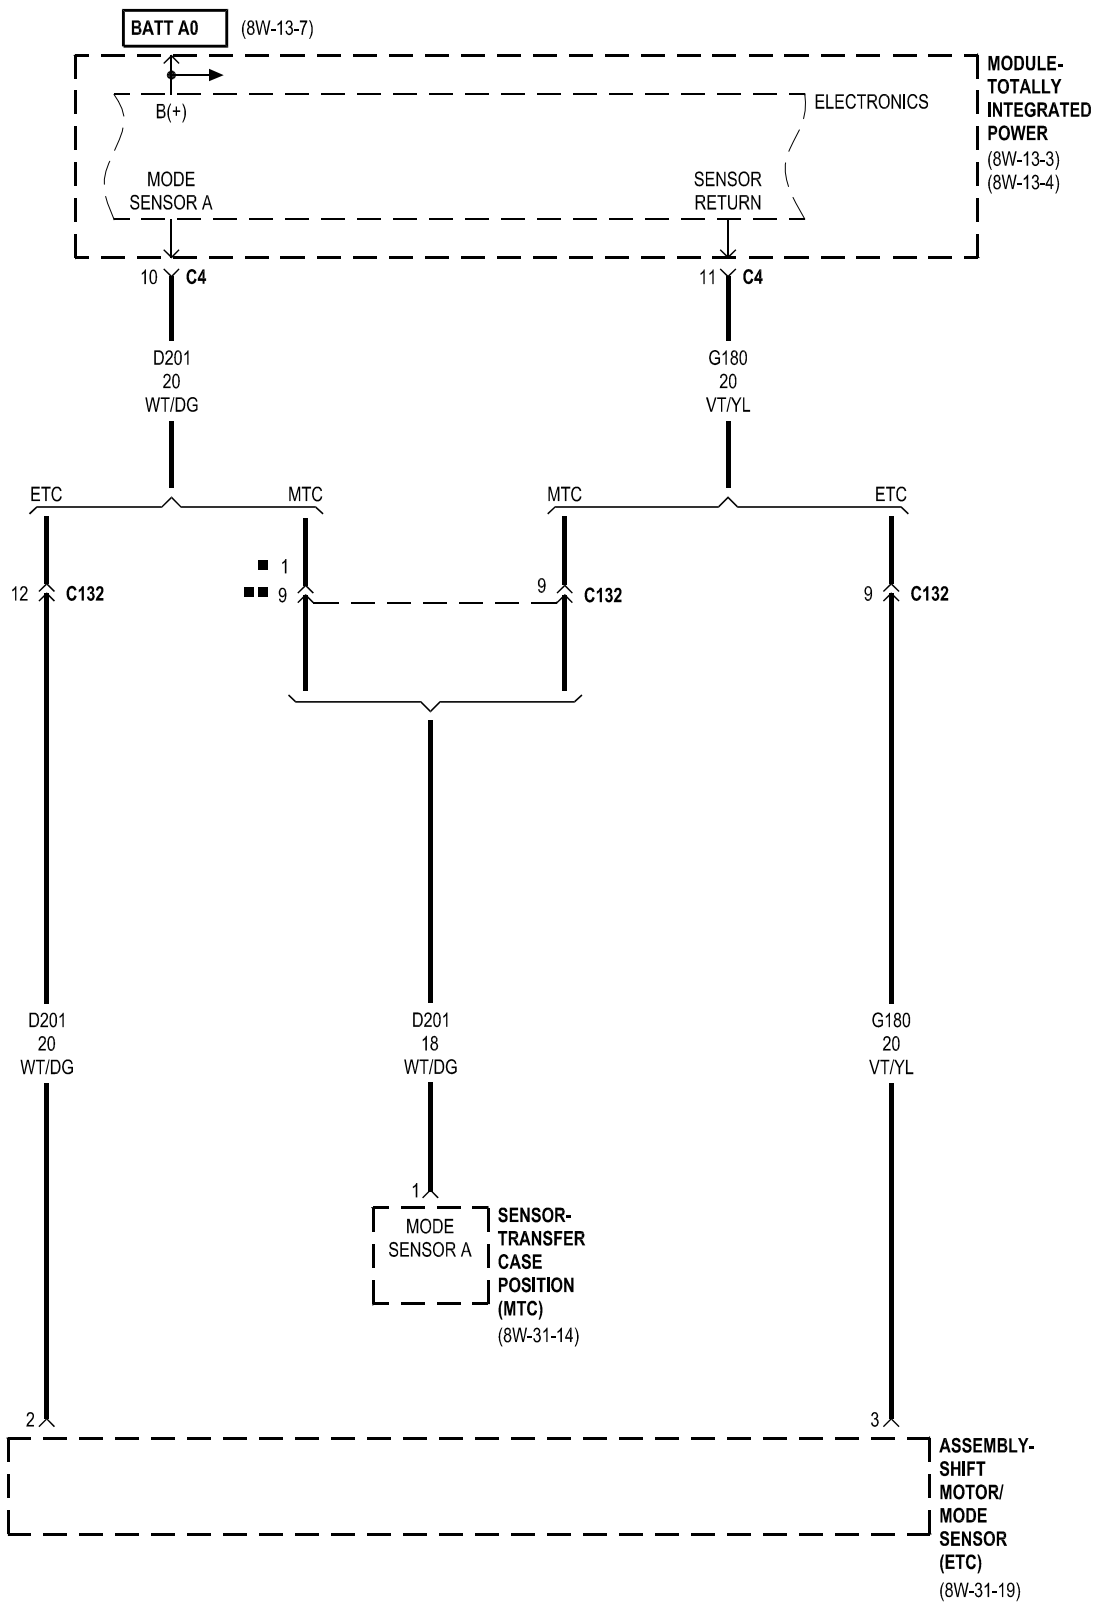


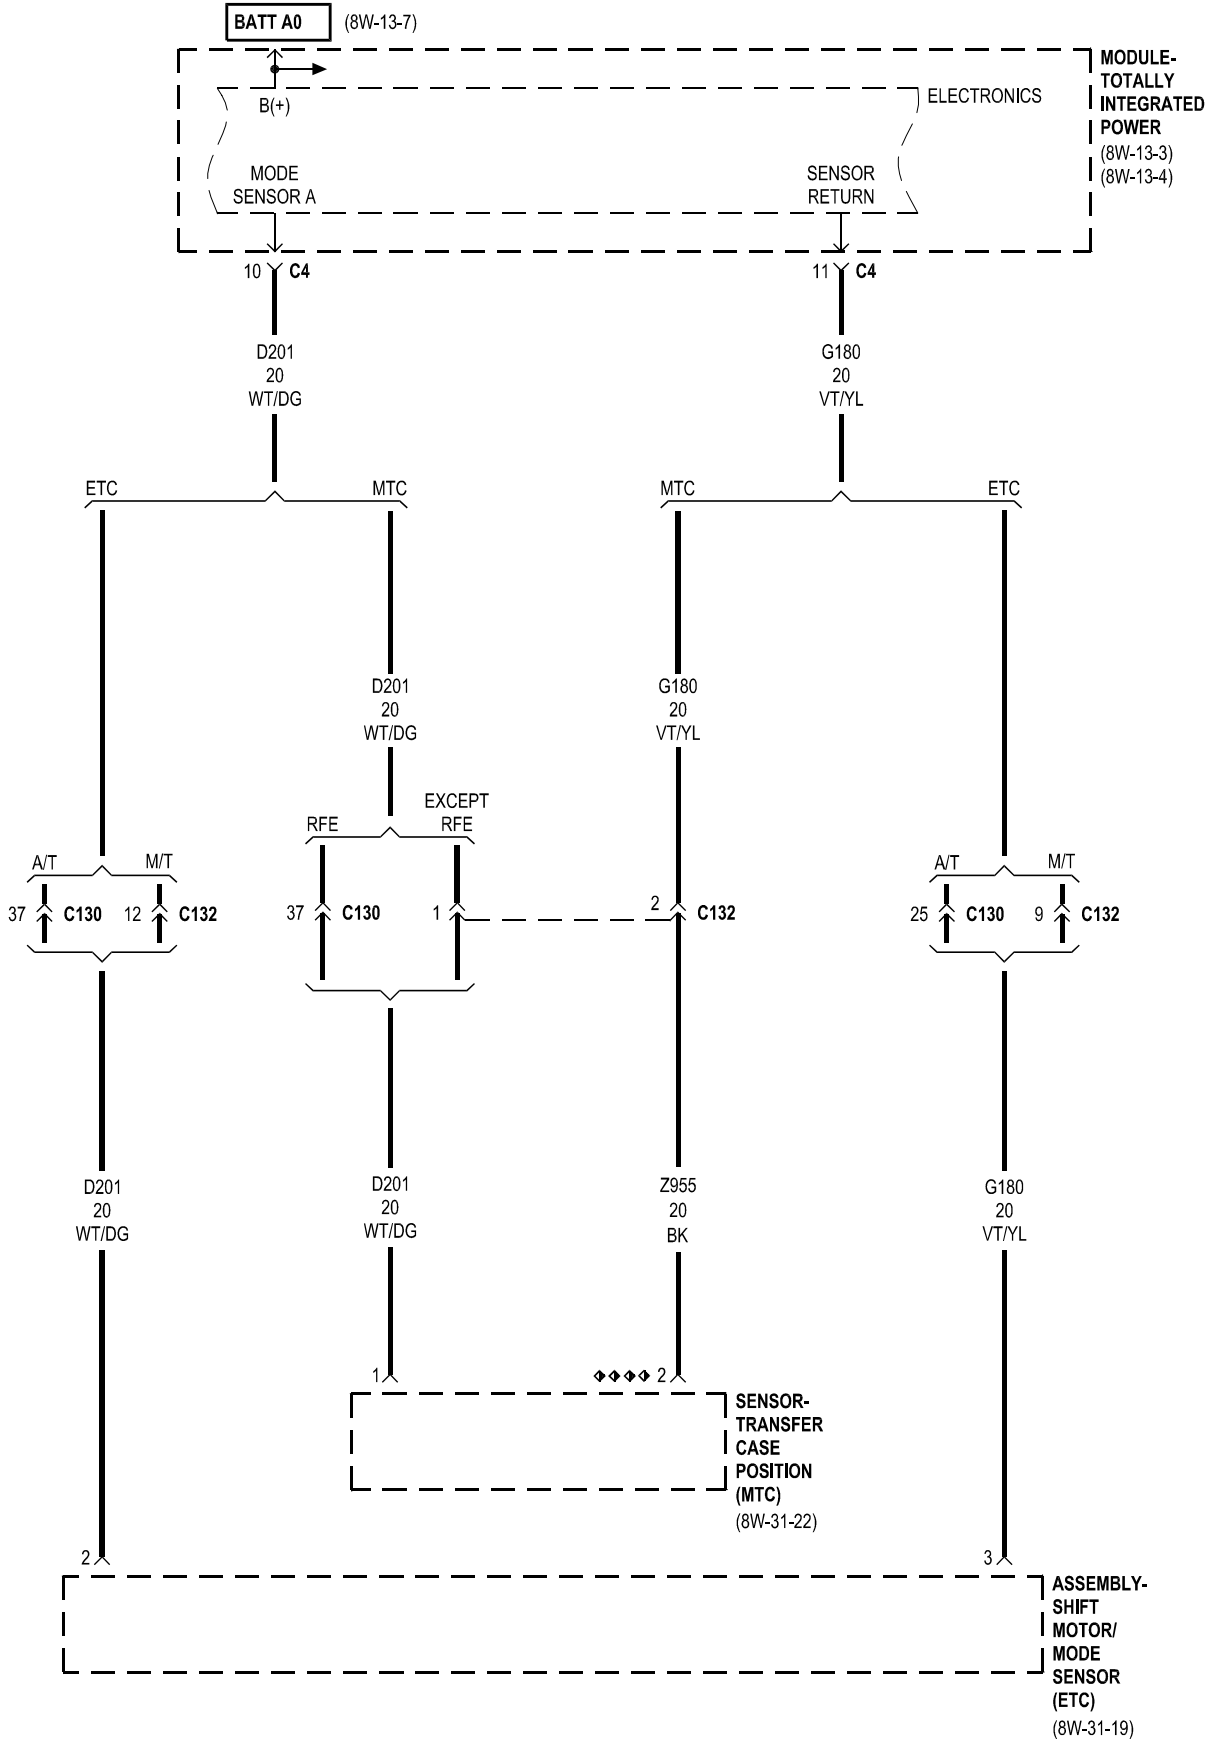


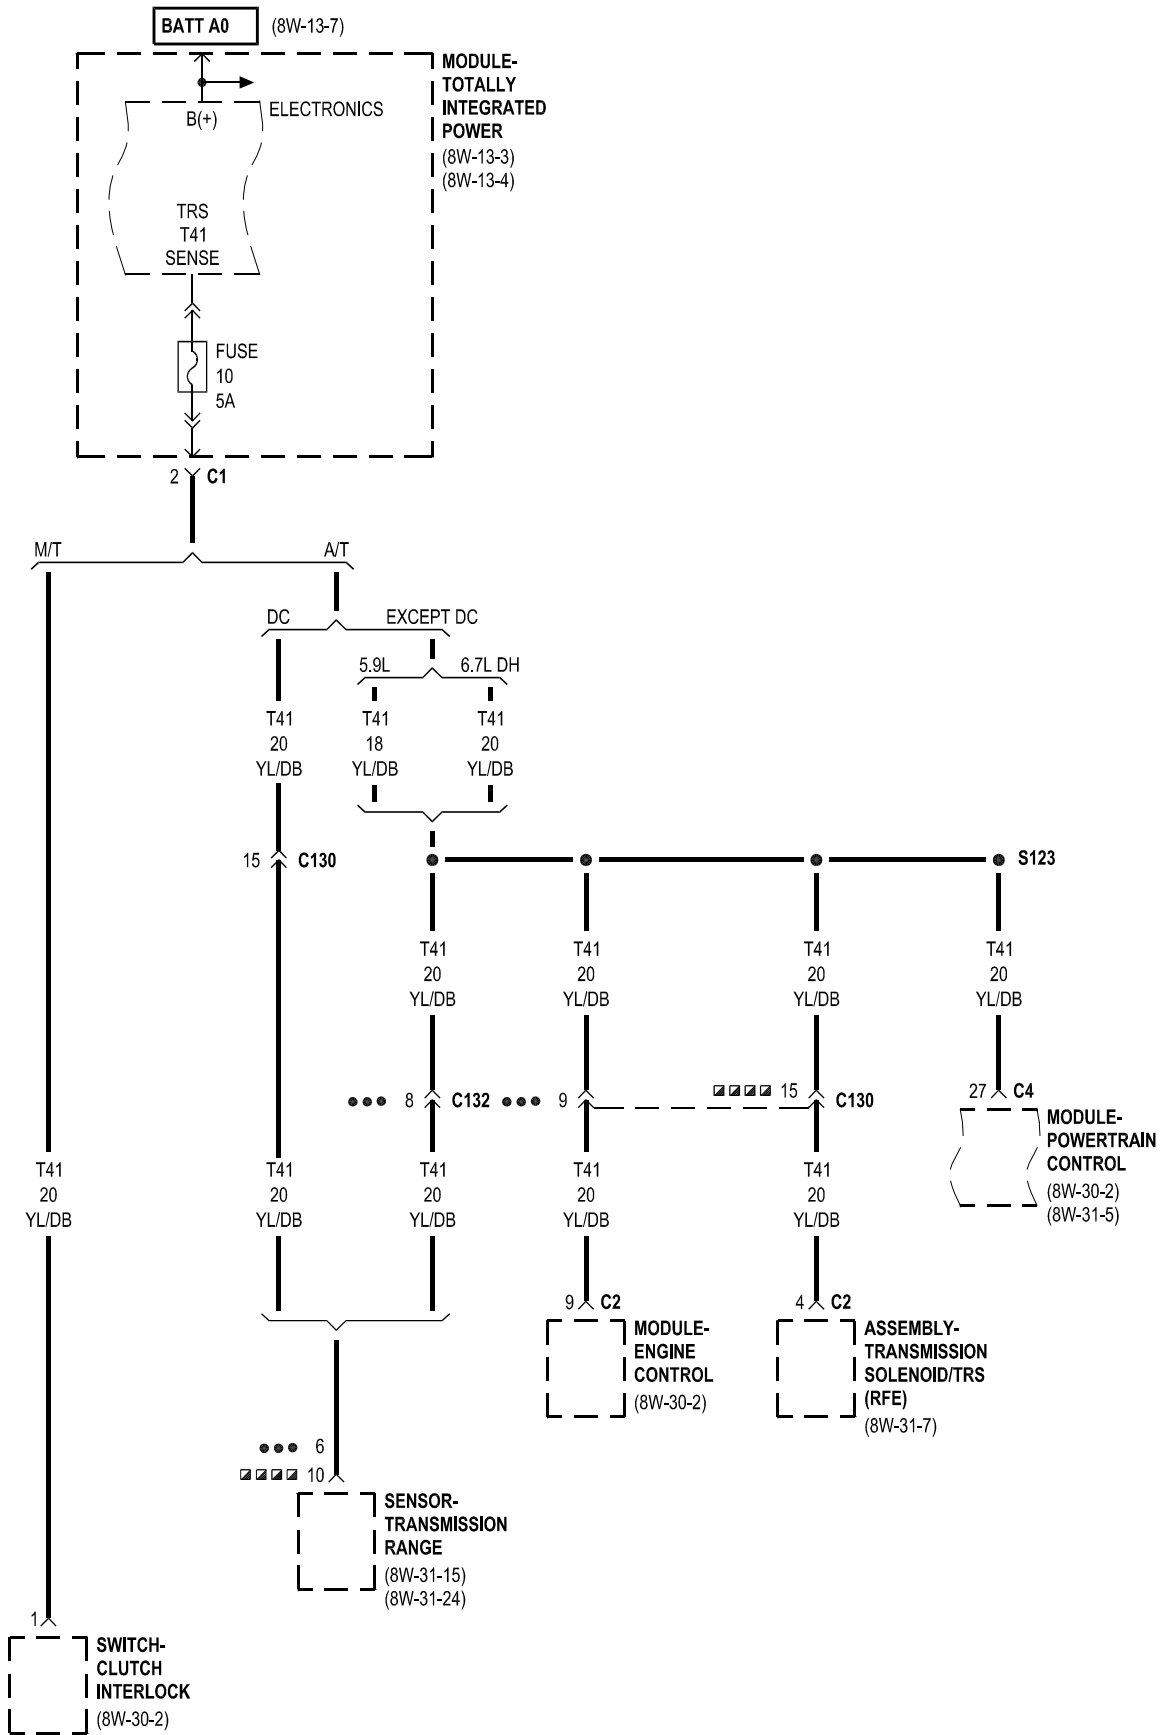


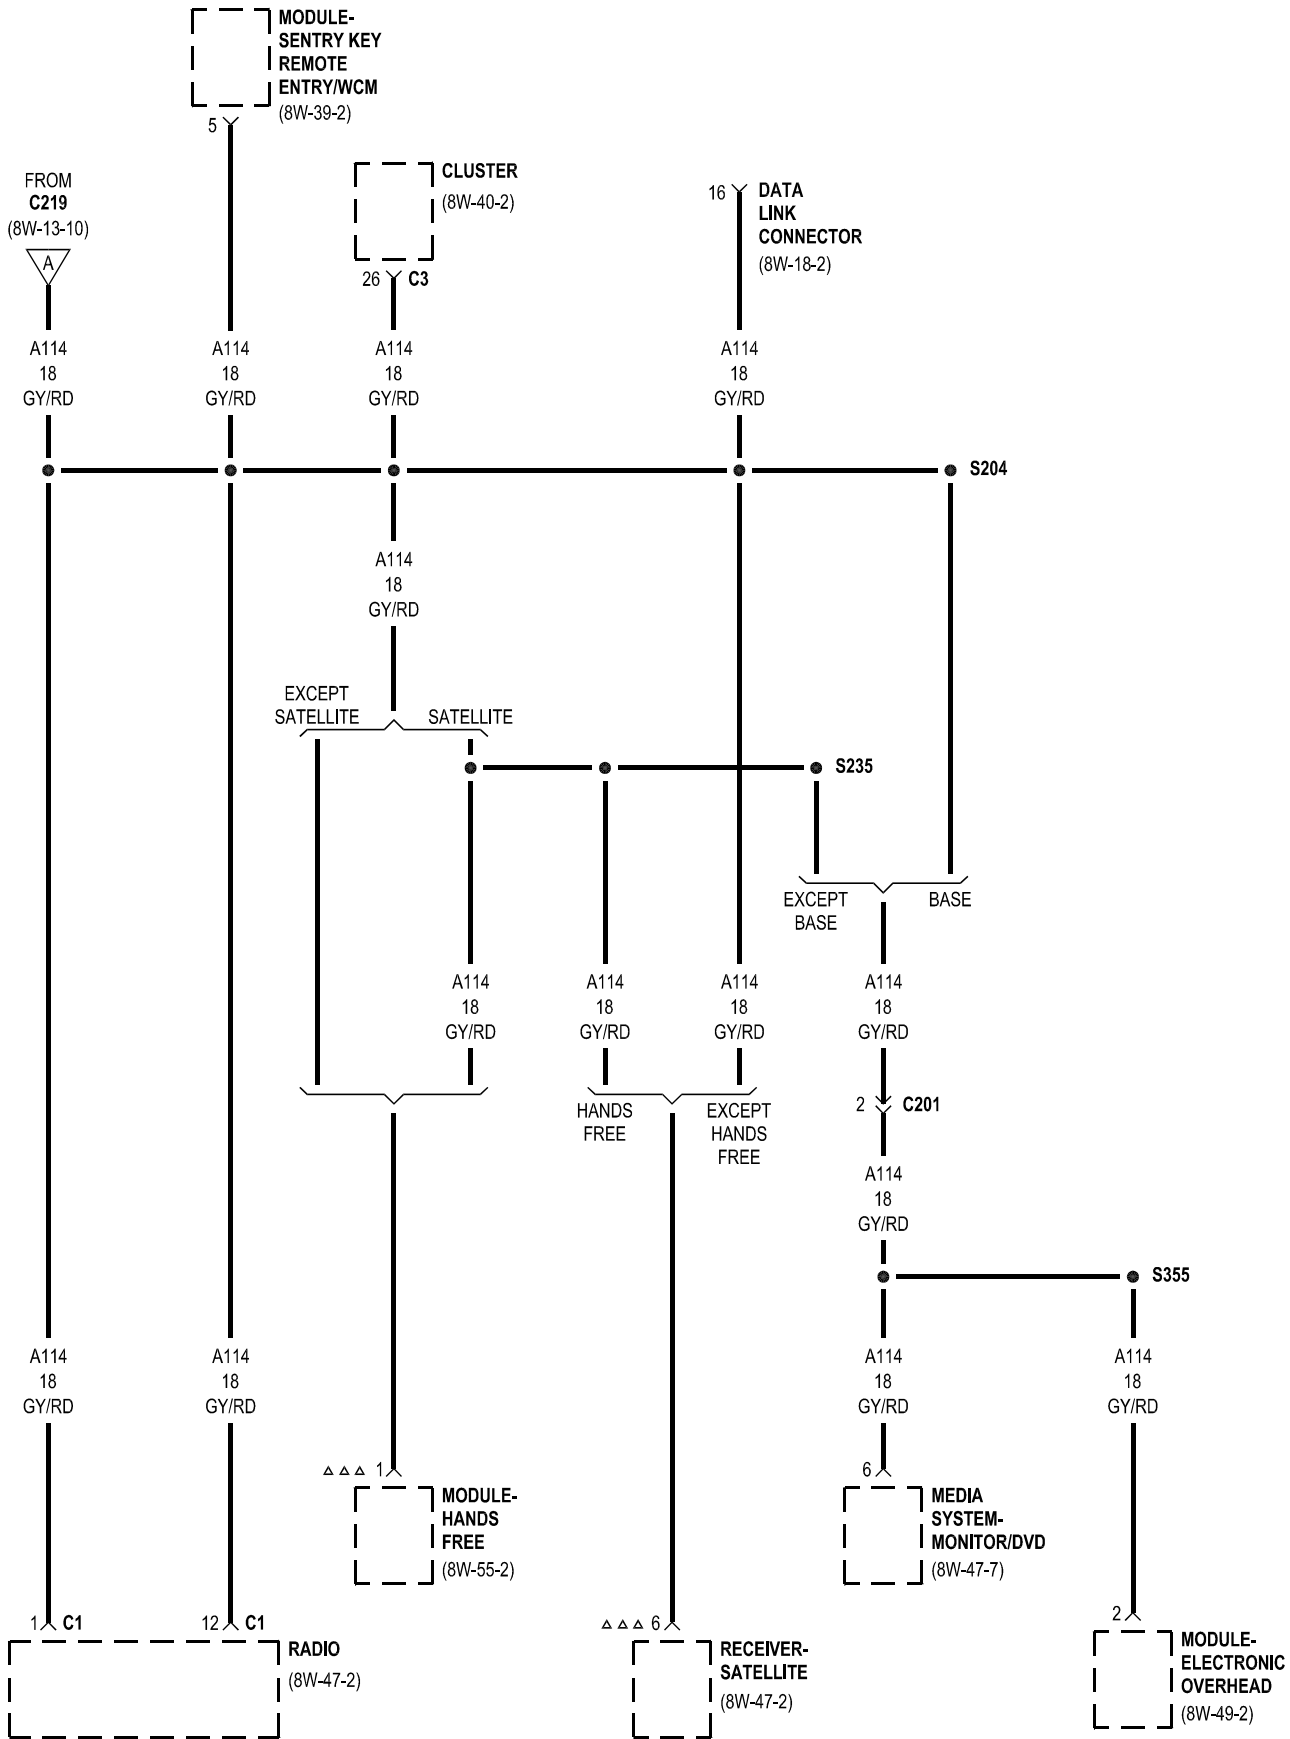


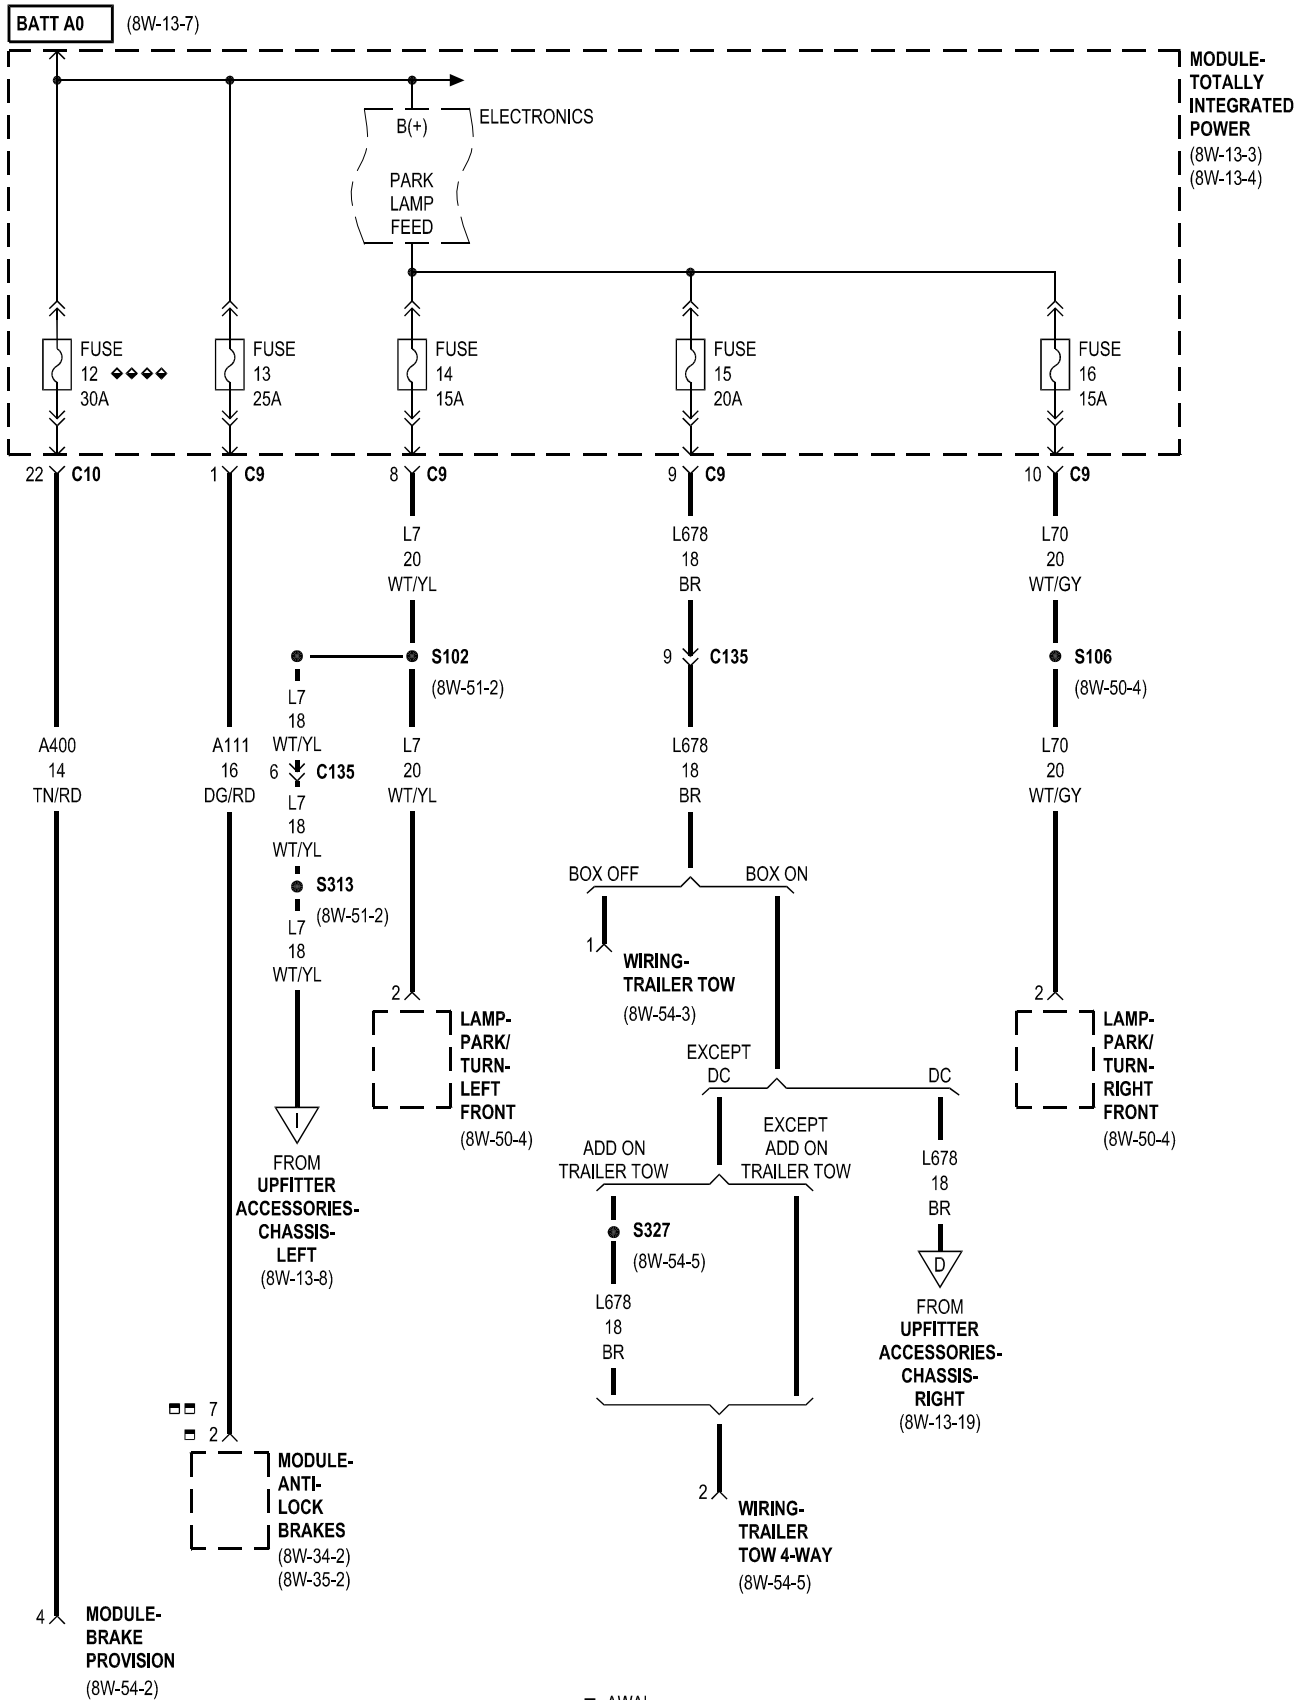


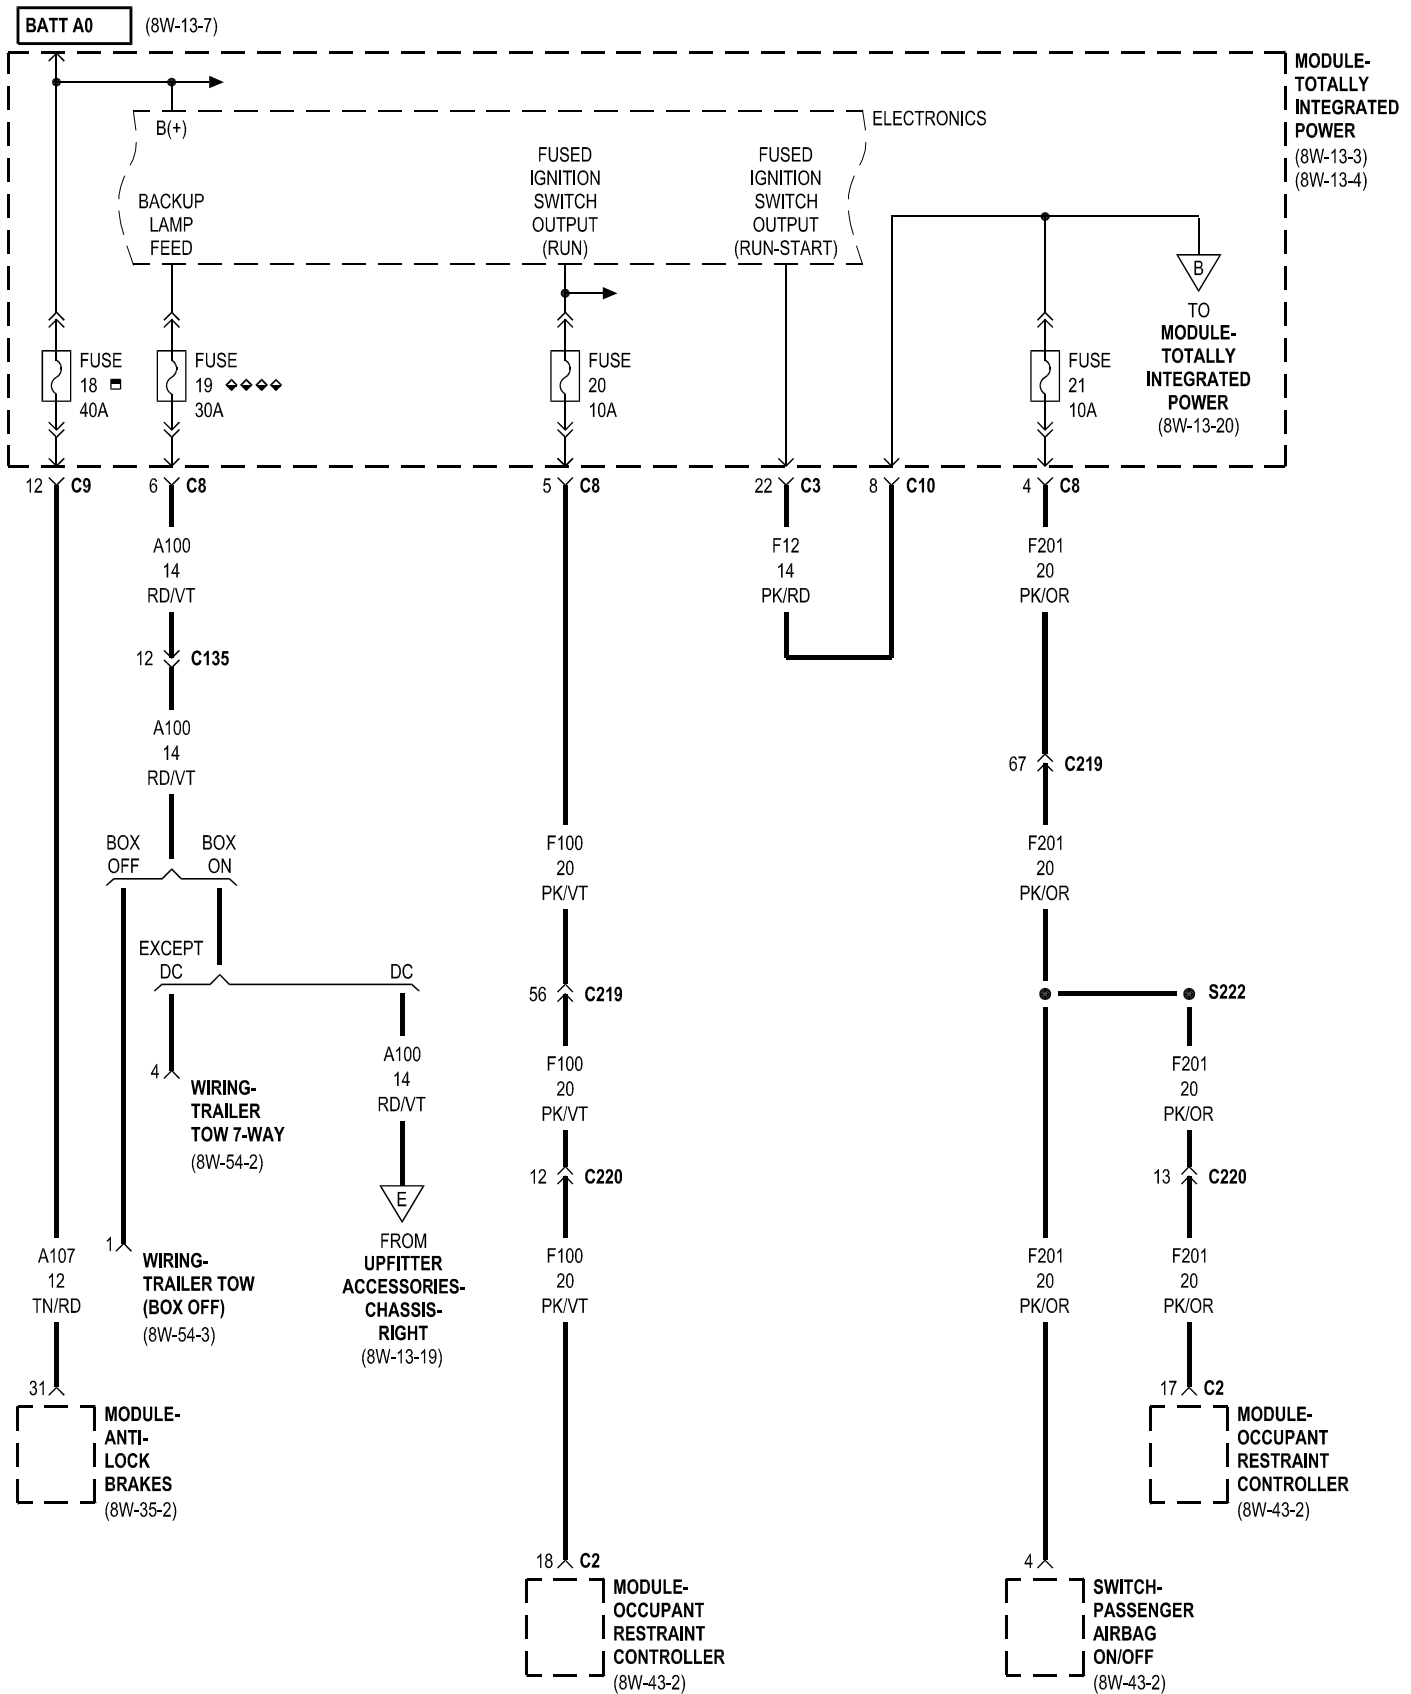

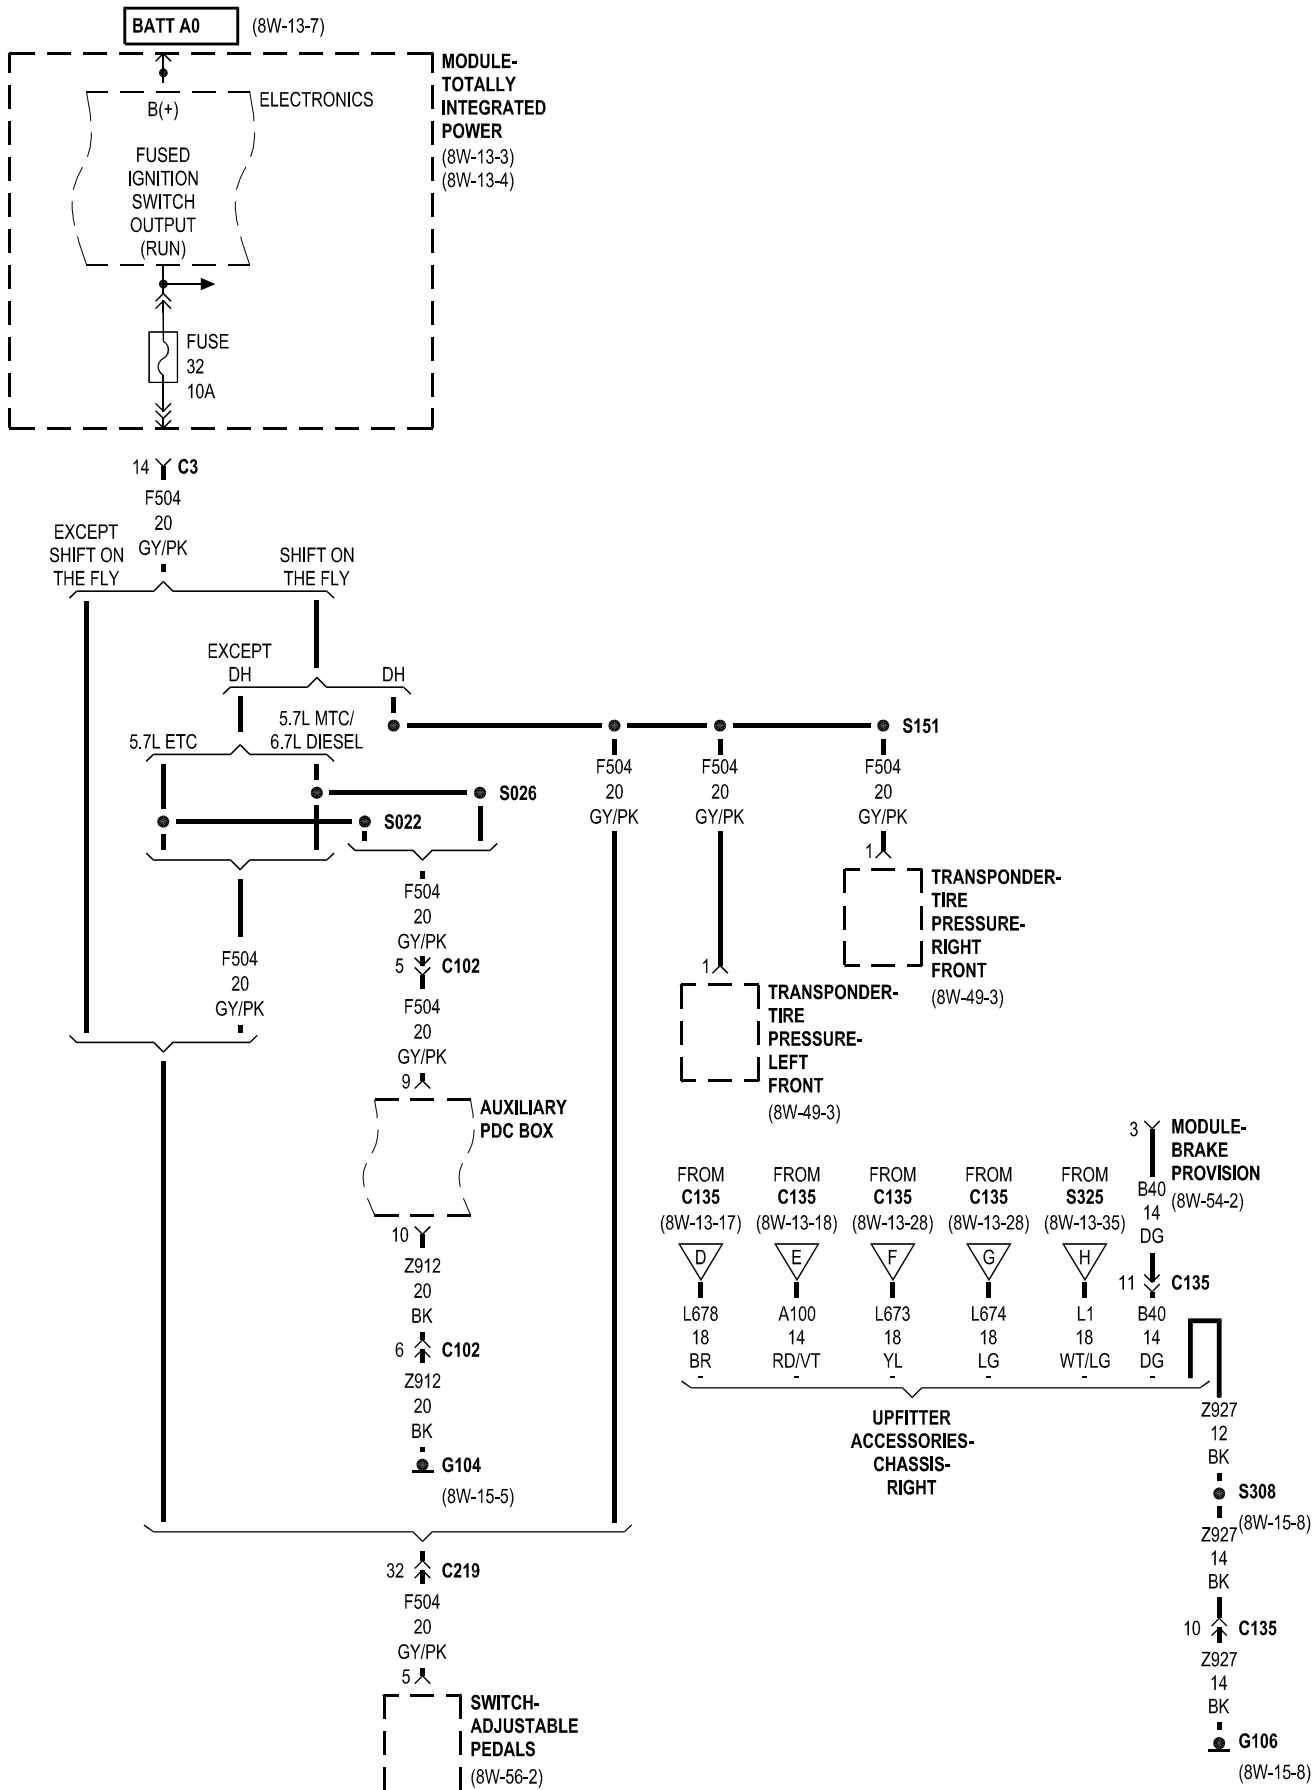


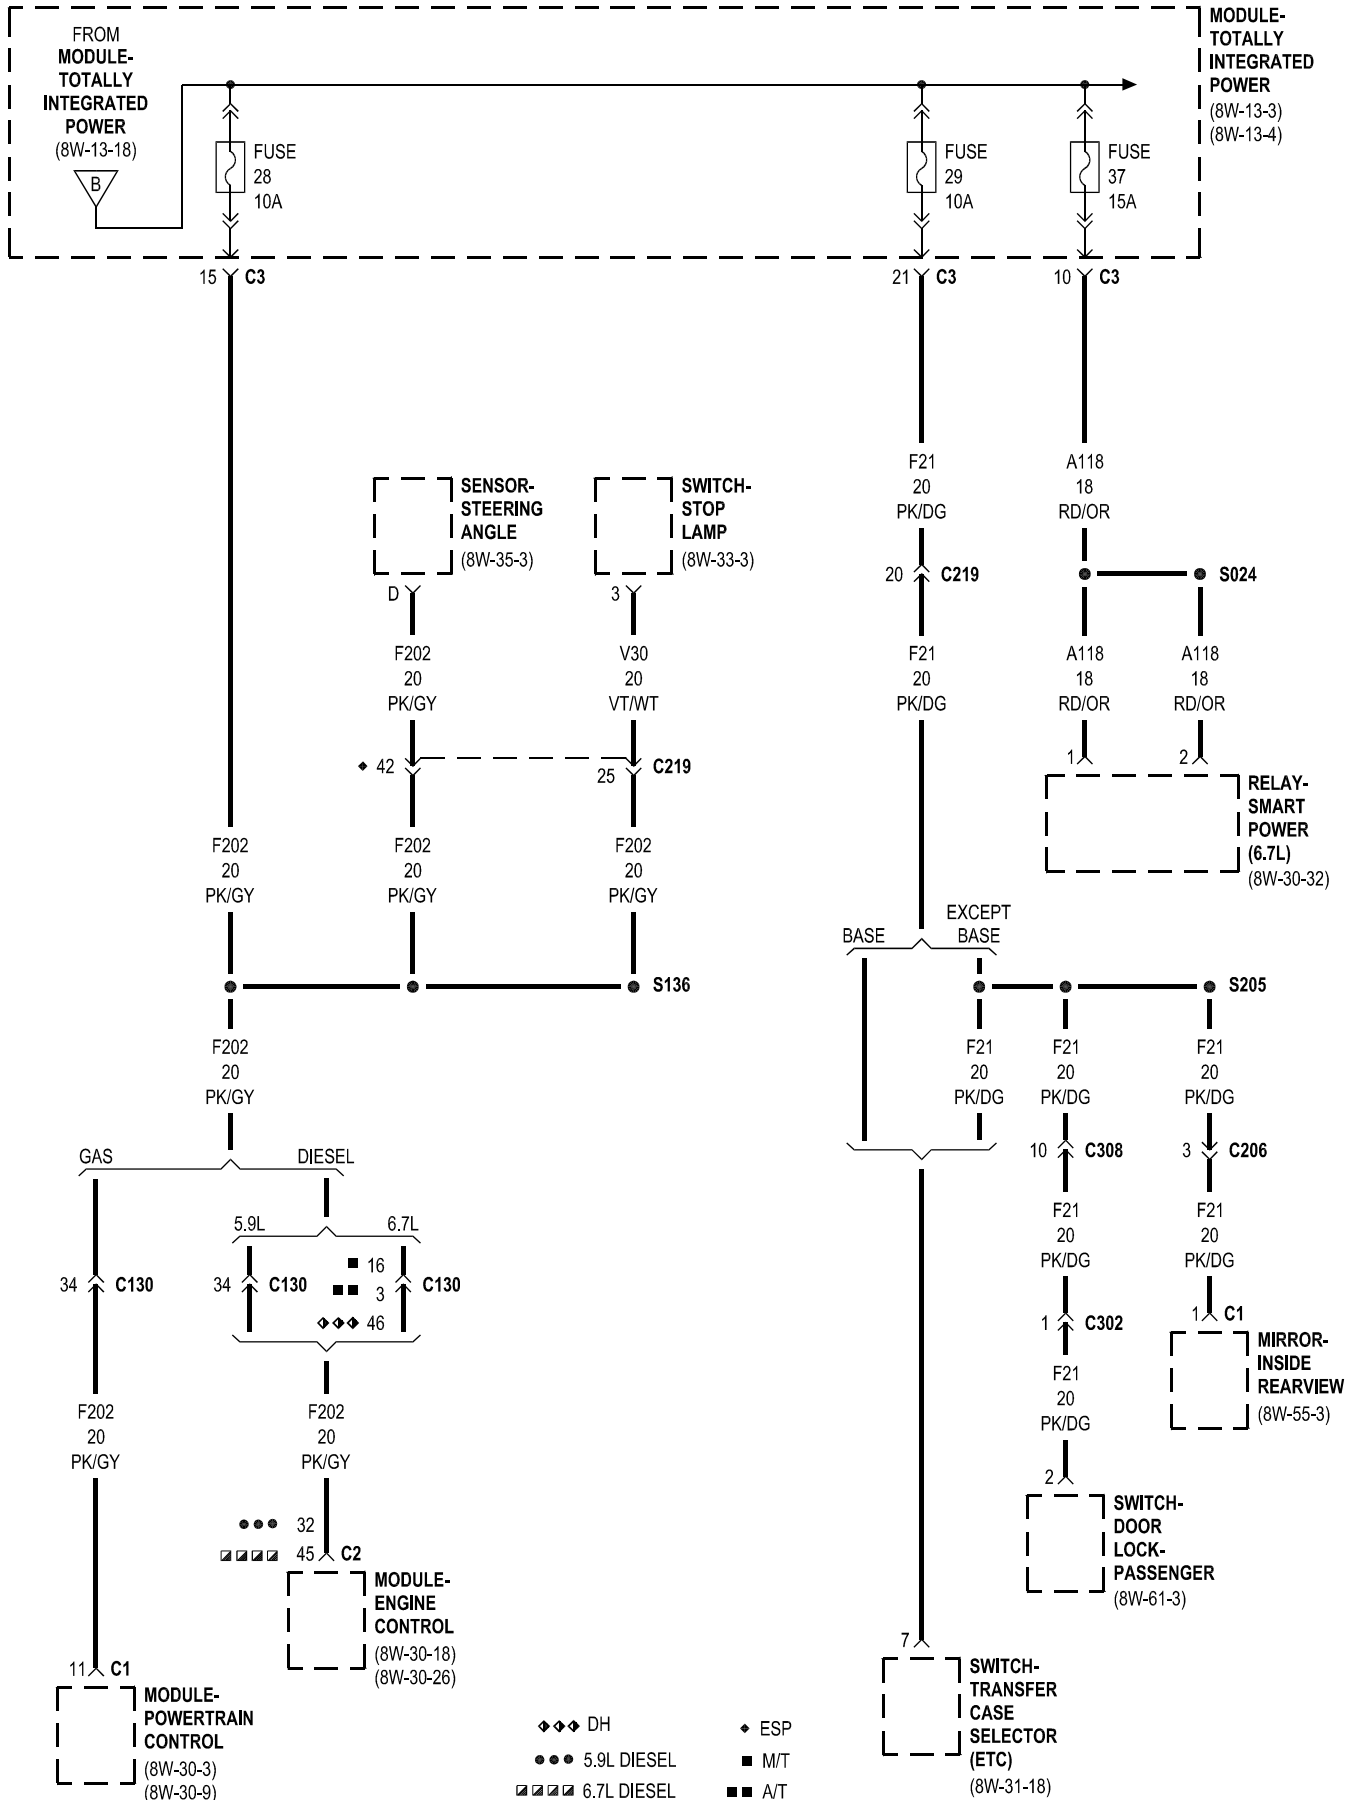


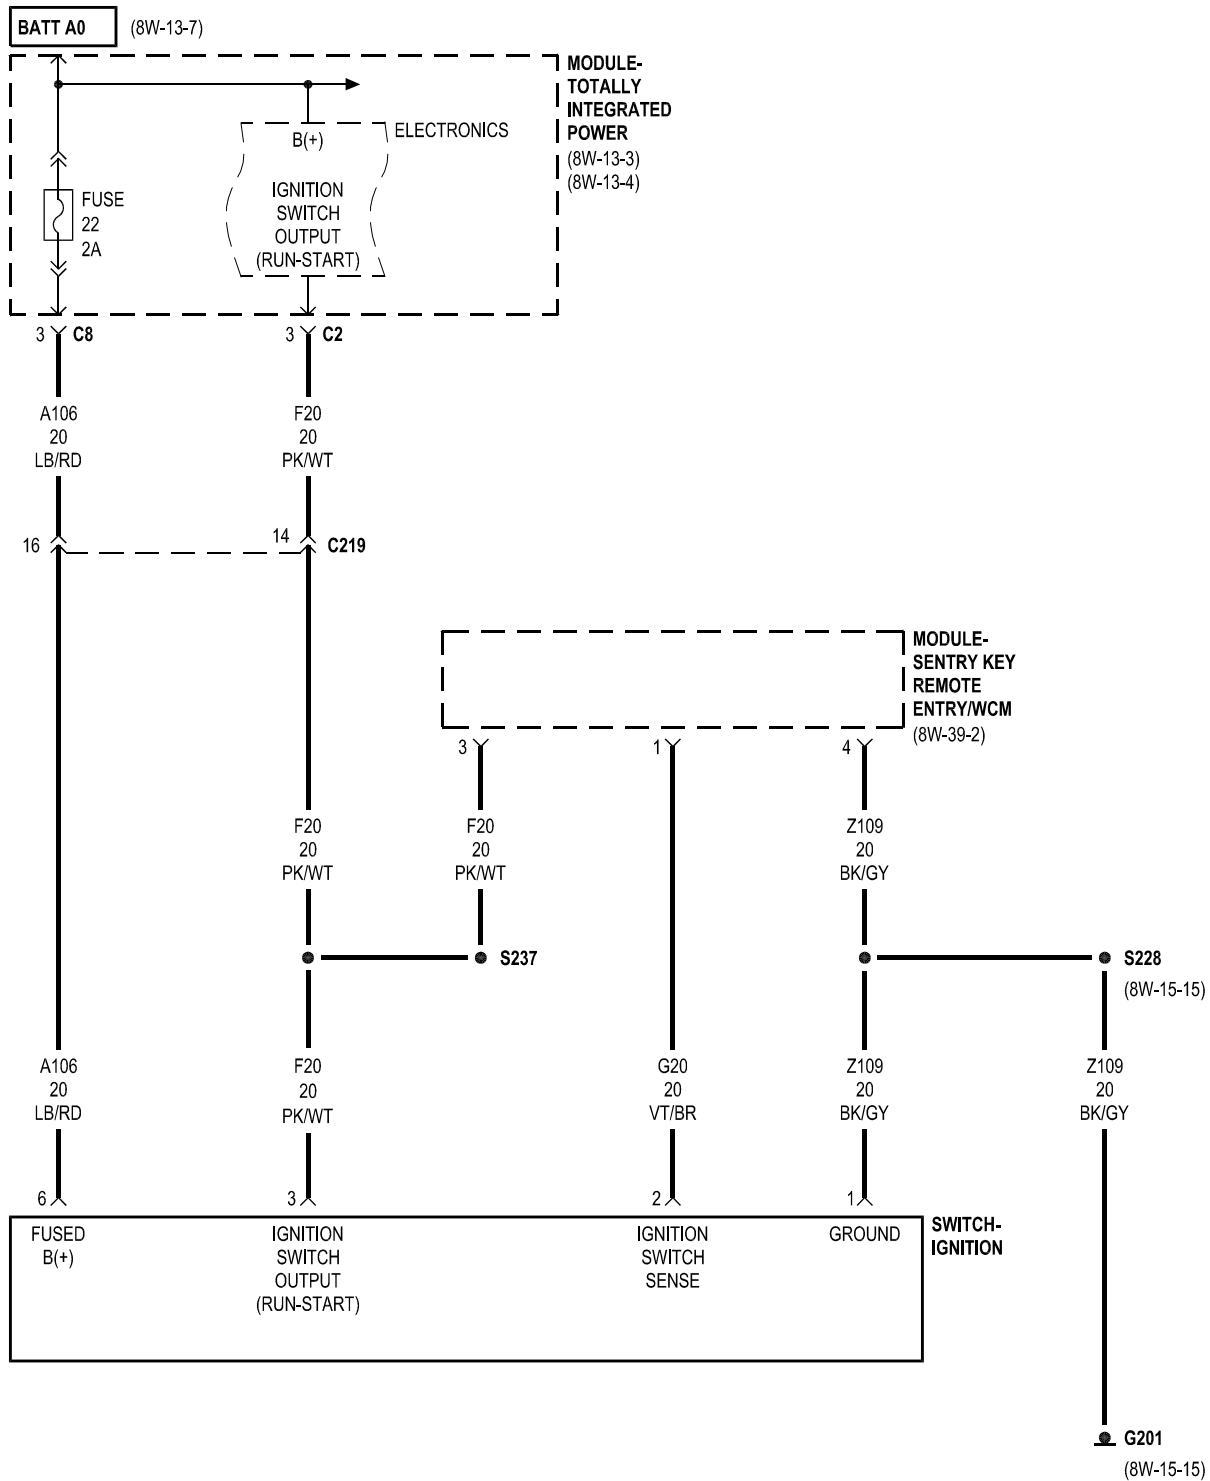

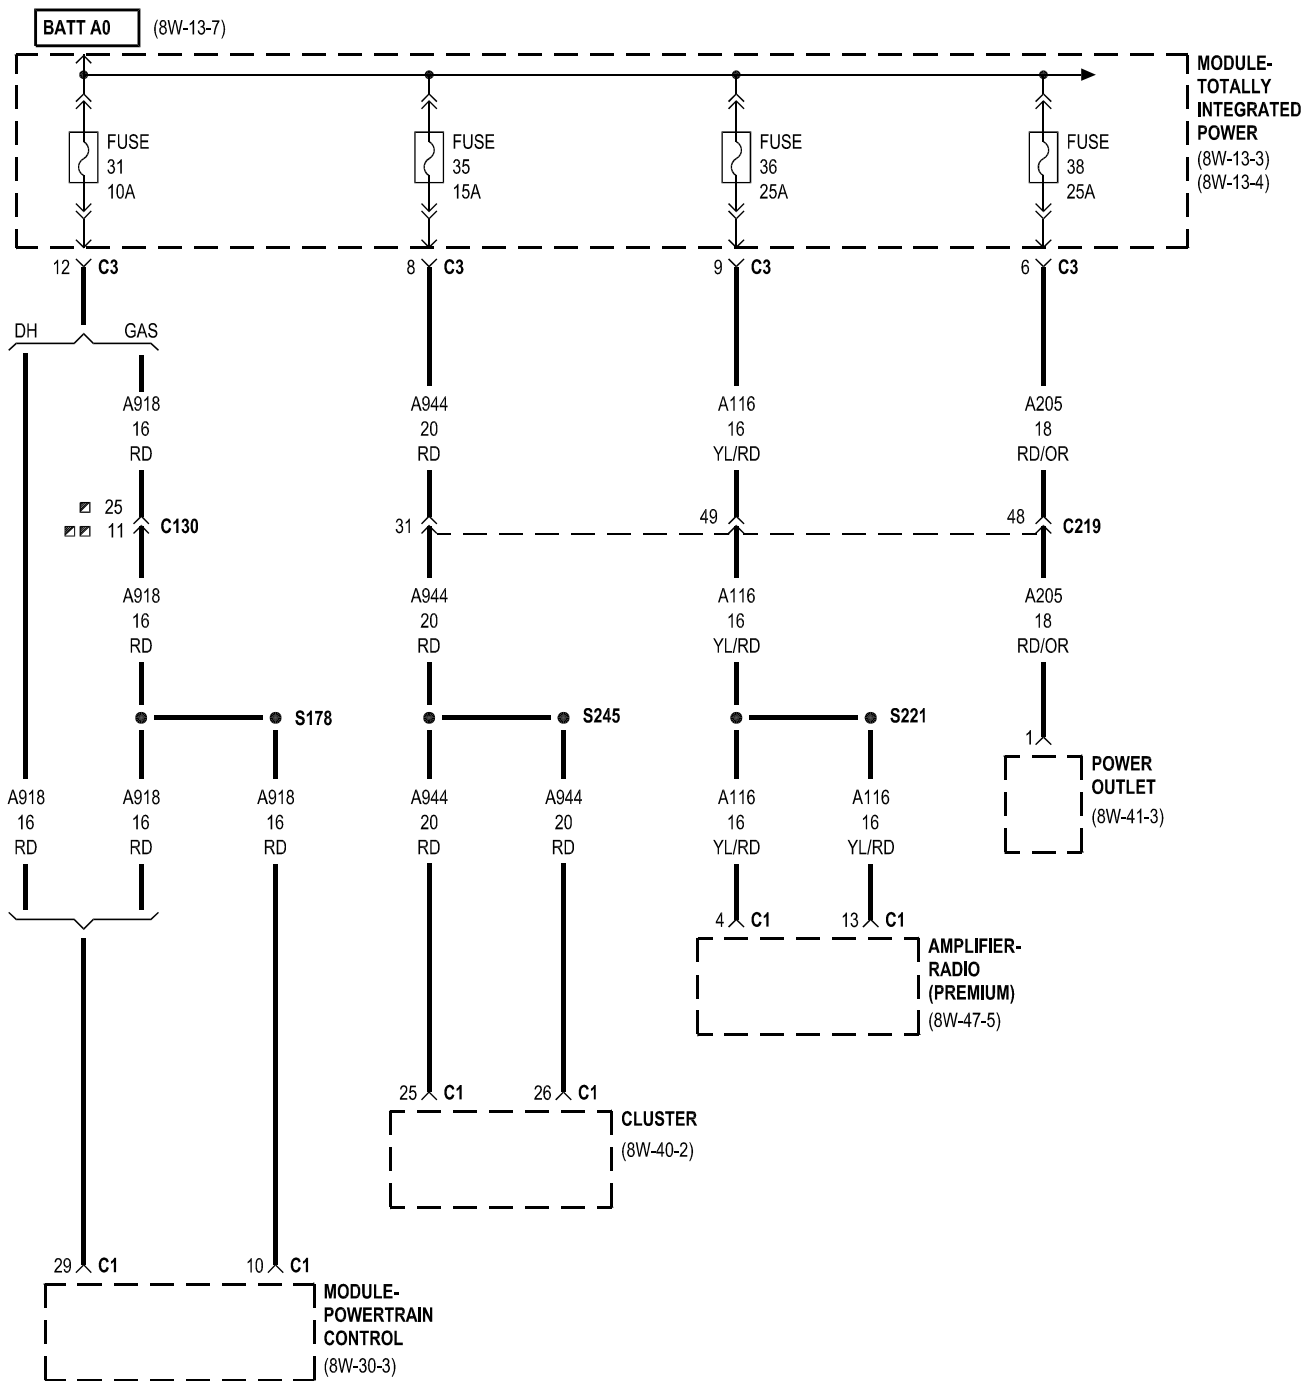



■ SHIFT ON THE FLY
 ■ EXCEPT SHIFT ON THE FLY

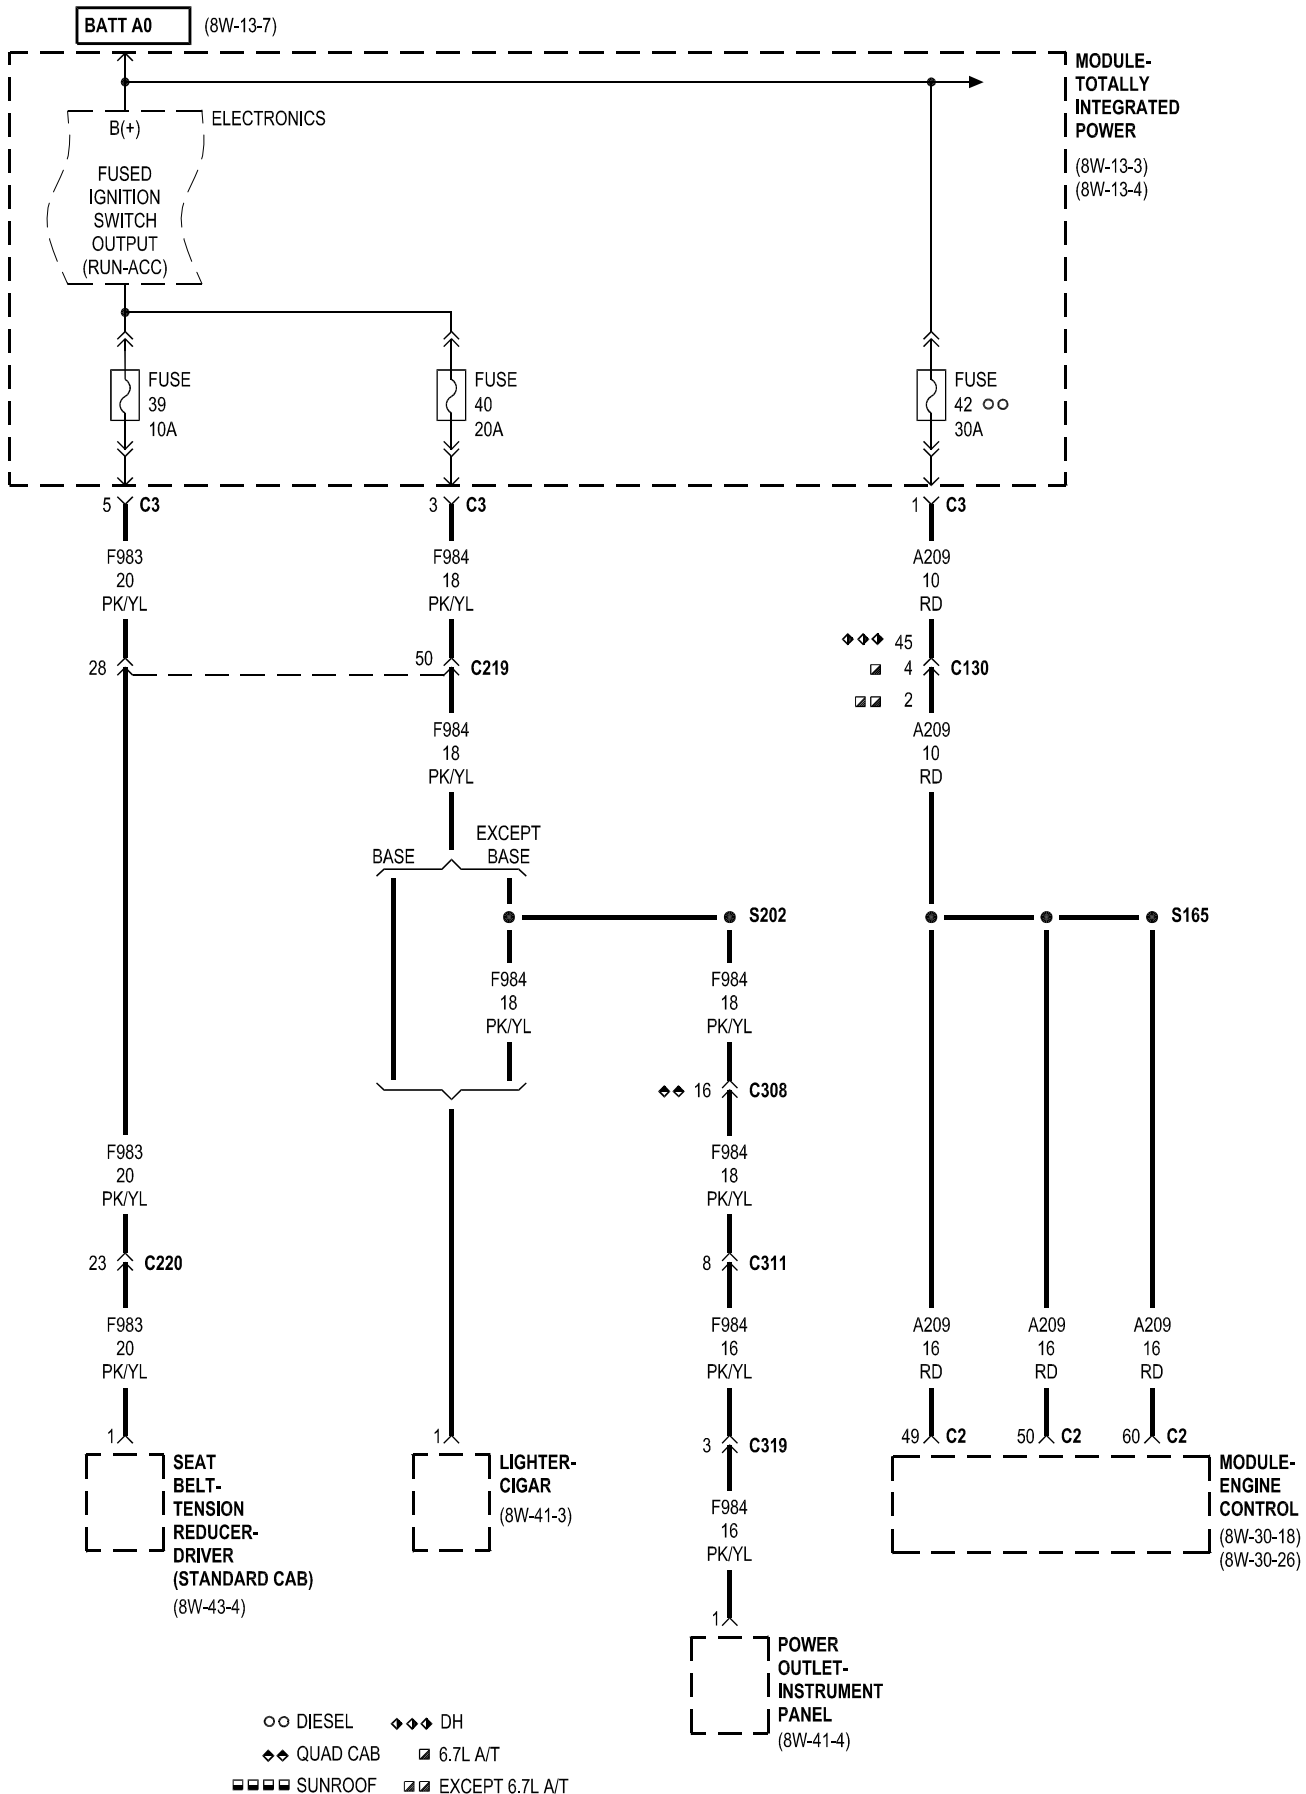


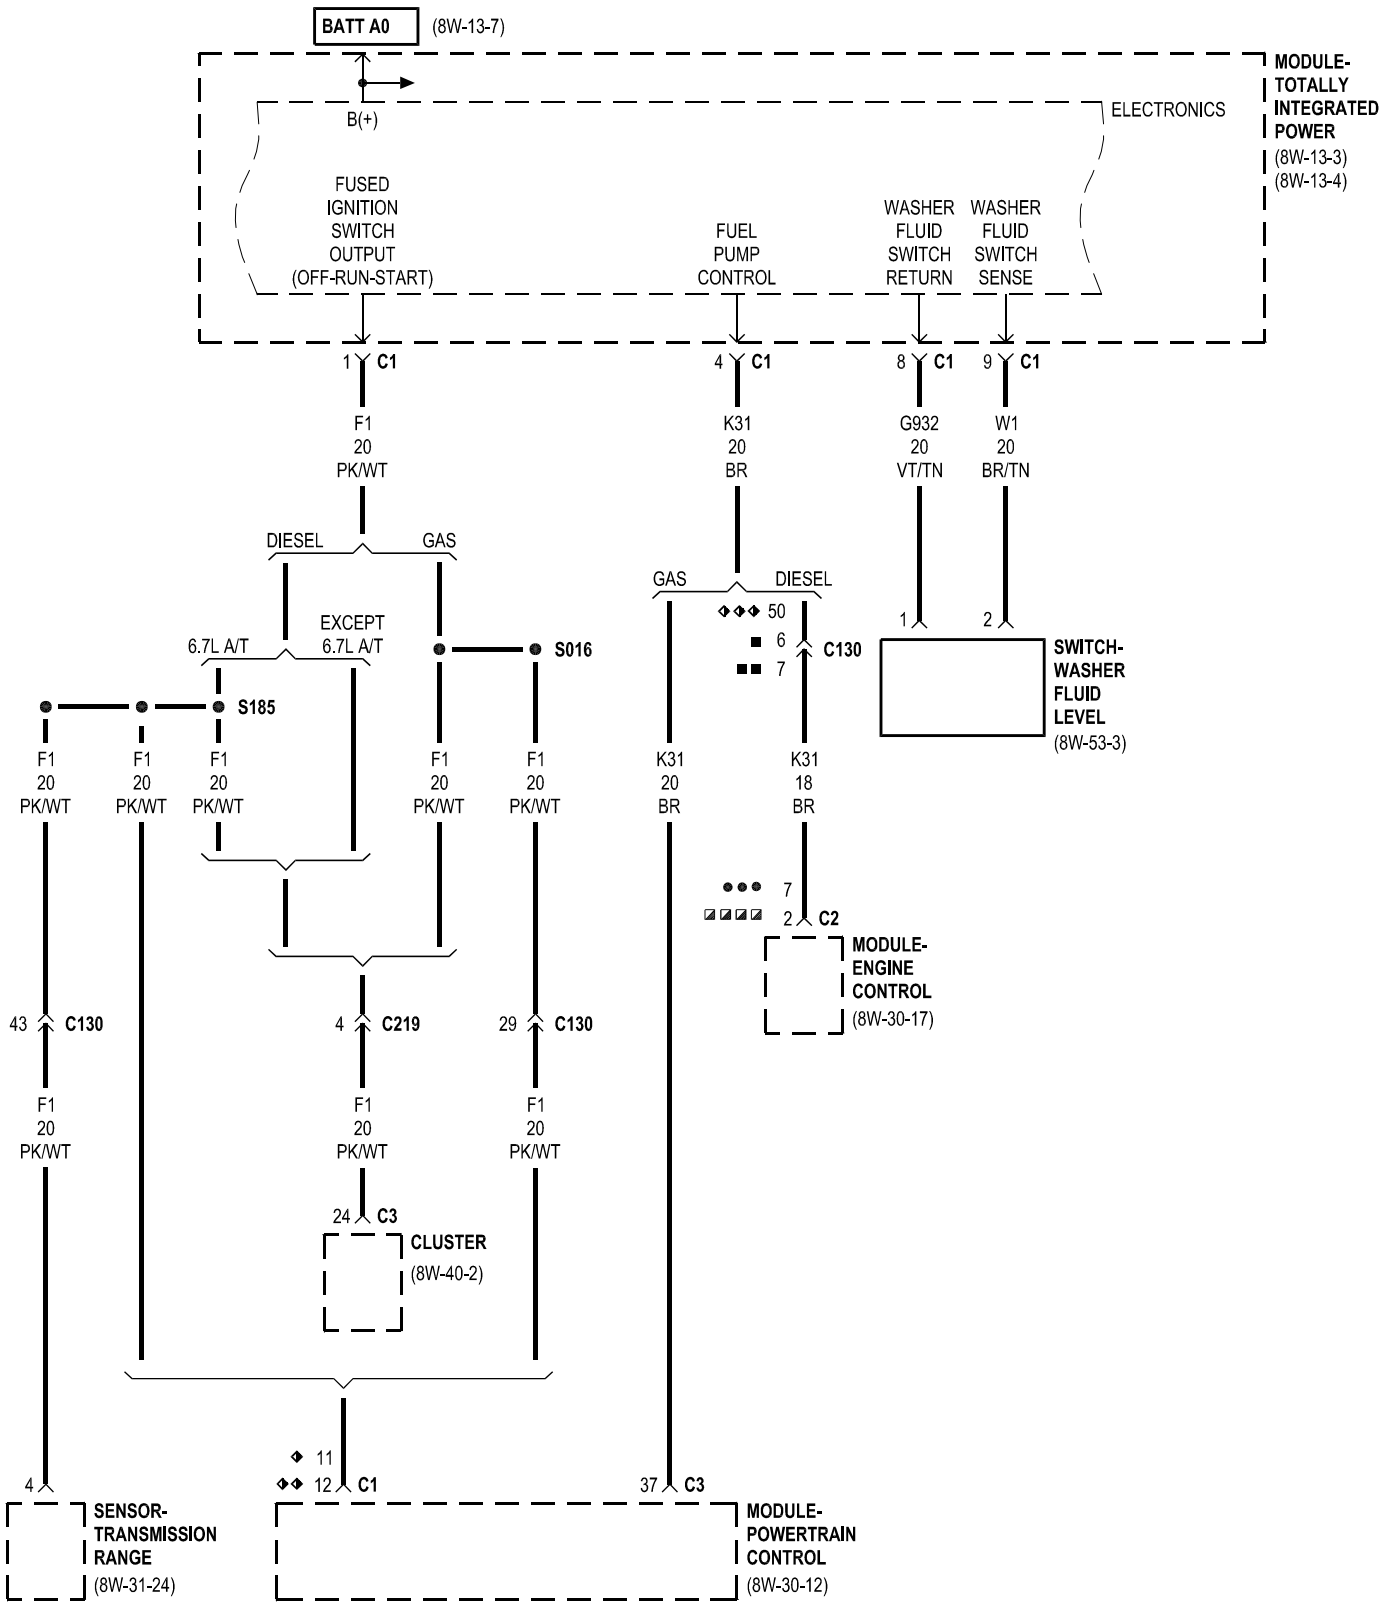



- ◆◆◆ DH
- 5.9L DIESEL
- ◆ GAS/6.7L ELECTRONIC TRANSFER CASE
- M/T
- ◆◆ 6.7L DIESEL
- ◆◆ 6.7L MANUAL TRANSFER CASE
- ◆ A/T

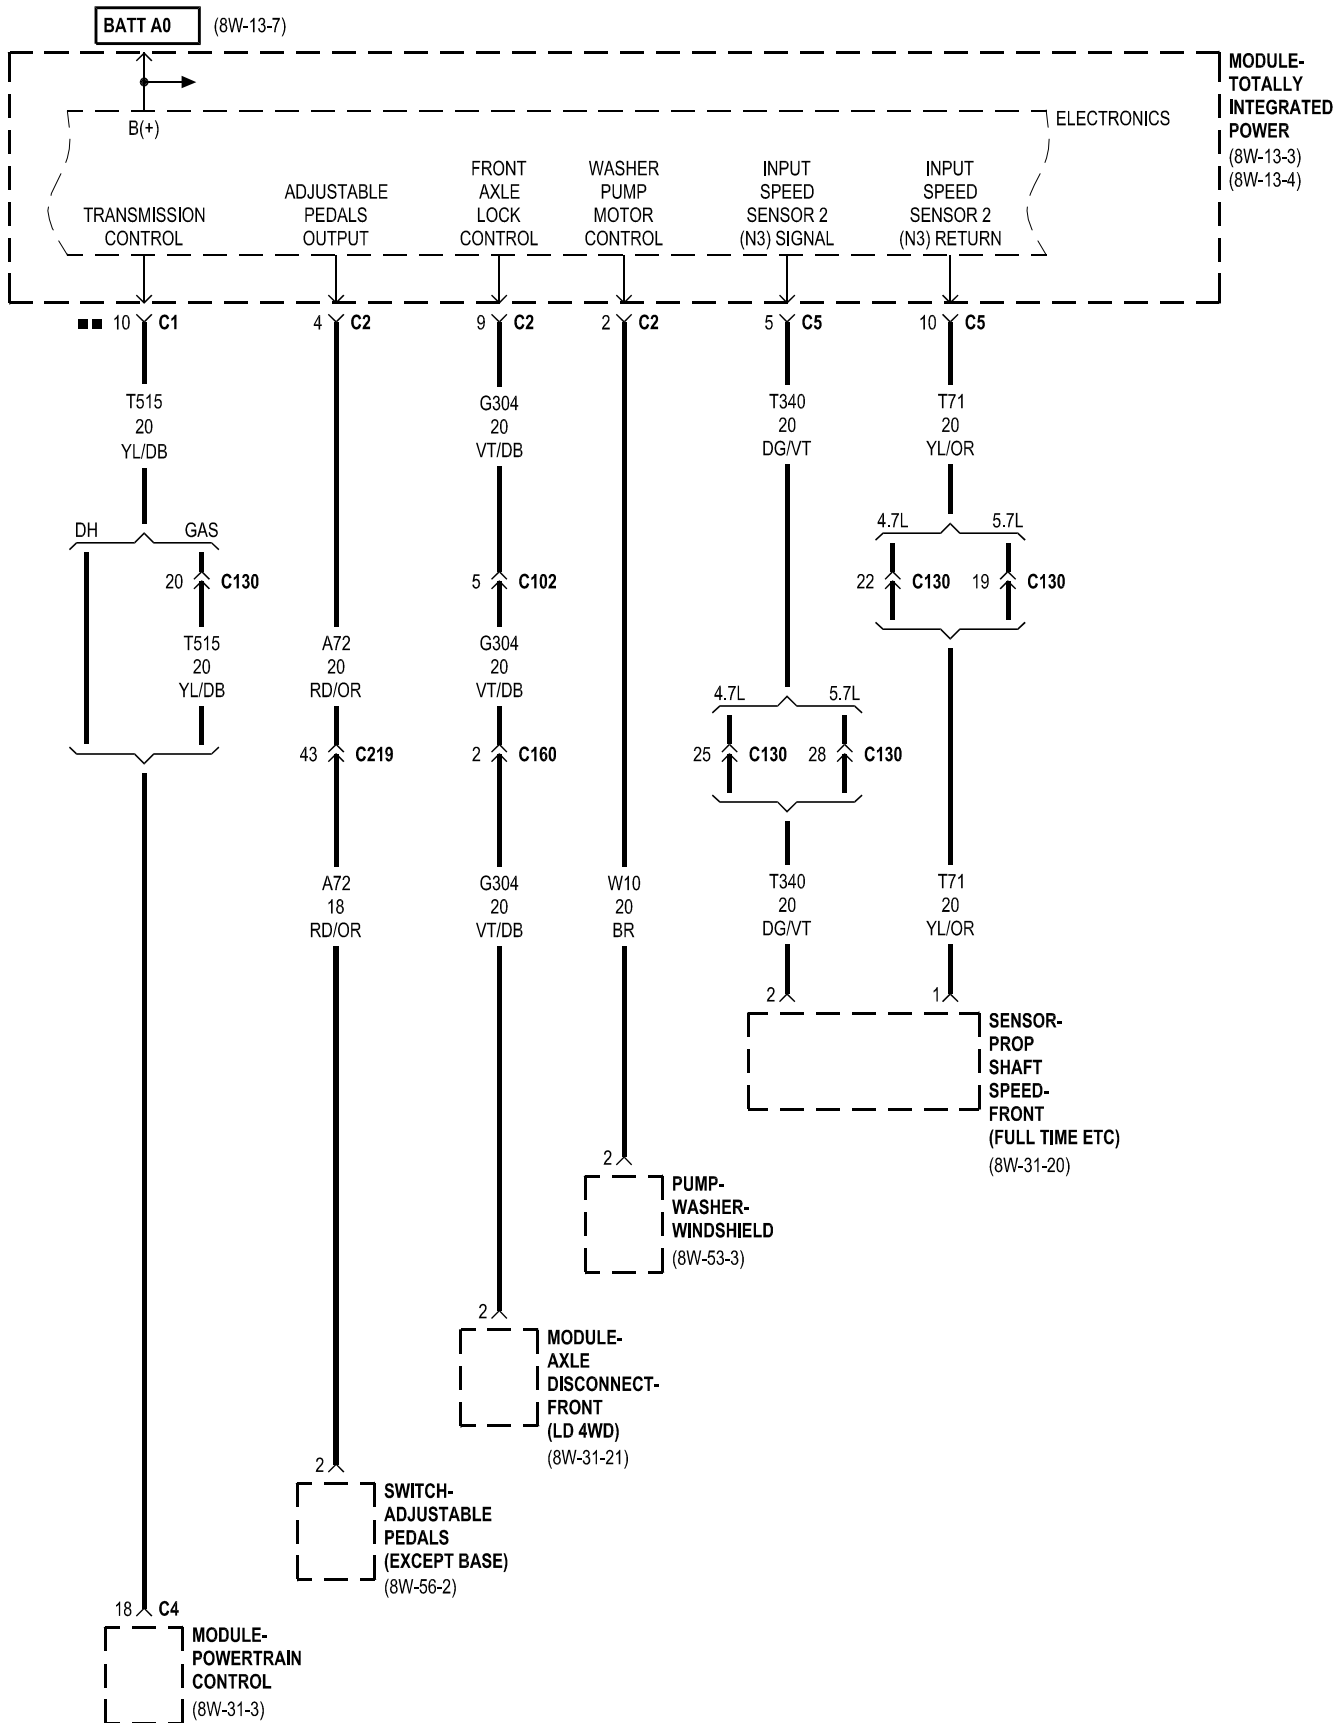


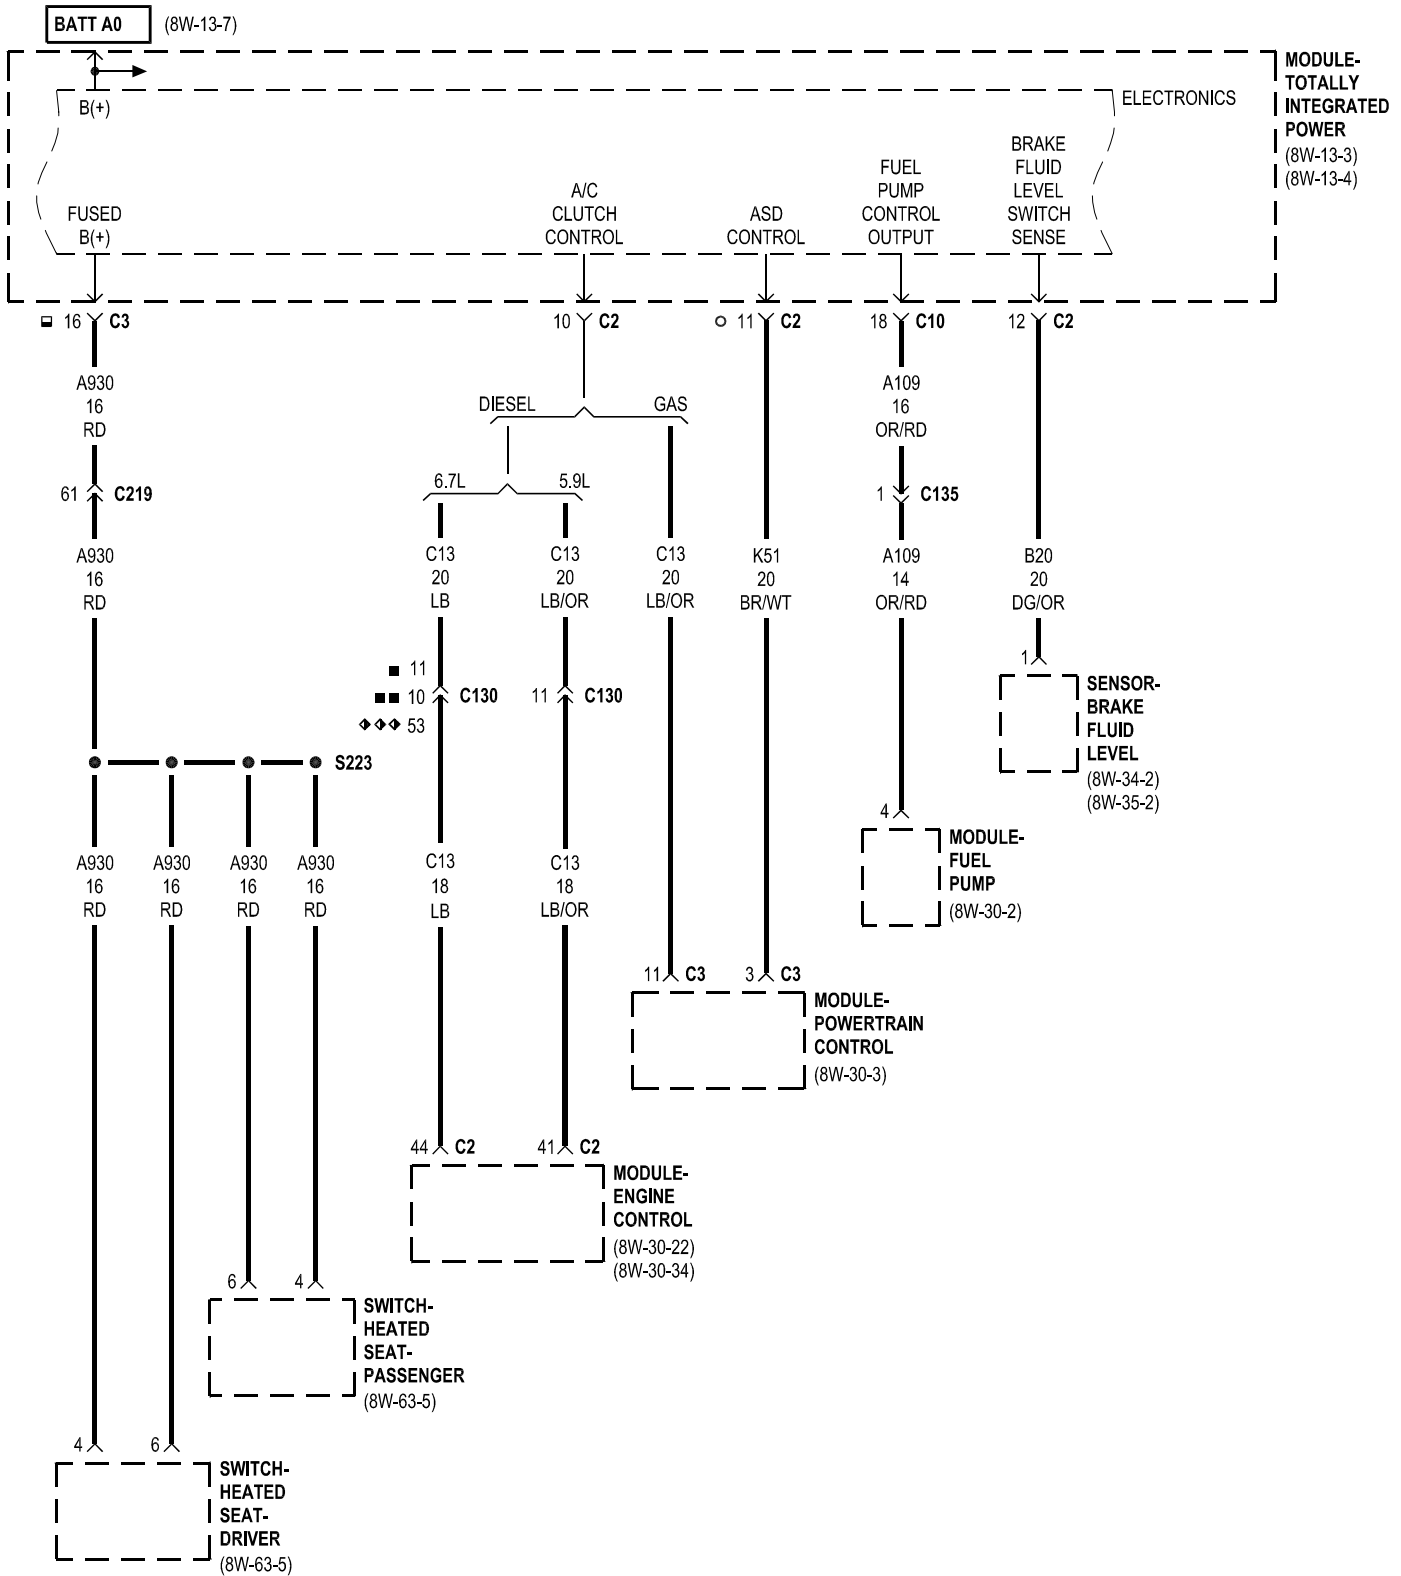


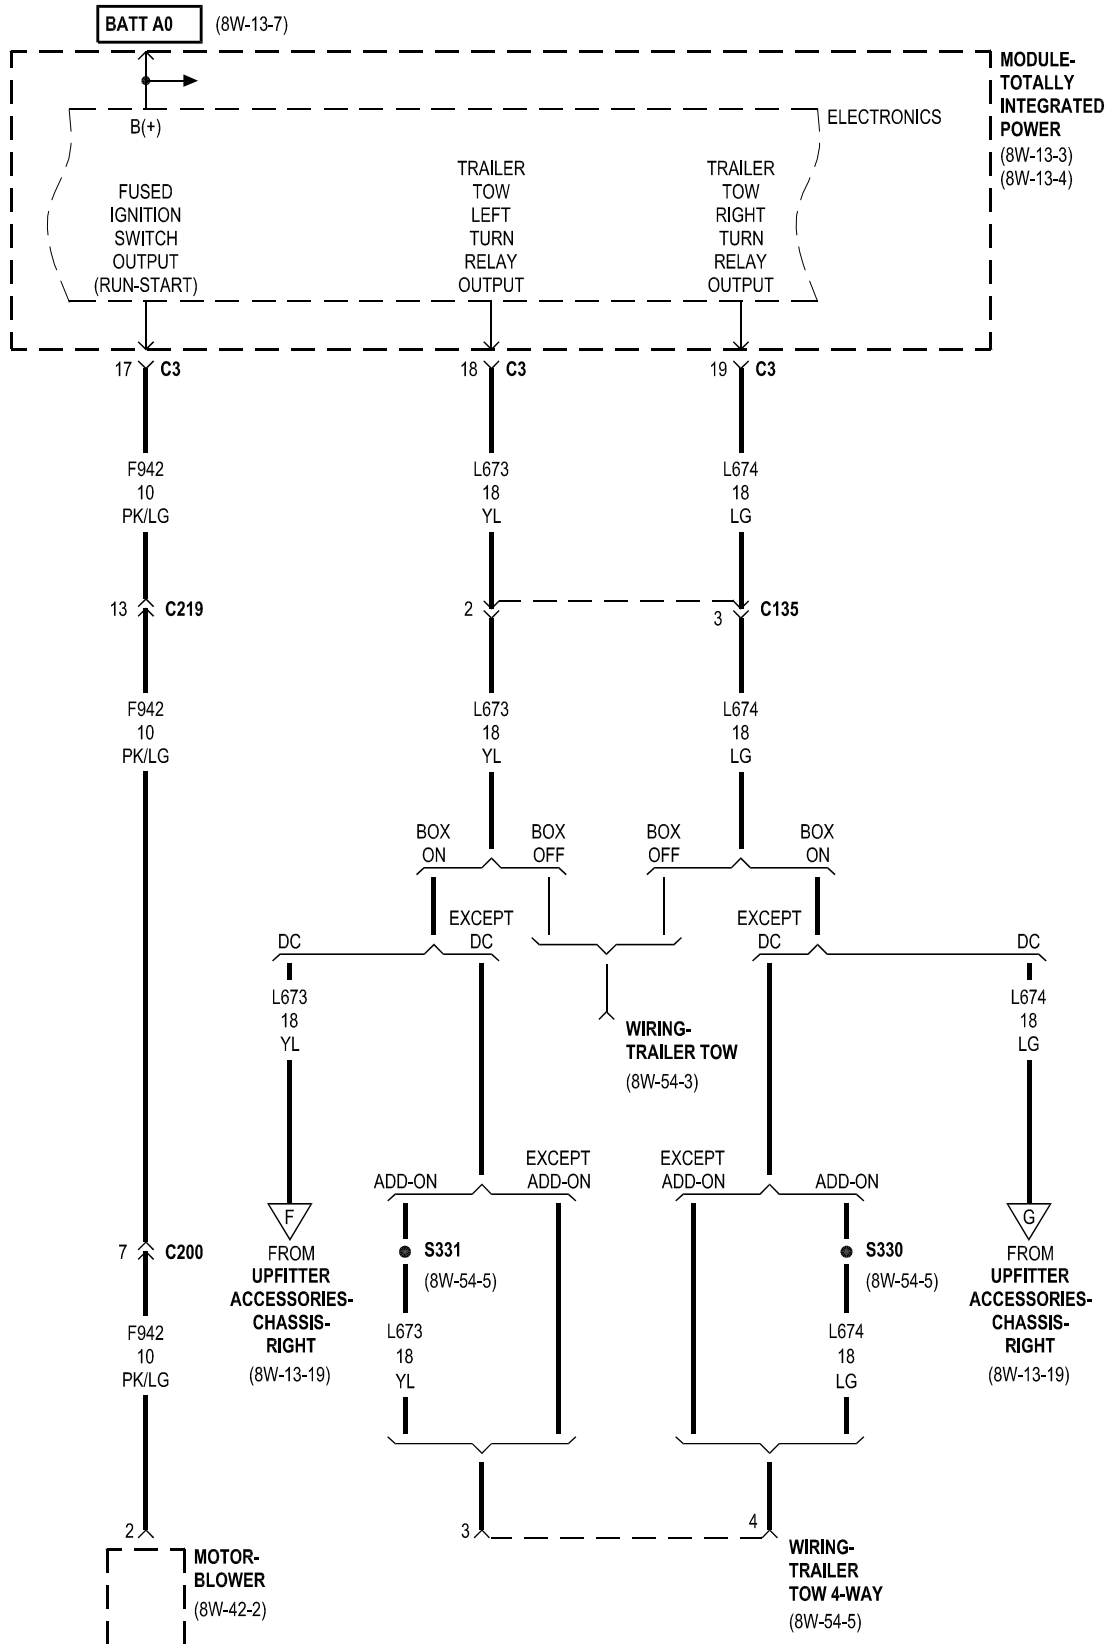


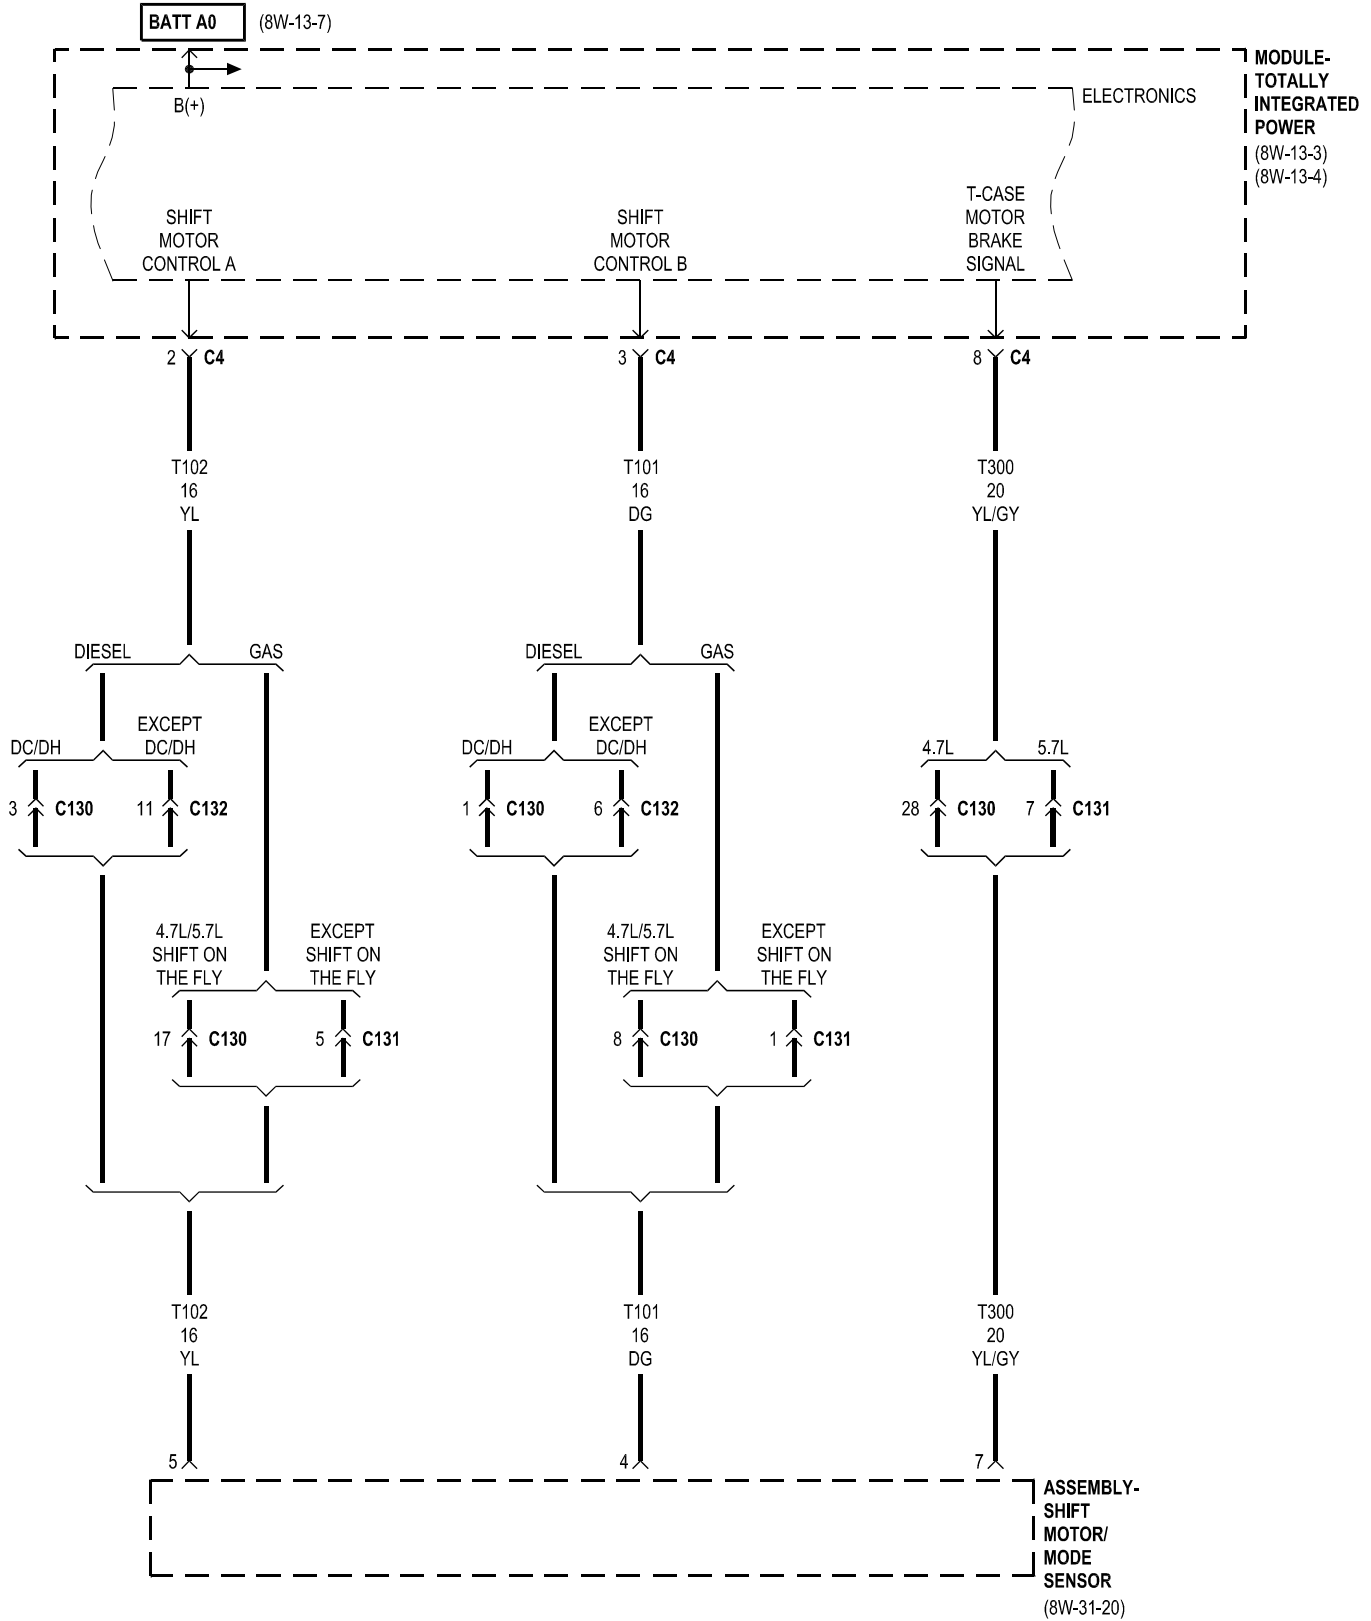

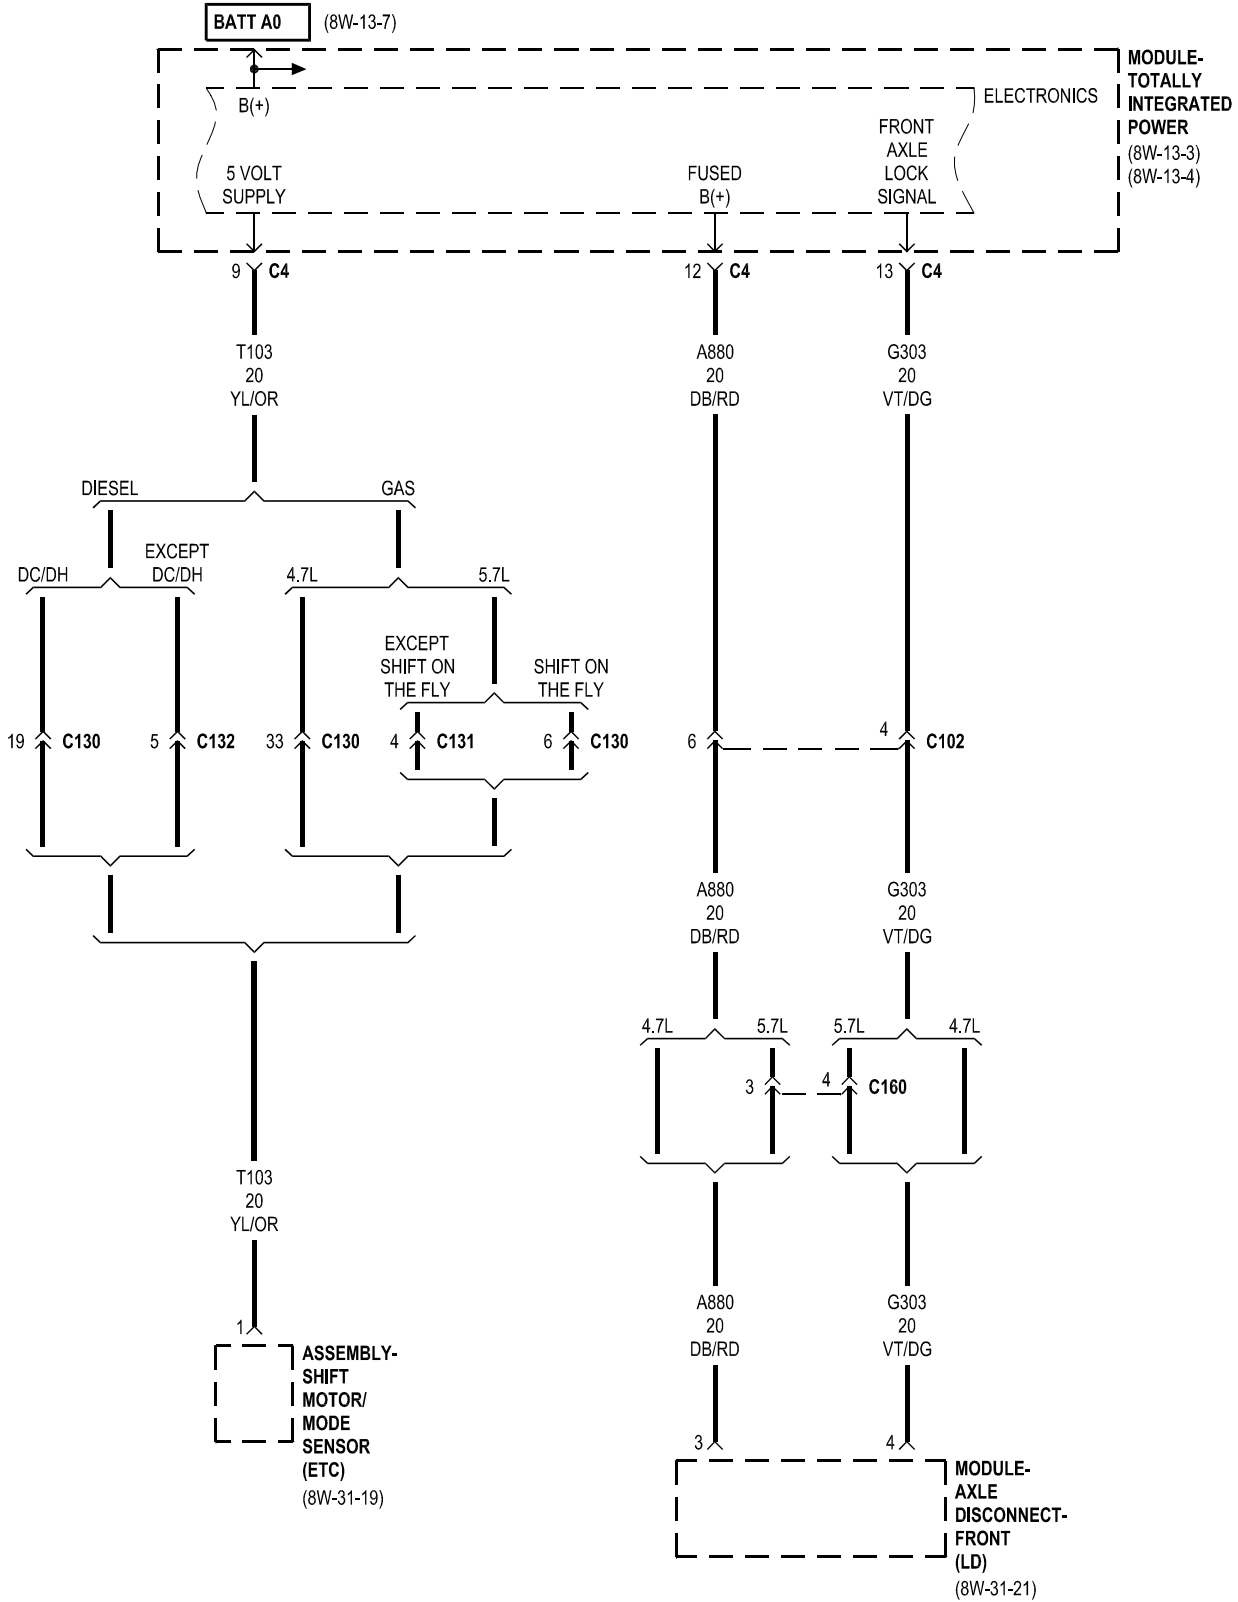


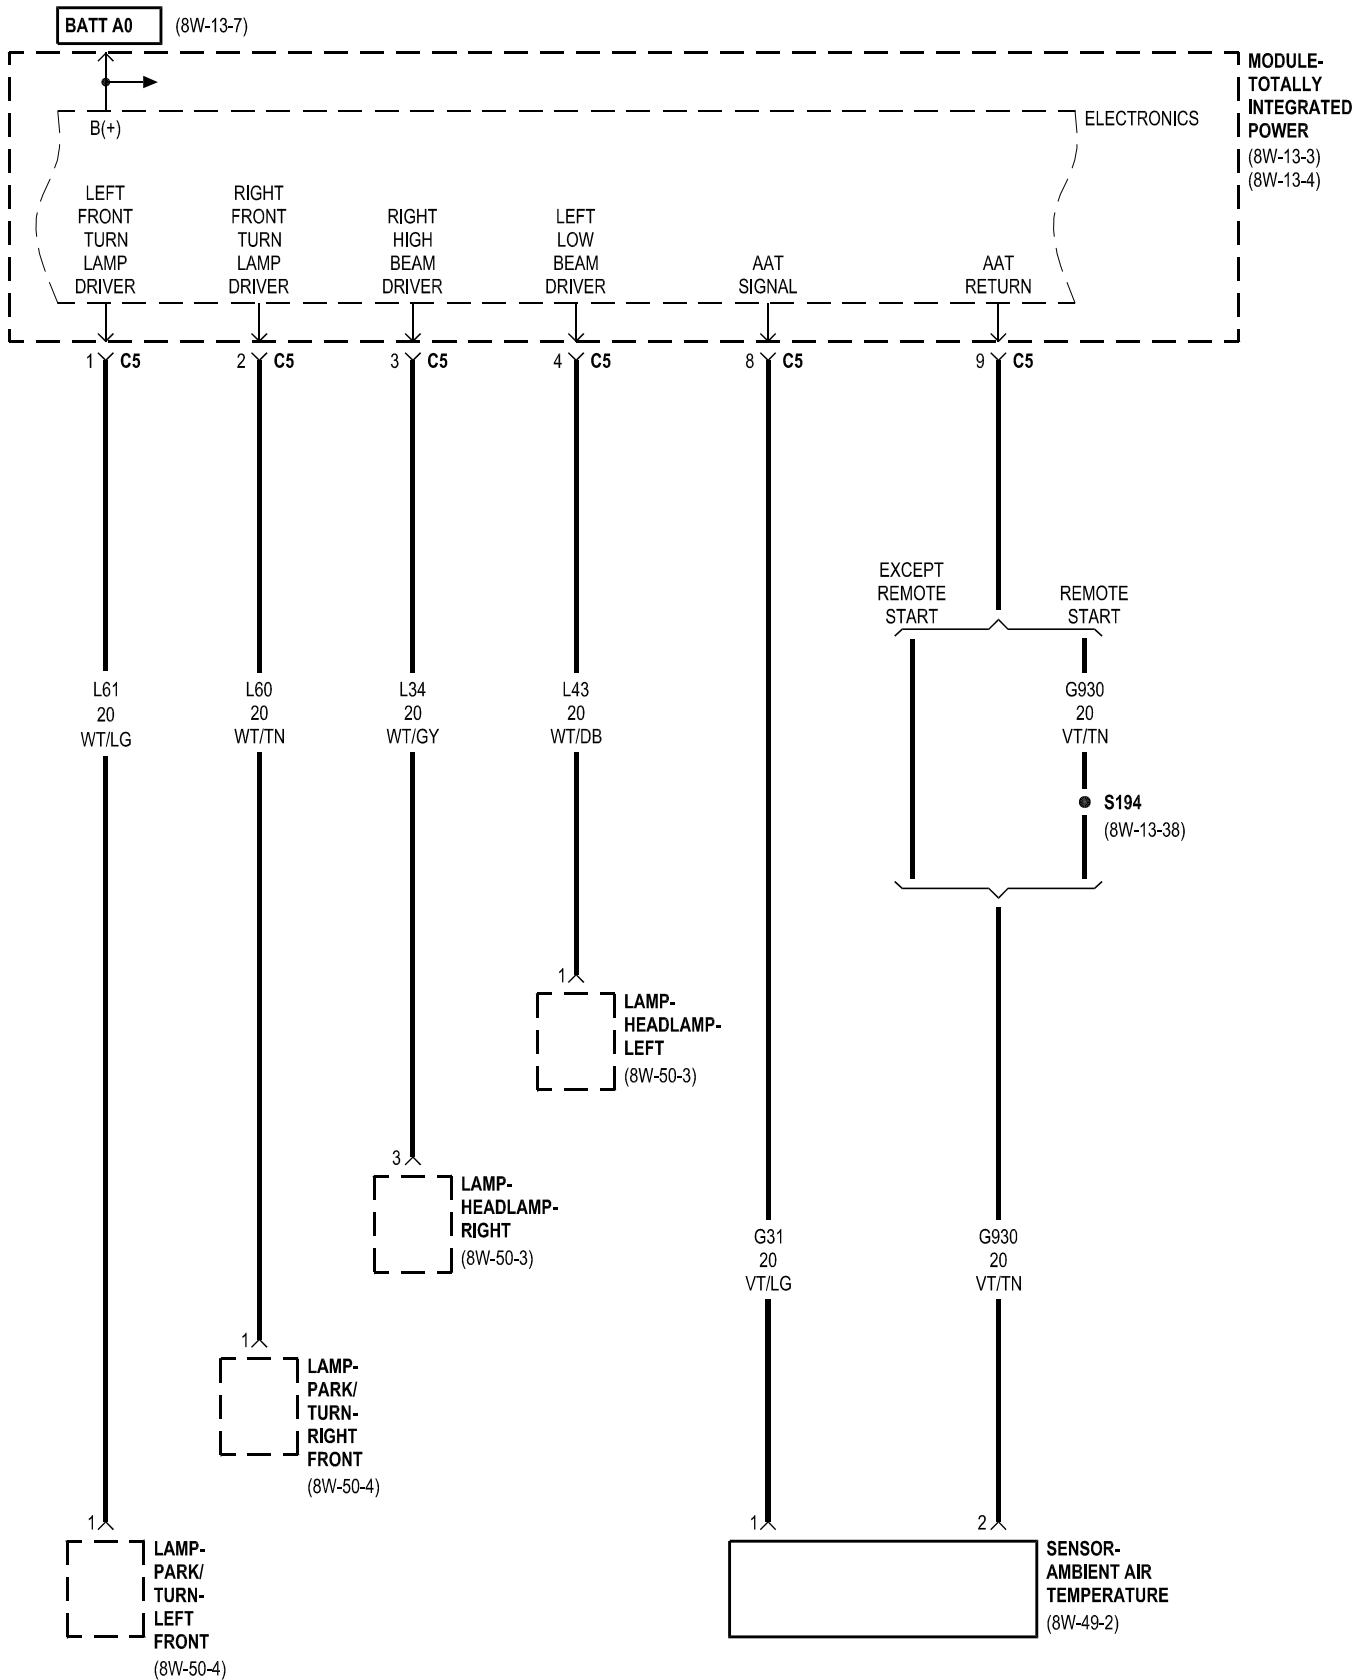

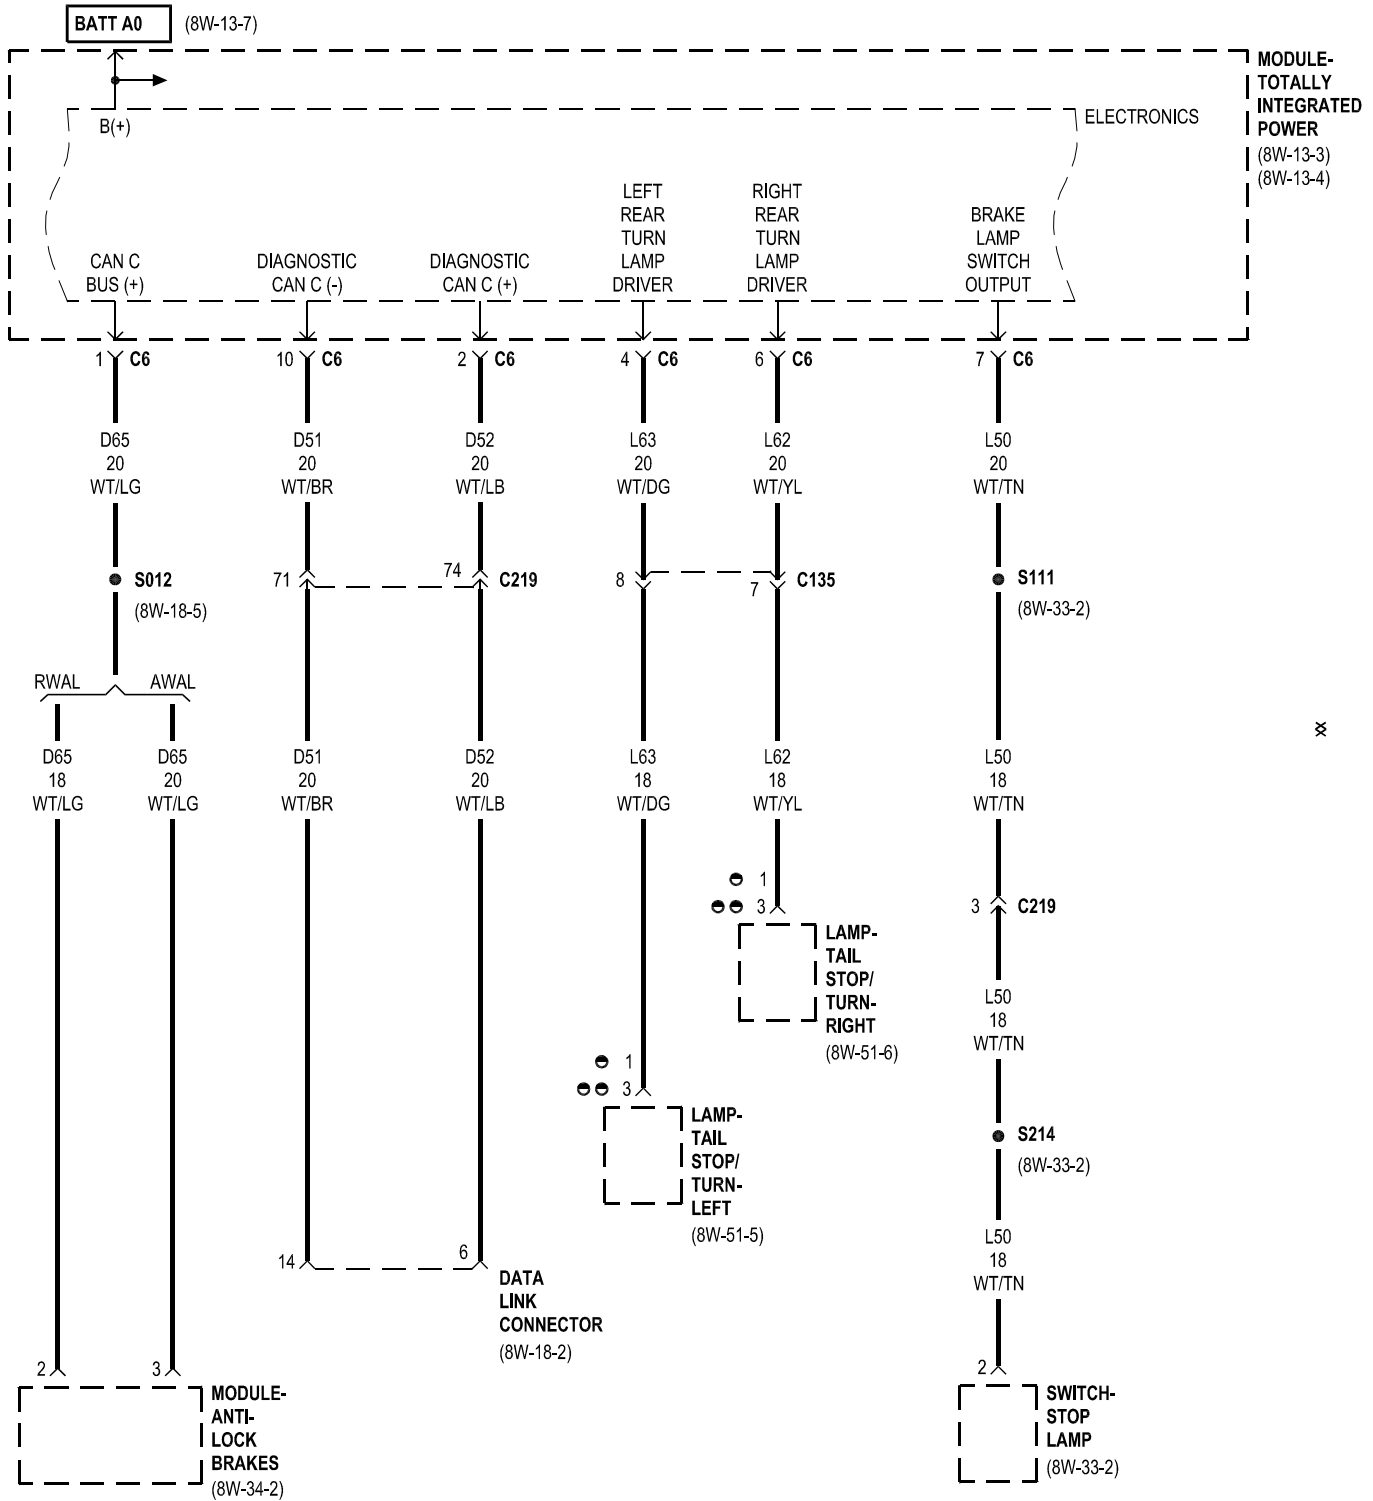


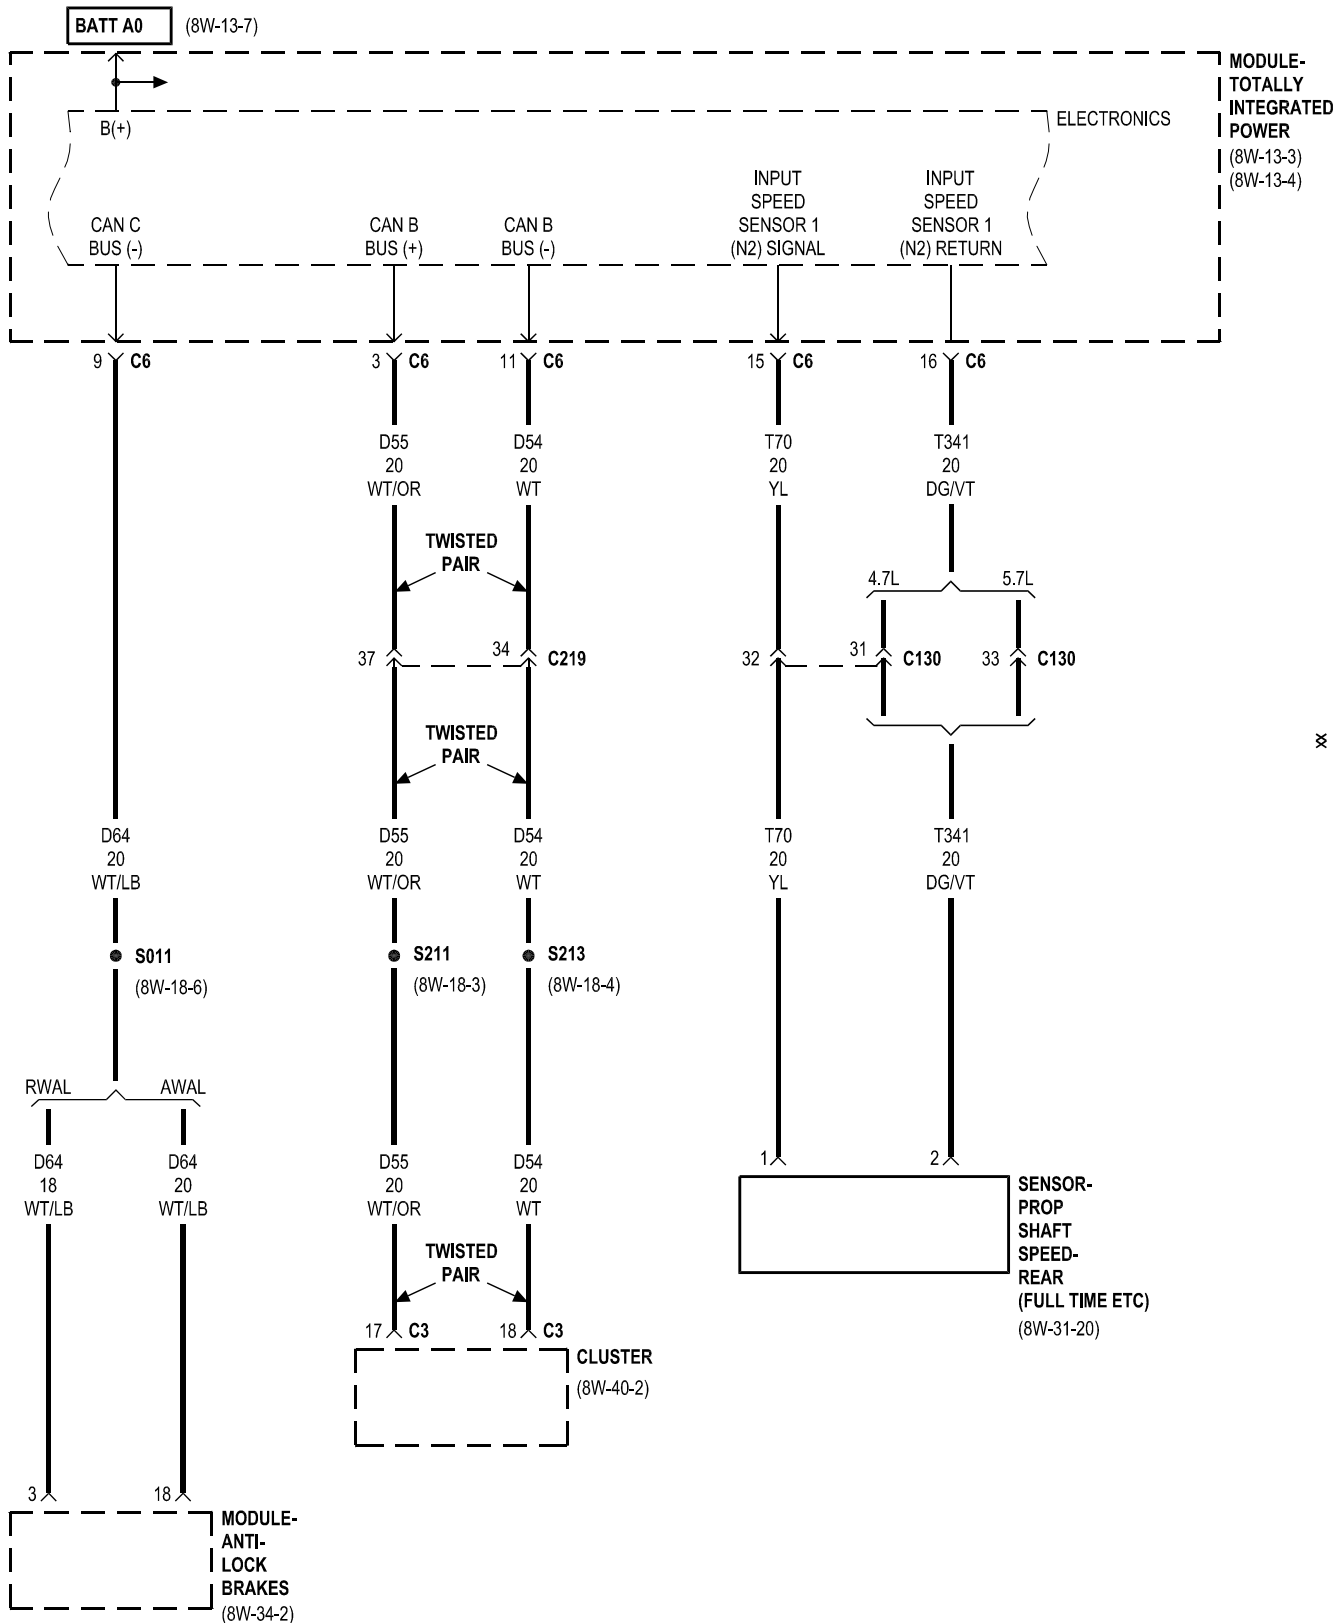


⊗ NOTE: D64, D65 CIRCUITS ARE TWISTED PAIR

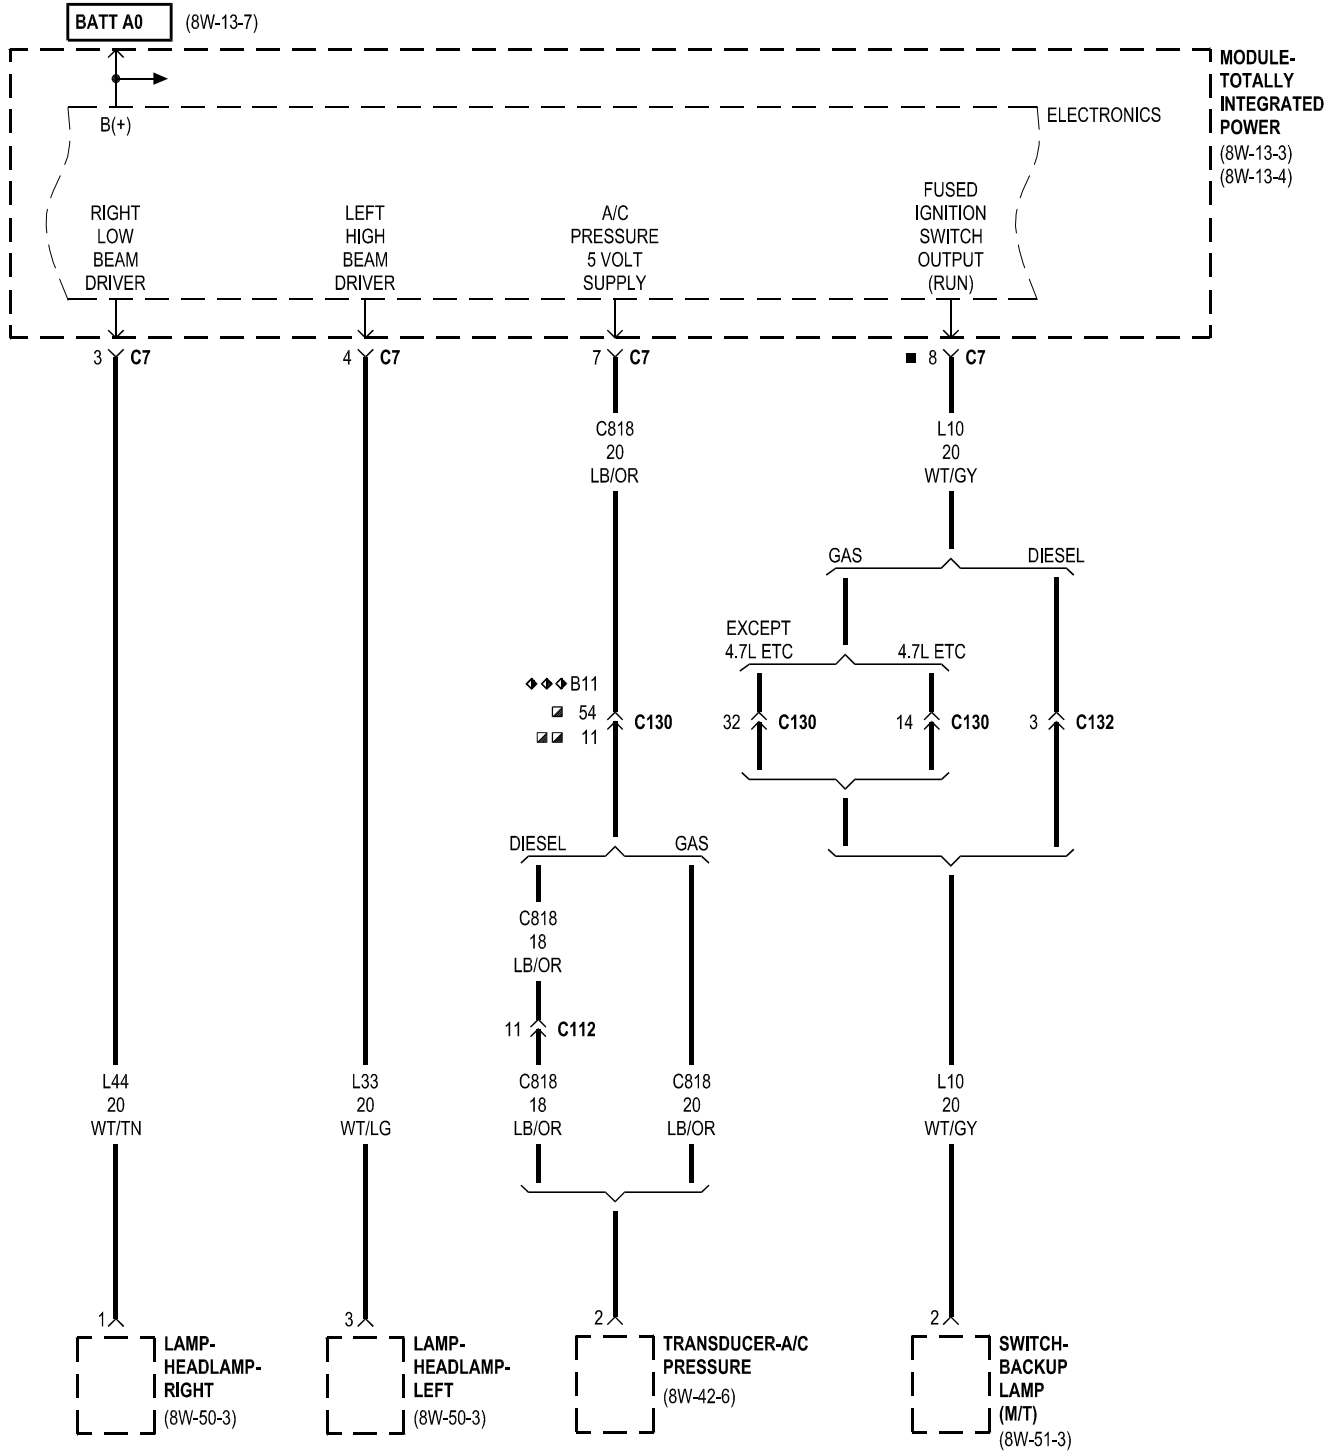

- ◆◆◆ DH
- M/T
- 6.7L A/T
- EXCEPT 6.7L A/T

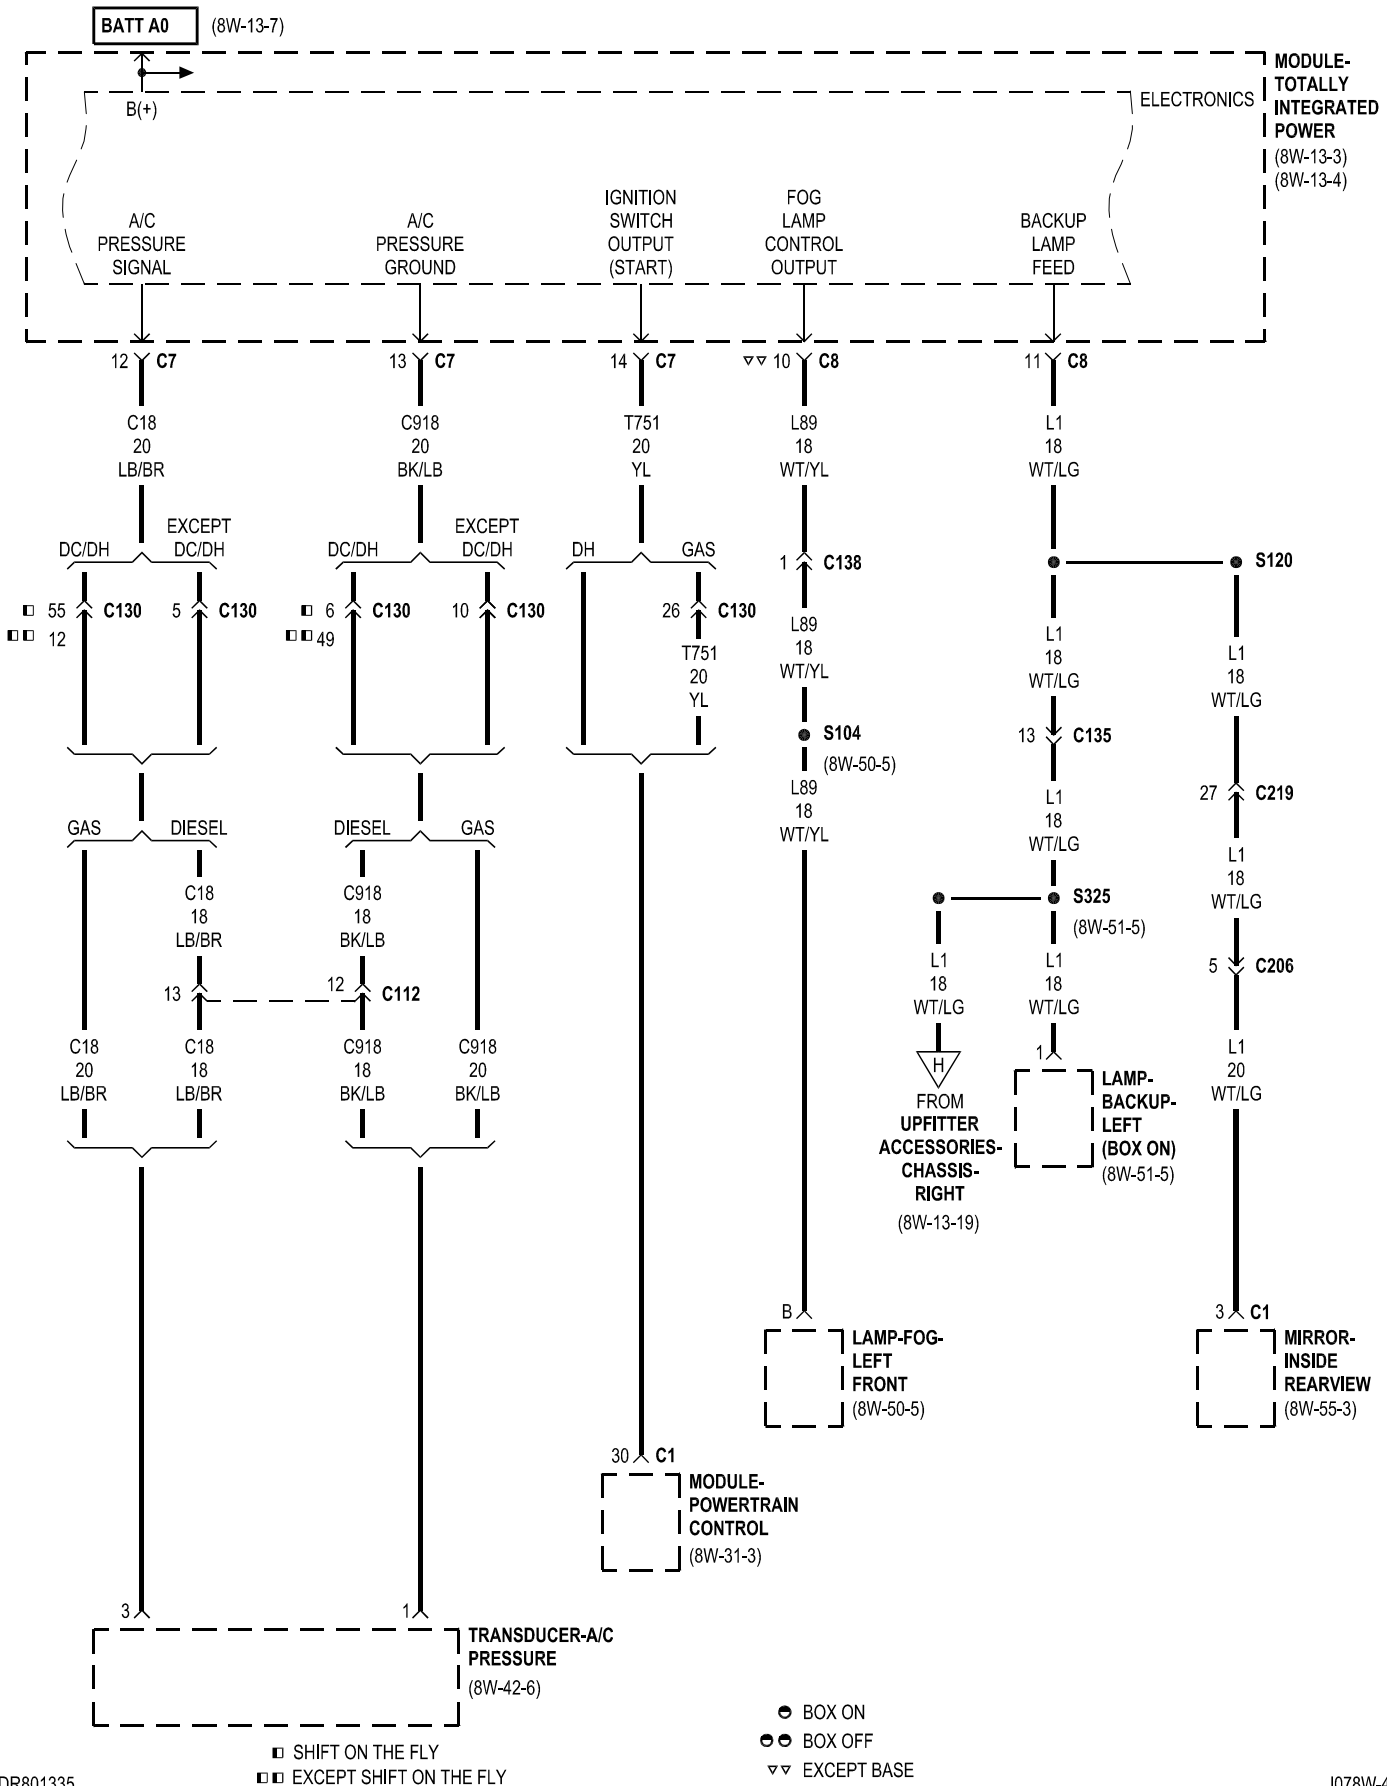

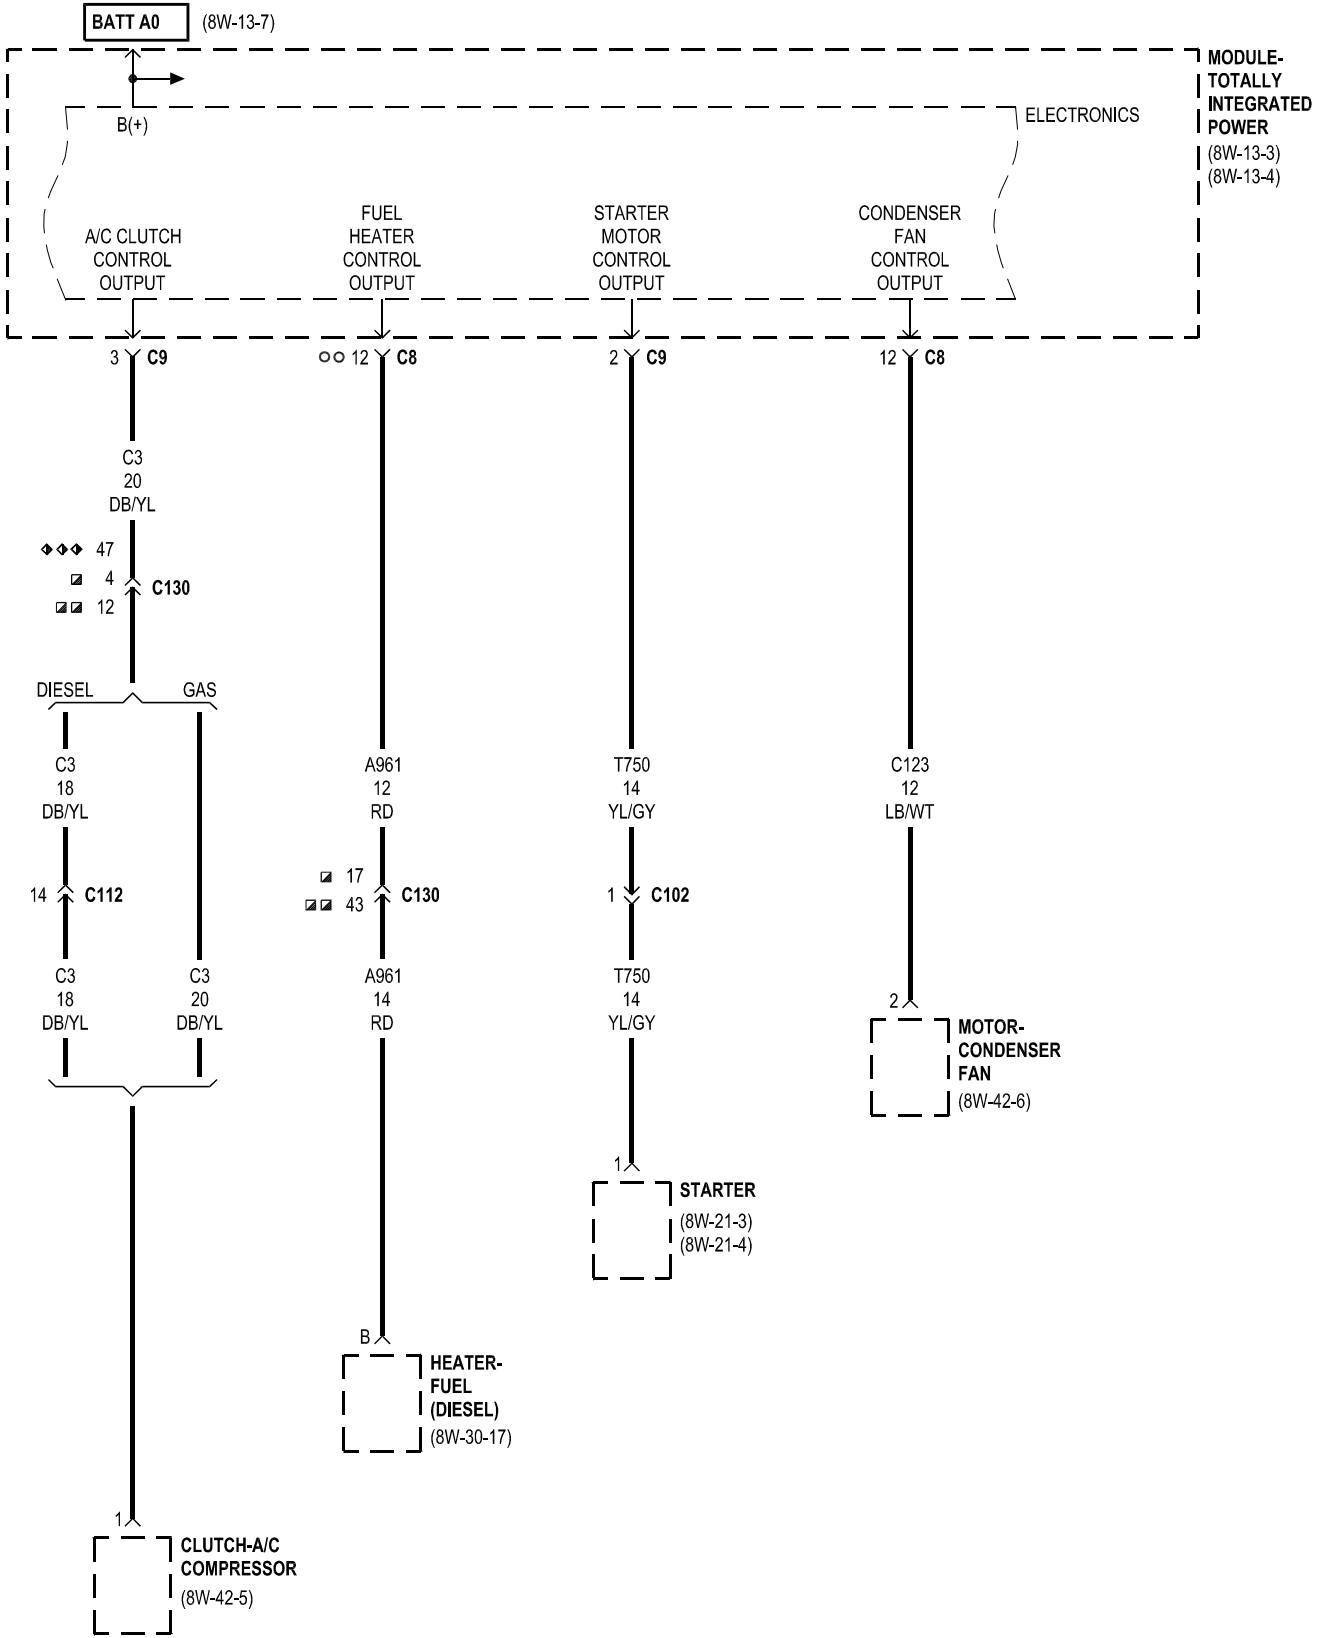

- ◆◆◆ DH
- 6.7L A/T
- EXCEPT 6.7L A/T
- DIESEL

