

8W-63 POWER SEATS

Component	Page	Component	Page
Circuit Breaker C01 (tipm)	8W-63-1, 2, 5, 6	Motor-Adjustable Pedals	8W-63-3
Cluster	8W-63-7	Motor-Seat Adjuster-Driver Horizontal	8W-63-1, 4
Fuse M34 (tipm)	8W-63-7	Motor-Seat Adjuster-Driver Lumbar.	8W-63-6
Fuse M35 (tipm)	8W-63-8	Motor-Seat Adjuster-Driver Recliner	8W-63-1, 3
Fuse M36 (tipm)	8W-63-7, 8	Motor-Seat Adjuster-Front Driver Vertical . .	8W-63-1, 4
G210	8W-63-7	Motor-Seat Adjuster-Passenger Horizontal . .	8W-63-5
G211	8W-63-7	Motor-Seat Adjuster-Passenger Lumbar	8W-63-6
G309	8W-63-1, 2, 5, 6, 8, 9, 10	Motor-Seat Adjuster-Rear Driver Vertical . .	8W-63-1, 3
Heater-Seat Back-Left	8W-63-9	Switch-Bank-Lower	8W-63-7
Heater-Seat Back-Right	8W-63-9	Switch-Heated Seat-Left Rear	8W-63-7
Heater-Seat Cushion-Left	8W-63-9	Switch-Heated Seat-Right Rear.	8W-63-7
Heater-Seat Cushion-Left Rear	8W-63-9, 10	Switch-Seat Adjuster-Driver Lumbar	8W-63-6
Heater-Seat Cushion-Right	8W-63-9	Switch-Seat Adjuster-Passenger Lumbar	8W-63-6
Heater-Seat Cushion-Right Rear	8W-63-9, 10	Switch-Seat-Driver	8W-63-1, 2
Module-Heated Seats	8W-63-8, 9, 10, 11	Switch-Seat-Passenger	8W-63-5
Module-Seat Memory	8W-63-2, 3	Vent-Seat Back-Left	8W-63-11
Module-Seat-Memory	8W-63-4	Vent-Seat Back-Right	8W-63-11
Module-Steering Control.	8W-63-10	Vent-Seat Cushion-Left	8W-63-11
Module-Totally Integrated Power . .	8W-63-1, 2, 5, 6, 7, 8	Vent-Seat Cushion-Right	8W-63-11





















