


8W-13 INTEGRATED POWER MODULE

Component	Page	Component	Page
Amplifier-Radio	8W-13-23, 39	Fuse 27	8W-13-26
Amplifier-Subwoofer	8W-13-23, 40	Fuse 28	8W-13-21
Assembly-Natural Vacuum Leak Detection	8W-13-28	Fuse 29	8W-13-23
Assembly-Transmission Solenoid	8W-13-28, 29	Fuse 30	8W-13-34
Assembly-Transmission Solenoid/TRS	8W-13-27, 41, 48	Fuse 32	8W-13-36
Assembly-Winch	8W-13-13	Fuse 33	8W-13-36
Backlite-Heated	8W-13-40	Fuse 34	8W-13-36
Battery	8W-13-13	Fuse 35	8W-13-41
Battery-Auxiliary	8W-13-13	Fuse 36	8W-13-26
Capacitor-Ignition	8W-13-15	Fuse 38	8W-13-41
Circuit Breaker-Power Window	8W-13-24	Fuse 39	8W-13-38
Cluster	8W-13-20, 22, 23, 33, 39	Fuse 40	8W-13-42
Clutch-A/C Compressor	8W-13-38	Fuse 41	8W-13-43
Coil-Ignition-Left	8W-13-19	Fuse 42	8W-13-42
Coil-Ignition-No. 1	8W-13-16, 17	Fuse 43	8W-13-40
Coil-Ignition-No. 2	8W-13-16, 18	Fuse 45	8W-13-43
Coil-Ignition-No. 3	8W-13-16, 17	Fuse 46	8W-13-44
Coil-Ignition-No. 4	8W-13-16, 18	Fuse 47	8W-13-44
Coil-Ignition-No. 5	8W-13-15, 17	Fuse 48	8W-13-42
Coil-Ignition-No. 6	8W-13-15, 18	Fuse 49	8W-13-14
Coil-Ignition-No. 7	8W-13-15, 17	Fuse 50	8W-13-29, 30
Coil-Ignition-No. 8	8W-13-15, 18	Fuse 51	8W-13-33
Coil-Ignition-Right	8W-13-19	Fuse 52	8W-13-41
Control-A/C-Heater	8W-13-26, 40	Fuse 53	8W-13-40
Data Link Connector	8W-13-33, 45	Fuse Holder	8W-13-23, 24
Drive-Fan-Radiator	8W-13-26	Fuses	8W-13-5, 6
Fuse 1	8W-13-14	Fusible Link	8W-13-13
Fuse 2	8W-13-14	G100	8W-13-13
Fuse 3	8W-13-20	G101	8W-13-13
Fuse 4	8W-13-20, 25	G102	8W-13-13
Fuse 5	8W-13-27, 28, 29	G103	8W-13-27, 46, 47
Fuse 6	8W-13-31	G104	8W-13-24, 25, 27, 29, 32, 38, 46, 47
Fuse 7	8W-13-31	G106	8W-13-32
Fuse 8	8W-13-32	G107	8W-13-34
Fuse 9	8W-13-24	G108	8W-13-13
Fuse 10	8W-13-20	G109	8W-13-13
Fuse 11	8W-13-33	G201	8W-13-20
Fuse 12	8W-13-29, 34	Gauge-Engine Oil Temperature	8W-13-22
Fuse 13	8W-13-33	Generator	8W-13-13, 28
Fuse 14	8W-13-25, 35	Heater-Fuel	8W-13-29
Fuse 15	8W-13-36	Horn-No. 1	8W-13-43
Fuse 16	8W-13-38	Horn-No. 2	8W-13-43
Fuse 17	8W-13-38	Injector-Fuel-No. 1	8W-13-16, 17, 19
Fuse 18	8W-13-33	Injector-Fuel-No. 2	8W-13-16, 18, 19
Fuse 19	8W-13-39	Injector-Fuel-No. 3	8W-13-16, 17, 19
Fuse 20	8W-13-20	Injector-Fuel-No. 4	8W-13-16, 18, 19
Fuse 21	8W-13-39	Injector-Fuel-No. 5	8W-13-16, 17, 19
Fuse 22	8W-13-39	Injector-Fuel-No. 6	8W-13-16, 18, 19
Fuse 23	8W-13-39	Injector-Fuel-No. 7	8W-13-15, 17, 19
Fuse 24	8W-13-33	Injector-Fuel-No. 8	8W-13-15, 18, 19
Fuse 25	8W-13-39	Injector-Fuel-No. 9	8W-13-19
Fuse 26	8W-13-40	Injector-Fuel-No. 10	8W-13-19

Component	Page	Component	Page
Lamp-Bar-Tailgate	8W-13-36	Relay-Adjustable Pedals	8W-13-42
Lamp-Center Bezel	8W-13-37	Relay-Auto Shut Down	8W-13-14
Lamp-Clearance No. 1	8W-13-37	Relay-Blower Motor	8W-13-25
Lamp-Clearance No. 2	8W-13-37	Relay-Clutch-A/C Compressor	8W-13-38
Lamp-Clearance No. 3	8W-13-37	Relay-Condenser Fan	8W-13-34
Lamp-Clearance No. 4	8W-13-37	Relay-Fog Lamp	8W-13-43
Lamp-Clearance No. 5	8W-13-37	Relay-Fuel Heater	8W-13-29
Lamp-Fender-Front Left	8W-13-37	Relay-Fuel Pump	8W-13-38
Lamp-Fender-Front Right	8W-13-37	Relay-Heated Mirror	8W-13-26
Lamp-Fender-Rear Left	8W-13-37	Relay-Horn	8W-13-43
Lamp-Fender-Rear Right	8W-13-37	Relay-Ignition Run-Acc	8W-13-24
Lamp-Fog-Left	8W-13-43	Relay-Intake Air Heater No. 1	8W-13-13
Lamp-Fog-Right	8W-13-43	Relay-Intake Air Heater No. 2	8W-13-13
Lamp-Headlamp-Left	8W-13-45	Relay-Oxygen Sensor Downstream	8W-13-14
Lamp-Headlamp-Right	8W-13-45	Relay-Park Lamp	8W-13-36
Lamp-License-Left	8W-13-36	Relay-Rear Window Defogger	8W-13-40
Lamp-License-Right	8W-13-36	Relay-Run	8W-13-25
Lamp-Park/Turn-Left Front	8W-13-36, 46	Relay-Starter	8W-13-23
Lamp-Park/Turn-Right Front	8W-13-36, 46	Relay-Starter Motor	8W-13-35
Lamp-Tail Stop Turn-Left	8W-13-36, 45, 46, 47	Relay-Trailer Tow-Left Turn	8W-13-44
Lamp-Tail Stop Turn-Right	8W-13-37, 45, 46, 47	Relay-Trailer Tow-Right Turn	8W-13-44
Lamp-Underhood	8W-13-33	Relay-Transmission Control	8W-13-27, 28, 29
Mirror-Inside Rearview	8W-13-22, 47	Relay-Wiper High/Low	8W-13-32
Mirror-Outside Rearview-Driver	8W-13-26	Relay-Wiper On/Off	8W-13-32
Mirror-Outside Rearview-Passenger	8W-13-26	Seat Belt-Tension Reducer-Driver	8W-13-23
Module-Anti-Lock Brakes	8W-13-31, 41	Sensor-Ambient Air Temperature	8W-13-45, 47
Module-Brake	8W-13-14	Sensor-Oxygen-Left Front	8W-13-14
Module-Electronic Overhead	8W-13-22, 39	Sensor-Oxygen-Left Rear	8W-13-14
Module-Engine Control	8W-13-13, 29, 30, 35, 38	Sensor-Oxygen-Right Front	8W-13-14
Module-Final Drive Control	8W-13-30, 40	Sensor-Oxygen-Right Rear	8W-13-14
Module-Front Controls	8W-13-12, 30, 32, 33, 36, 42, 43, 44, 45, 46, 47	Sensor-Transmission Range	8W-13-35, 41, 48
Module-Fuel Pump	8W-13-38	Sensor-Washer Fluid Level	8W-13-47
Module-Hands Free	8W-13-23, 33	Solenoid-EVAP/Purge	8W-13-30
Module-Heated Seats	8W-13-42	Solenoid-Radiator Fan	8W-13-15
Module-Integrated Power	8W-13-3, 4, 13, 14, 15, 20, 21, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47	Solenoid-Reverse Lock-Out	8W-13-28
Module-Occupant Restraint Controller	8W-13-40, 41	Solenoid-Wastegate	8W-13-26
Module-Powertrain Control	8W-13-14, 15, 20, 21, 27, 28, 30, 34, 35, 38, 39	Starter	8W-13-13, 35
Module-Sentry Key Immobilizer	8W-13-30, 39	Switch-Adjustable Pedals	8W-13-26, 42
Module-Transfer Case Control	8W-13-35, 40	Switch-Back Up Lamp	8W-13-41, 48
Motor-Blower	8W-13-20, 25	Switch-Clutch Interlock	8W-13-34, 35
Motor-Condenser Fan	8W-13-34	Switch-Door Lock-Passenger	8W-13-22
Motor-Sunroof	8W-13-23, 24	Switch-Headlamp	8W-13-43
Motor-Windshield Wiper	8W-13-32, 47	Switch-Ignition	8W-13-20, 23, 24, 25
Power Outlet-Console	8W-13-39, 42	Switch-Passenger Airbag On/Off	8W-13-40
Power Outlet-Instrument Panel	8W-13-23	Switch-Push-Button Starter	8W-13-21
Power Outlet-Rear	8W-13-23	Switch-Seat-Driver	8W-13-31
PTC No. 1	8W-13-38	Switch-Seat-Passenger	8W-13-31
PTC No. 2	8W-13-23	Switch-Stop Lamp	8W-13-30, 33
PTC No. 5	8W-13-33	Switch-Transfer Case Selector	8W-13-21
Pump-Washer-Windshield	8W-13-47	Switch-Window/Door Lock-Driver	8W-13-20, 24, 42
Radio	8W-13-23, 33	Wiring-Trailer Tow 4-Way	8W-13-36, 44
		Wiring-Trailer Tow 7-Way	8W-13-36, 39, 44, 47

MODULE-
INTEGRATED POWER
(REAR VIEW)

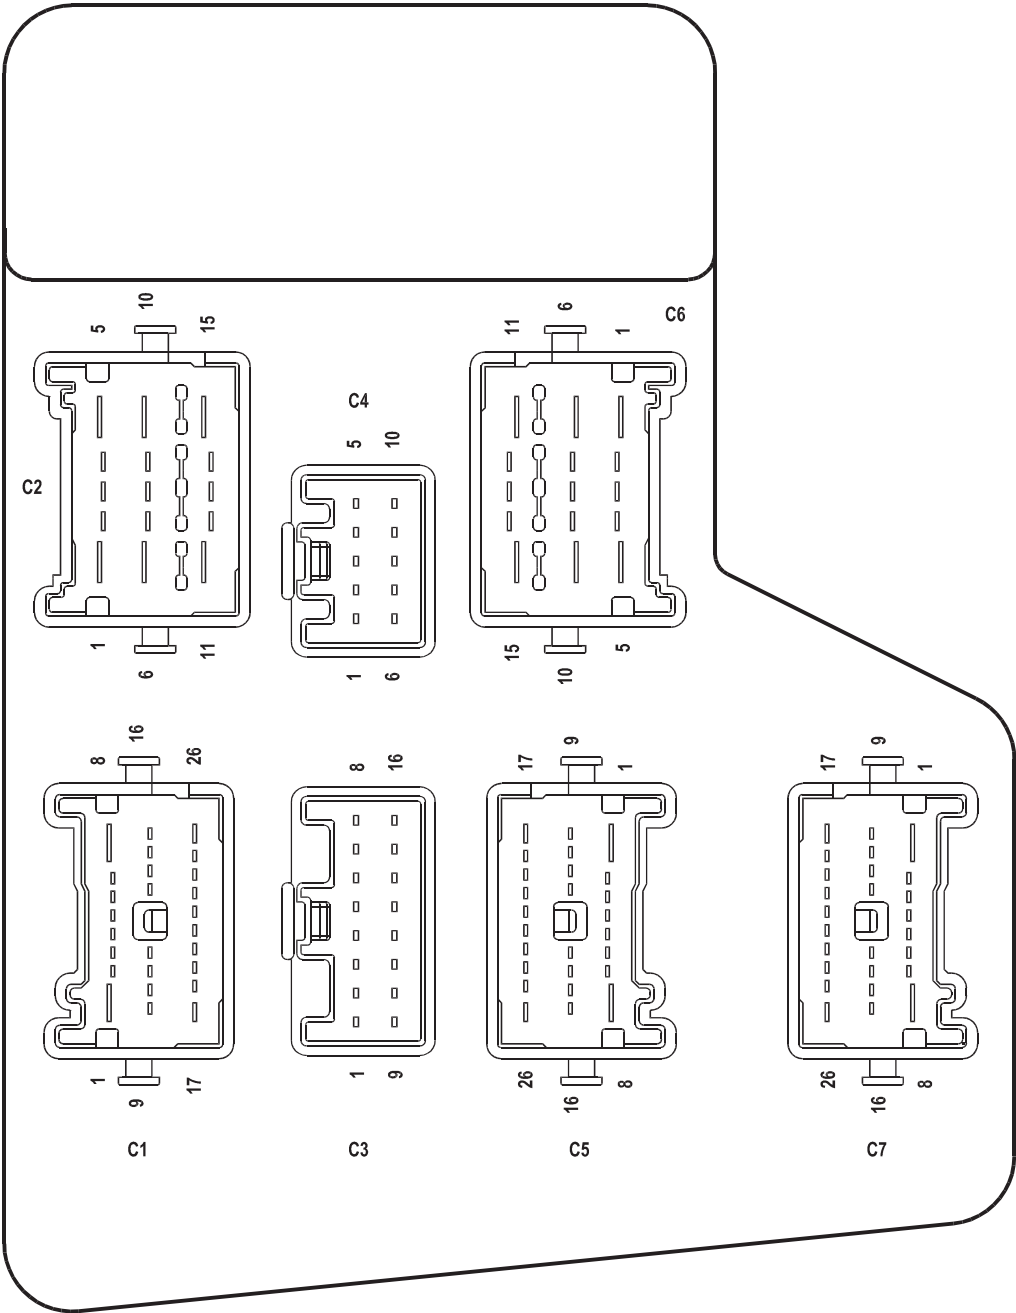









FUSES
(IPM)

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	30A	A400 14TN/RD ◆◆◆◆	FUSED B(+)
2	30A	INTERNAL ○	FUSED B(+)
3	30A	A921 16RD ■■■■	FUSED B(+)
4	40A	A970 10RD	FUSED B(+)
5	20A	INTERNAL	FUSED B(+)
6	40A	A111 14DG/RD	FUSED B(+)
7	50A	A210 10OR/RD ■■■■	FUSED B(+)
7	50A	A210 12OR/RD ■■■■	FUSED B(+)
8	30A	INTERNAL	FUSED B(+)
9	40A	A991 10RD ■■■■	FUSED B(+)
9	40A	A991 12RD ■■■■	FUSED B(+)
10	40A	A981 14RD ■■■■	FUSED B(+)
10	40A	A981 12RD ■■■■	FUSED B(+)
11	30A	INTERNAL	FUSED B(+)
12	40A	A960 14RD ○○	FUSED B(+)
12	30A	A16 16RD/BR ■	FUSED B(+)
13	30A	INTERNAL	FUSED B(+)
14	30A	INTERNAL	FUSED B(+)
15	50A	INTERNAL	FUSED B(+)
16	10A	INTERNAL	FUSED B(+)
17	20A	INTERNAL ○	FUSED B(+)
18	15A	A944 20RD	FUSED B(+)
19	20A	A100 14RD/VT ◆◆◆	FUSED B(+)
20	25A	A951 16RD	FUSED B(+)
21	20A	A116 18YL/RD ■■■■	FUSED B(+)
21	20A	A116 16YL/RD ■■■■	FUSED B(+)
22	20A	A941 18RD	FUSED B(+)
23	15A	A919 20RD	FUSED B(+)
24	15A	A103 18GY/RD	FUSED B(+)
25	20A	A205 18RD/OR ■■■■	FUSED B(+)
25	20A	A205 16RD/OR ■■■■	FUSED B(+)
26	25A	INTERNAL	FUSED B(+)
27	15A	INTERNAL	FUSED B(+)
28	10A	F21 20PK/DG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
29	20A	F984 18PK/YL ■■■■	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
29	20A	F984 16PK/YL ■■■■	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
30	-	-	-
31	-	-	-
32	10A	L70 18WT/GY	FUSED PARK LAMP RELAY OUTPUT
33	20A	L678 18BR ■■■■	FUSED PARK LAMP RELAY OUTPUT

○ GAS
 ○○ DIESEL
 ◆◆◆ OFF ROAD
 ■ NGC
 ■■■ SRT
 ■■■■ EXCEPT SRT
 ◆◆◆◆ TRAILER TOW

FUSES
(IPM)

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
33	20A	L678 16BR 	FUSED PARK LAMP RELAY OUTPUT
34	10A	L7 18WT/YL	FUSED PARK LAMP RELAY OUTPUT
35	10A	F500 20DG/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
36	10A	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
37	-	-	-
38	15A	L10 18WT/GY	FUSED IGNITION SWITCH OUTPUT (RUN)
39	20A	INTERNAL 	FUSED B(+)
40	15A	INTERNAL	FUSED B(+)
41	15A	INTERNAL	FUSED B(+)
42	20A	A405 18RD/DB	FUSED B(+)
43	25A	A34 16RD/WT 	FUSED B(+)
43	25A	A916 16RD 	FUSED B(+)
44	-	-	-
45	20A	INTERNAL	FUSED B(+)
46	15A	INTERNAL	FUSED B(+)
47	15A	INTERNAL	FUSED B(+)
48	20A	A930 18RD	FUSED B(+)
49	20A	INTERNAL 	FUSED AUTO SHUT DOWN RELAY OUTPUT
50	10A	F202 20PK/GY 	FUSED IGNITION SWITCH OUTPUT (RUN-START)
51	20A	A114 18GY/RD	FUSED B(+)
52	15A	F100 18PK/VT 	FUSED IGNITION SWITCH OUTPUT (RUN)
52	15A	F100 20PK/VT 	FUSED IGNITION SWITCH OUTPUT (RUN)
53	15A	F201 20PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN)

 SRT  DIESEL
 EXCEPT SRT  ETC EXCEPT SRT

POSITIVE TEMPERATURE COEFFICIENTS (PTC)



PTC NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	7.5A	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN)
2	4.5A	F983 20PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
3	-	-	-
4	-	-	-
5	7.5A	INTERNAL	FUSED B(+)

RELAYS (IPM)

RELAY- ADJUSTABLE PEDALS

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED B(+)
86	INTERNAL	ADJUSTABLE PEDALS RELAY CONTROL
87	-	-
87A	A72 18RD/OR	ADJUSTABLE PEDALS RELAY OUTPUT

RELAY- AUTO SHUT DOWN (GAS)

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED B(+)
86	K51 18BR/WT 	ASD RELAY CONTROL
86	K51 20BR/WT 	ASD RELAY CONTROL
87	INTERNAL	ASD RELAY OUTPUT
87A	-	-

RELAY- BLOWER MOTOR (SRT)

CAVITY	CIRCUIT	FUNCTION
30	A970 10 RD	FUSED B(+)
85	F102 18PK/DB	FUSED IGNITION SWITCH OUTPUT (RUN)
86	Z1 18BK	GROUND
87	C7 10DB	BLOWER MOTOR FEED
87A	-	-

 SRT
 EXCEPT SRT

RELAYS
(IPM)
(CONTINUED)

RELAY-
CLUTCH-A/C
COMPRESSOR

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
86	C13 18LB/OR ■■■■	A/C CLUTCH RELAY CONTROL
86	C13 20LB/OR ■■■■	A/C CLUTCH RELAY CONTROL
87	C3 18DB/YL ■■■■	A/C CLUTCH RELAY OUTPUT
87	C3 20DB/YL ■■■■	A/C CLUTCH RELAY OUTPUT
87A	-	-

RELAY-
CONDENSER
FAN
(NGC)

CAVITY	CIRCUIT	FUNCTION
30	A16 16RD/BR	FUSED B(+)
85	A16 16RD/BR	FUSED B(+)
86	K173 18BR/VT	CONDENSER FAN RELAY CONTROL
87	C123 16LB/WT	CONDENSER FAN RELAY OUTPUT
87A	-	-

RELAY-FOG
LAMP

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED B(+)
86	INTERNAL	FOG LAMP RELAY CONTROL
87	L89 18WT/YL	FOG LAMP RELAY OUTPUT
87A	-	-

RELAY-
FUEL
HEATER
(DIESEL)

CAVITY	CIRCUIT	FUNCTION
30	A960 14RD	FUSED B(+)
85	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
86	Z114 20BK/LG	GROUND
87	A961 14RD	FUEL HEATER RELAY OUTPUT
87A	-	-

RELAY-
FUEL
PUMP

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL ○	FUSED IGNITION SWITCH OUTPUT (RUN-START)
85	Z723 20BK ○○	GROUND
86	K31 18BR ■■■■	FUEL PUMP RELAY CONTROL
86	K31 20BR ■■■■	FUEL PUMP RELAY CONTROL
87	A109 16OR/RD	FUEL PUMP RELAY OUTPUT
87A	-	-

■■■■ SRT ○ GAS
■■■■ EXCEPT SRT ○○ DIESEL

RELAYS
(IPM)
(CONTINUED)

RELAY-
HEATED
MIRROR

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN)
86	C110 20DB/LB	DEFOGGER RELAY CONTROL
87	C16 16DB/GY	HEATED MIRROR RELAY OUTPUT
87A	-	-

RELAY-
HORN

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED B(+)
86	INTERNAL	HORN RELAY CONTROL
87	X2 18DG/OR	HORN RELAY OUTPUT
87A	-	-

RELAY-
OXYGEN
SENSOR
DOWNSTREAM
(SRT)

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED AUTO SHUT DOWN RELAY OUTPUT
85	INTERNAL	FUSED AUTO SHUT DOWN RELAY OUTPUT
86	K127 18BR/OR	OXYGEN SENSOR DOWNSTREAM RELAY CONTROL
87	K344 18BR/GY	OXYGEN SENSOR DOWNSTREAM RELAY OUTPUT
87A	-	-

RELAY-
PARK
PUMP

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED B(+)
86	INTERNAL	PARK LAMP RELAY CONTROL
87	INTERNAL	PARK LAMP RELAY OUTPUT
87A	-	-

RELAYS
(IPM)
(CONTINUED)

RELAY-
REAR
WINDOW
DEFOGGER

CAVITY	CIRCUIT	FUNCTION
30	C15 16DB/WT	REAR WINDOW DEFOGGER RELAY OUTPUT
85	C110 20DB/LB	DEFOGGER RELAY CONTROL
86	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN)
87	INTERNAL	FUSED B(+)
87A	-	-

RELAY-RUN
(SRT)

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	F102 18PK/DB	IGNITION SWITCH OUTPUT (RUN)
86	Z1 18BK	GROUND
87	F922 14PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN)
87A	-	-

RELAY-
STARTER
MOTOR
(EXCEPT SRT)

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	T751 16YL	FUSED IGNITION SWITCH OUTPUT (START)
86	T41 20YL/DB ○○	TRS T41 SENSE
86	T752 20DG/OR ○	STARTER MOTOR RELAY CONTROL
87	T750 14YL/GY	STARTER MOTOR RELAY OUTPUT
87A	-	-

RELAY-
TRAILER
TOW
LEFT
TURN

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED B(+)
86	INTERNAL	TRAILER TOW LEFT TURN RELAY CONTROL
87	L673 18YL	TRAILER TOW LEFT TURN RELAY OUTPUT
87A	-	-













○ GAS
○○ DIESEL

RELAYS
(IPM)
(CONTINUED)













RELAY-
TRAILER
TOW
RIGHT
TURN

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	INTERNAL	FUSED B(+)
86	INTERNAL	TRAILER TOW RIGHT TURN RELAY CONTROL
87	L674 18LG	TRAILER TOW RIGHT TURN RELAY OUTPUT
87A	-	-

RELAY-
TRANSMISSION
CONTROL





CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	FUSED B(+)
85	T515 18YL/DB   	TRANSMISSION CONTROL RELAY CONTROL
85	T515 20YL/DB   	TRANSMISSION CONTROL RELAY CONTROL
86	K125 18BR/DG   	GENERATOR SOURCE
86	F941 20PK/LG  	FUSED IGNITION SWITCH OUTPUT (RUN-START)
86	Z912 20BK 	GROUND
87	T16 18YL/OR	TRANSMISSION CONTROL RELAY OUTPUT
87A	-	-

RELAY-
WIPER
HIGH/LOW

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	WIPER CONTROL
85	INTERNAL	WIPER HIGH/LOW RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	W4 14BR/OR   	WIPER RELAY HIGH SPEED OUTPUT
87	W4 16BR/OR   	WIPER RELAY HIGH SPEED OUTPUT
87A	W3 14BR/WT   	WIPER RELAY LOW SPEED OUTPUT
87A	W3 16BR/WT   	WIPER RELAY LOW SPEED OUTPUT


RELAY-
WIPER
ON/OFF

CAVITY	CIRCUIT	FUNCTION
30	INTERNAL	WIPER CONTROL
85	INTERNAL	WIPER ON/OFF RELAY CONTROL
86	INTERNAL	FUSED B(+)
87	INTERNAL	FUSED B(+)
87A	Z920 12BK	GROUND


 NGC
 SRT
 EXCEPT SRT
 DIESEL


MODULE-FRONT CONTROL


CAV	CIRCUIT	FUNCTION
1	L44 18WT/TN	RIGHT LOW BEAM DRIVER
2	L33 18WT/LG	LEFT HIGH BEAM DRIVER
3	INTERNAL	FUSED B(+)
4	INTERNAL	FUSED B(+)
5	W10 20BR	WASHER PUMP MOTOR CONTROL
6	INTERNAL	FUSED B(+)
7	INTERNAL	FUSED B(+)
8	L34 18WT/GY	RIGHT HIGH BEAM DRIVER
9	L43 18WT/DB	LEFT LOW BEAM DRIVER
10	INTERNAL	FUSED B(+)
11	-	-
12	Z117 18BK/WT	GROUND
13	-	-
14	INTERNAL	TRAILER TOW LEFT TURN RELAY CONTROL
15	INTERNAL	PARK LAMP RELAY CONTROL
16	-	-
17	INTERNAL	WIPER ON/OFF RELAY CONTROL
18	INTERNAL	FOG LAMP RELAY CONTROL
19	L62 18WT/YL	RIGHT REAR TURN LAMP DRIVER
20	-	-
21	-	-
22	L1 18WT/LG	BACKUP LAMP FEED
23	-	-
24	-	-
25	-	-
26	-	-
27	Z116 18BK/VT	GROUND
28	W1 20BR/TN	WASHER FLUID SWITCH SENSE
29	G31 20VT/LG	AAT SIGNAL
30	Z118 18BK/YL	GROUND
31	Z117 18BK/WT	GROUND
32	INTERNAL	HORN RELAY CONTROL
33	-	-
34	INTERNAL	TRAILER TOW RIGHT TURN RELAY CONTROL
35	INTERNAL	ADJUSTABLE PEDALS RELAY CONTROL
36	-	-
37	INTERNAL	WIPER HIGH/LOW RELAY CONTROL
38	D25 20VT/PK	PCI BUS
39	-	-
40	-	-
41	L54 18WT/LG	RIGHT STOP LAMP DRIVER
42	L61 18WT/LG	LEFT FRONT TURN LAMP DRIVER
43	L53 18DG/WT	LEFT STOP LAMP DRIVER
44	L63 18WT/DG	LEFT REAR TURN LAMP DRIVER
45	L60 18WT/TN	RIGHT FRONT TURN LAMP DRIVER
46	G180 20VT/YL	SENSOR GROUND
47	Z118 18BK/YL	GROUND
48	INTERNAL	FUSED IGNITION SWITCH OUTPUT (RUN-START)
49	W7 20BR/GY	WIPER PARK SWITCH SENSE





■ ■ EXCEPT NGC

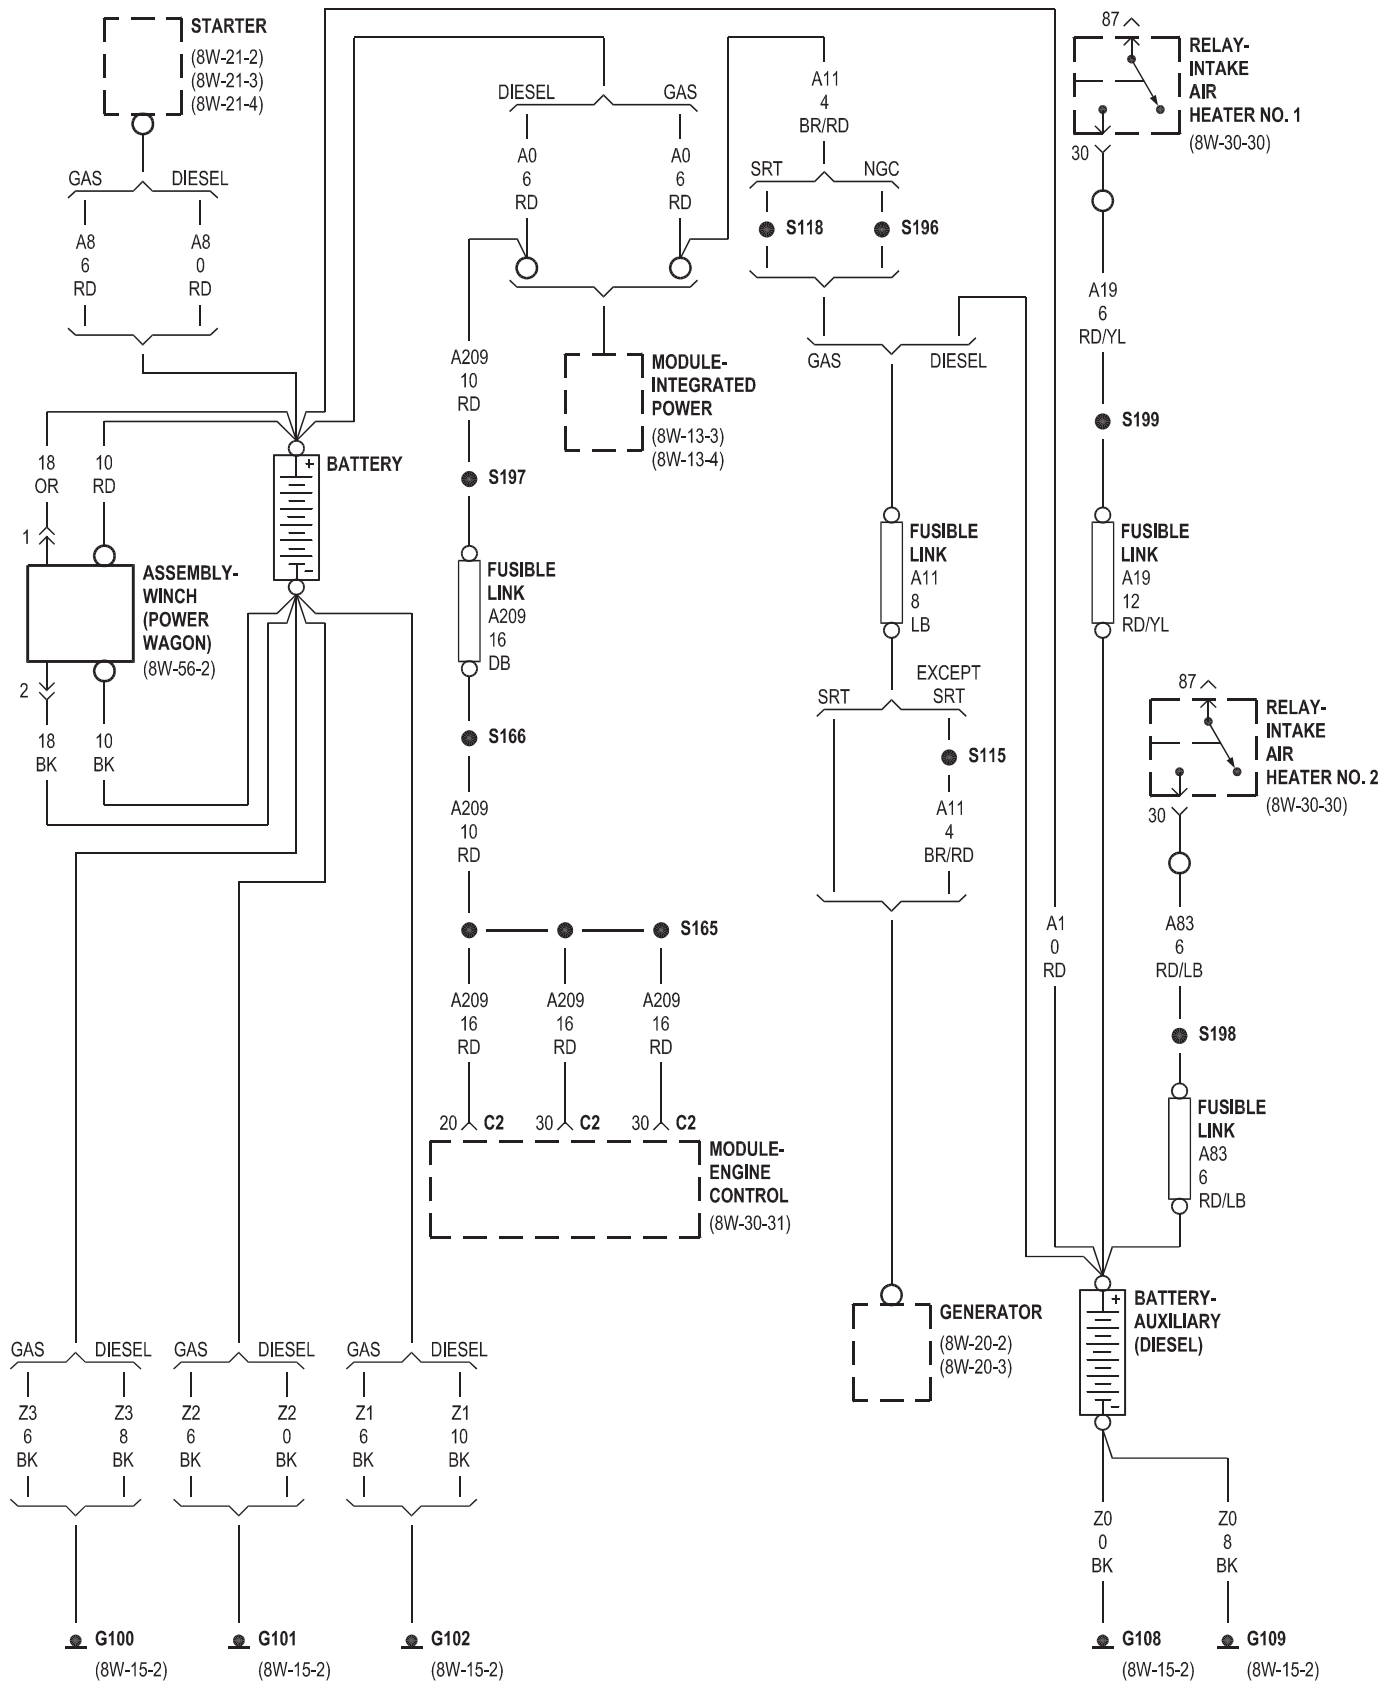


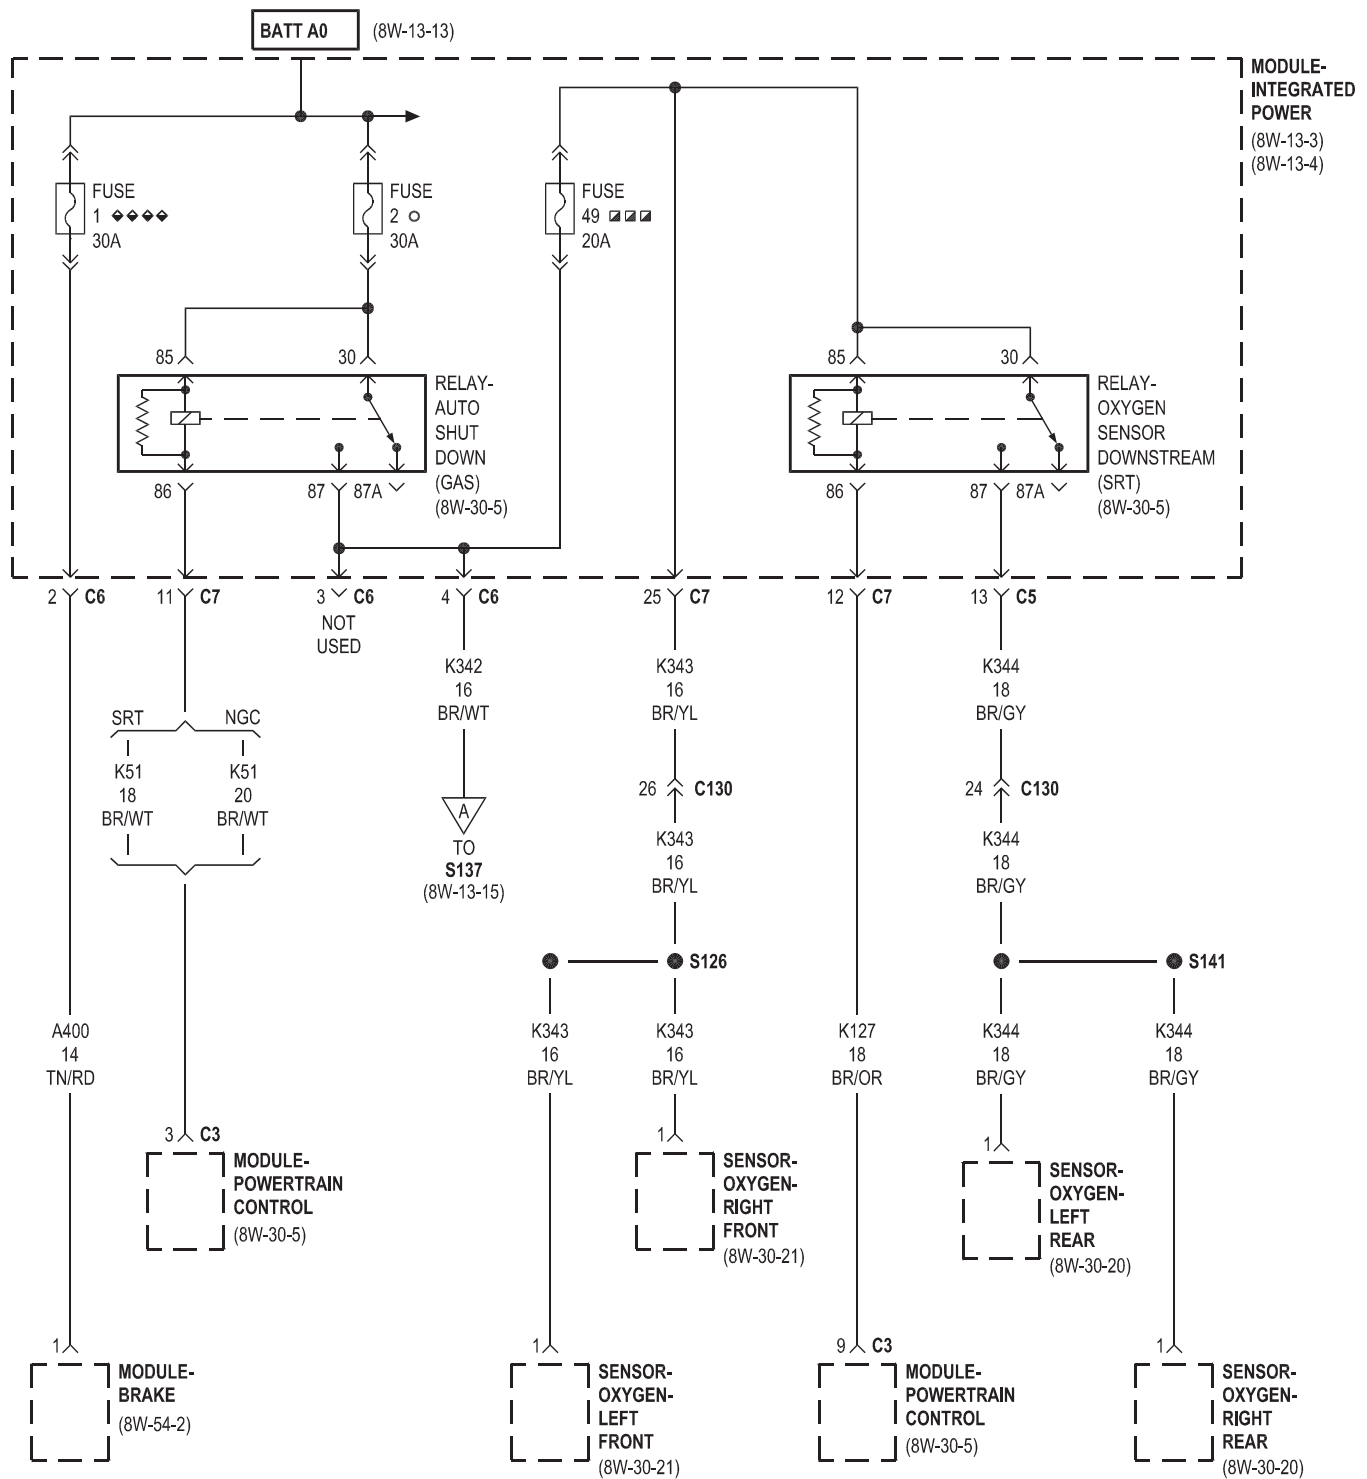

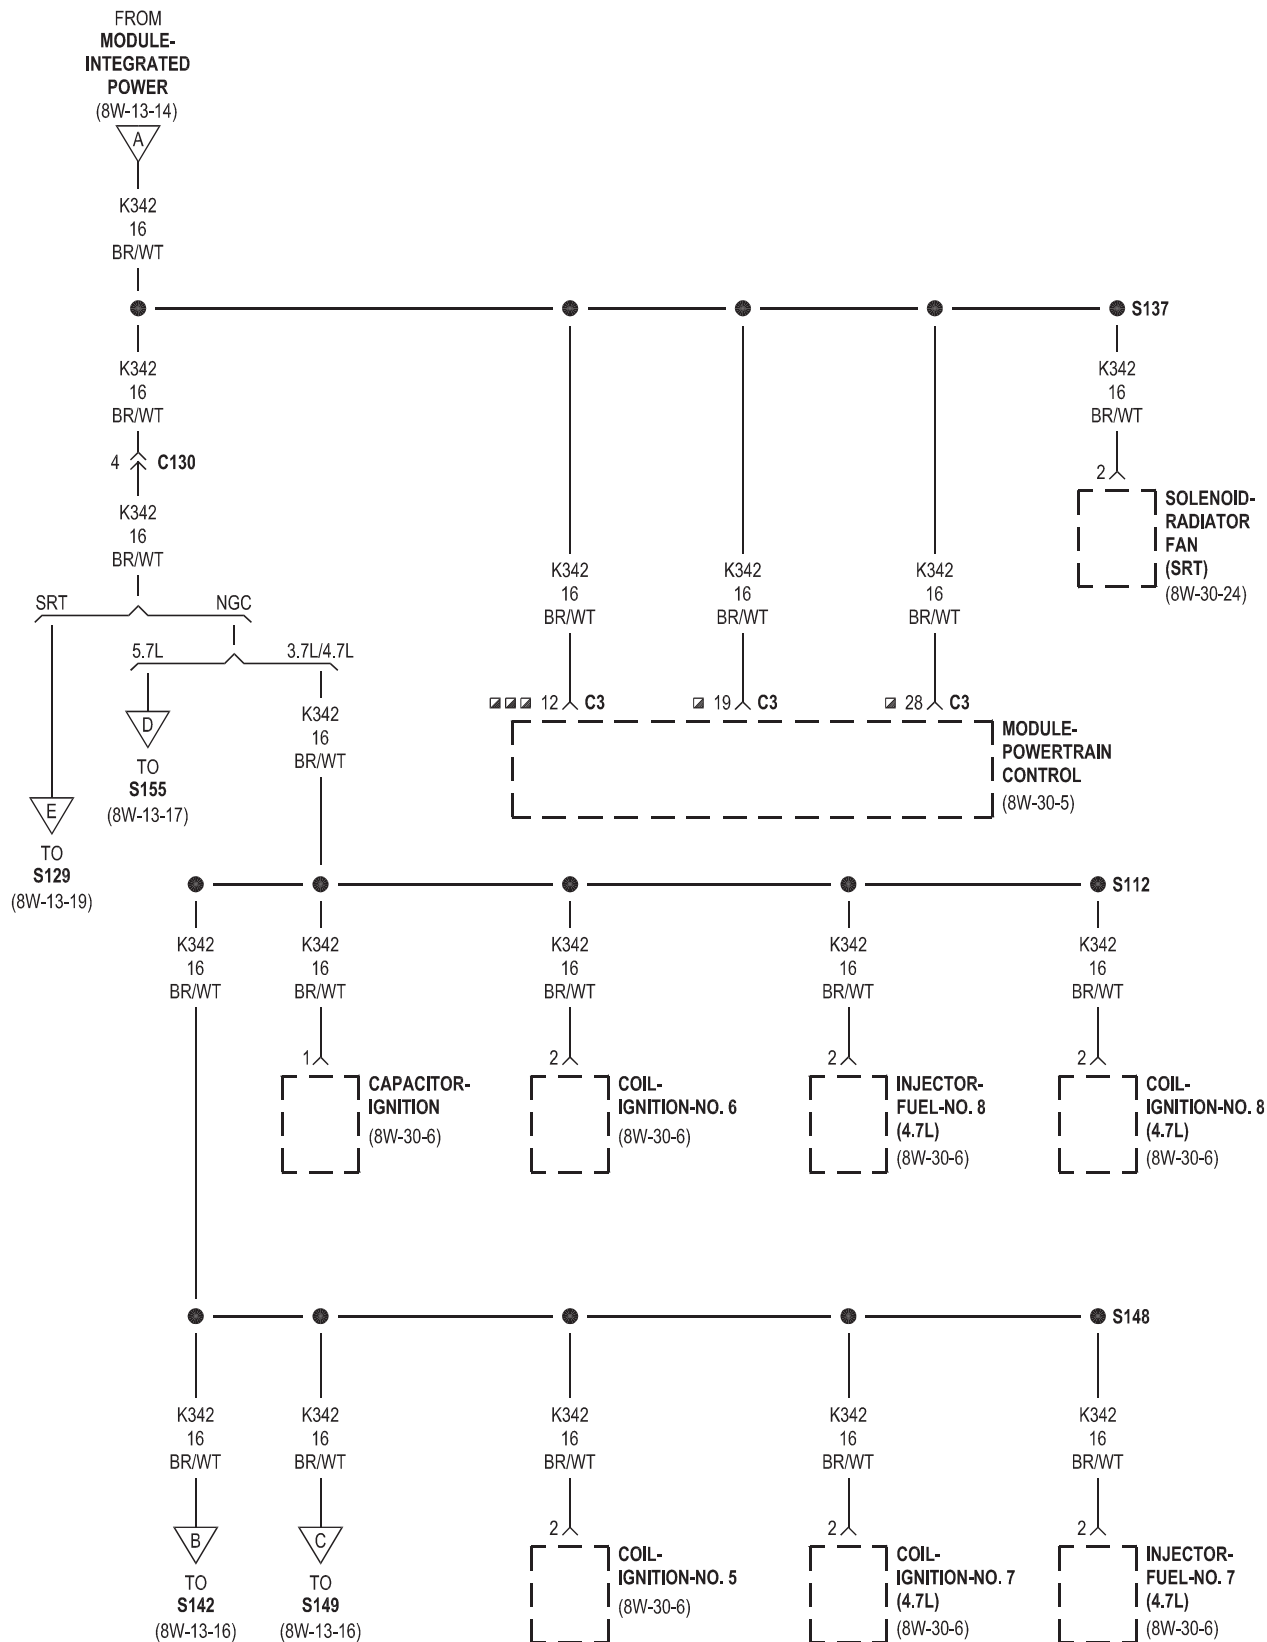



NGC
SRT

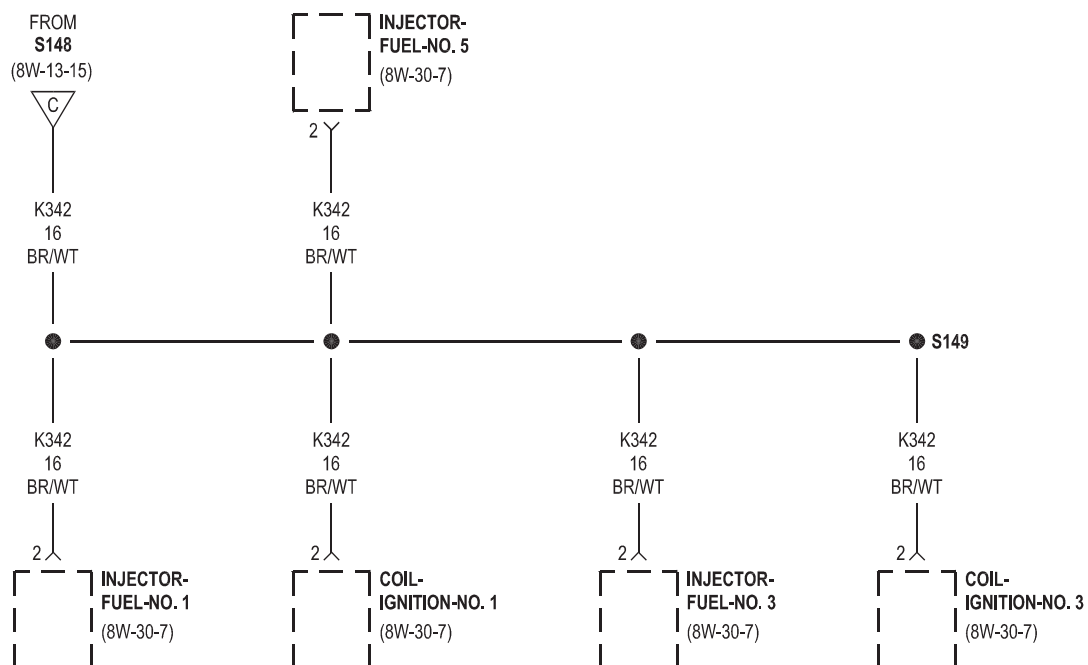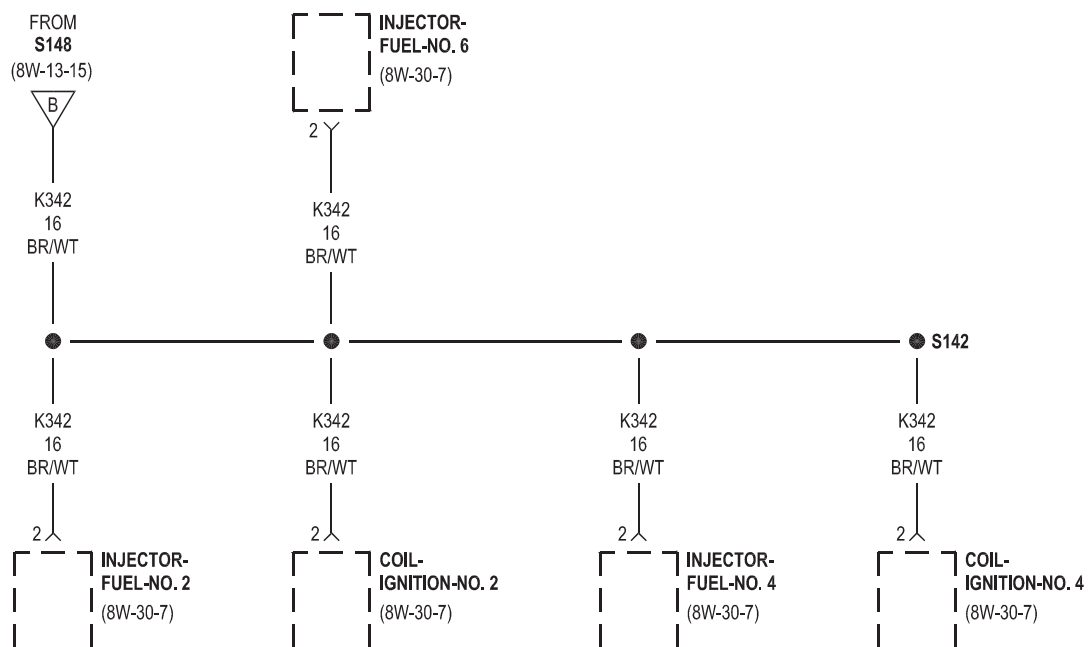

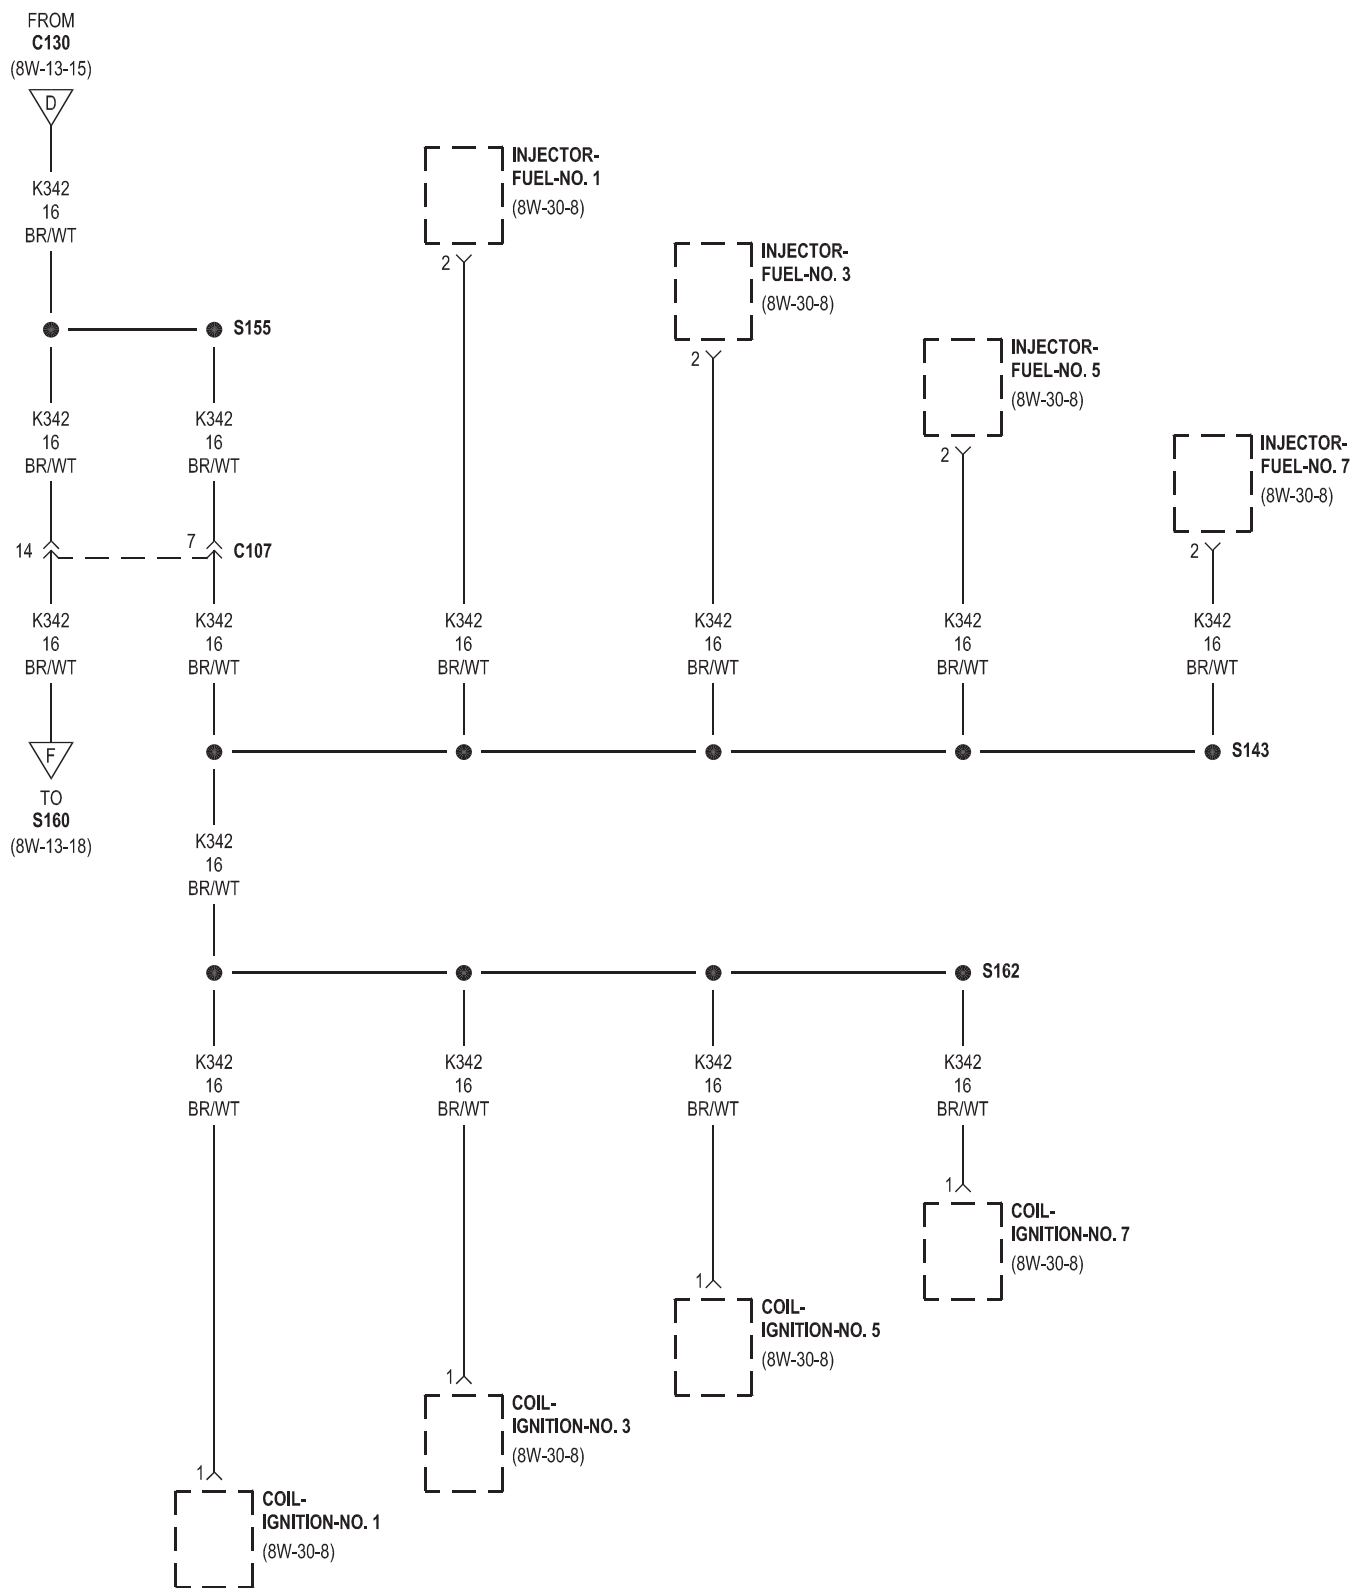



5.7L

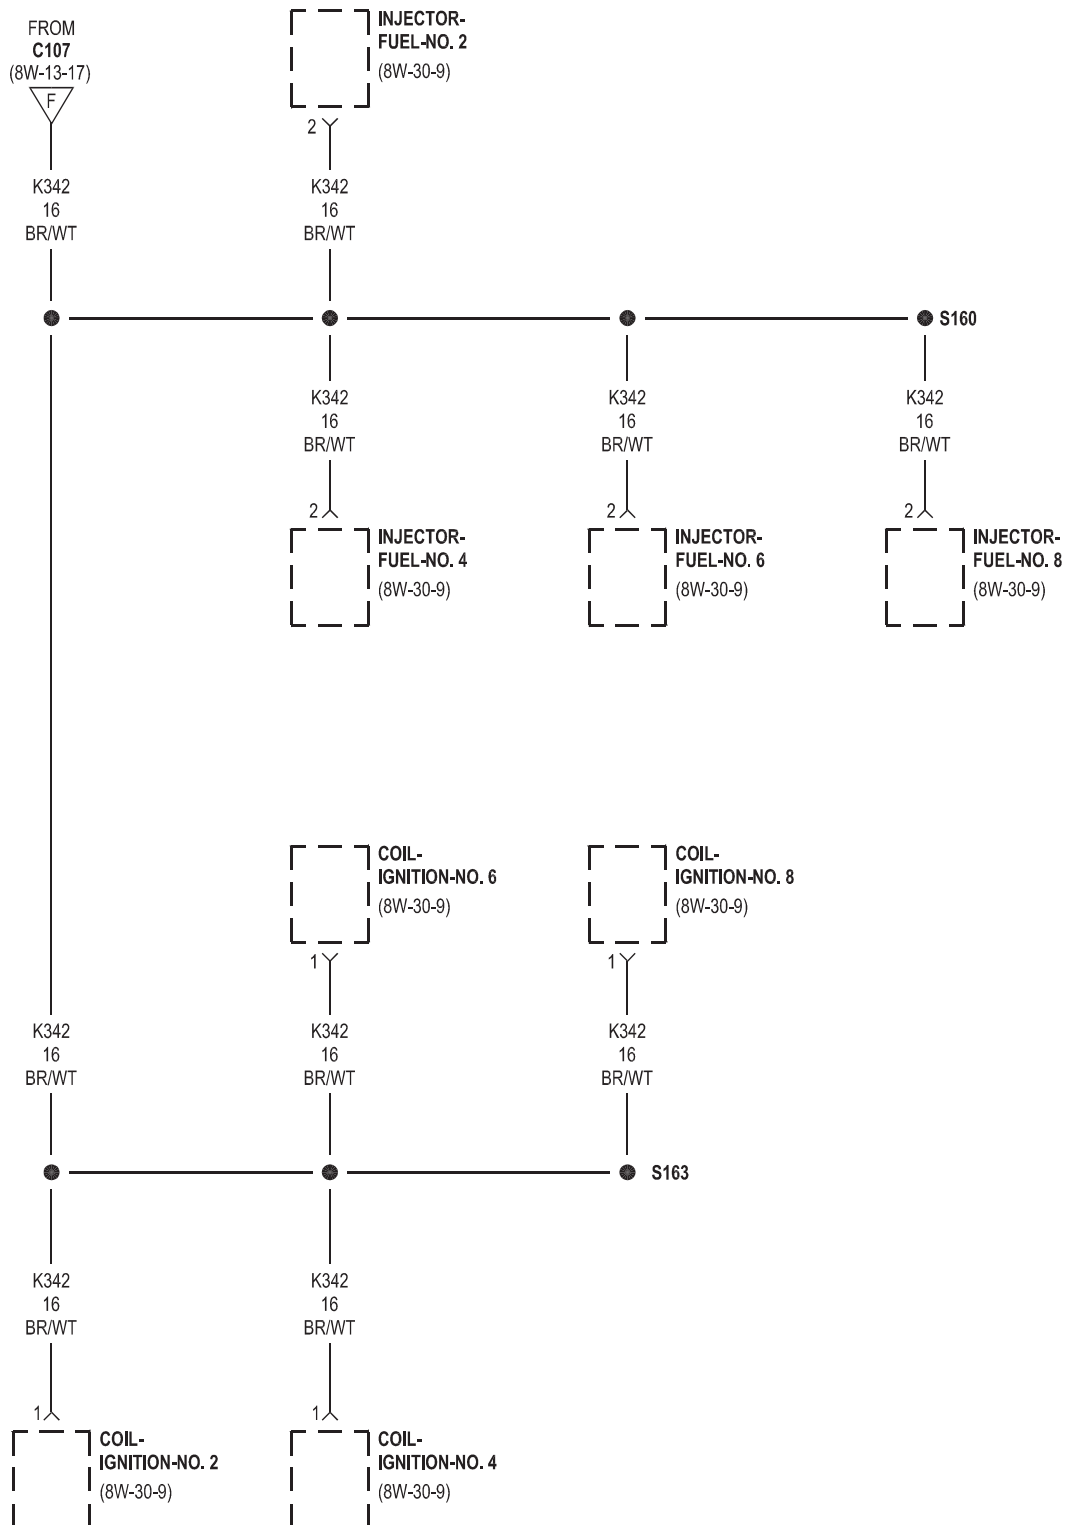


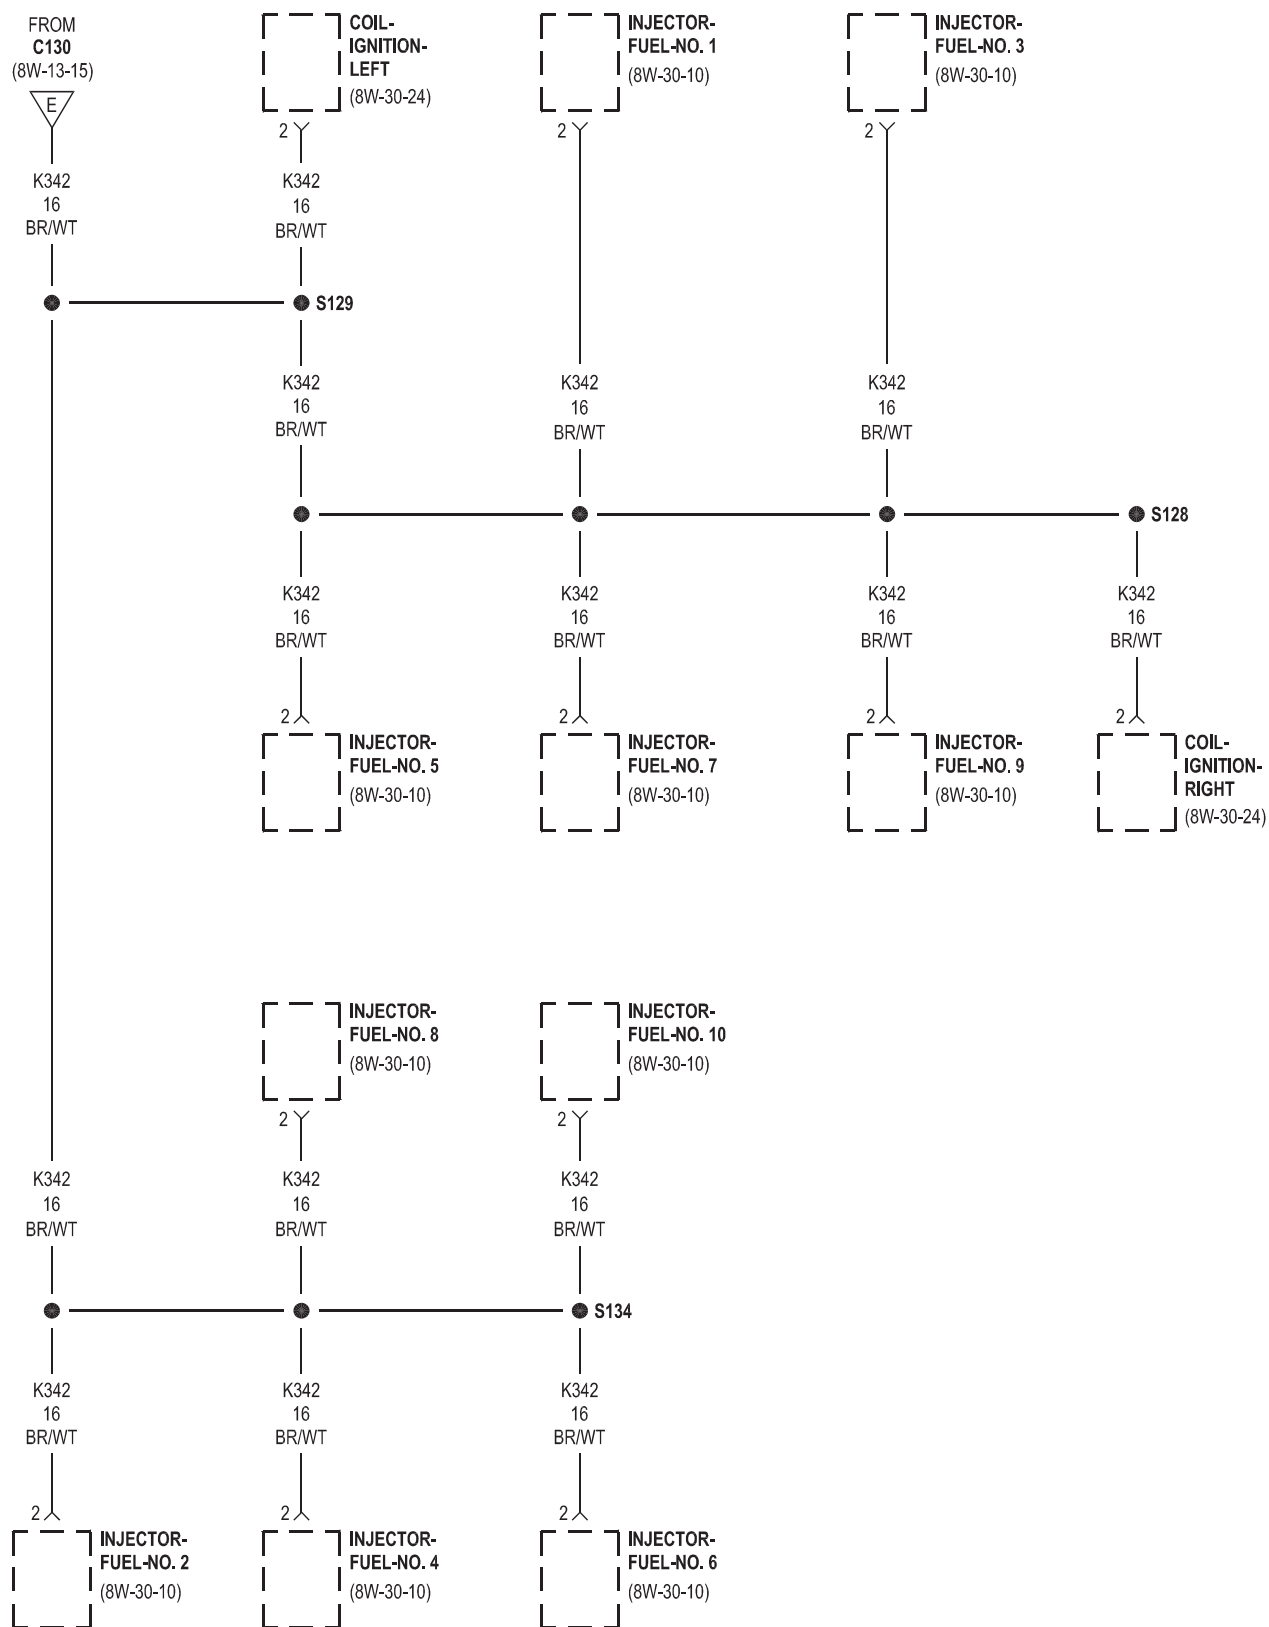





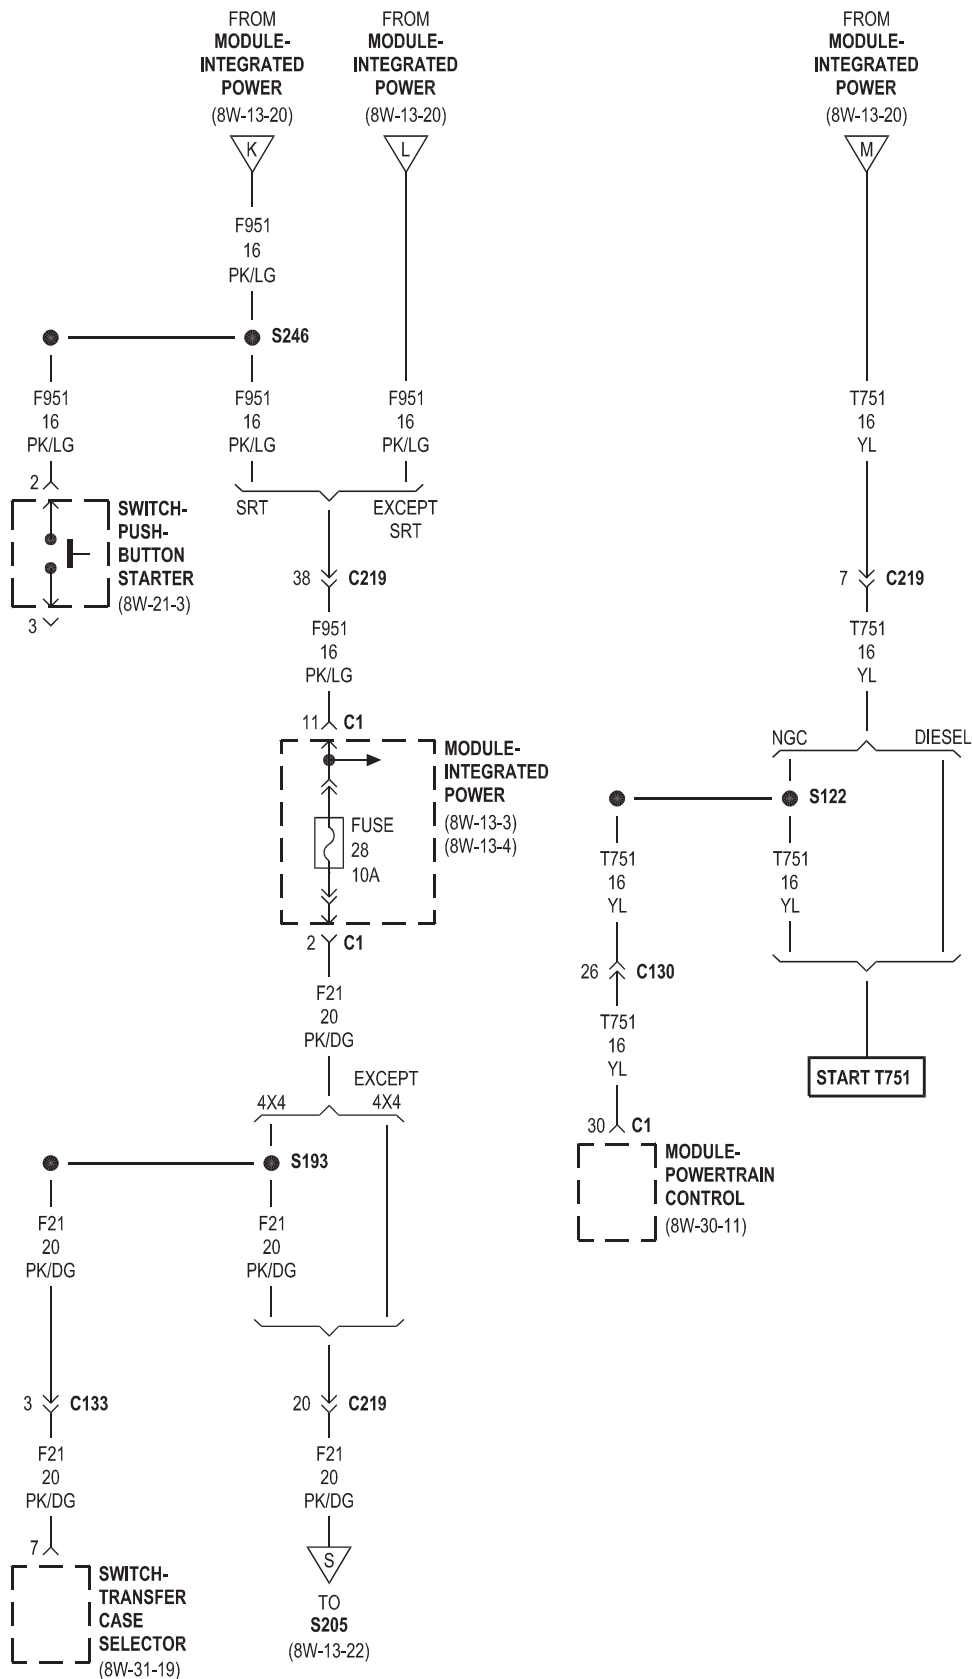


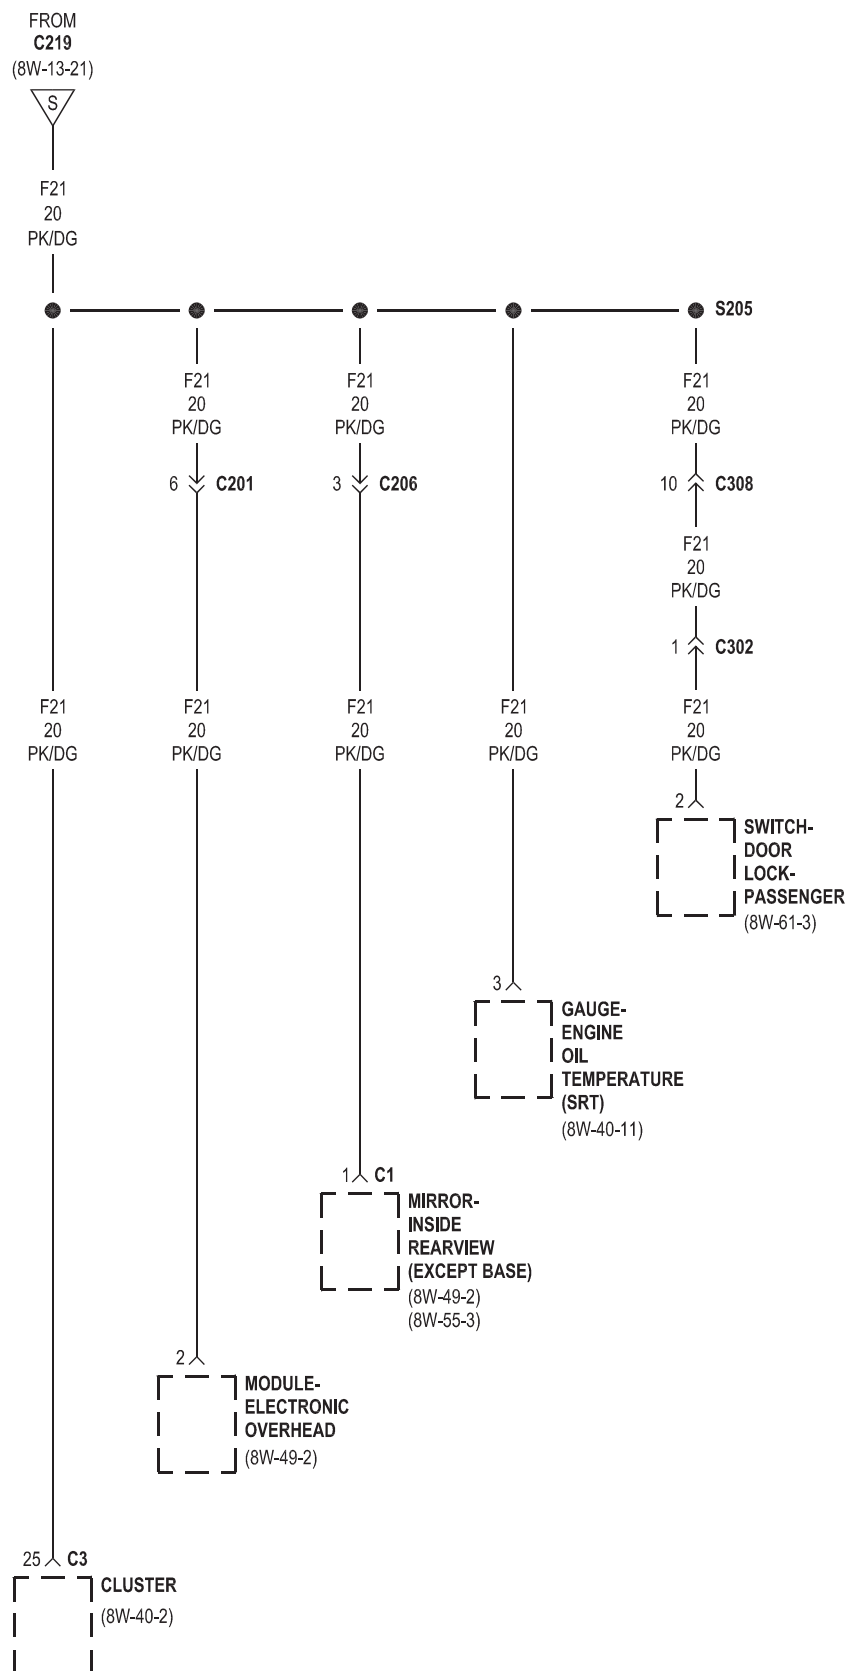

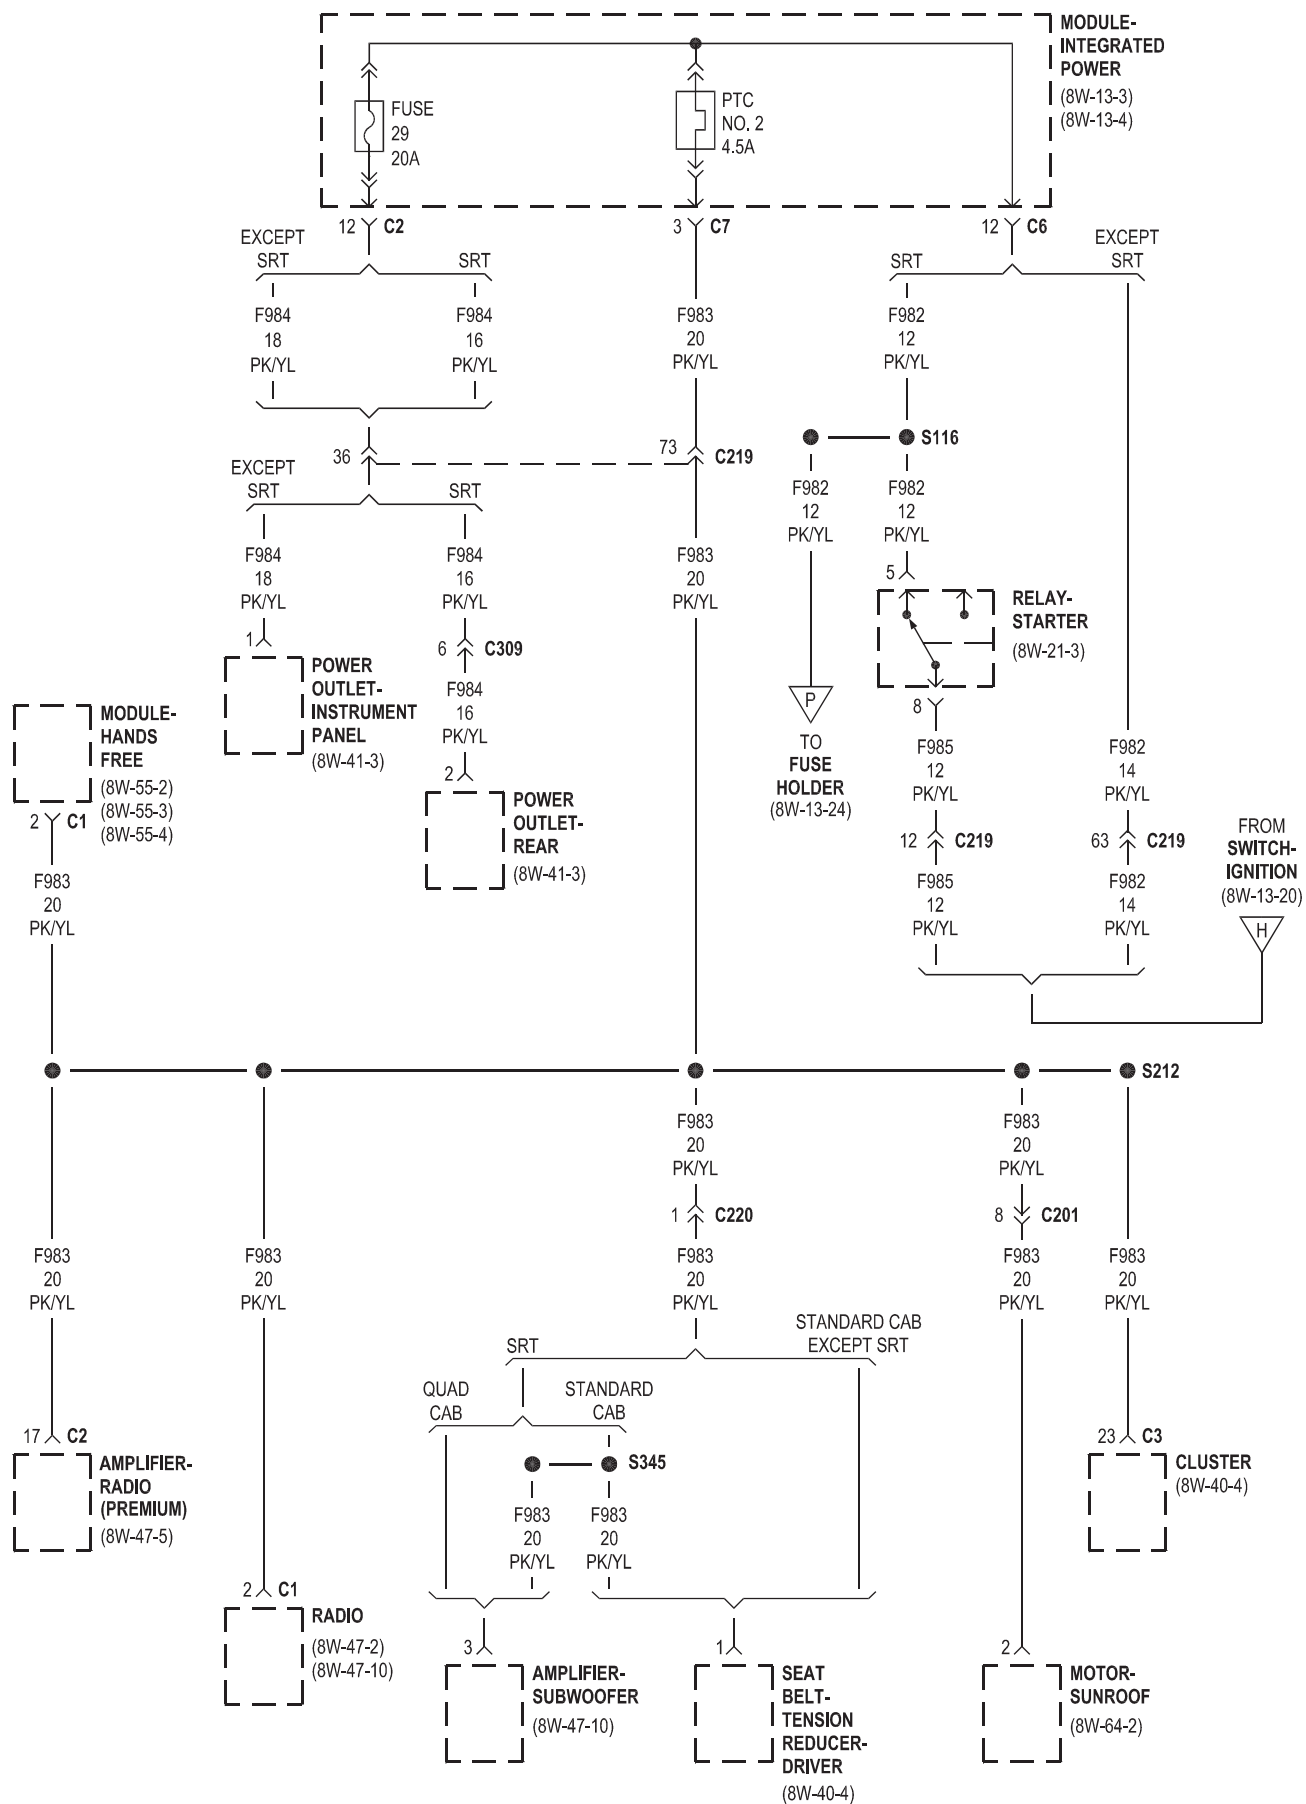


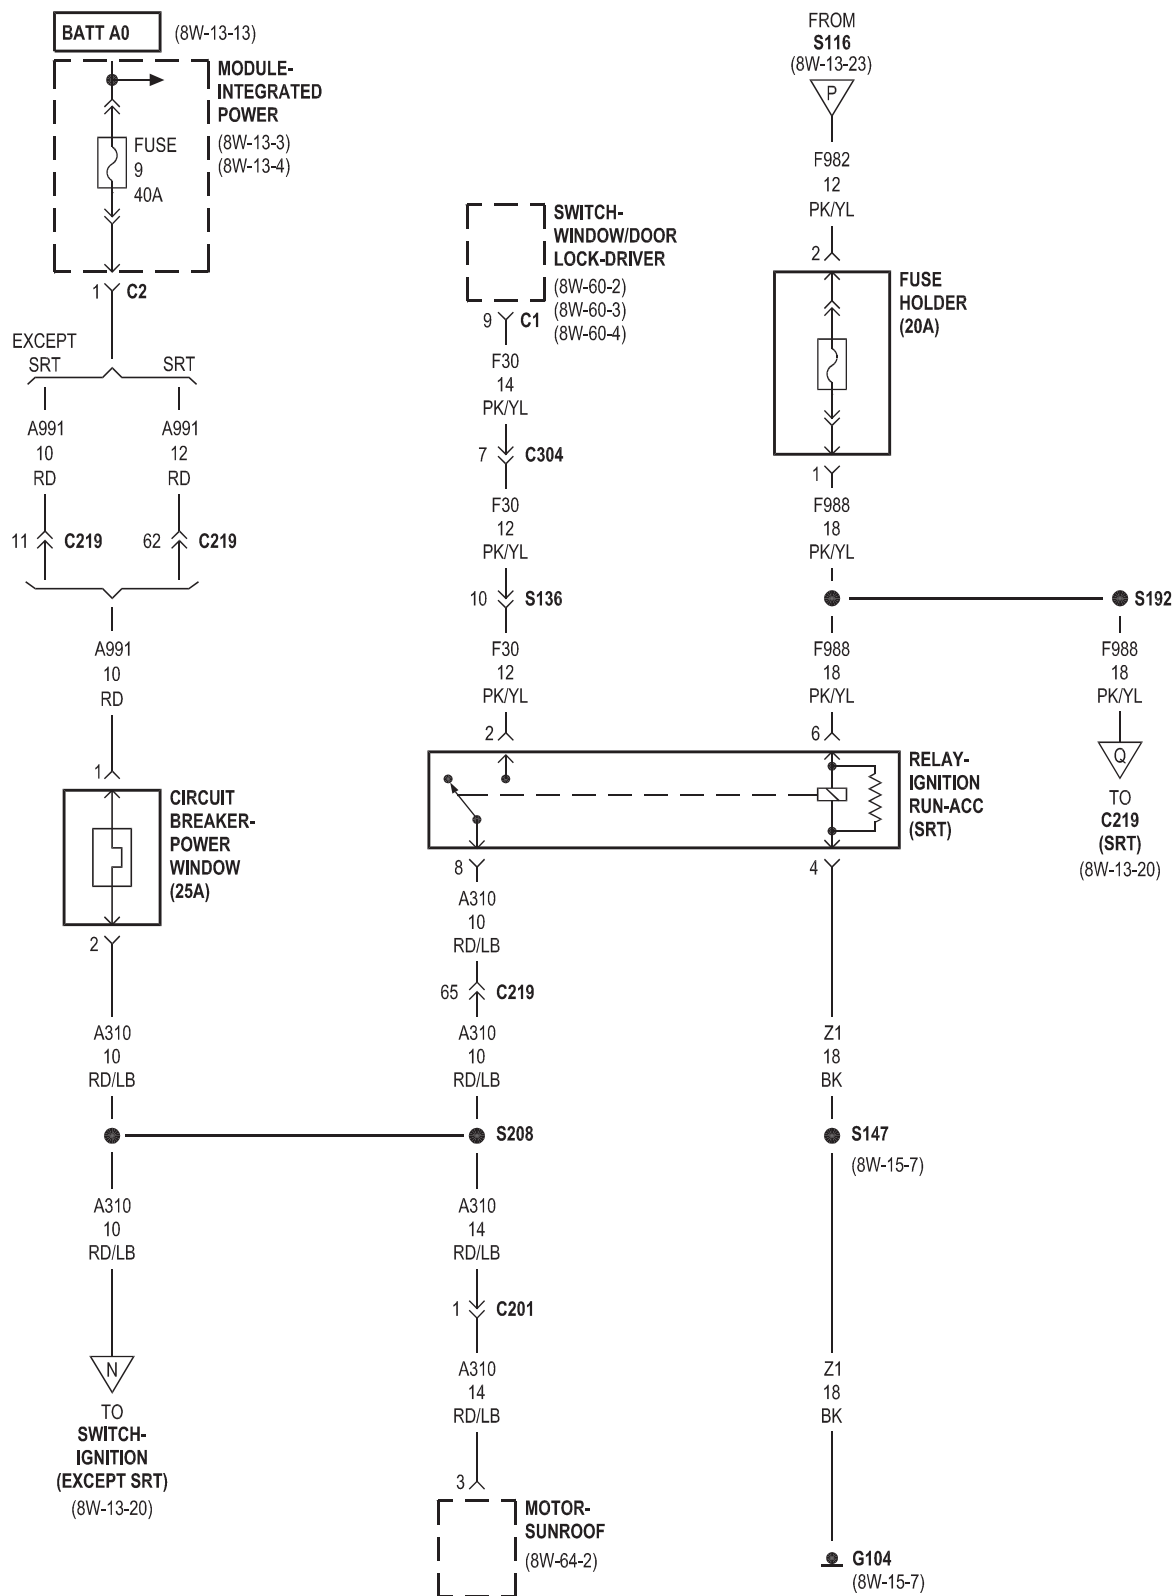


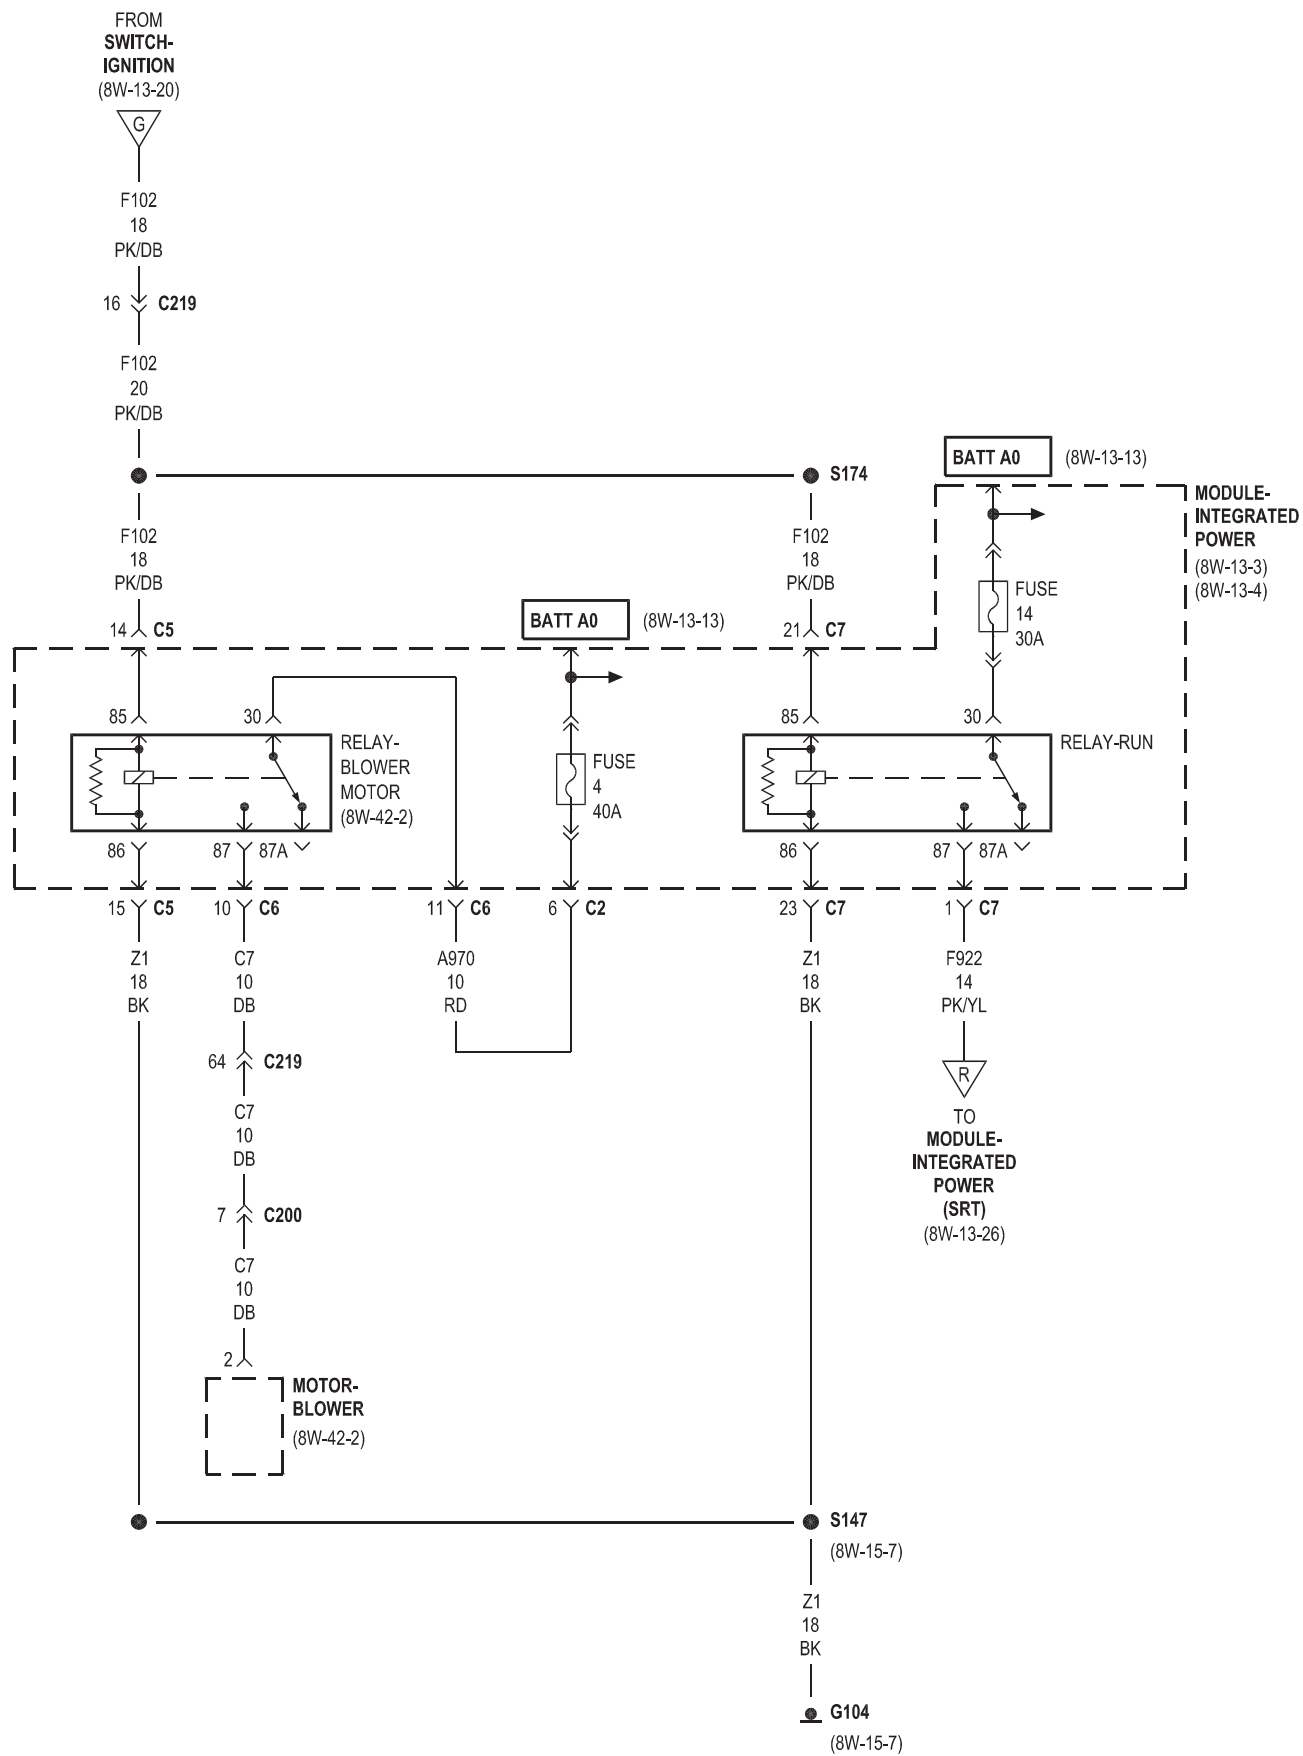

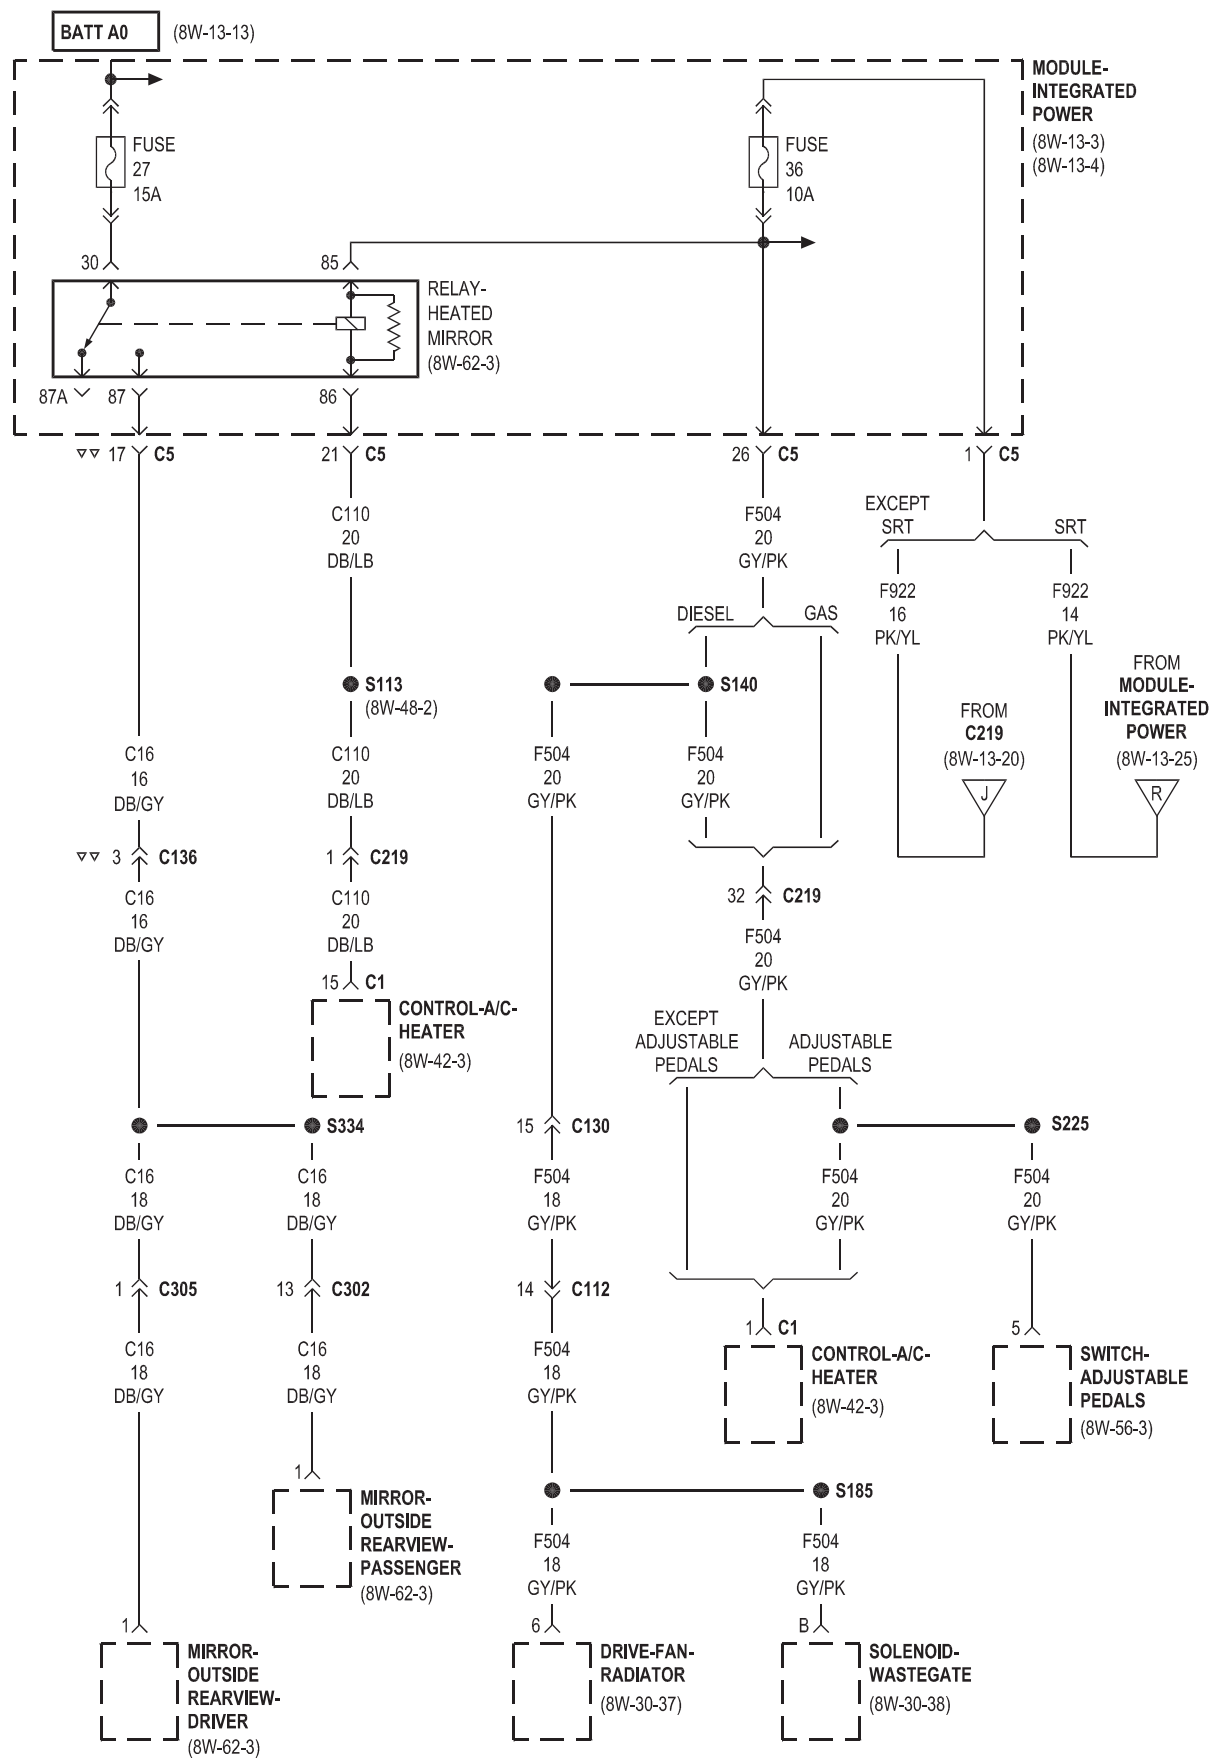


▽▽ EXCEPT BASE

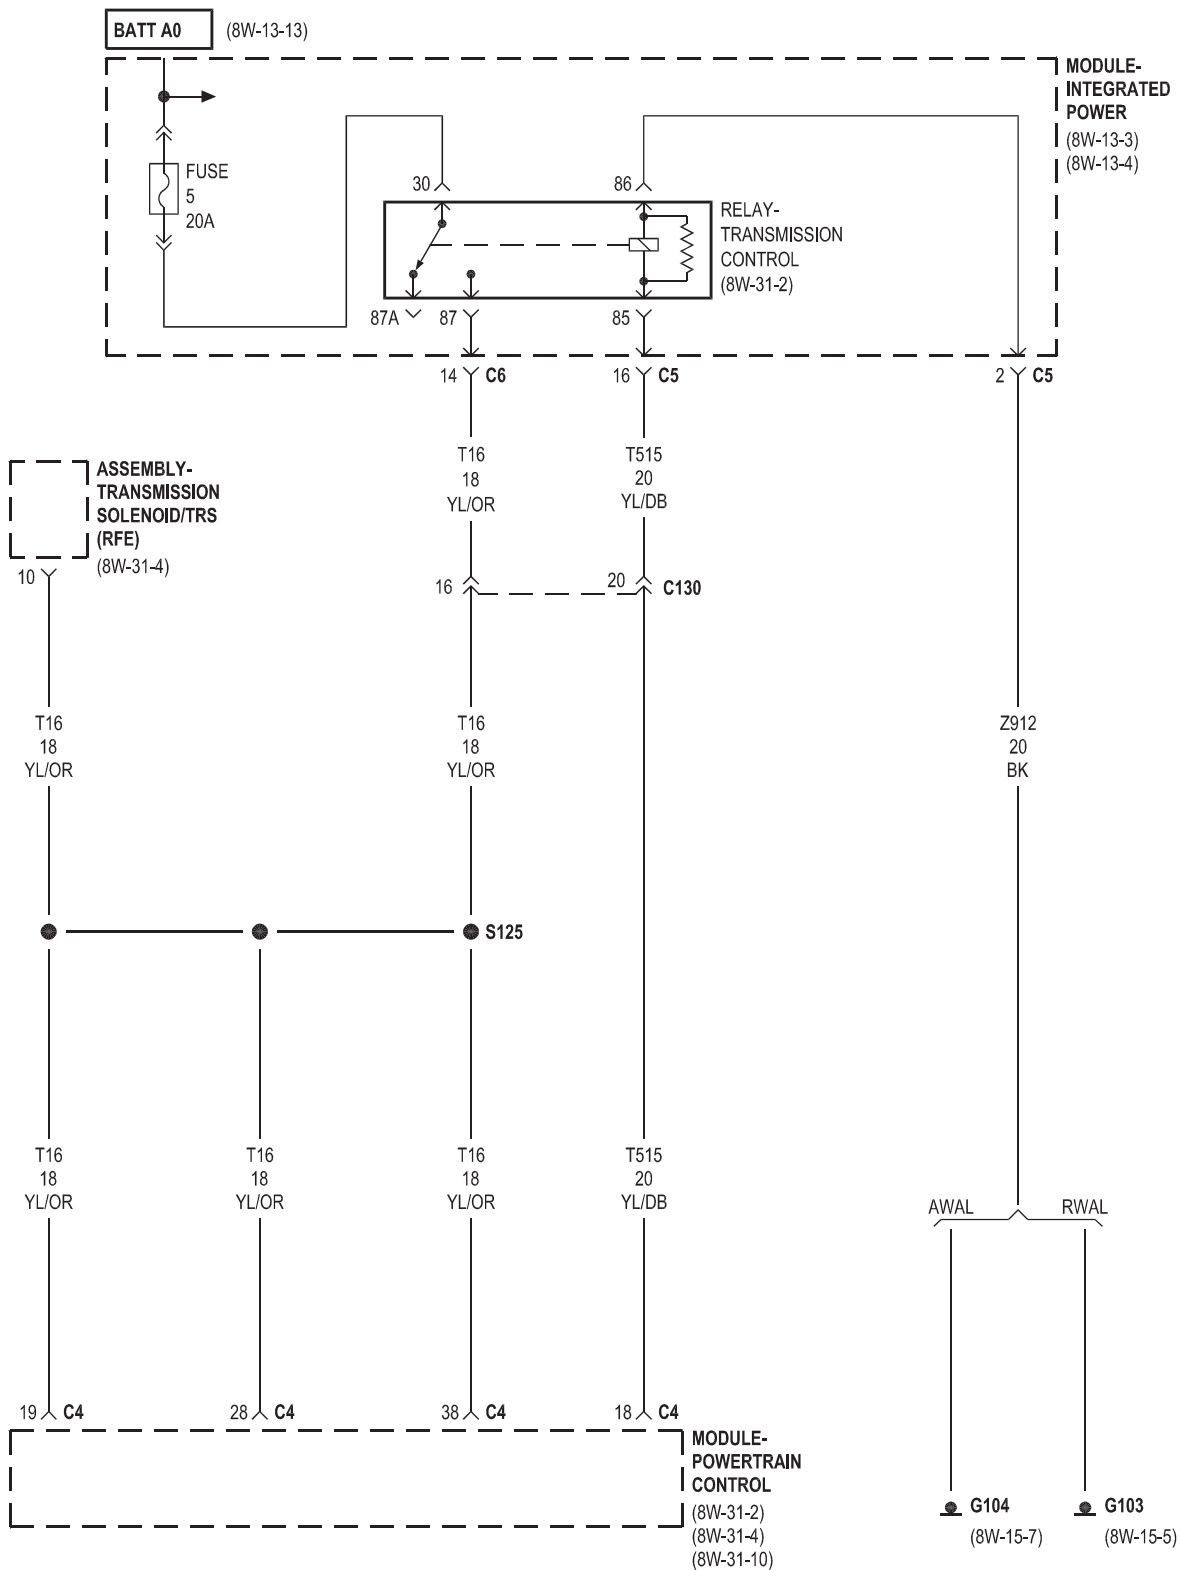


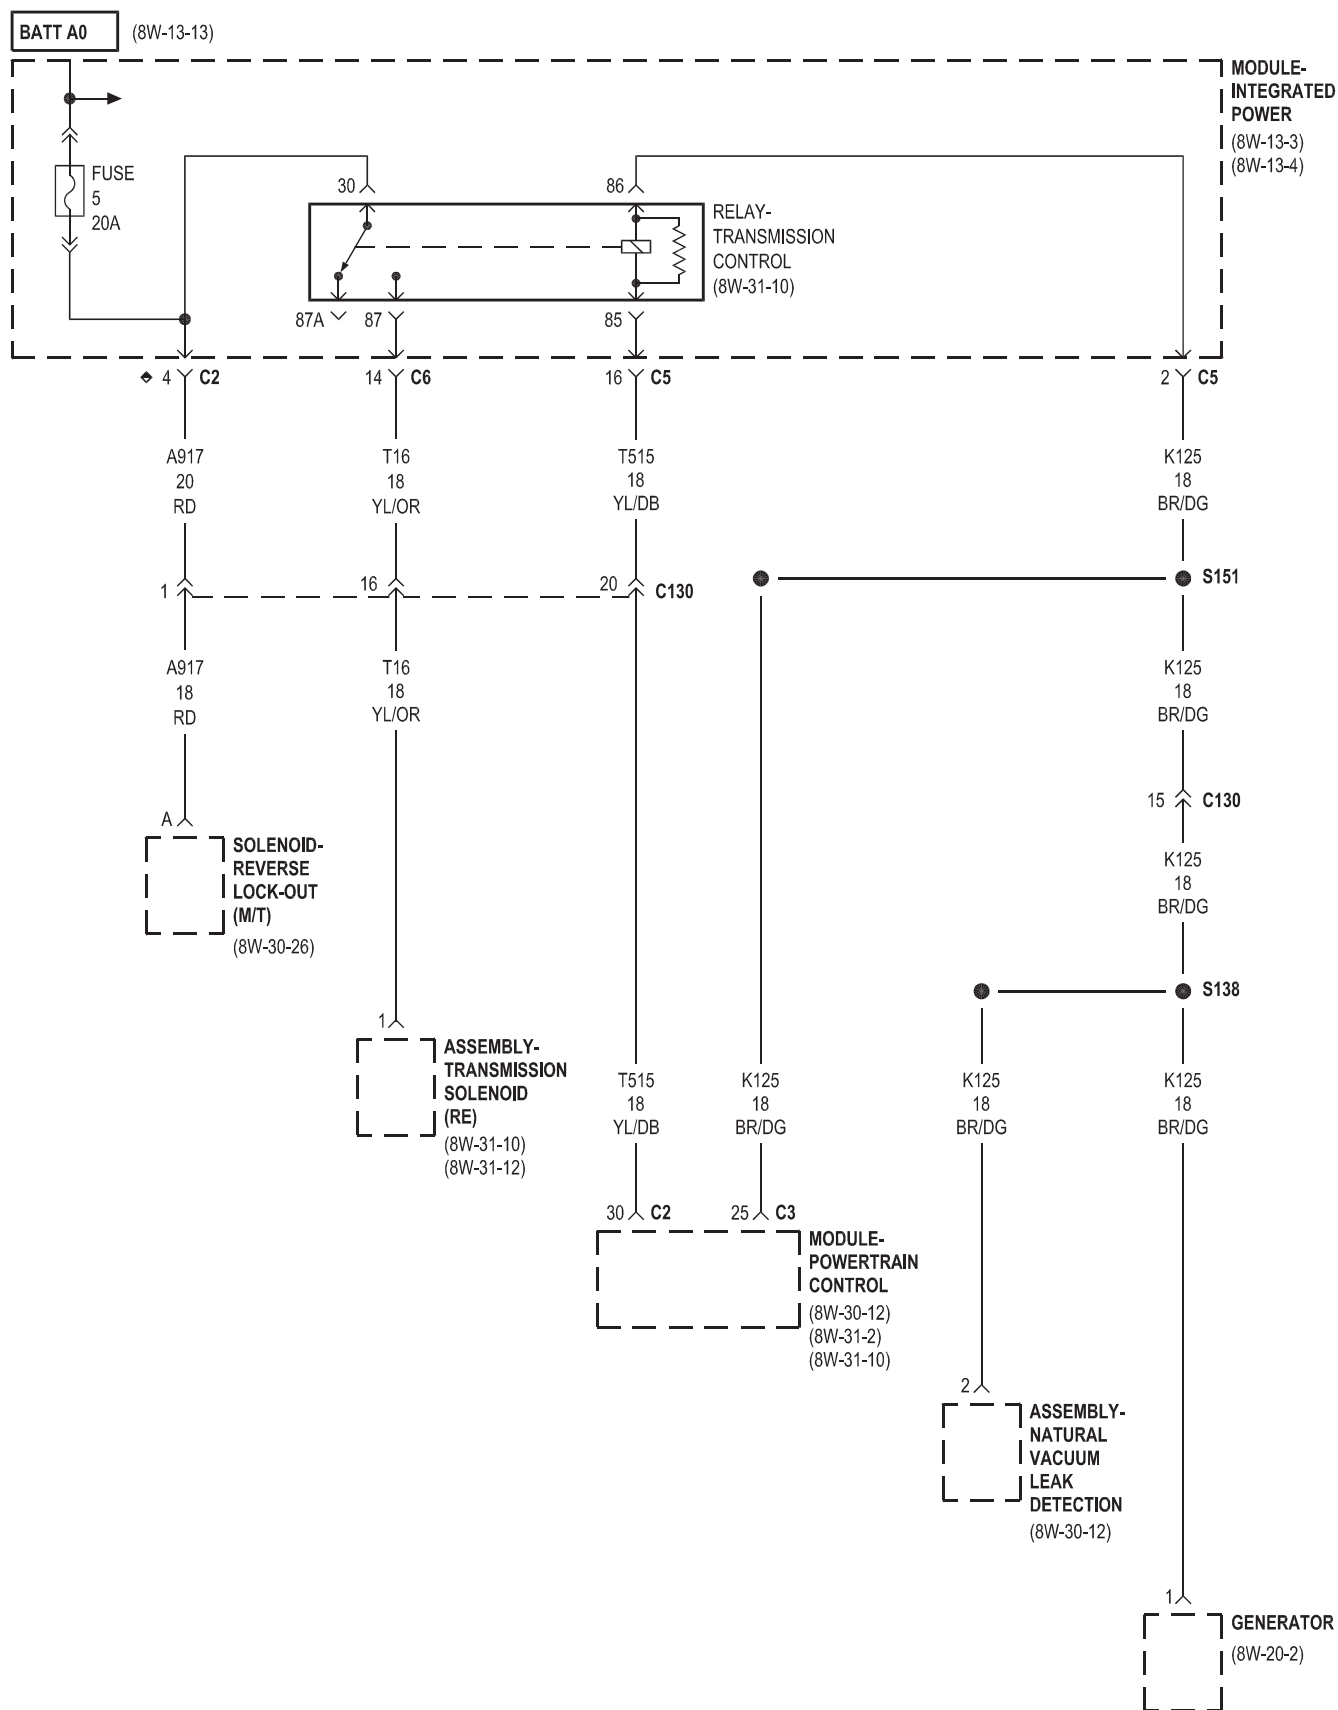



◆ STANDARD CAB

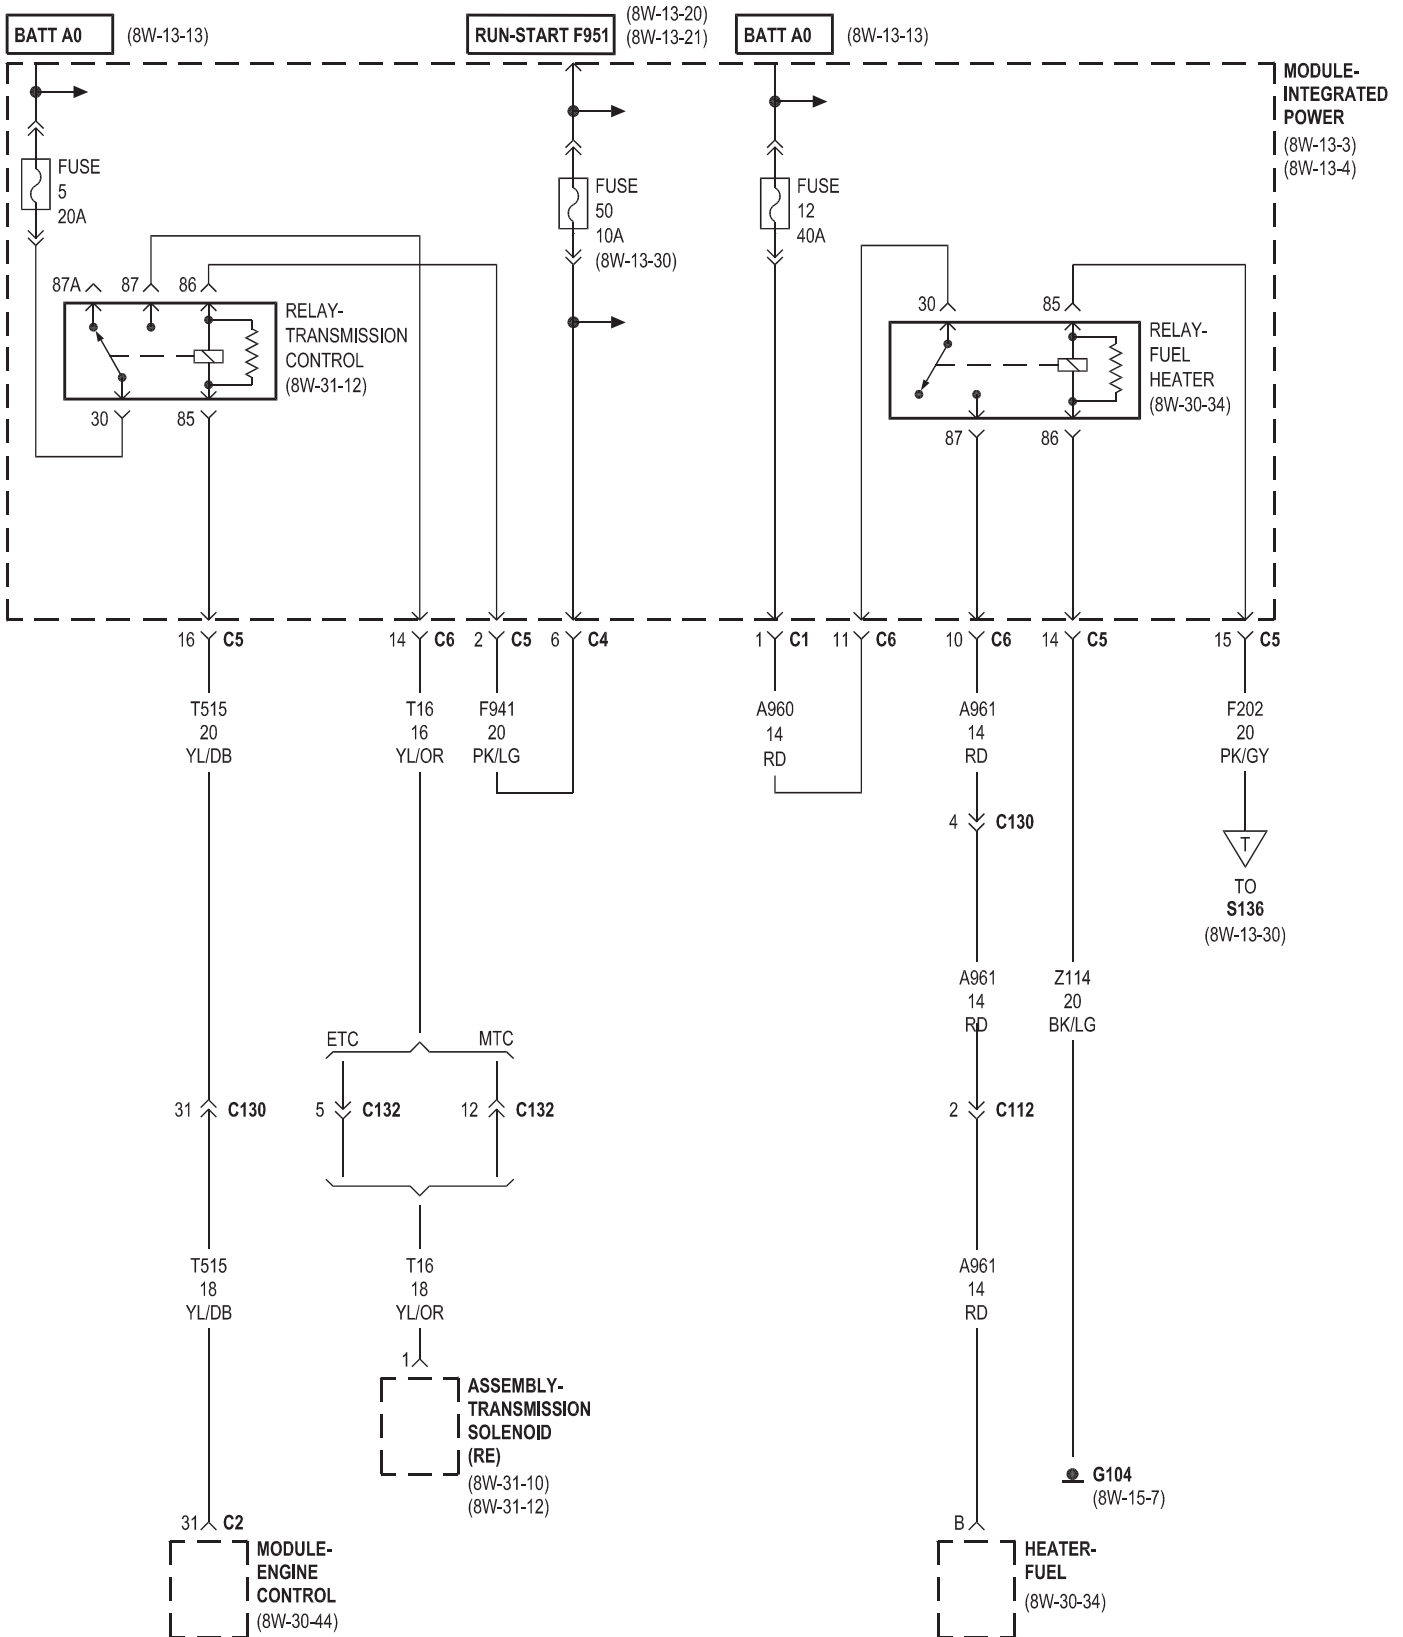




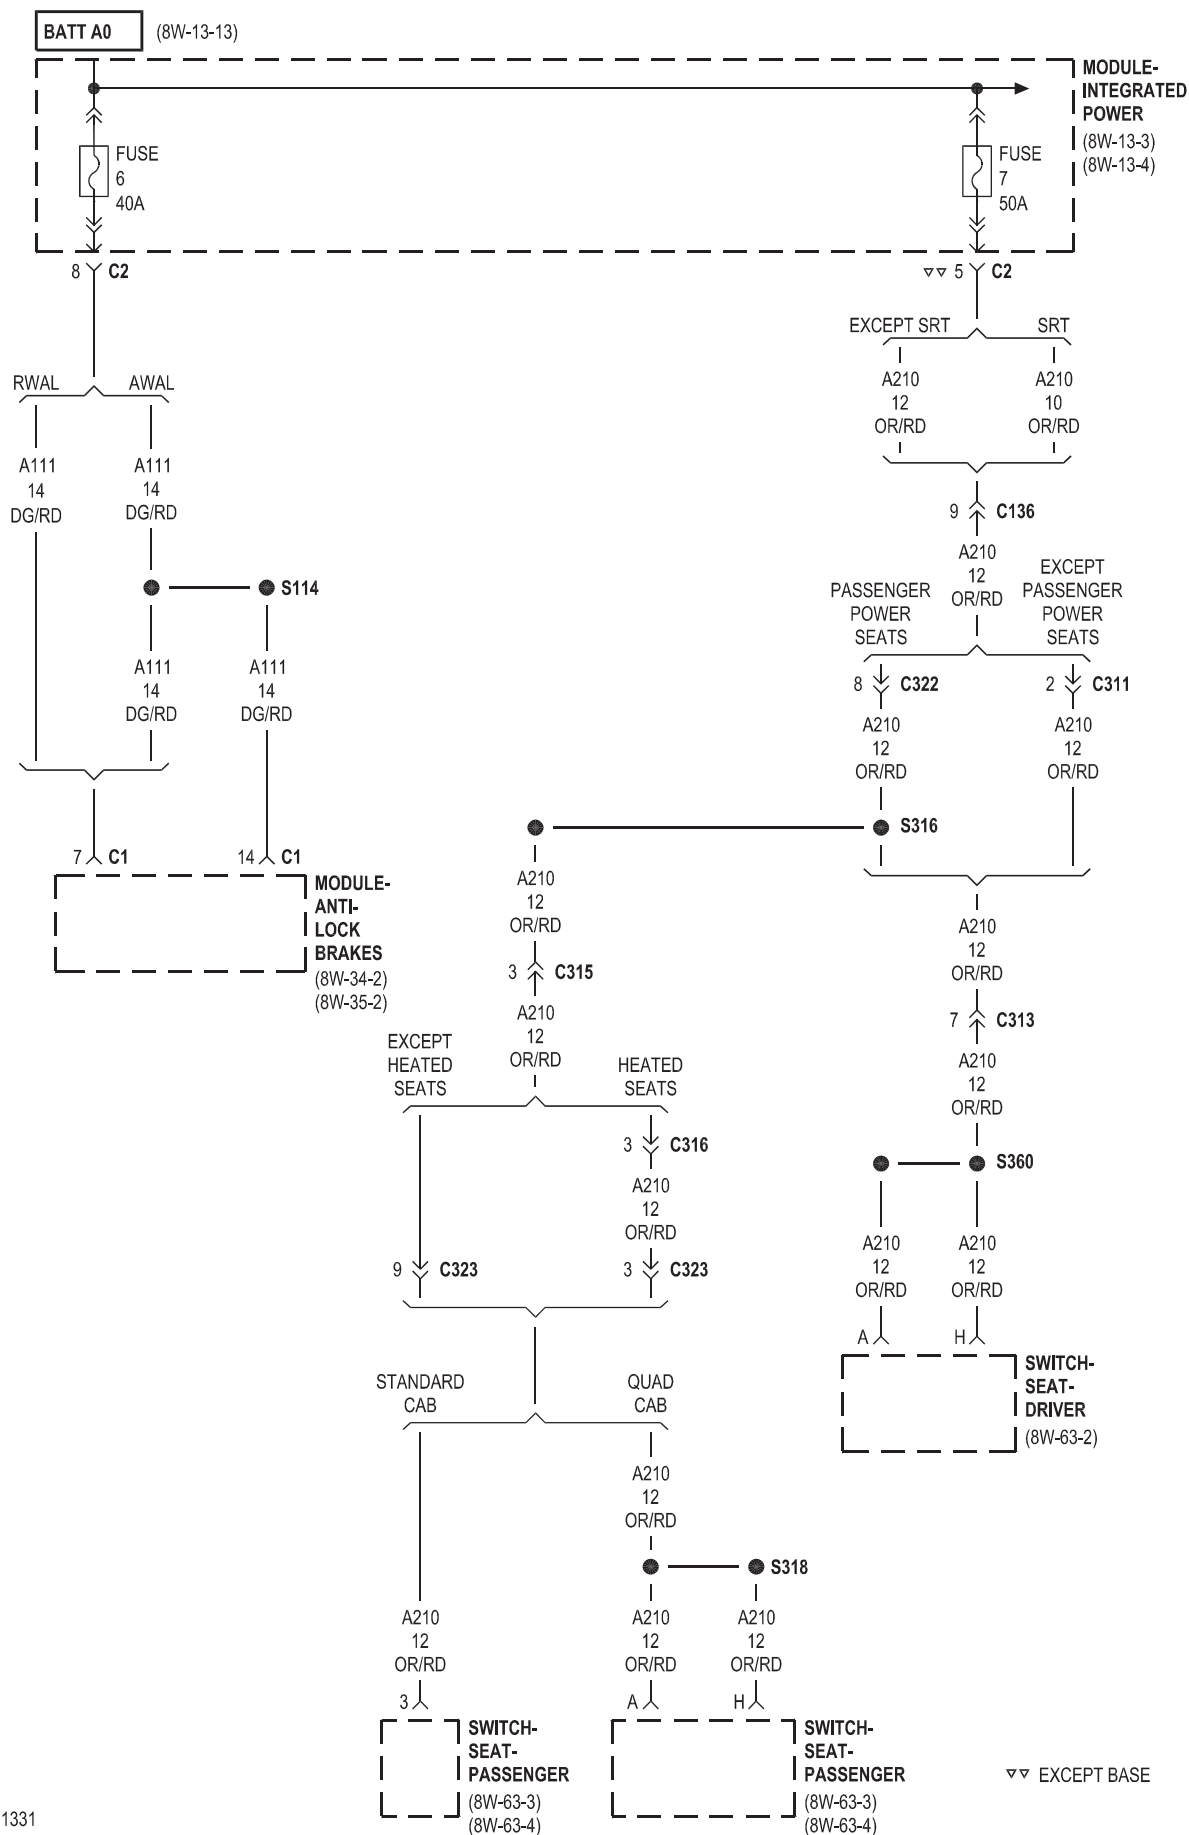

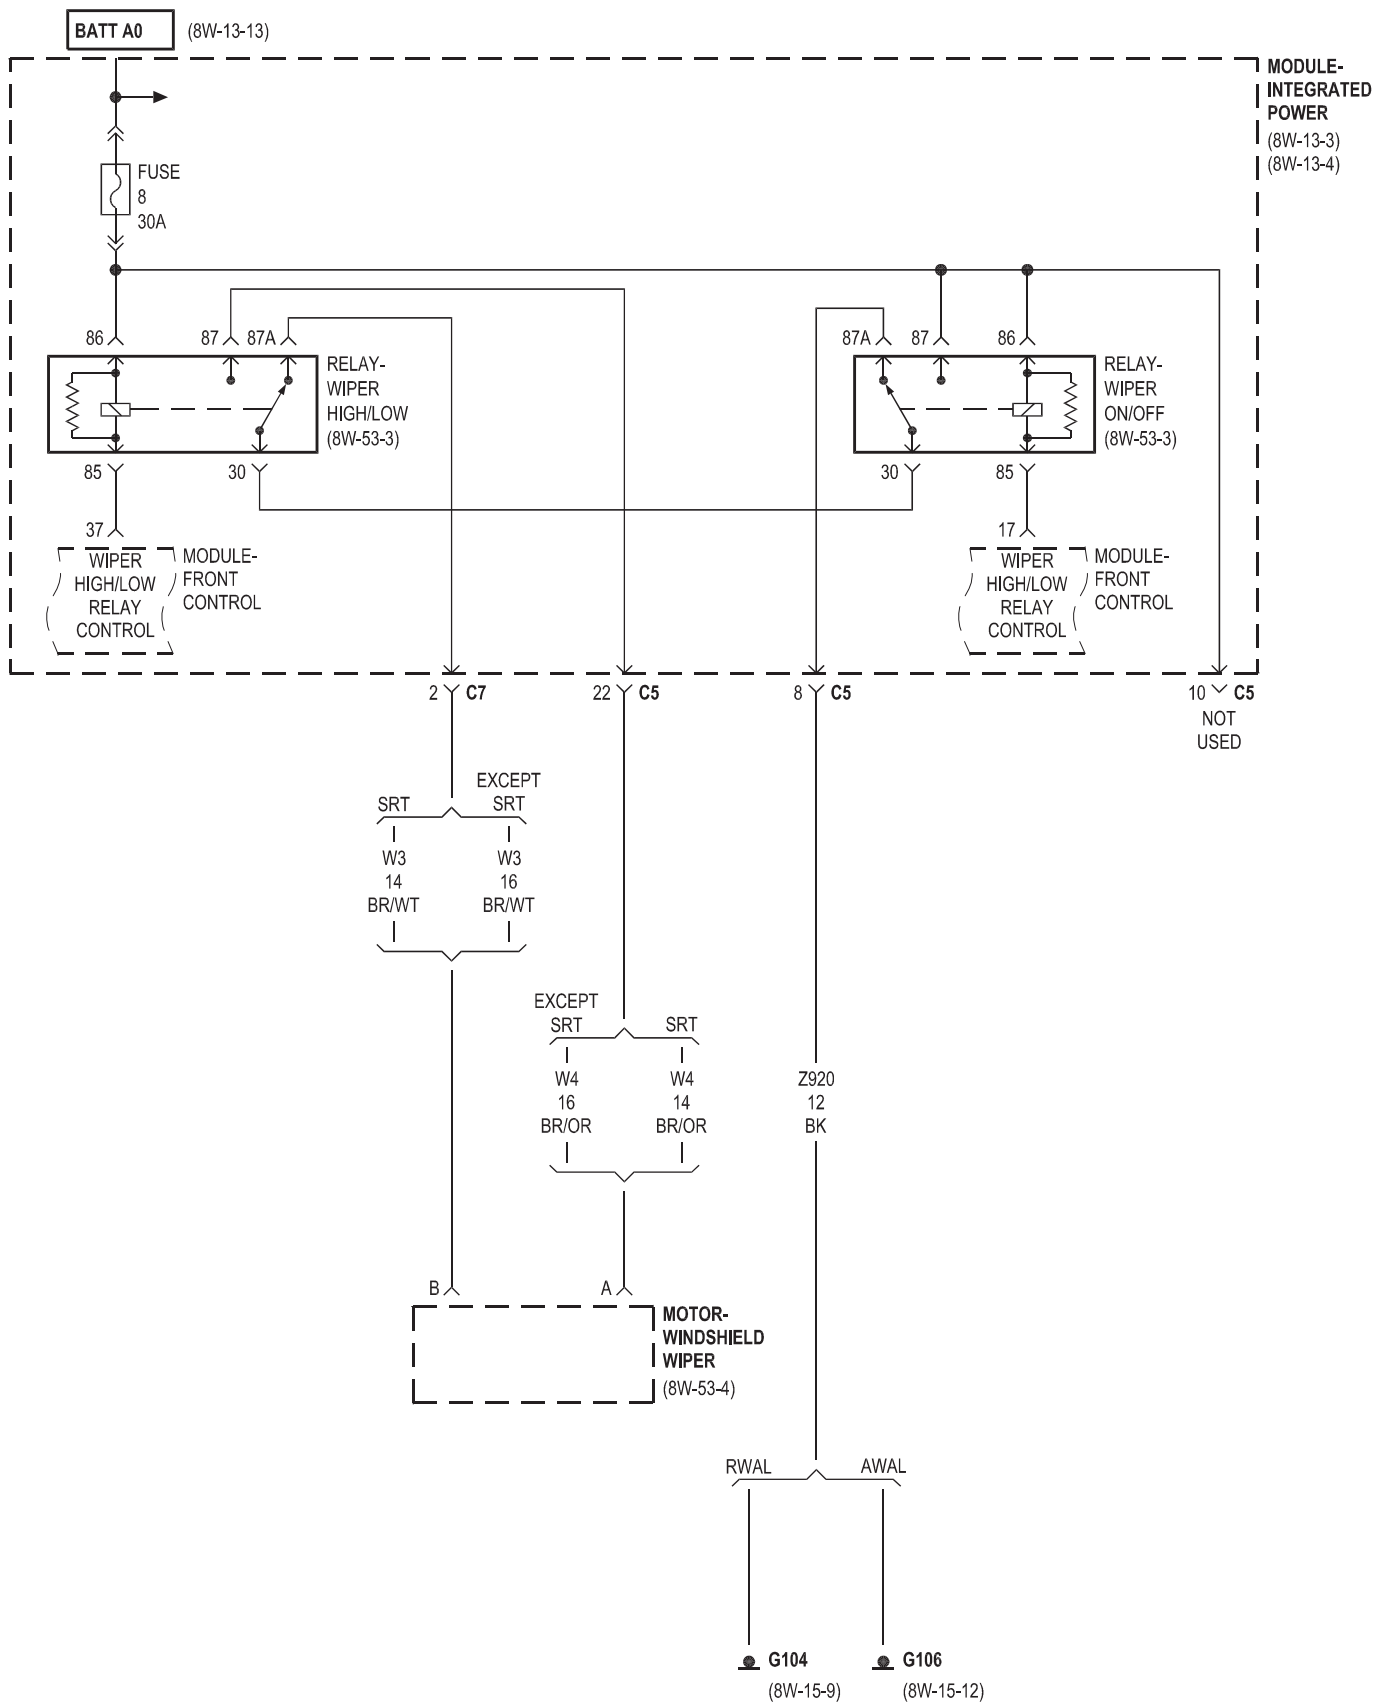


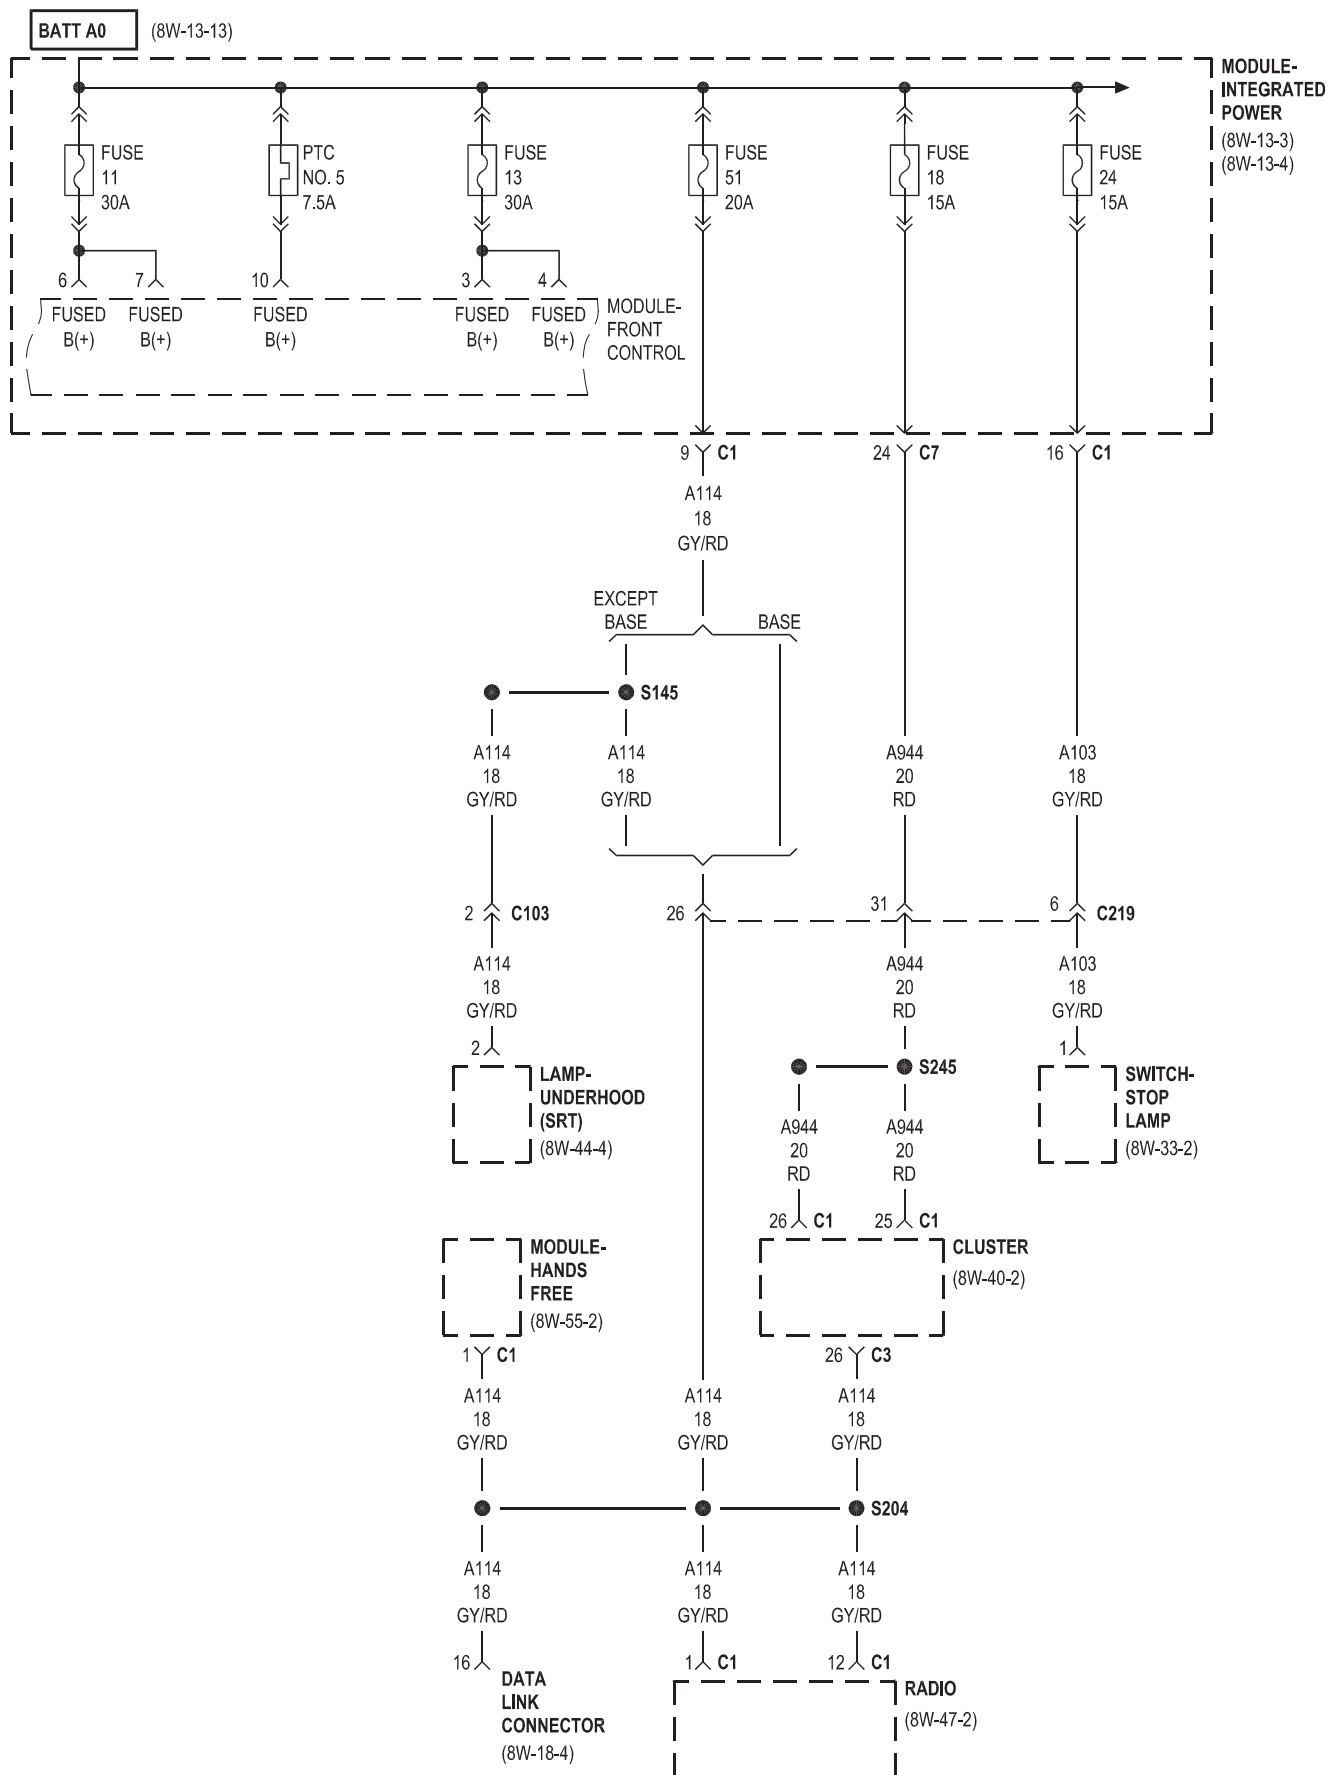

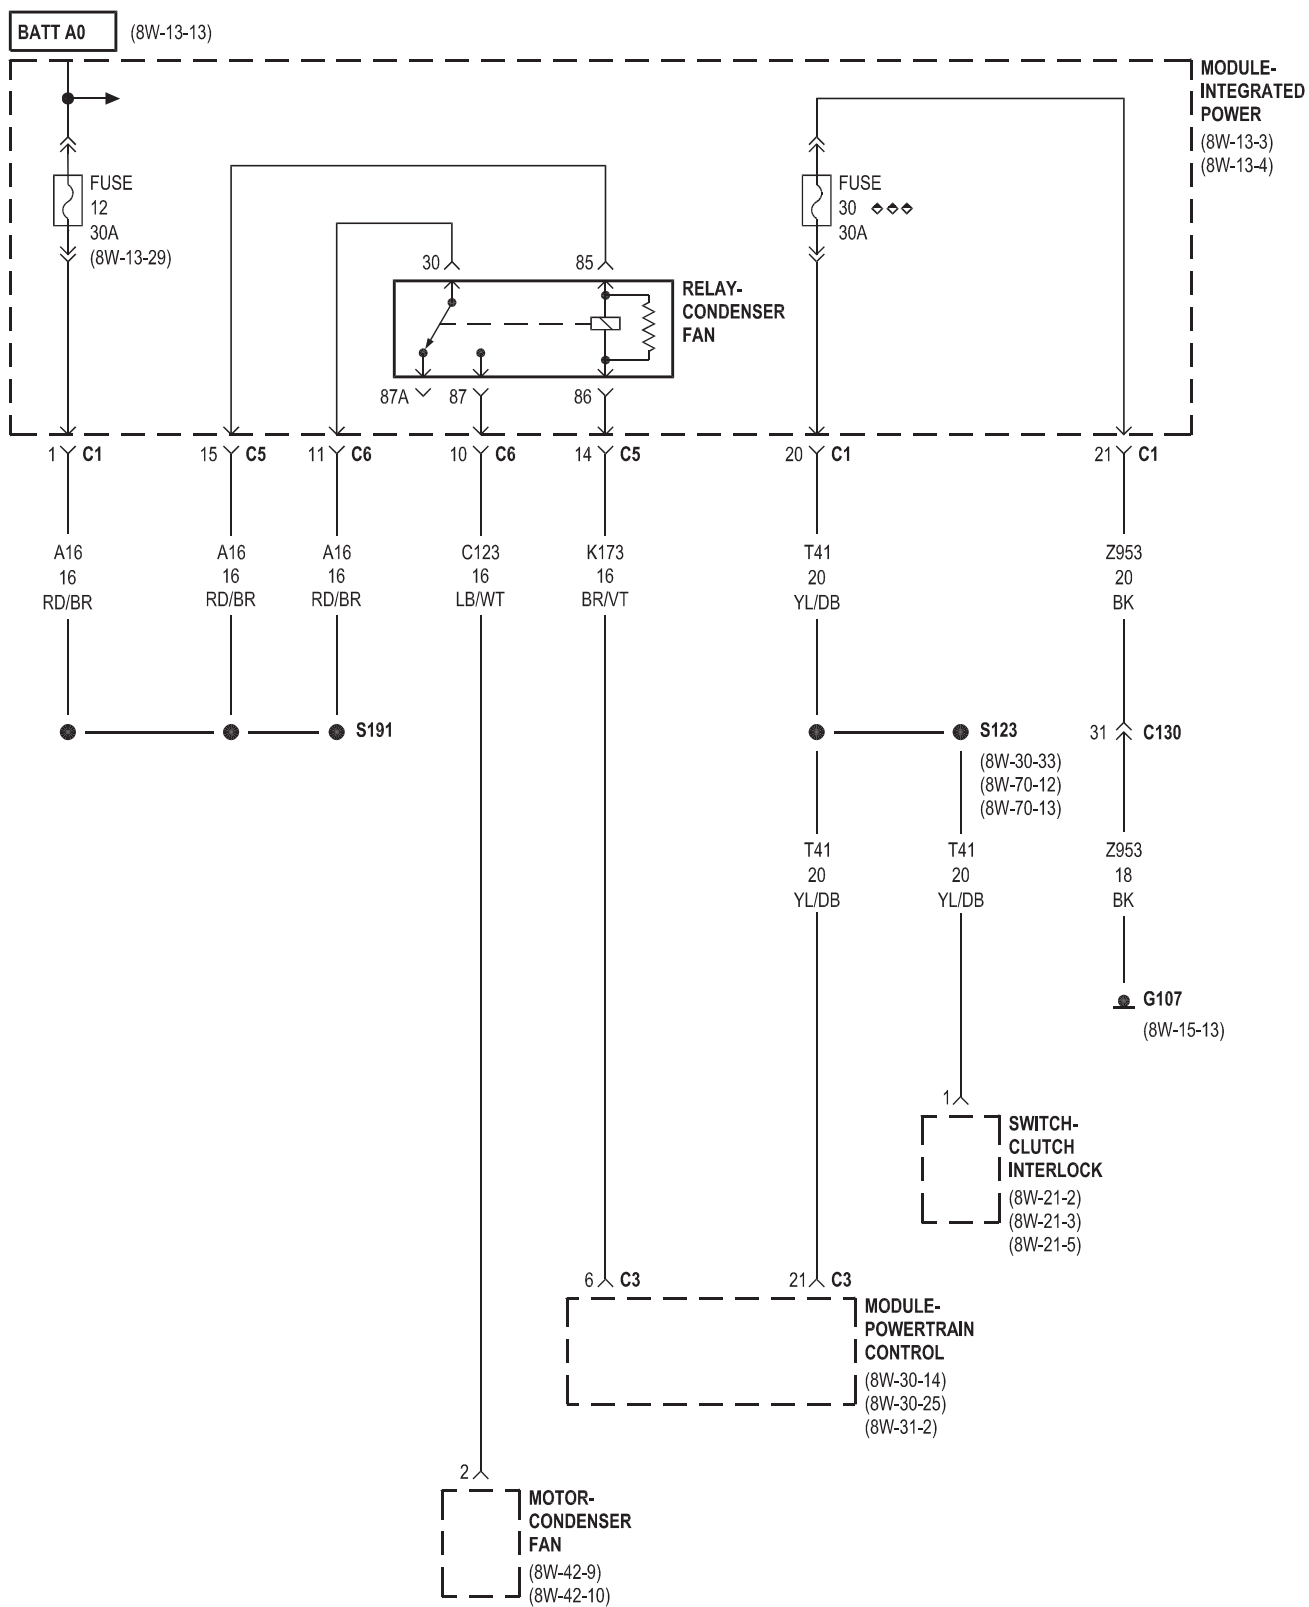


◆◆◆ OFF ROAD


EXCEPT SRT

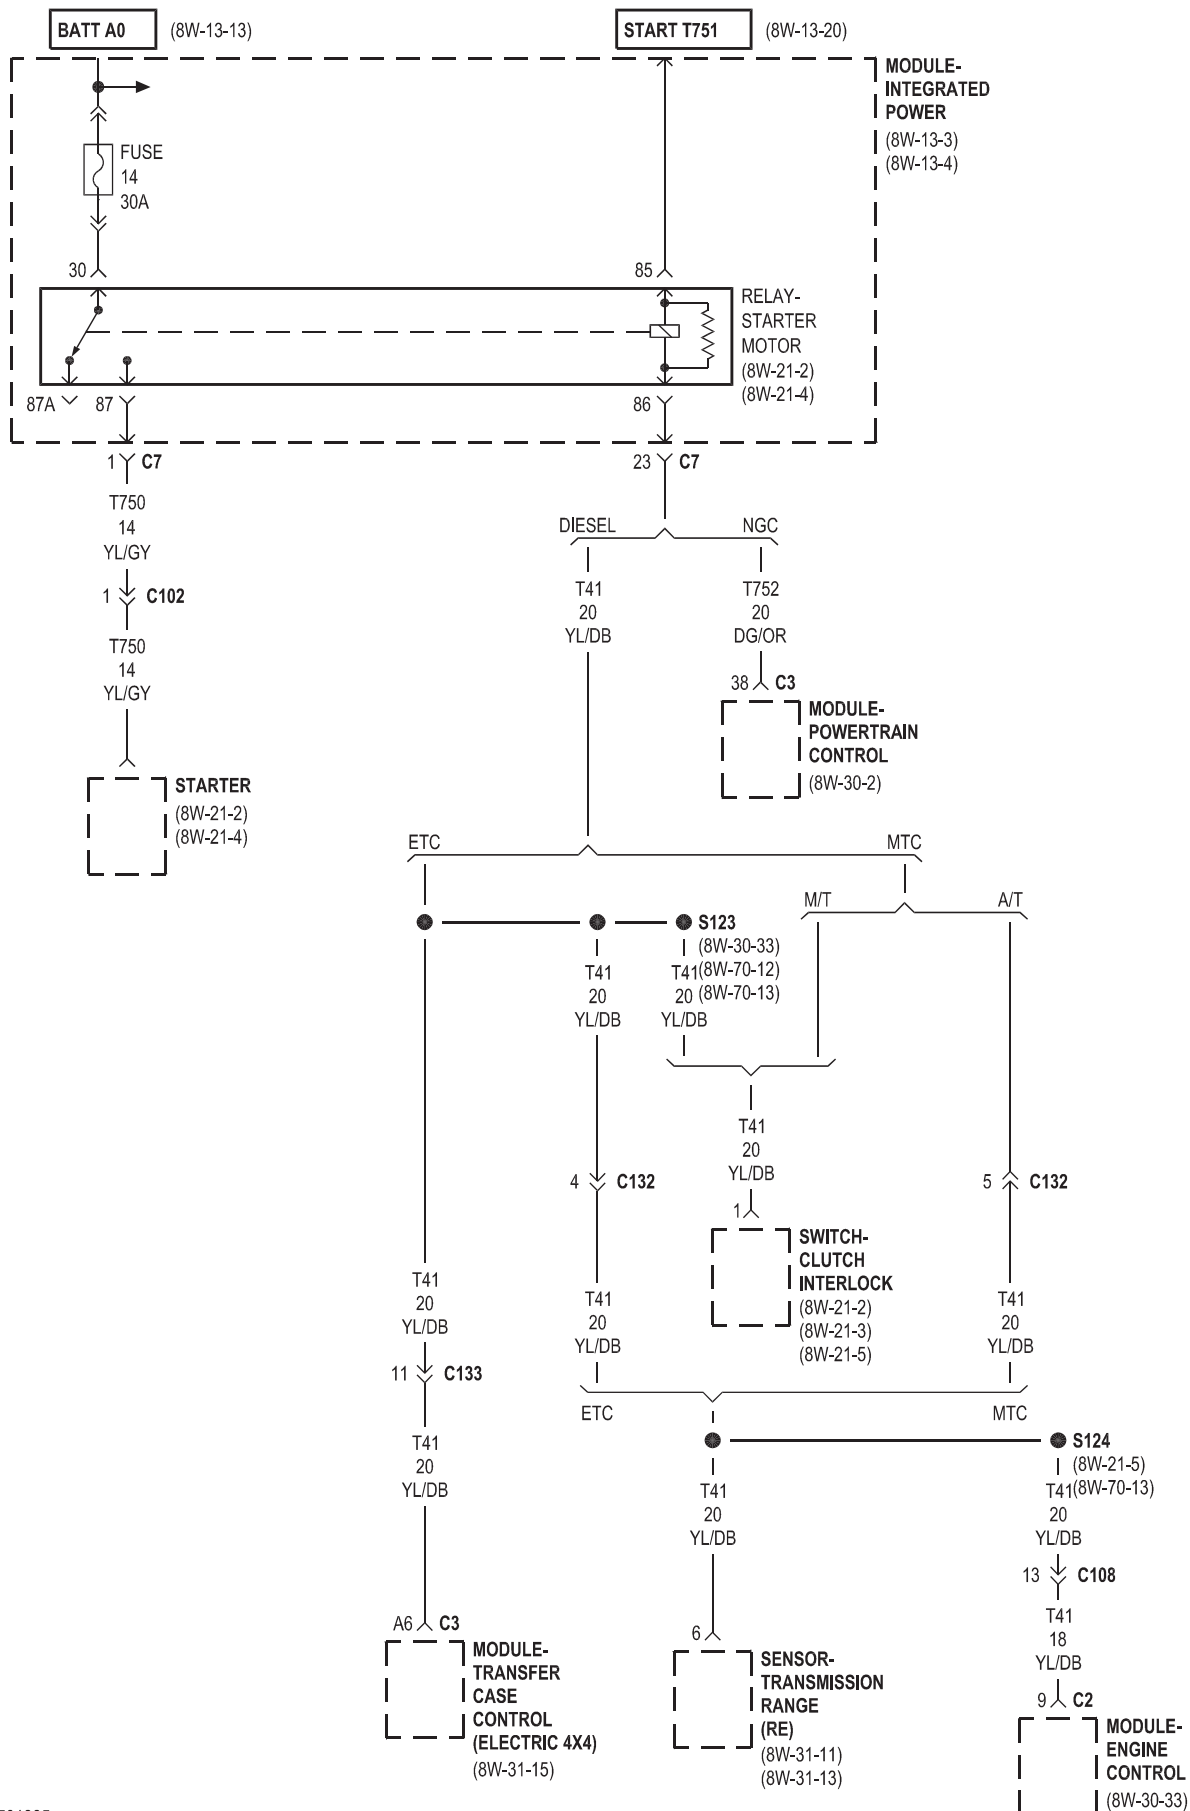




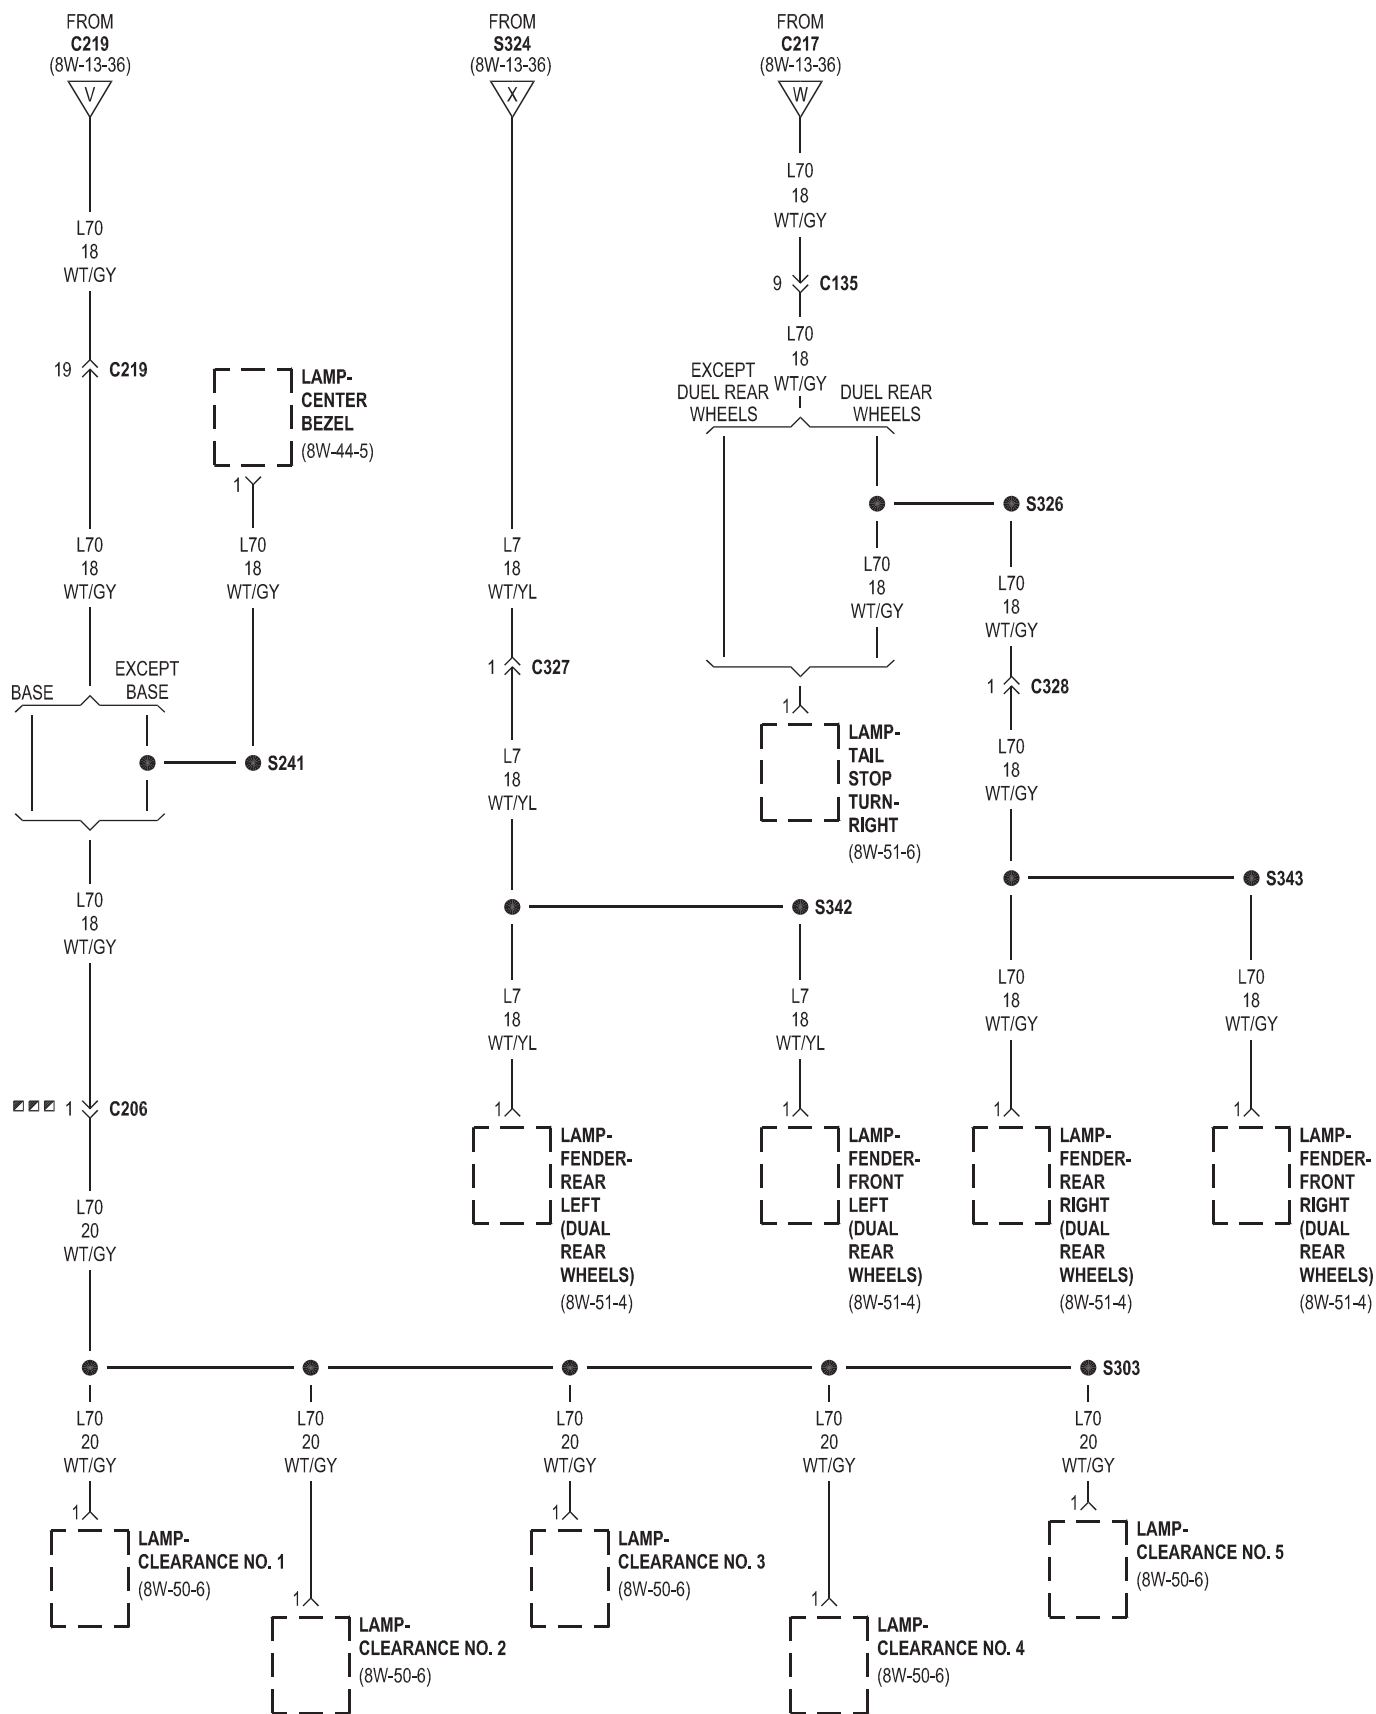



HD

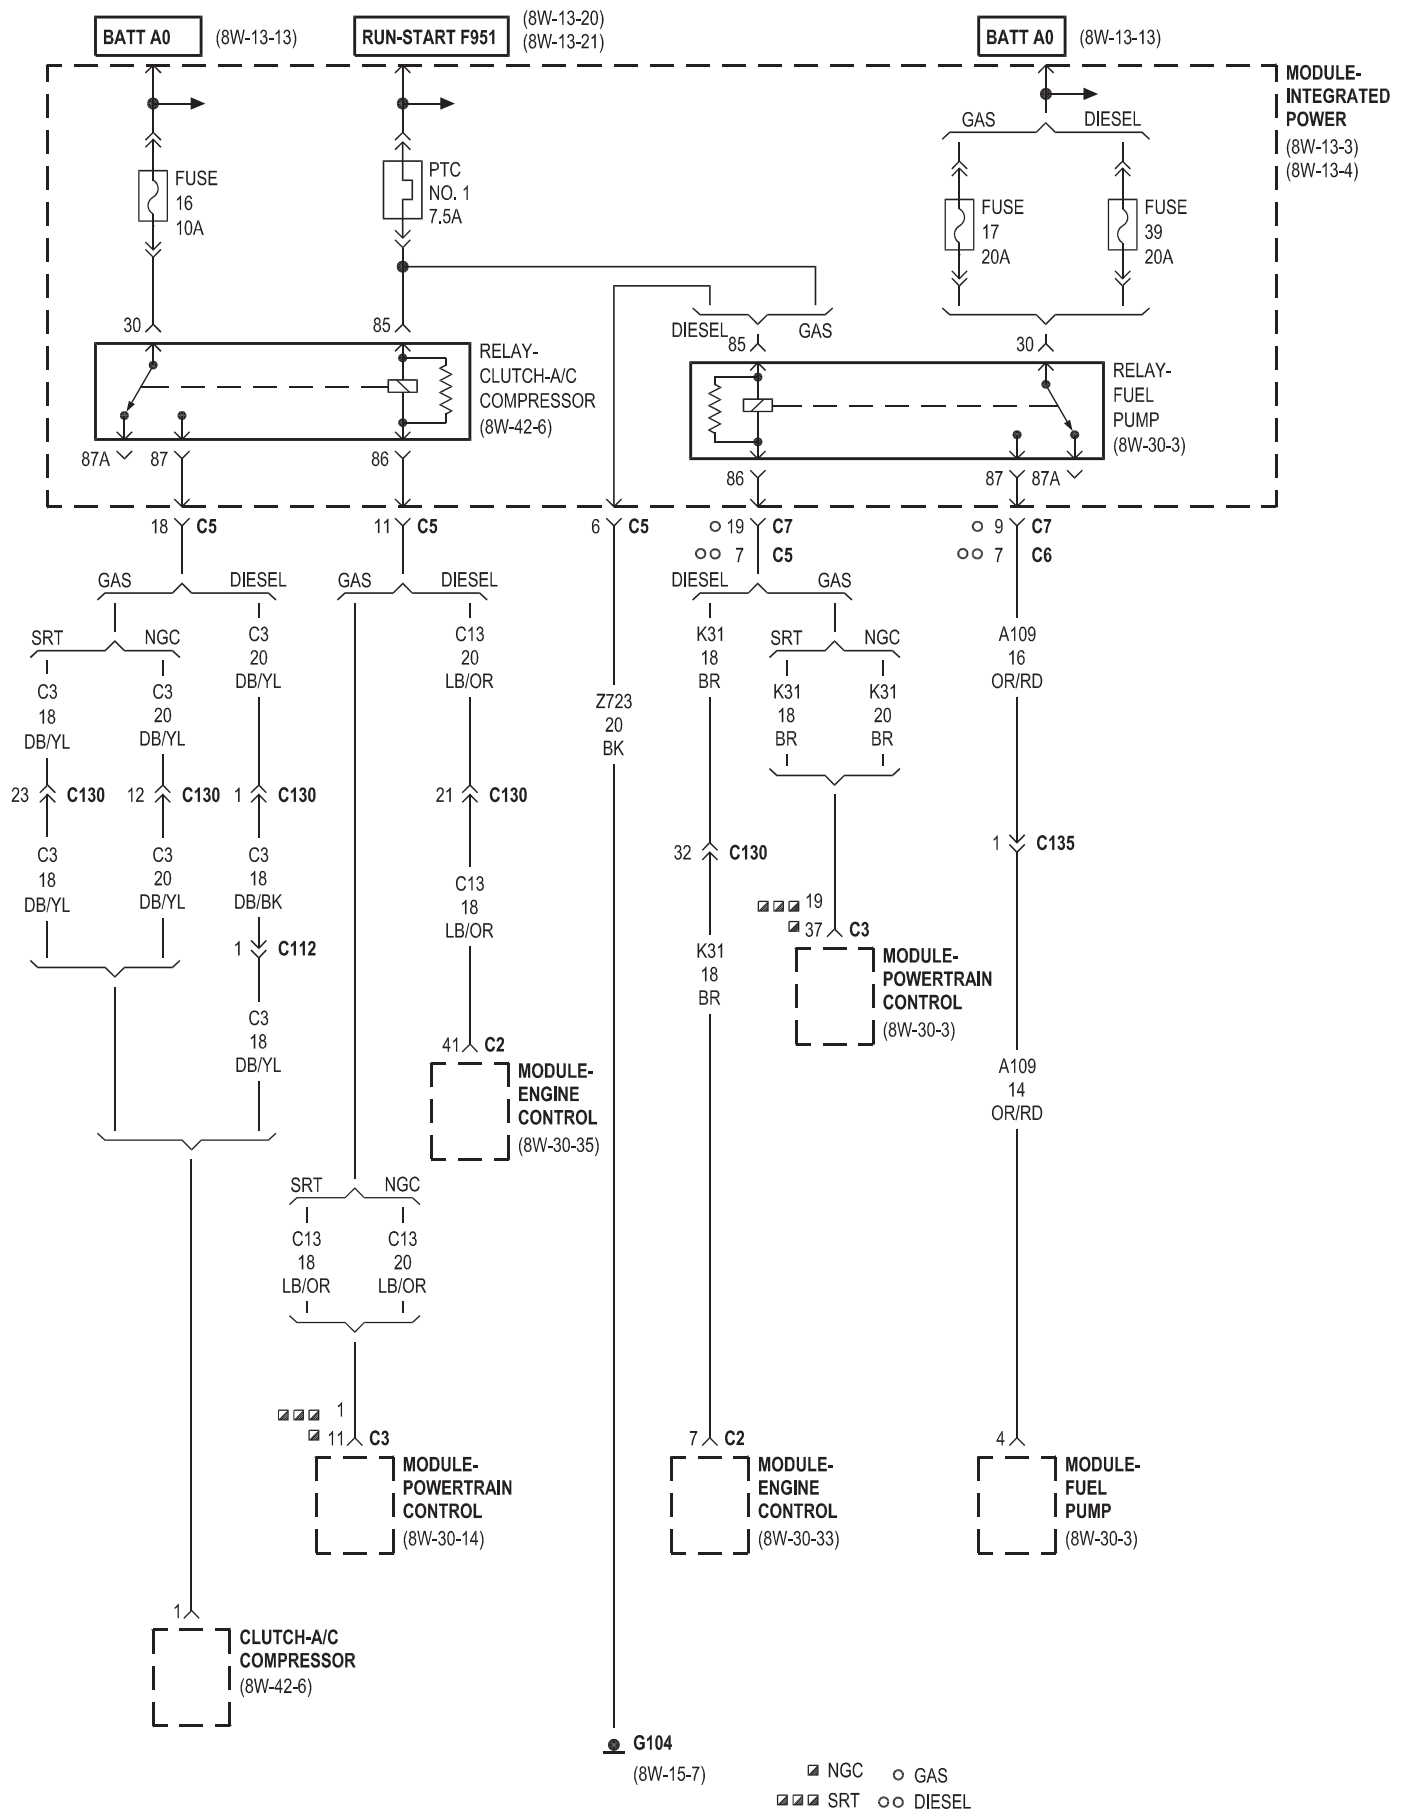




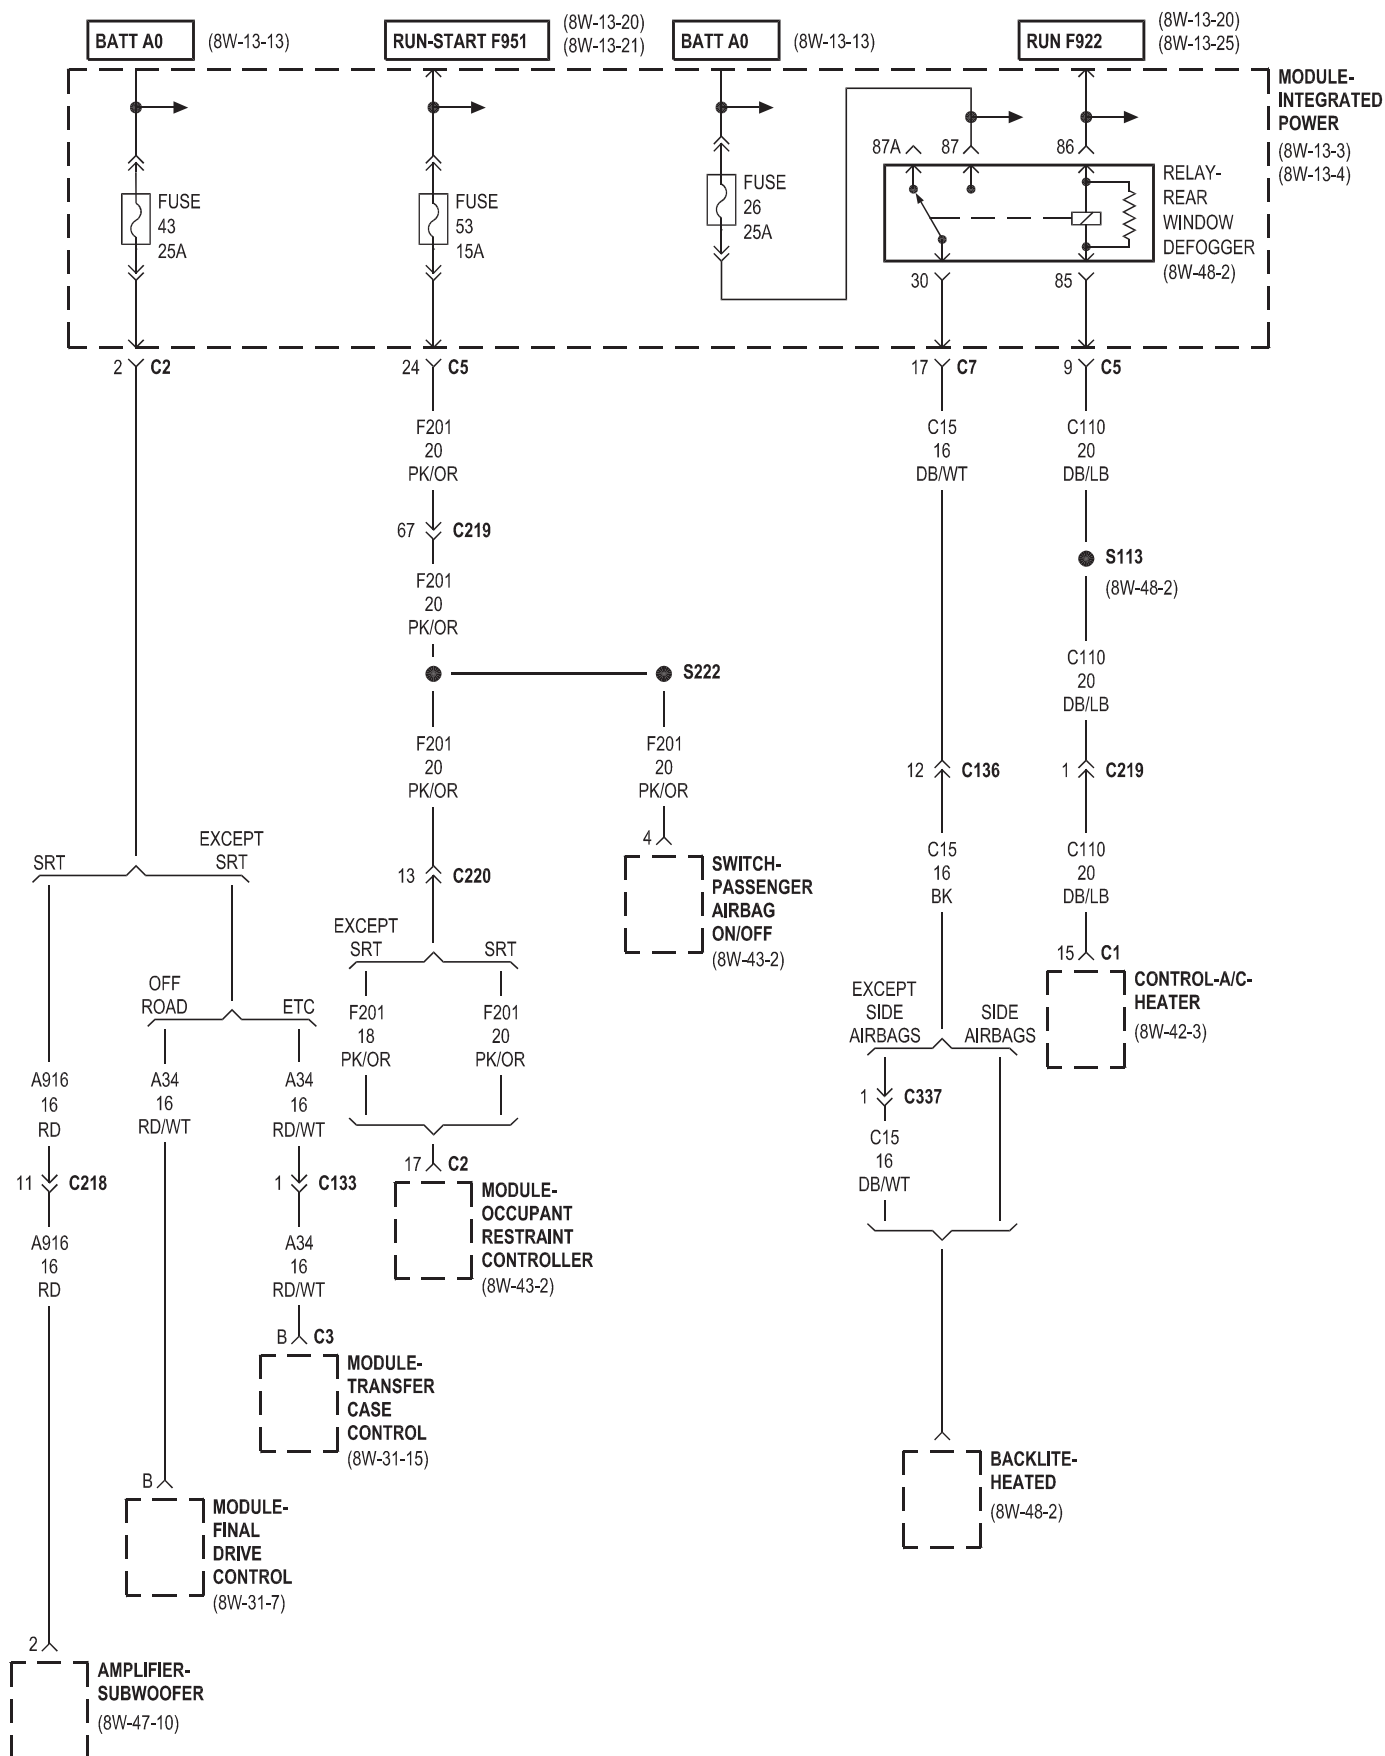


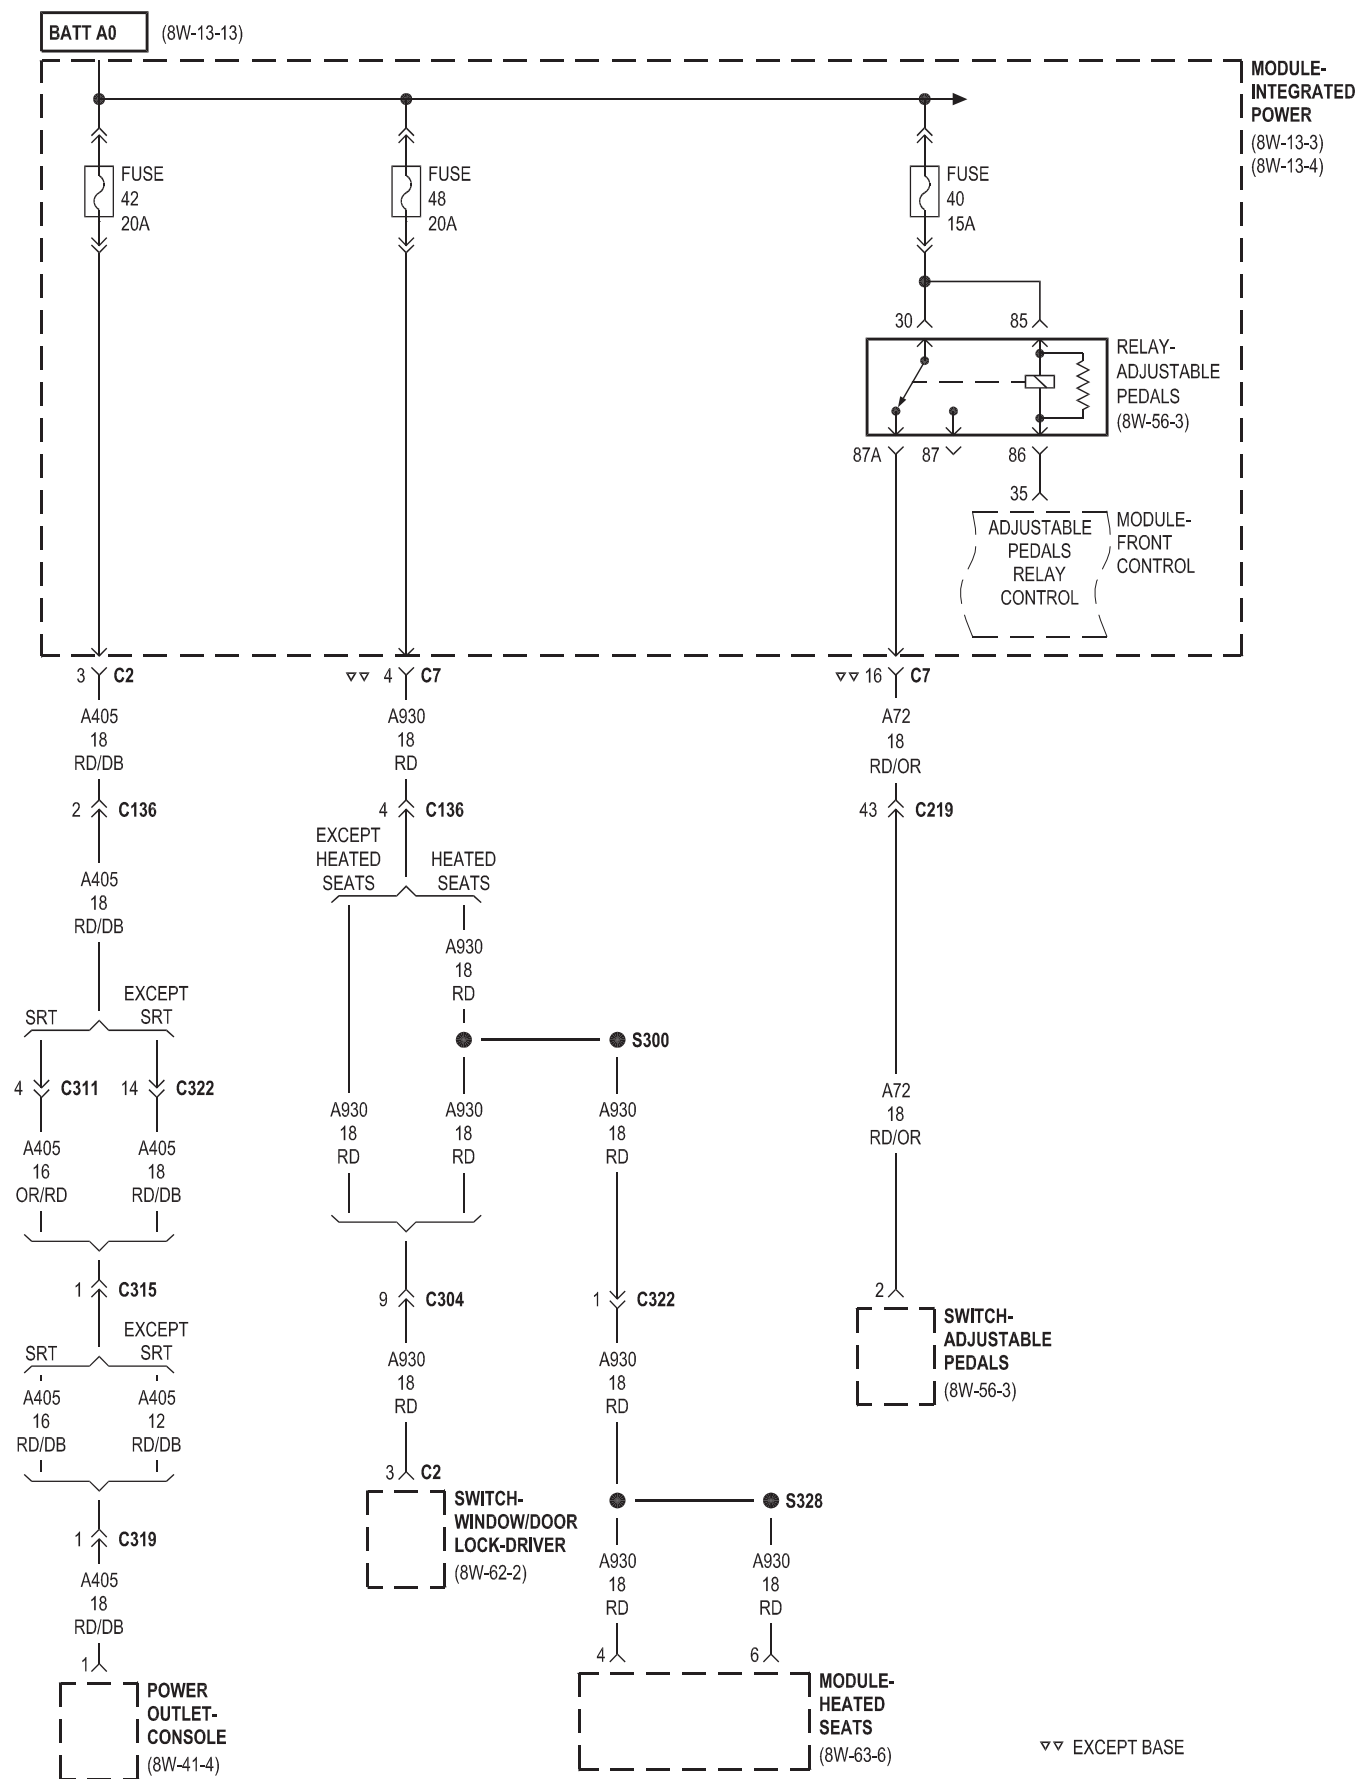


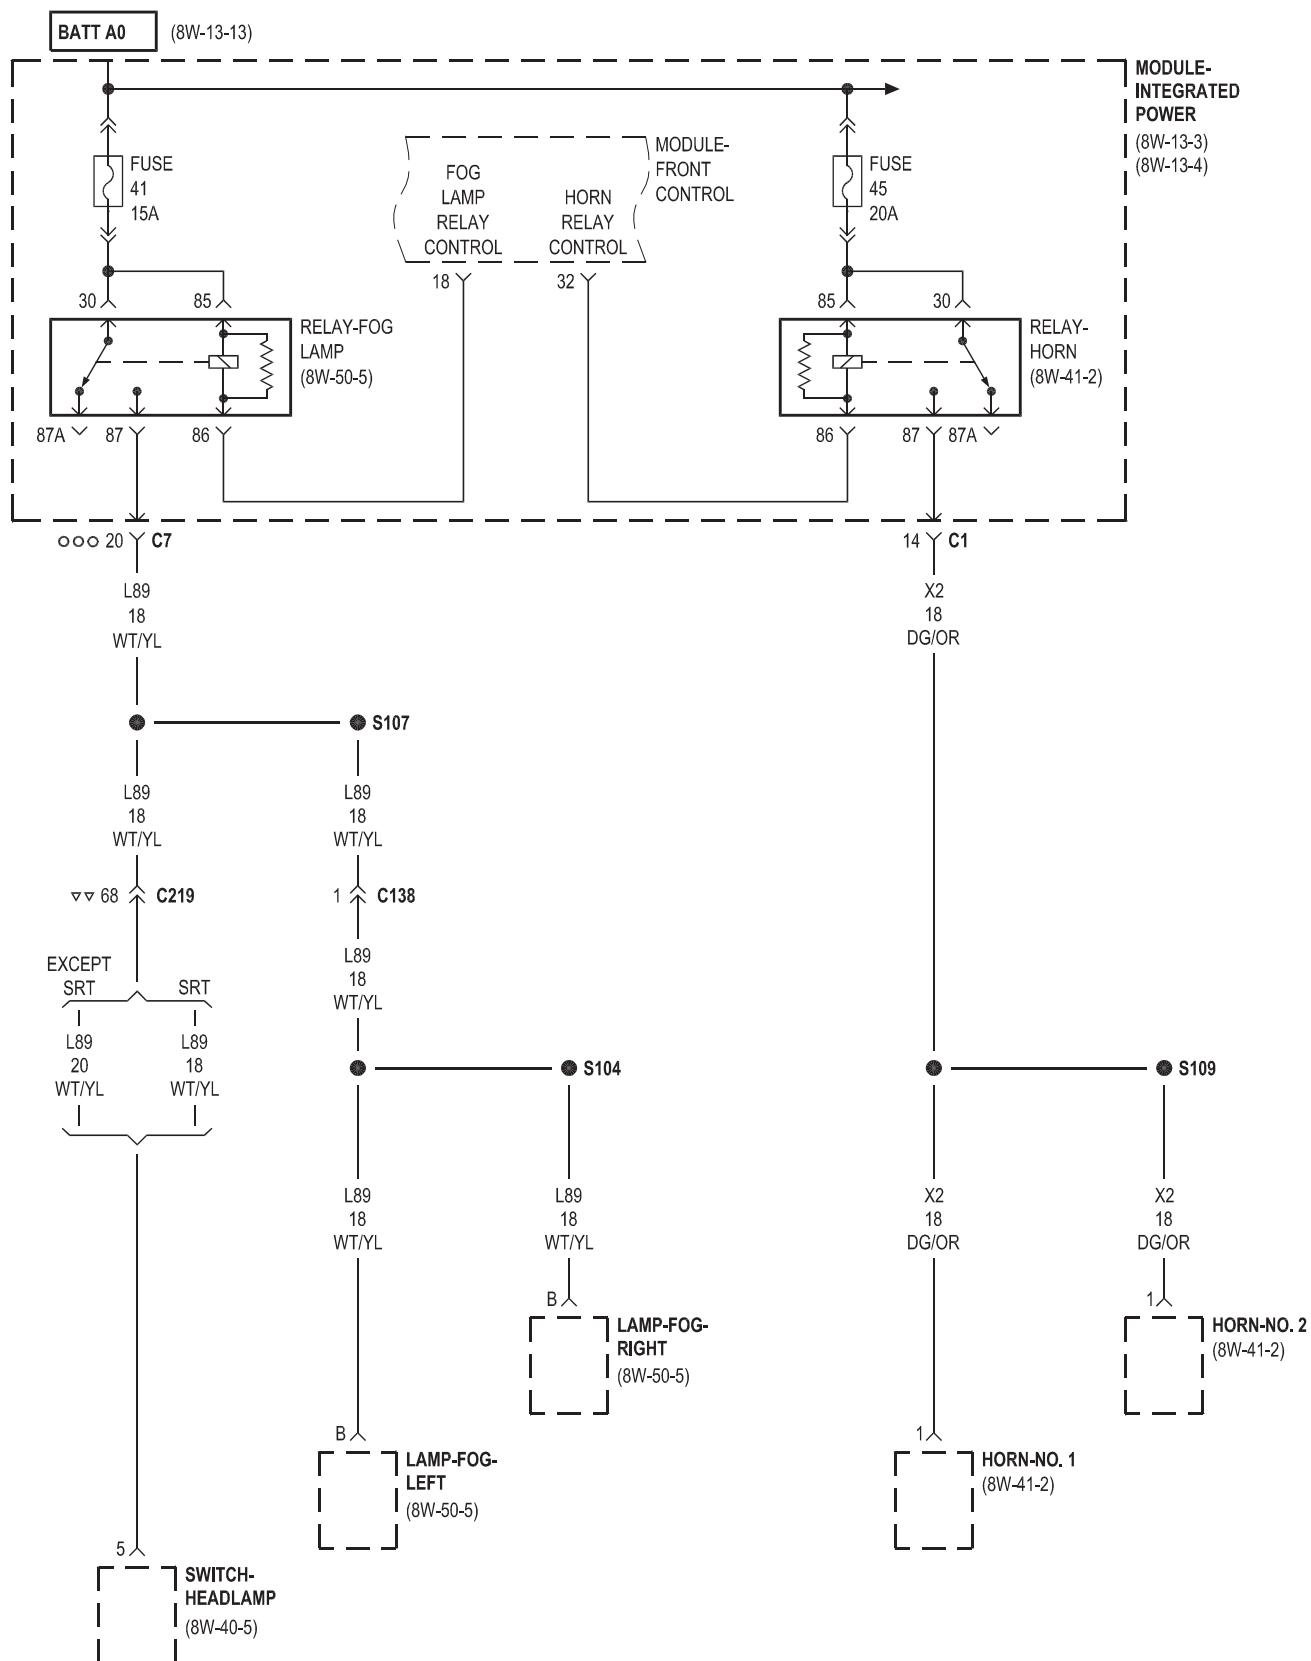



▽▽ EXCEPT BASE
○○○ FOG LAMPS

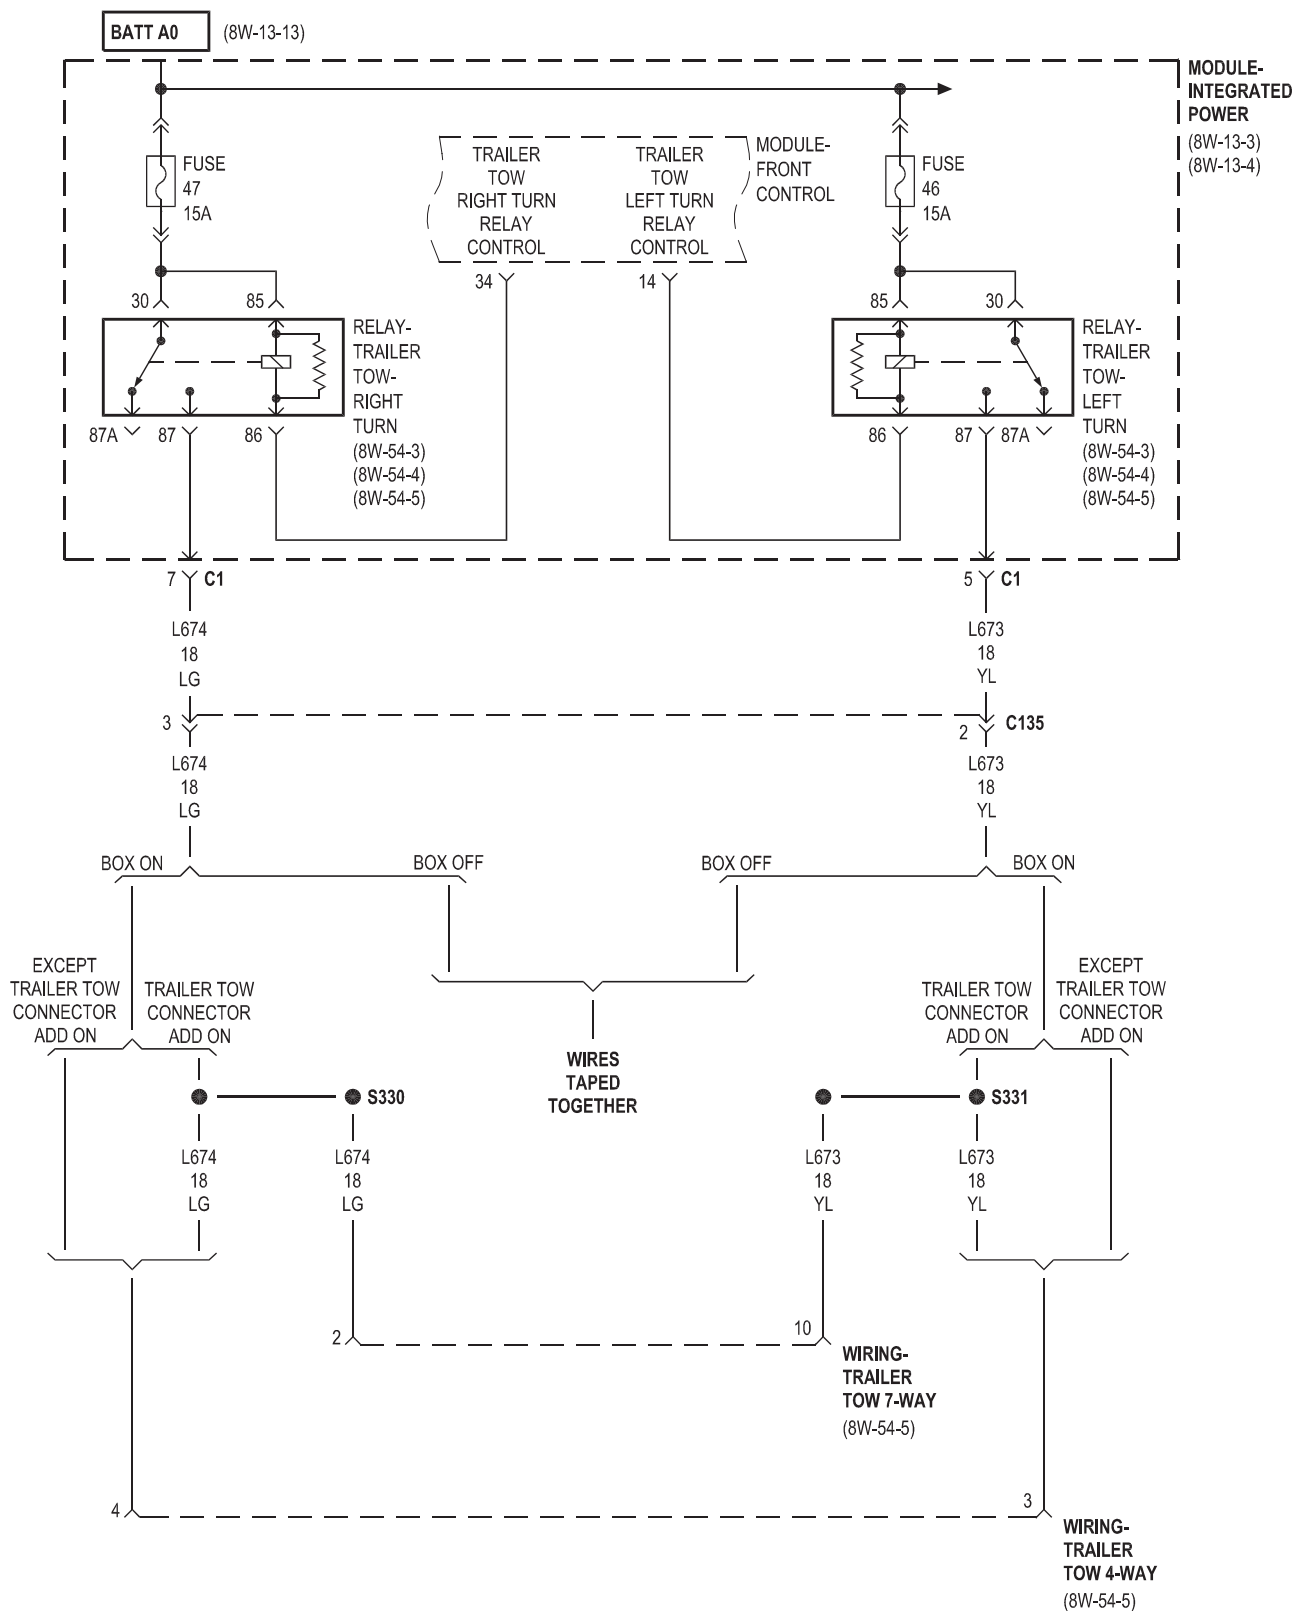

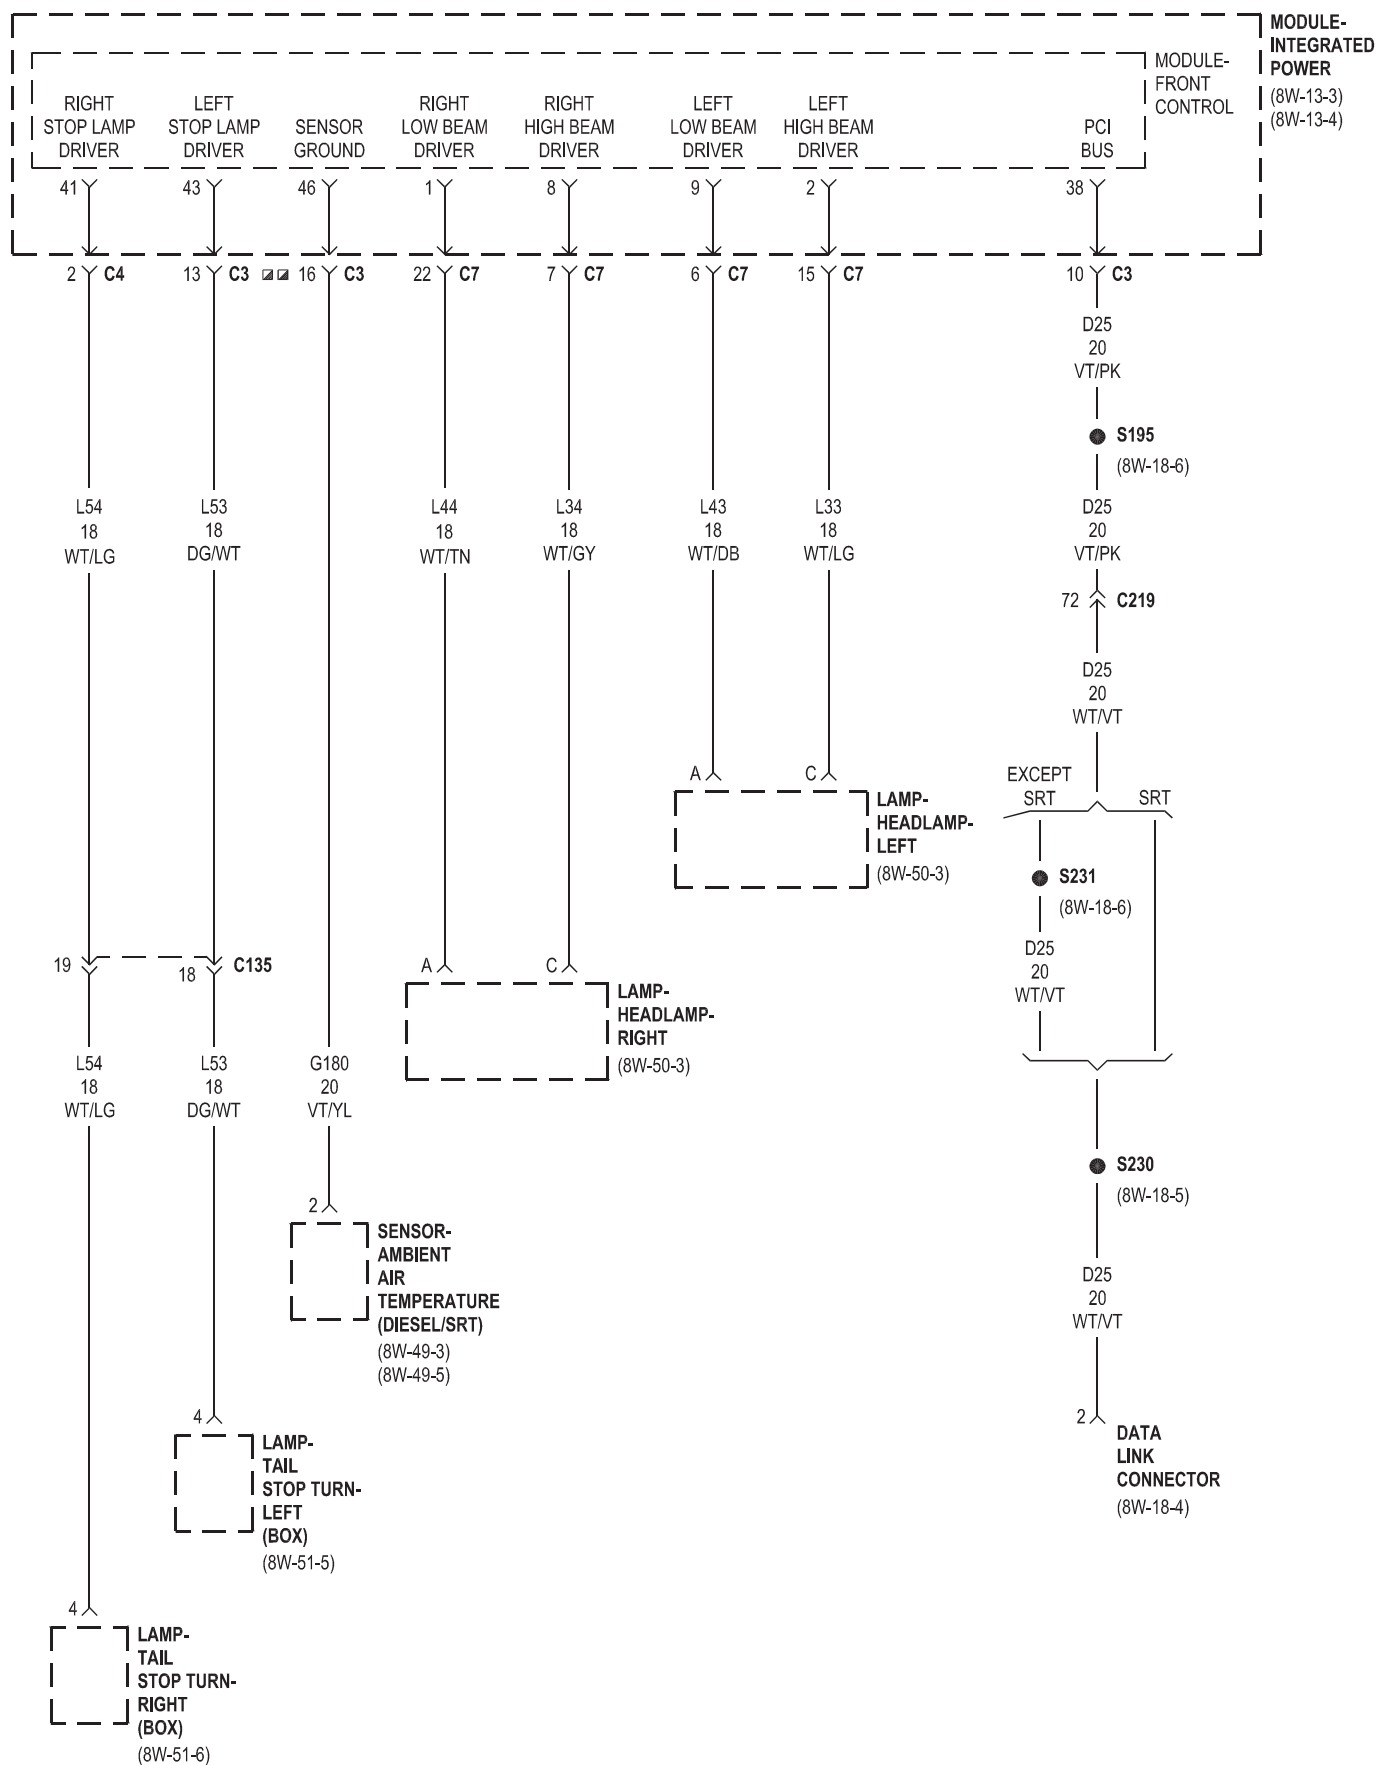

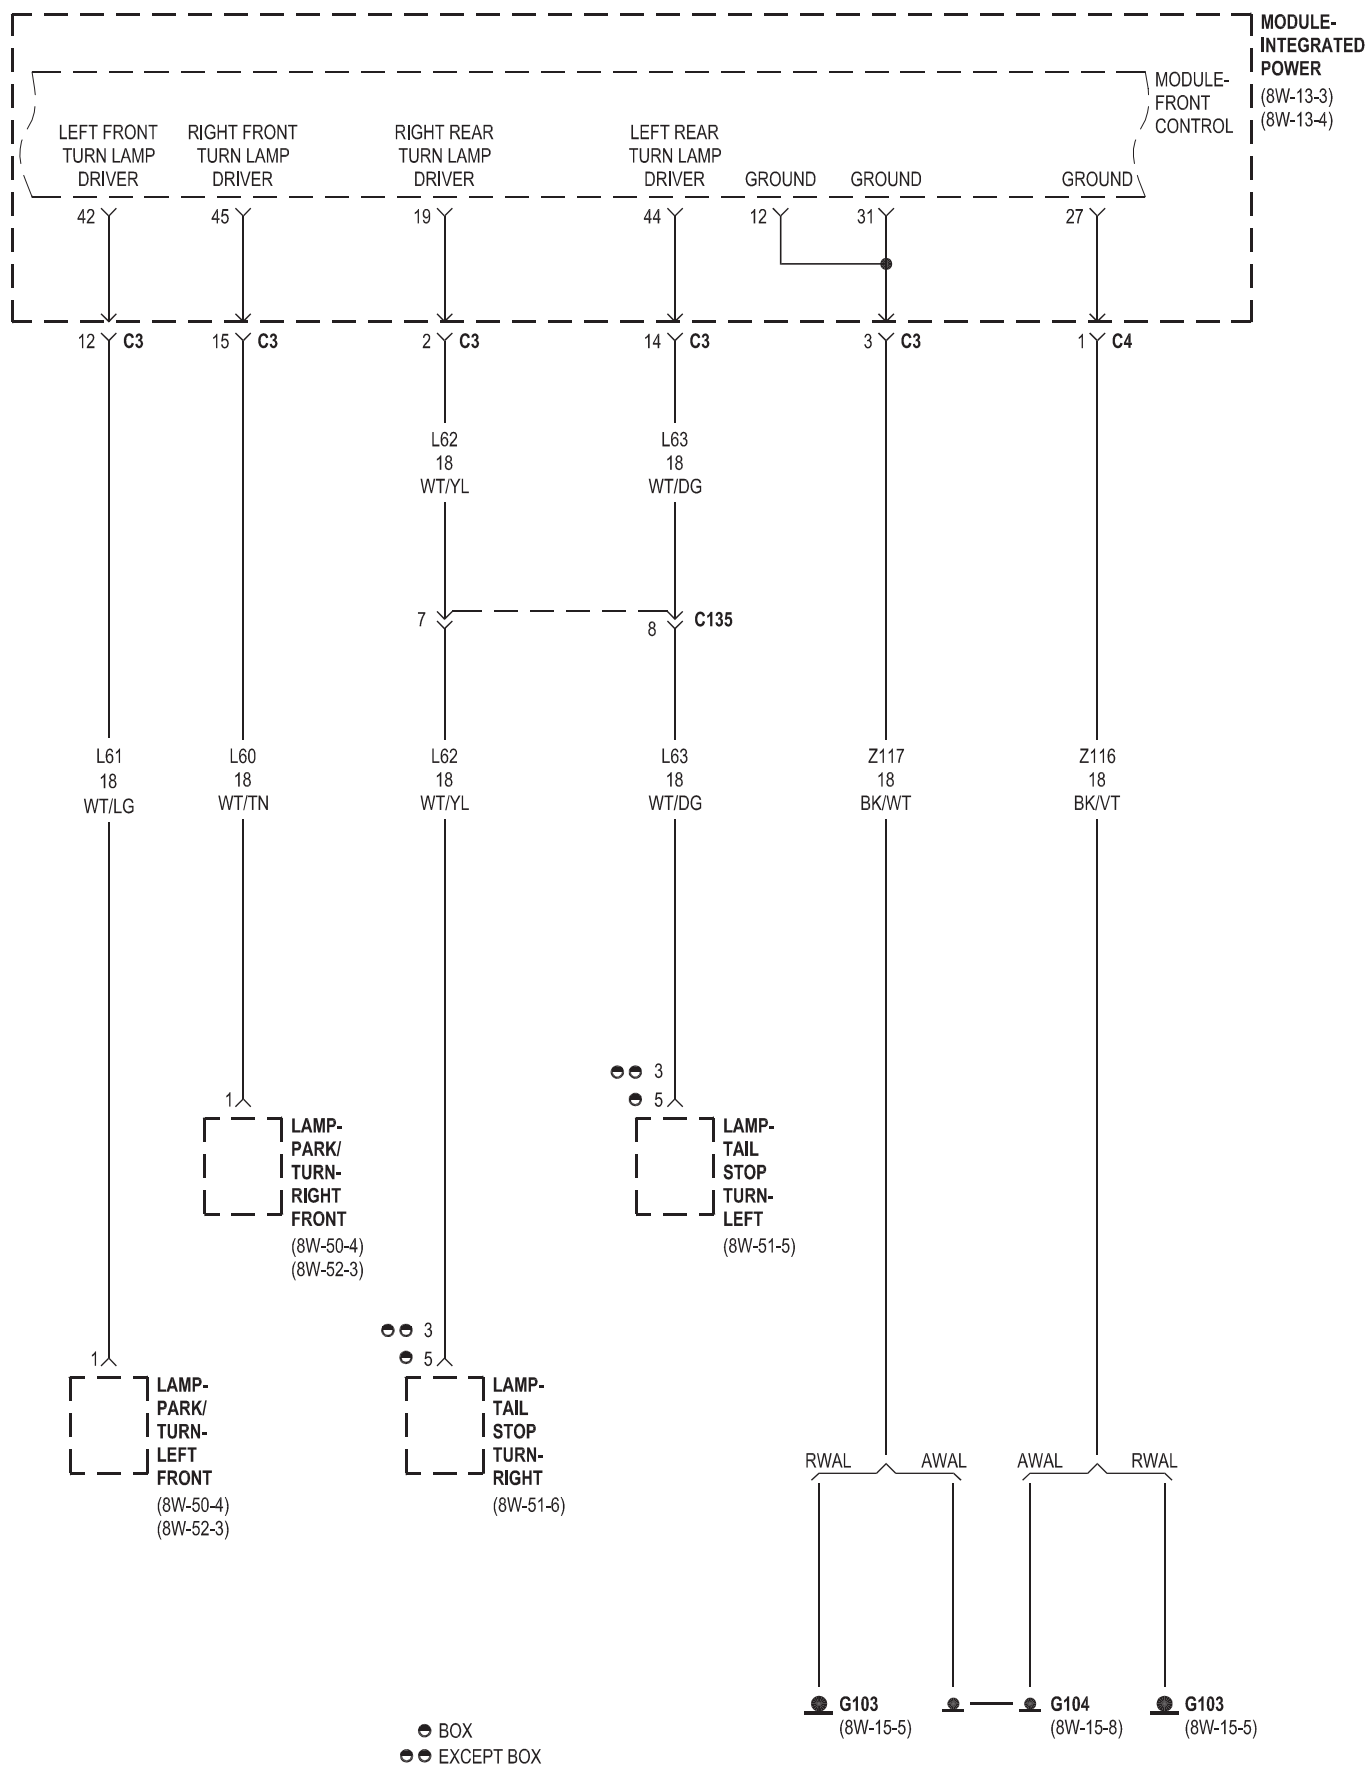

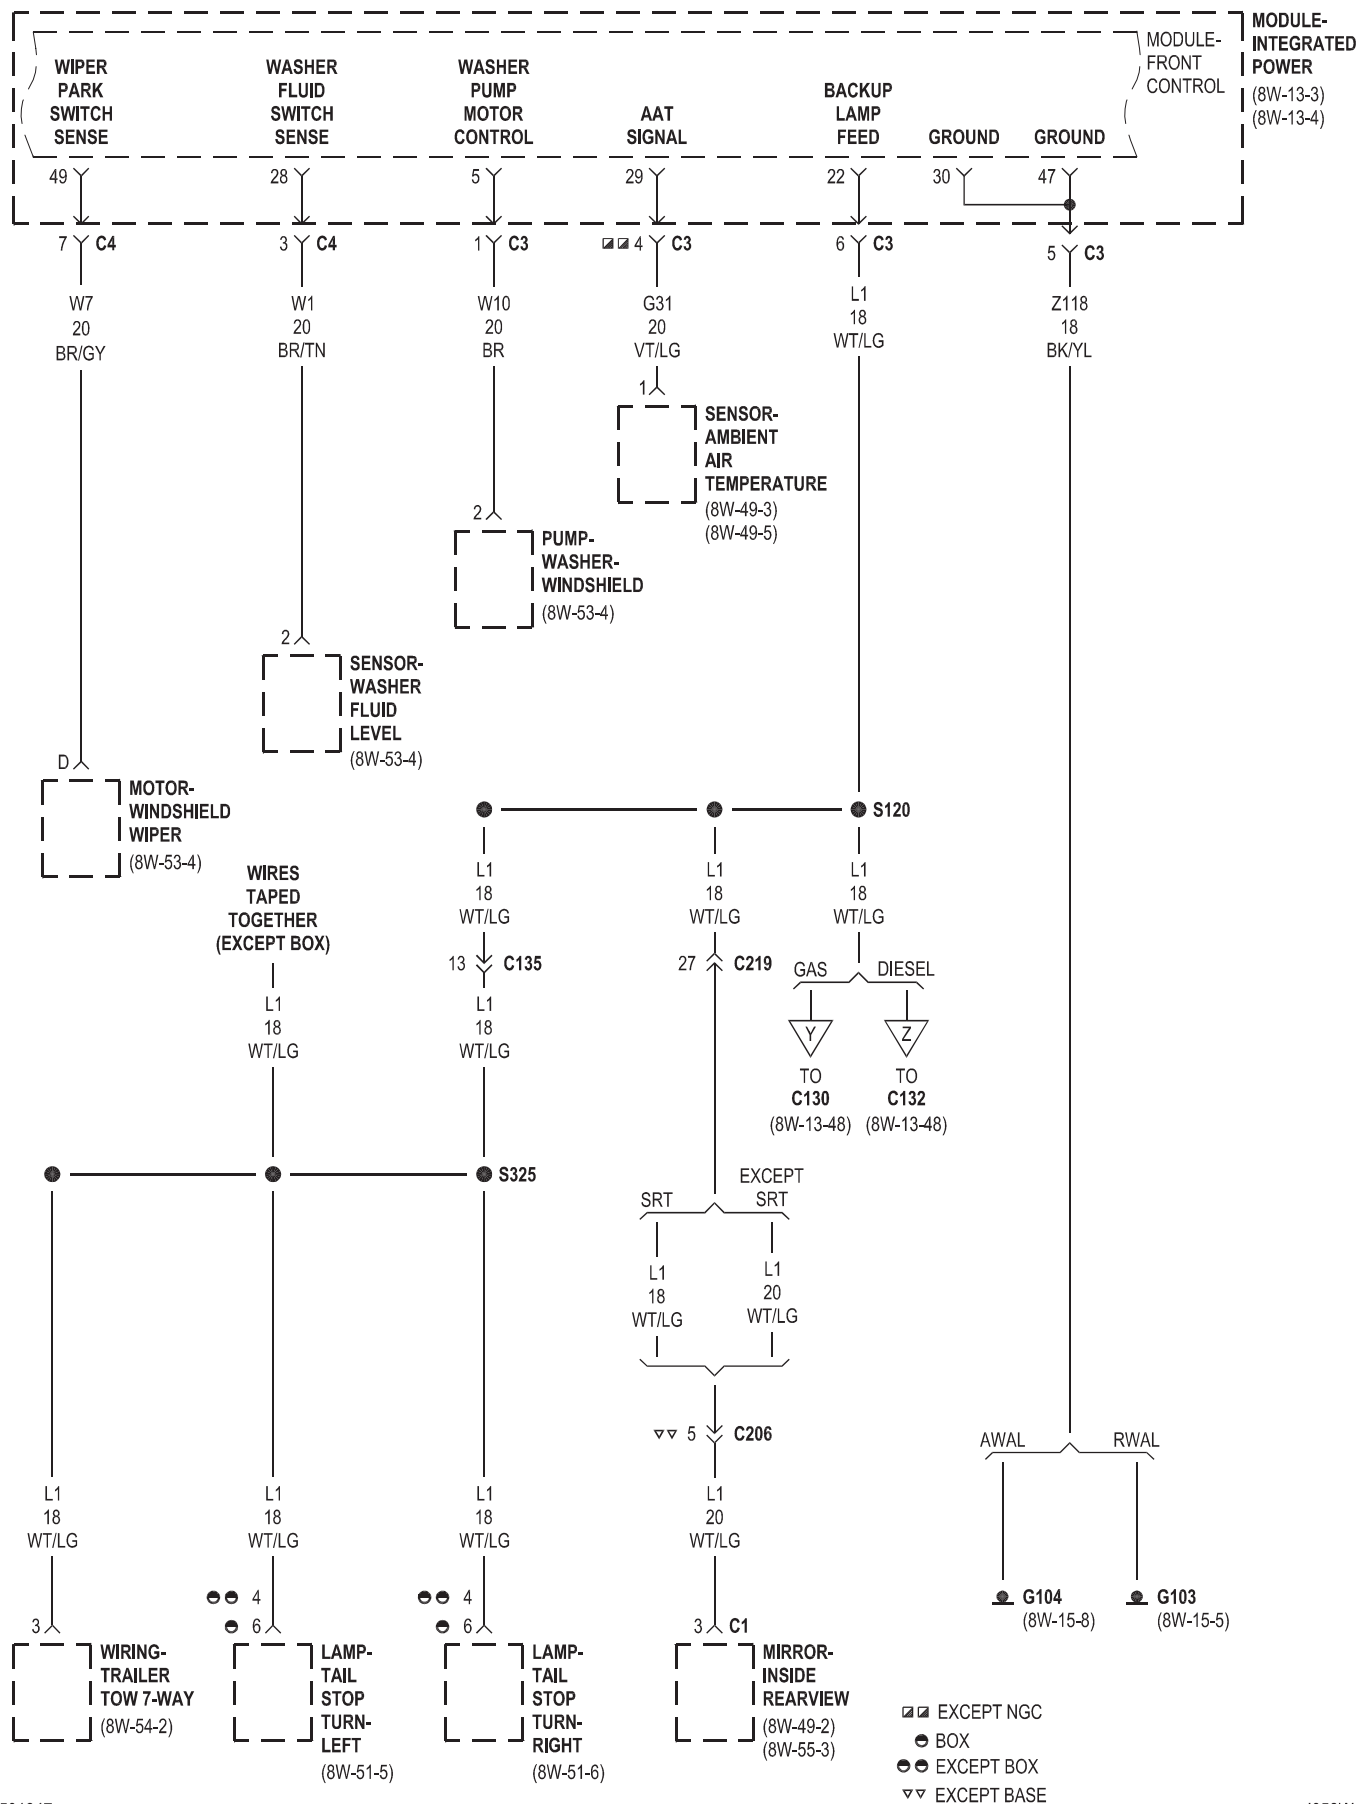

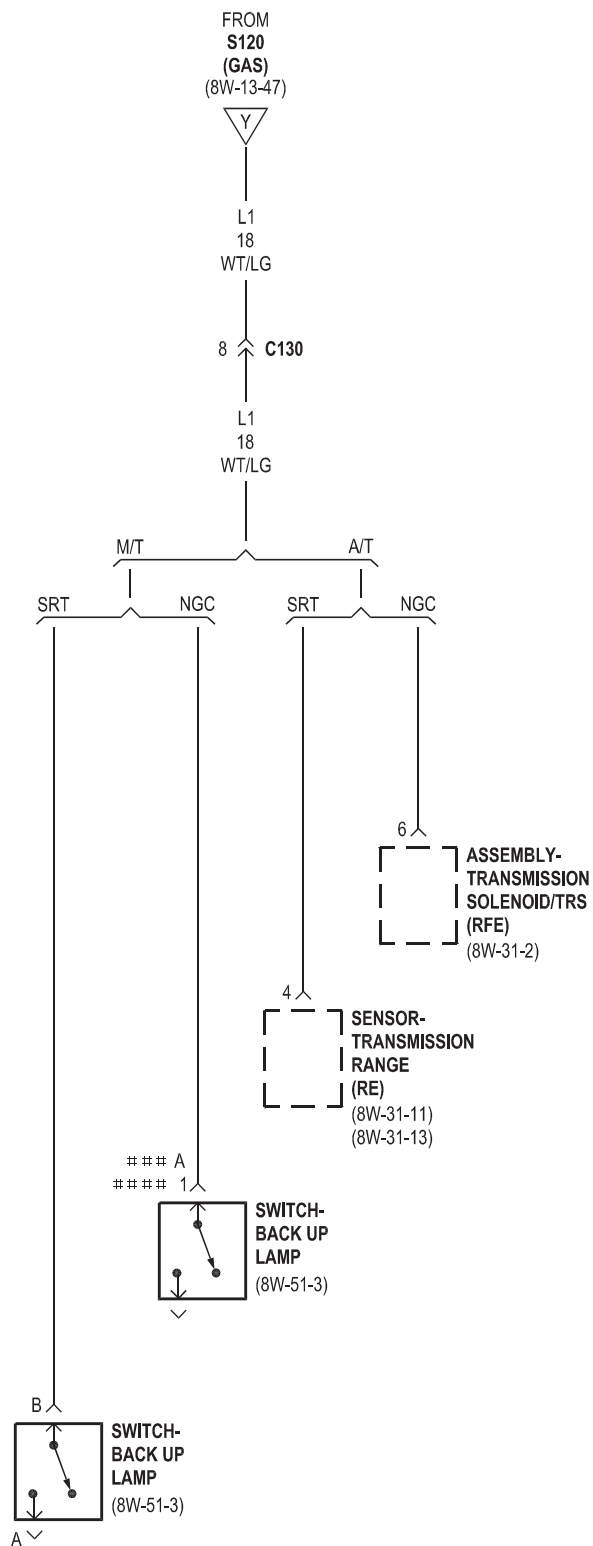

5.7L
3.7L/4.7L

