





8W-15 GROUND DISTRIBUTION


Component	Page	Component	Page
A/C Compressor Clutch	8W-15-2, 9	Left Turn Signal Lamp	8W-15-19
A/C-Heater Control	8W-15-10, 12	Left Visor/Vanity Lamp	8W-15-23
Adjustable Pedals Switch	8W-15-11	License Lamp	8W-15-26, 29
Amplifier	8W-15-27	Lift Pump Motor	8W-15-28
Auto Temp Control	8W-15-10	Liftgate Ajar Switch	8W-15-30
Back-Up Lamp Switch	8W-15-2, 4	Liftgate Cinch/Release Motor	8W-15-26, 30
Battery	8W-15-2, 3, 4	Liftgate Right Pinch Sensor	8W-15-26
Body Control Module	8W-15-24	Memory Seat/Mirror/Adjustable Pedals Module	8W-15-17
Brake Fluid Level Switch	8W-15-18	Natural Vacuum Leak Detection Assembly	8W-15-2, 3
Brake Lamp Switch	8W-15-18	Occupant Classification Module	8W-15-24
Cabin Heater Assist	8W-15-9	Occupant Restraint Controller	8W-15-13
CD Changer	8W-15-13	Overhead Console	8W-15-22
Center High Mounted Stop Lamp	8W-15-30	Oxygen Sensor 1/1 Upstream	8W-15-3
Clutch Pedal Interlock Switch	8W-15-18	Oxygen Sensor 1/2 Downstream	8W-15-3
Clutch Pedal Upstop Switch	8W-15-19	Park Assist Display	8W-15-28
Controller Antilock Brake	8W-15-2, 4	Park Assist Module	8W-15-28
Crank Case Ventilation Heater	8W-15-9	Passenger Door Courtesy Lamp	8W-15-16, 21
Crankshaft Position Sensor	8W-15-4	Passenger Door Lock Switch	8W-15-16, 21
Data Link Connector	8W-15-3, 4, 18	Passenger Heated Seat Back	8W-15-25
Dosing Pump	8W-15-9	Passenger Heated Seat Cushion	8W-15-25
Driver Door Courtesy Lamp	8W-15-15, 21	Passenger Heated Seat Module	8W-15-25
Driver Door Lock Switch	8W-15-15, 21	Passenger Power Seat Switch	8W-15-25
Driver Heated Seat Cushion	8W-15-17	Power Folding Mirror Switch	8W-15-12
Driver Heated Seat Module	8W-15-17	Power Liftgate Module	8W-15-26, 28
Driver Power Seat Switch	8W-15-17	Power Liftgate Motor	8W-15-26
Driver Power Window Switch	8W-15-15, 21	Power Mirror Switch	8W-15-12
DVD/CD Changer	8W-15-11	Power Outlet	8W-15-10
EGR Solenoid	8W-15-3	Power Window Switch	8W-15-15
Engine Control Module	8W-15-4	Powertrain Control Module	8W-15-3
Floor Console Lamp	8W-15-28	Radiator Fan No. 1	8W-15-5
Floor Console Power Outlet	8W-15-28	Radiator Fan No. 2	8W-15-5
Front Blower Module	8W-15-12	Radiator Fan Relay	8W-15-5
Front Cigar Lighter	8W-15-10	Radiator Fan Relay No. 3	8W-15-5
Front Control Module	8W-15-2, 8, 9, 19	Radio	8W-15-13
Front Reading Lamps/Switch	8W-15-22	Rear Auto Temp Control Switch	8W-15-18
Fuel Heater	8W-15-28	Rear Blower Front Control Switch	8W-15-12
Fuel Heater Relay	8W-15-4	Rear Blower Motor Power Module	8W-15-28
Fuel Pump Module	8W-15-28	Rear Blower Rear Control Switch	8W-15-18
G100	8W-15-2, 4	Rear Dome Lamp	8W-15-22, 23
G101	8W-15-2, 4	Rear Power Outlet	8W-15-28
G102	8W-15-5, 6, 7	Rear View Mirror	8W-15-11, 22
G103	8W-15-9	Rear Window Defogger Grid	8W-15-30
G200	8W-15-10, 11, 12	Rear Wiper Motor	8W-15-29
G201	8W-15-13	Right B-Pillar Switch	8W-15-24
G202	8W-15-13	Right Cinch/Release Motor	8W-15-20
G300	8W-15-12, 14, 16, 17, 18, 19	Right Cylinder Lock Switch	8W-15-21
G301	8W-15-20, 21, 22, 24, 25	Right Fog Lamp	8W-15-6
G302	8W-15-26, 27, 28	Right Front Door Ajar Switch	8W-15-21
G303	8W-15-28, 29, 30	Right Front Door Lock Motor/Ajar Switch	8W-15-21
Generator	8W-15-2	Right Front Park/Turn Signal Lamp	8W-15-6
Hands Free Module	8W-15-11	Right Full Open Switch	8W-15-20
Headlamp Switch	8W-15-10	Right Headlamp	8W-15-19
Headlamp Washer Pump Motor	8W-15-7	Right Headlamp Leveling Motor	8W-15-7
High Note Horn	8W-15-6	Right High Beam Lamp	8W-15-8, 19
Hood Ajar Switch	8W-15-19	Right Liftgate Flood Lamp	8W-15-29
Horn Switch	8W-15-12	Right Low Beam Lamp	8W-15-8, 19
Instrument Cluster	8W-15-10	Right Mid Reading Lamp	8W-15-23
Instrument Panel Switch Bank	8W-15-10	Right Park Lamp	8W-15-8, 19
Integrated Power Module	8W-15-2, 3, 4, 8, 9, 19	Right Power Mirror	8W-15-11, 12
Left B-Pillar Switch	8W-15-18	Right Rear Lamp Assembly	8W-15-27, 28
Left Cinch/Release Motor	8W-15-14	Right Rear Reading Lamp	8W-15-23
Left Cylinder Lock Switch	8W-15-15, 16	Right Sliding Door Control Module	8W-15-20
Left Fog Lamp	8W-15-6	Right Sliding Door Latch Sensing Switch	8W-15-20
Left Front Door Ajar Switch	8W-15-16	Right Sliding Door Lock Motor	8W-15-20
Left Front Door Lock Motor/Ajar Switch	8W-15-15, 16	Right Sliding Door Lock Motor/Ajar Switch	8W-15-20
Left Front Park/Turn Signal Lamp	8W-15-6	Right Sliding Door Motor	8W-15-20
Left Full Open Switch	8W-15-14	Right Turn Signal Lamp	8W-15-19
Left Headlamp	8W-15-19	Right Visor/Vanity Lamp	8W-15-23
Left Headlamp Leveling Motor	8W-15-7	Sentry Key Remote Entry Module	8W-15-11
Left High Beam Lamp	8W-15-8, 19	Siren	8W-15-11
Left Liftgate Flood Lamp	8W-15-29	Speed Control Servo	8W-15-2
Left Low Beam Lamp	8W-15-8, 19	Sunroof Module	8W-15-27
Left Mid Reading Lamp	8W-15-23	Sunroof Switch	8W-15-23
Left Park Lamp	8W-15-8, 19	Thatcham Alarm Module	8W-15-11
Left Power Mirror	8W-15-12	Traction Control Switch	8W-15-11
Left Rear Lamp Assembly	8W-15-28	Trailer Tow Connector	8W-15-27
Left Rear Reading Lamp	8W-15-23	Transmission Control Module	8W-15-4
Left Sliding Door Control Module	8W-15-14	Transmission Control Relay	8W-15-3, 4
Left Sliding Door Latch Sensing Switch	8W-15-14	Washer Fluid Level Switch	8W-15-5
Left Sliding Door Lock Motor	8W-15-14	Wiper Module	8W-15-18
Left Sliding Door Lock Motor/Ajar Switch	8W-15-14		
Left Sliding Door Motor	8W-15-14		

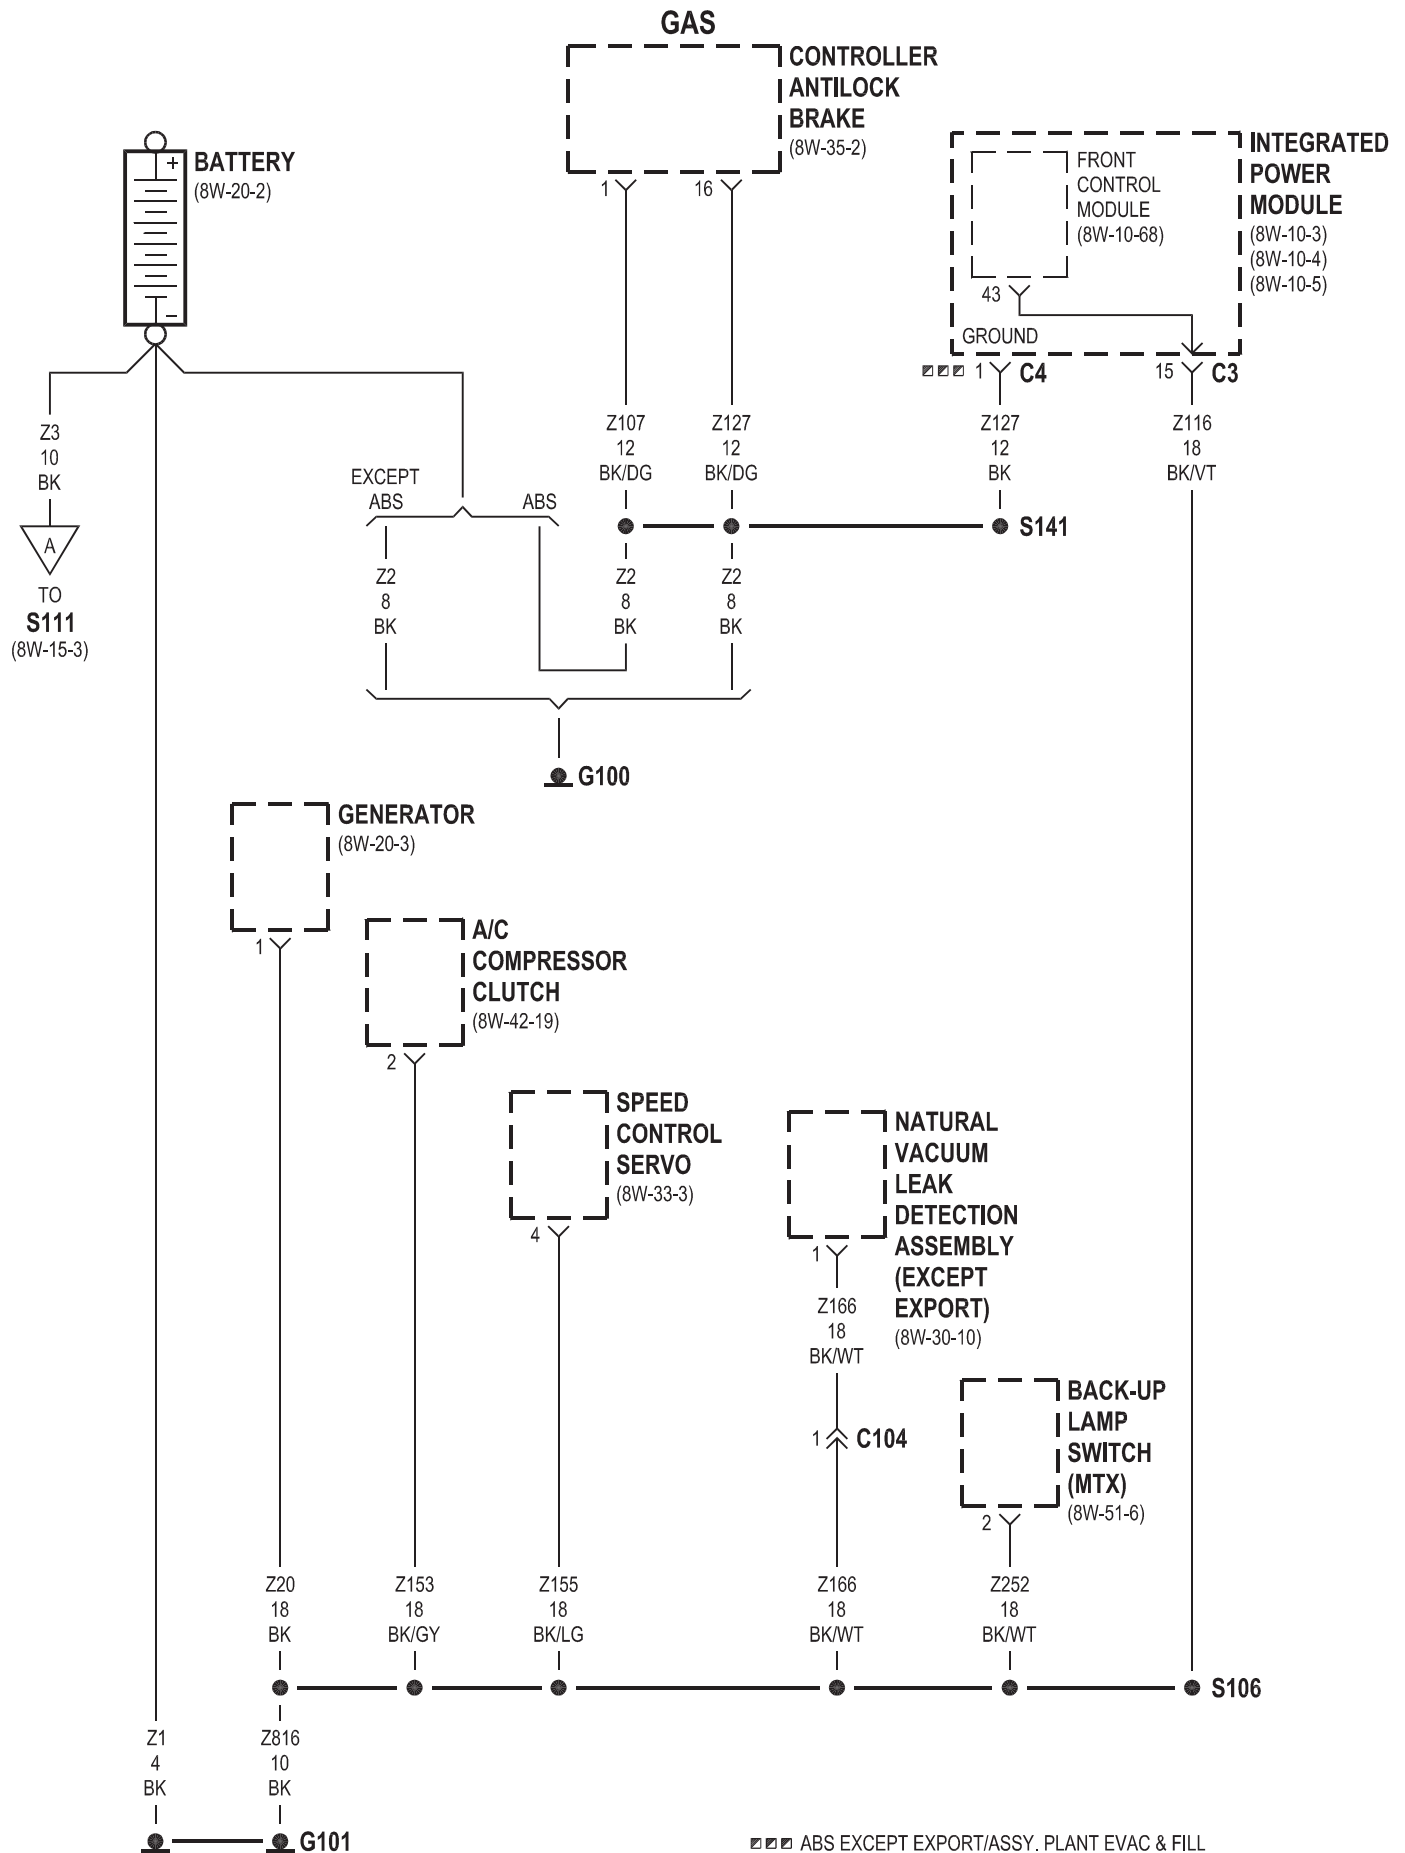


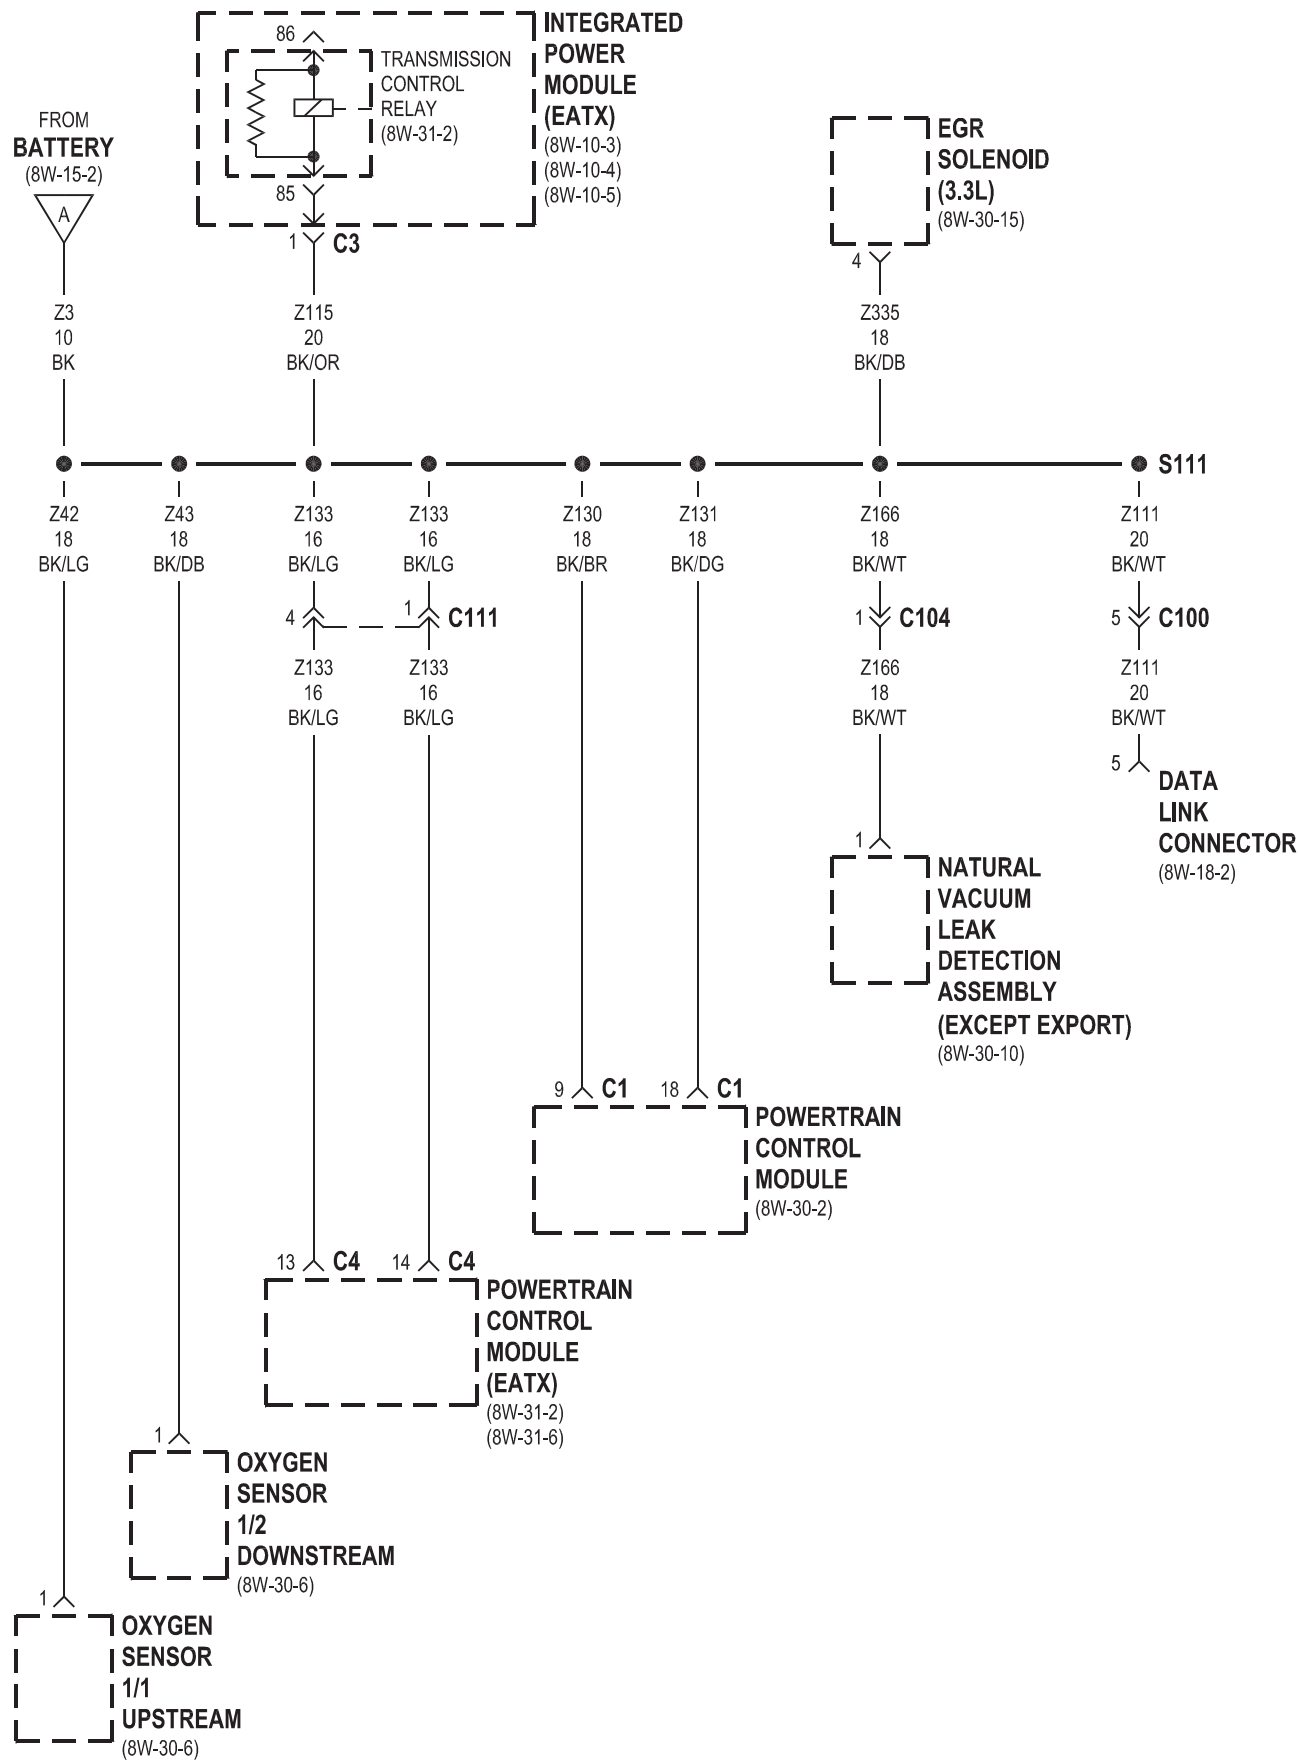


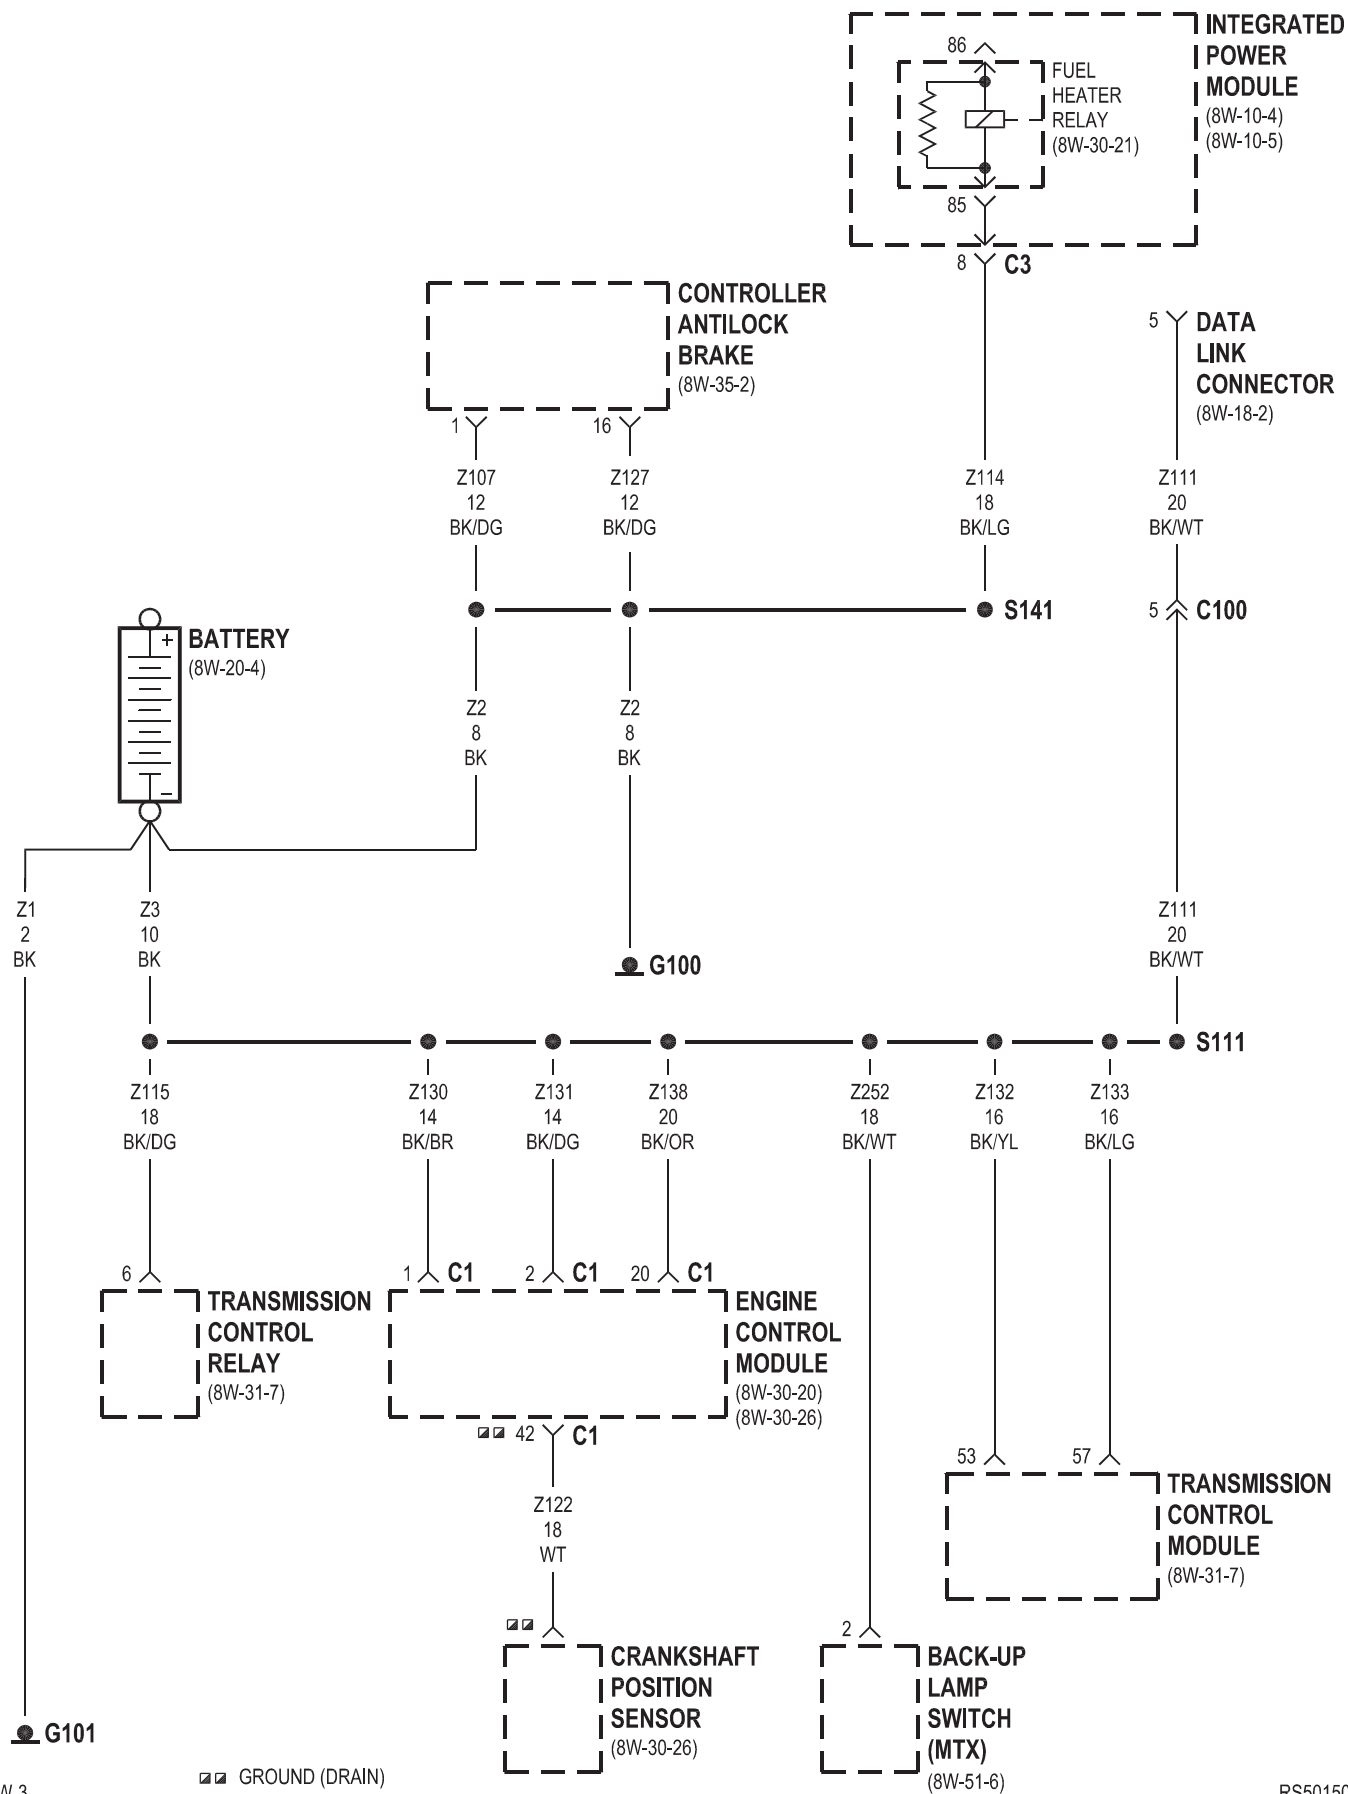

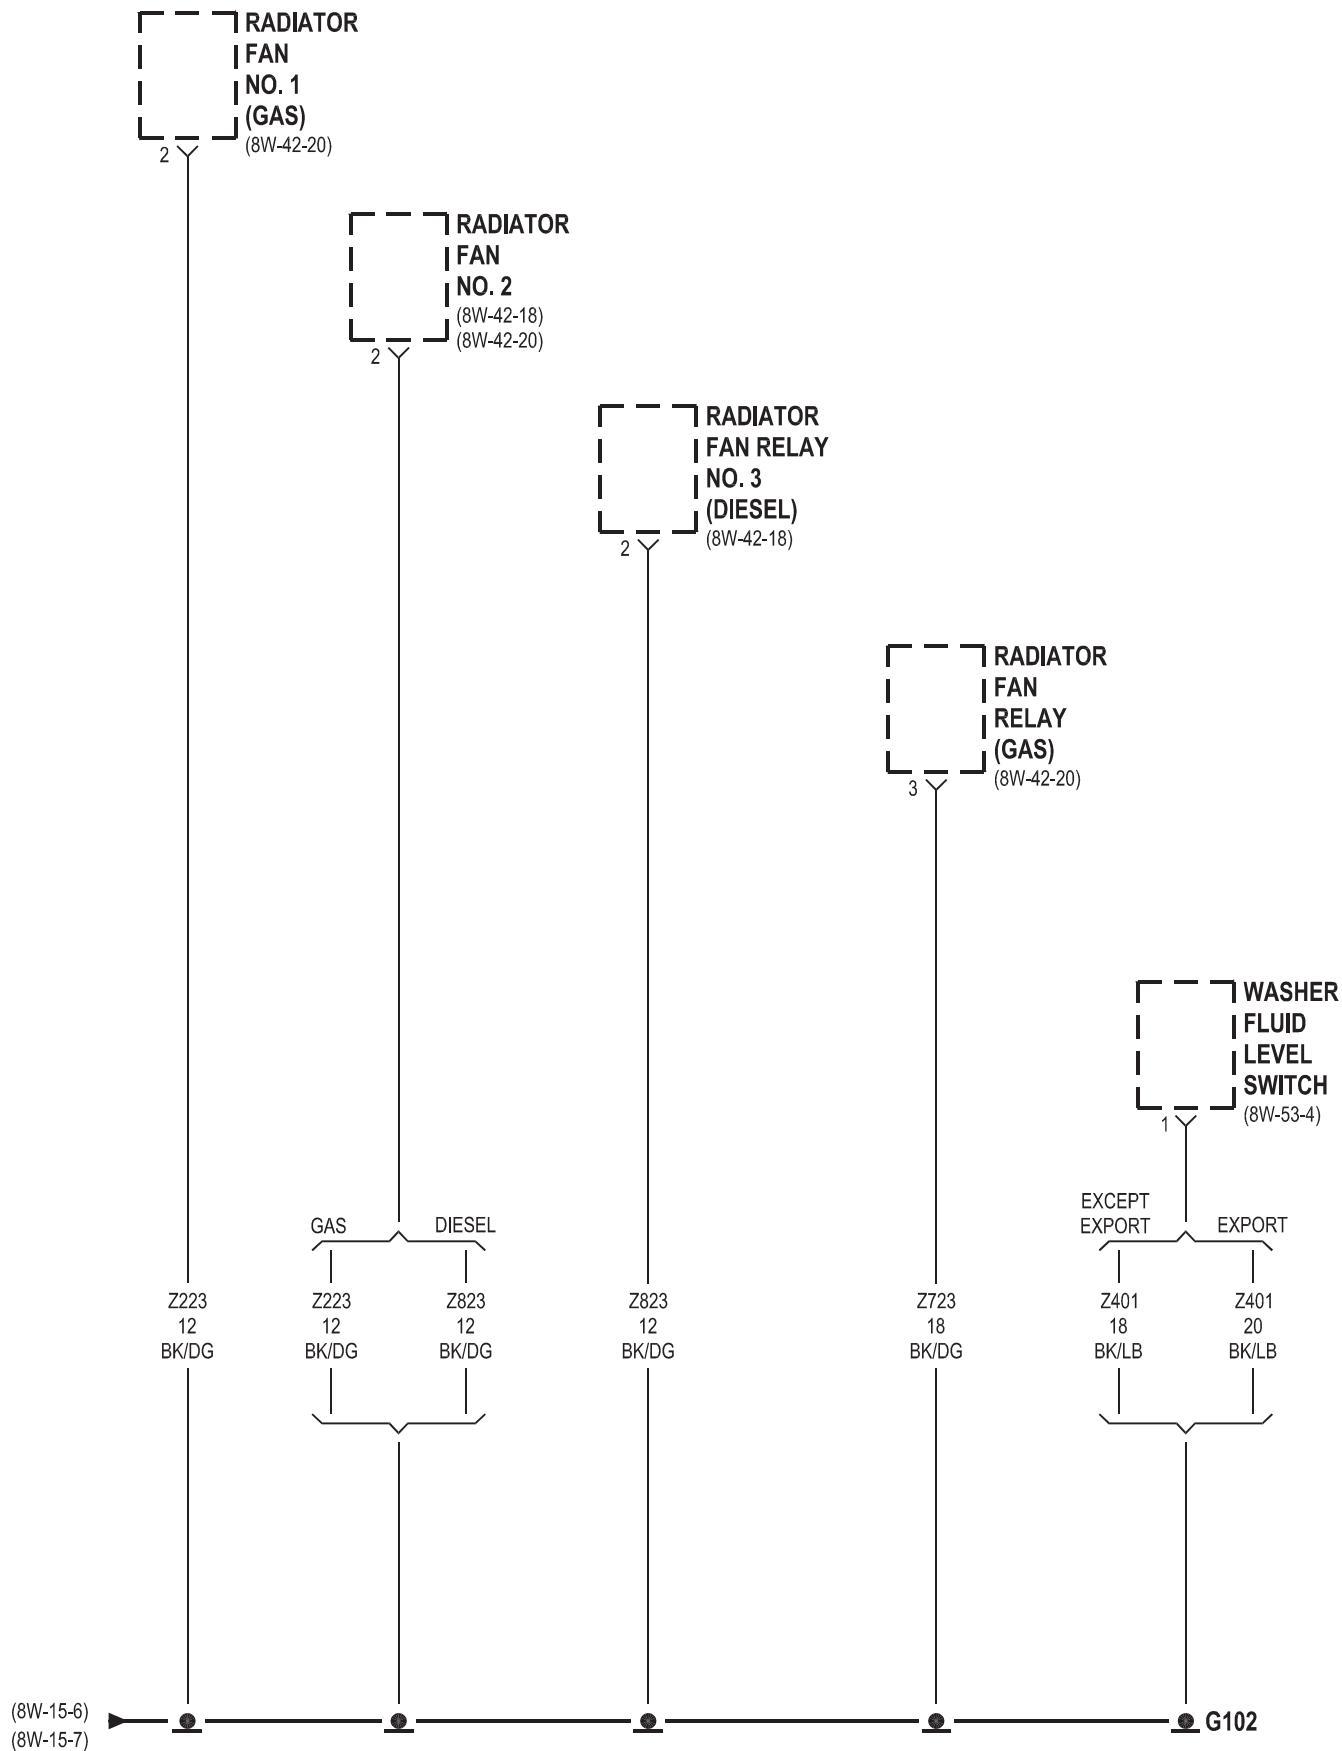

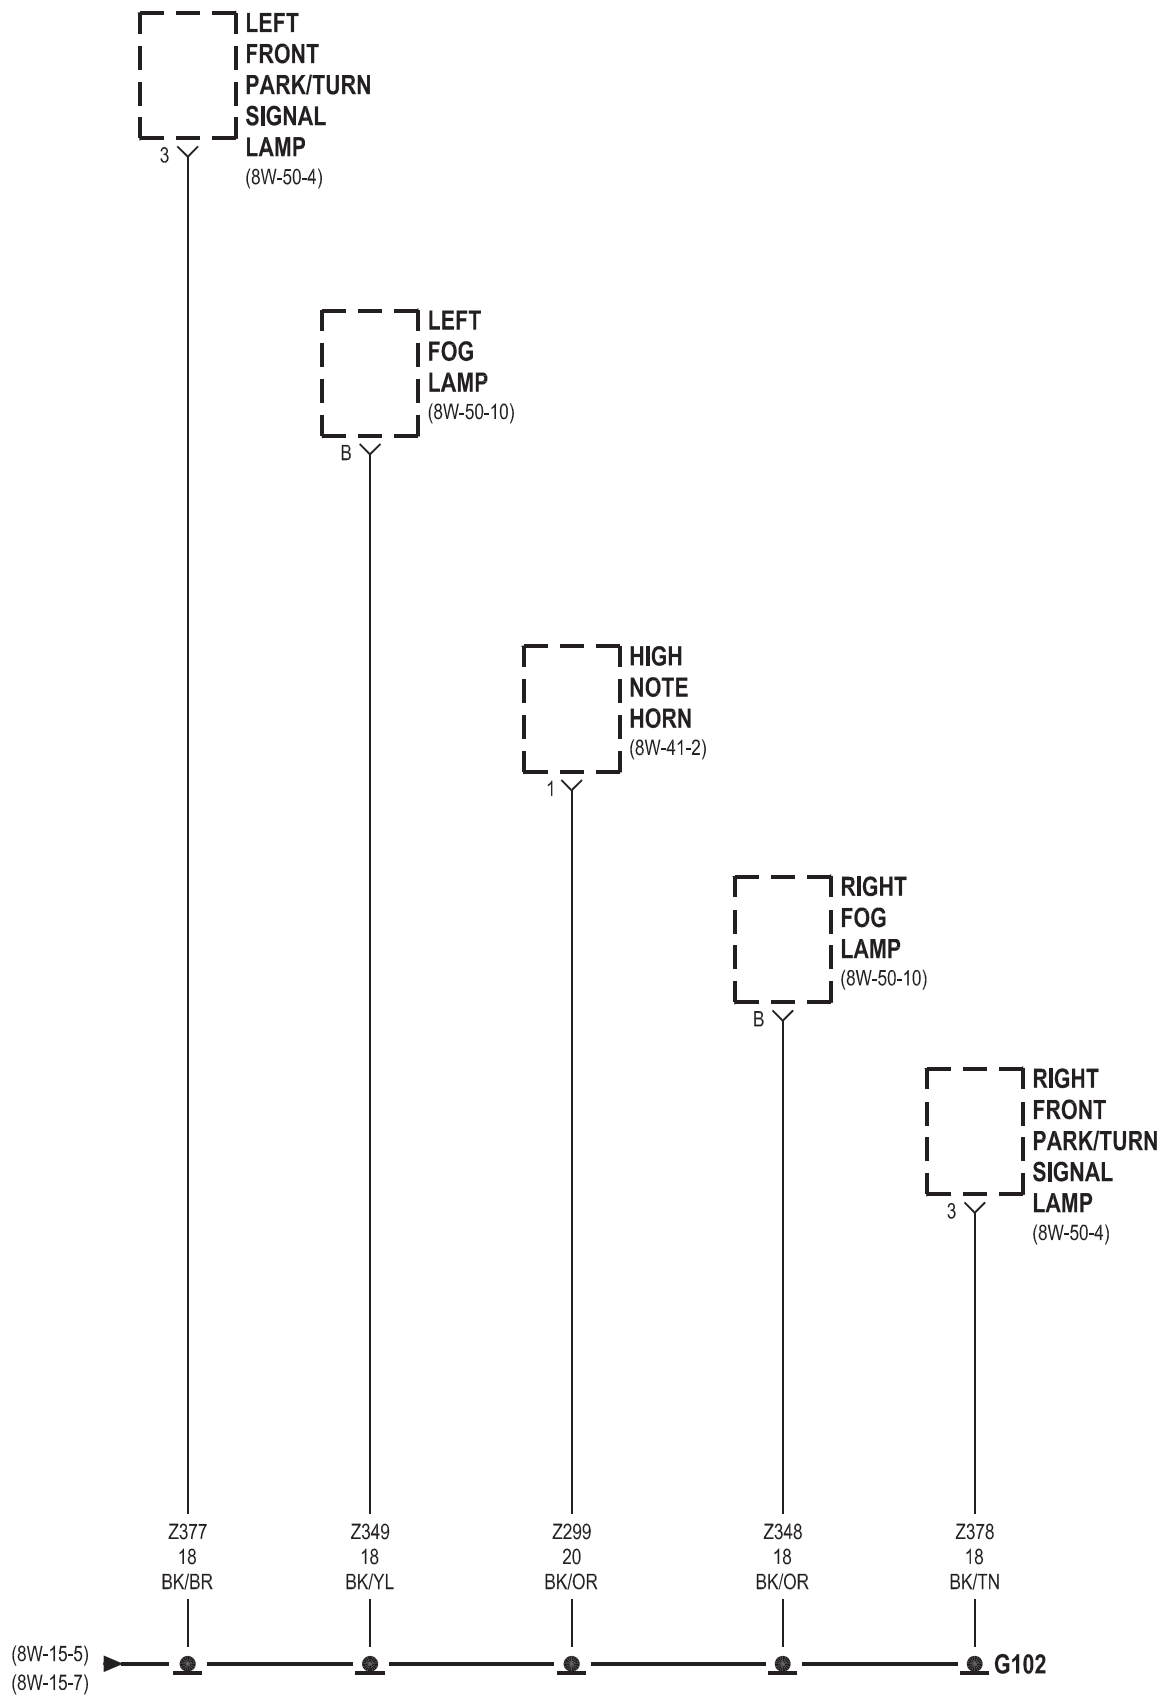

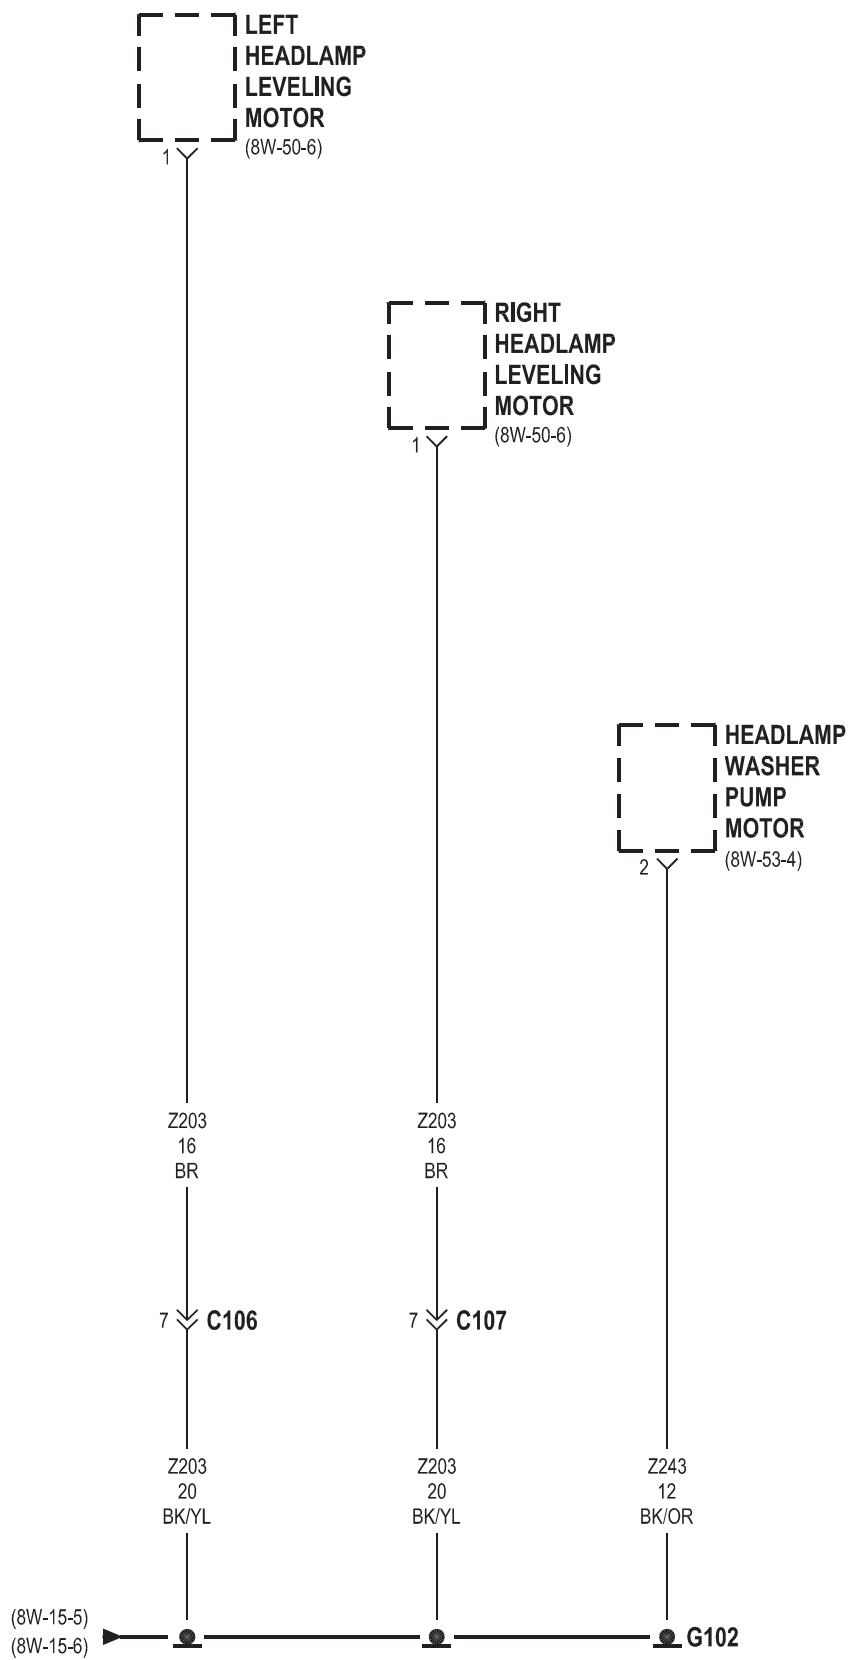

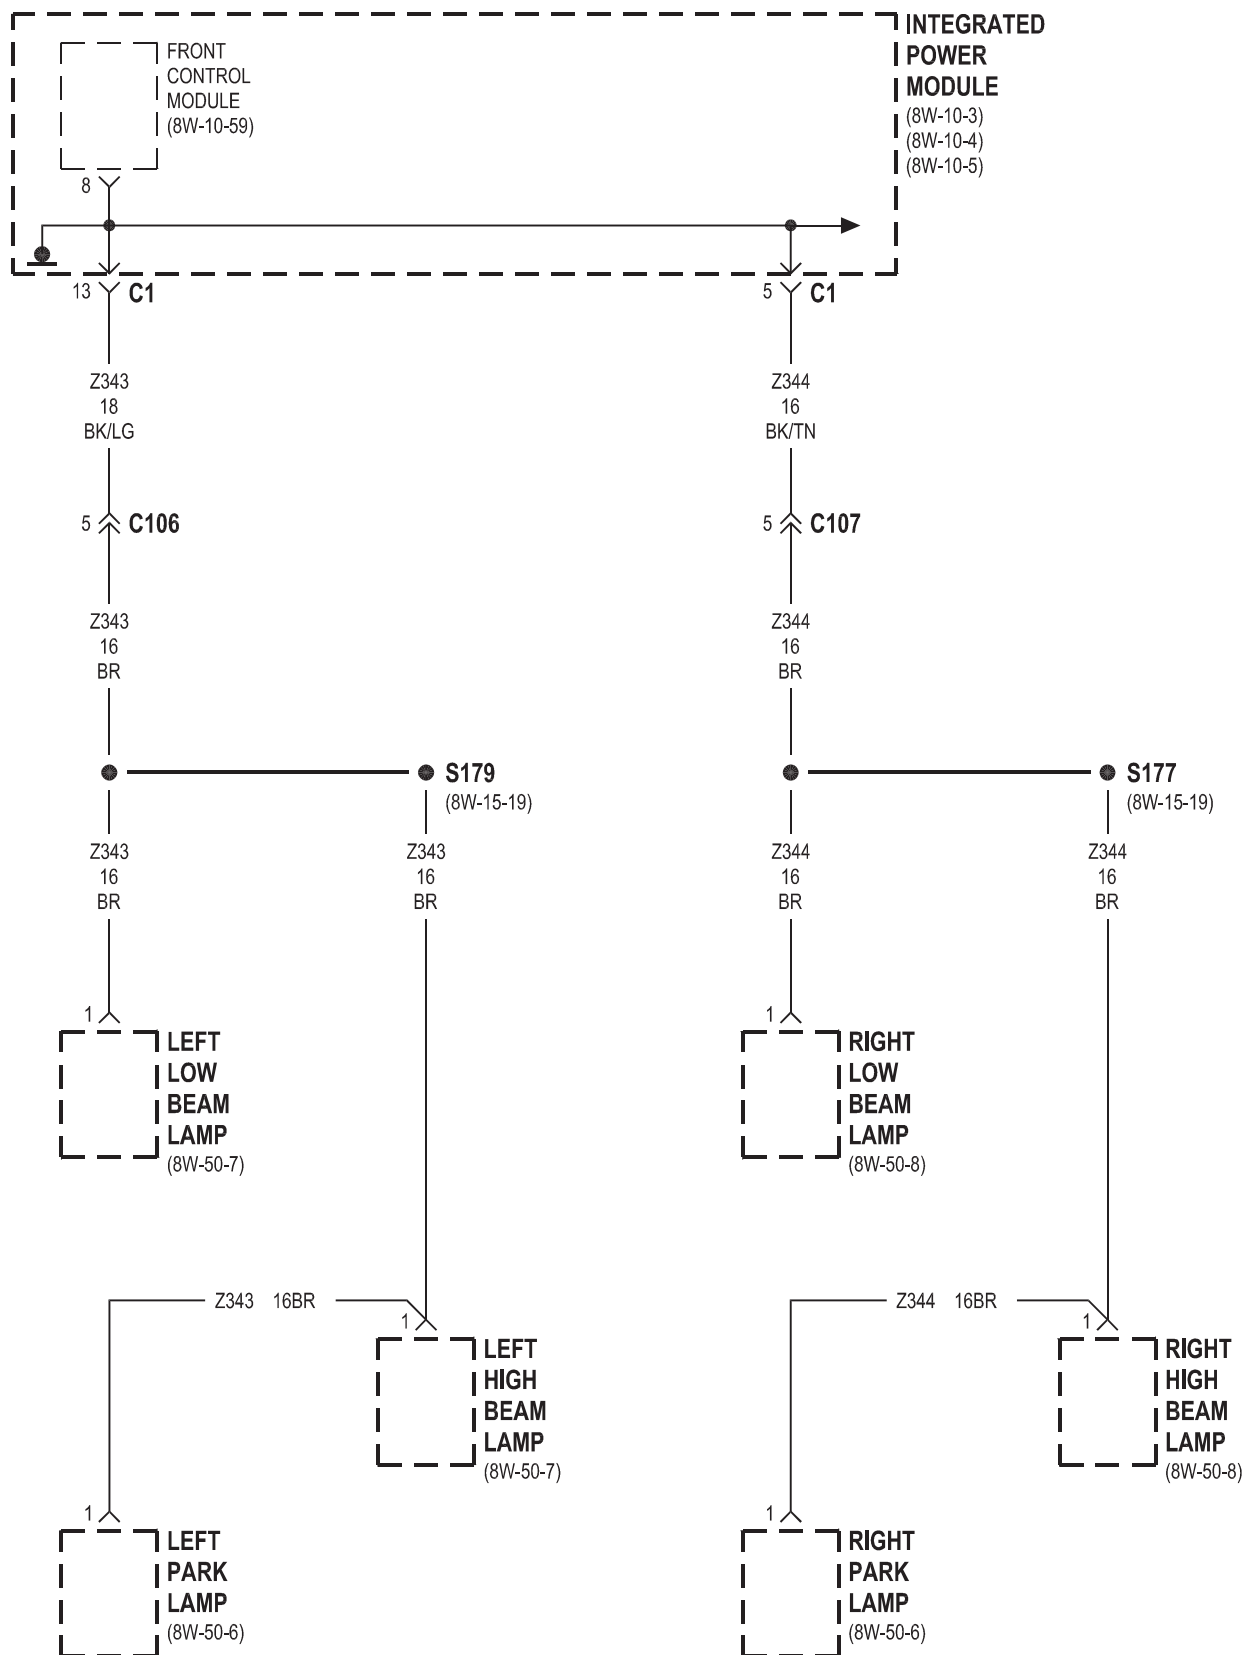



RS

8W-15 GROUND DISTRIBUTION


8W - 15 - 9

DIESEL

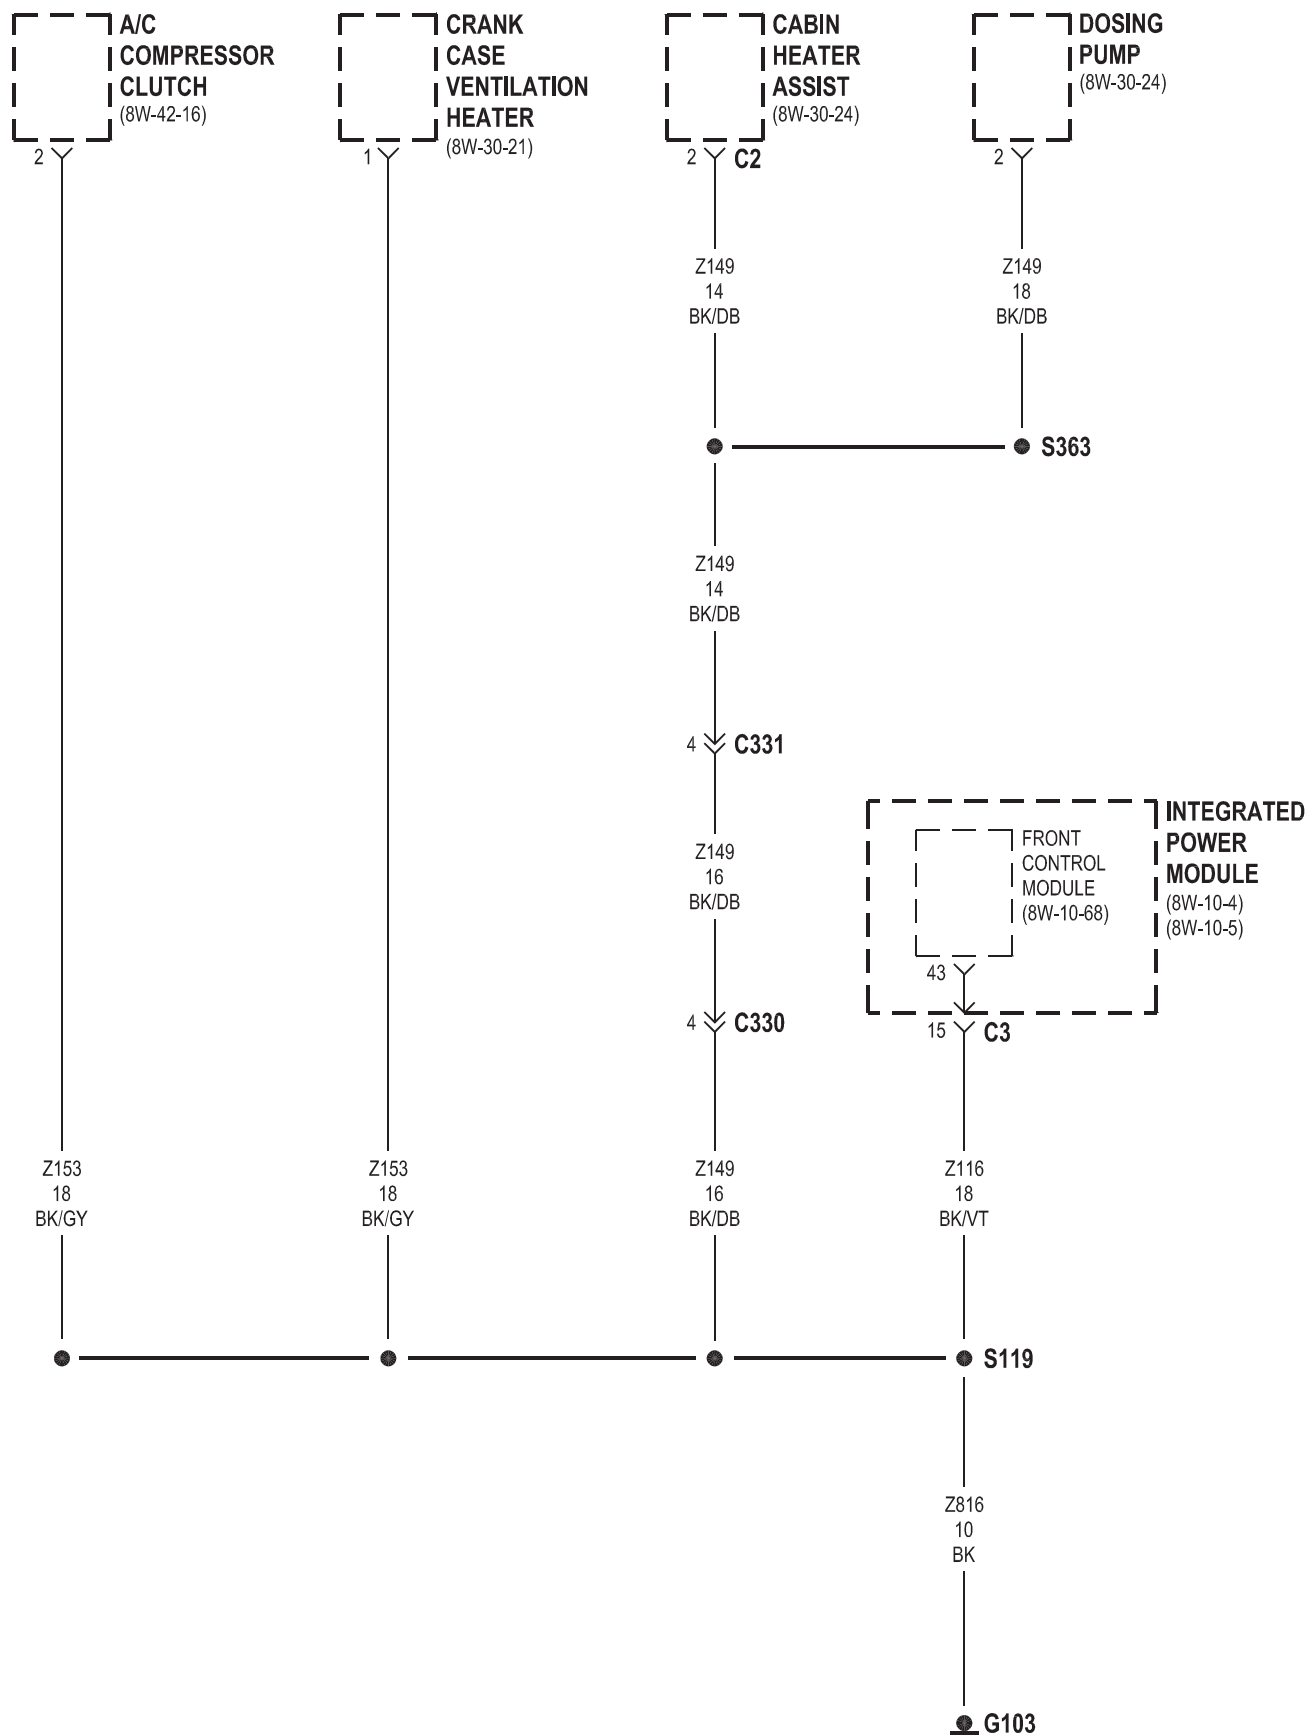


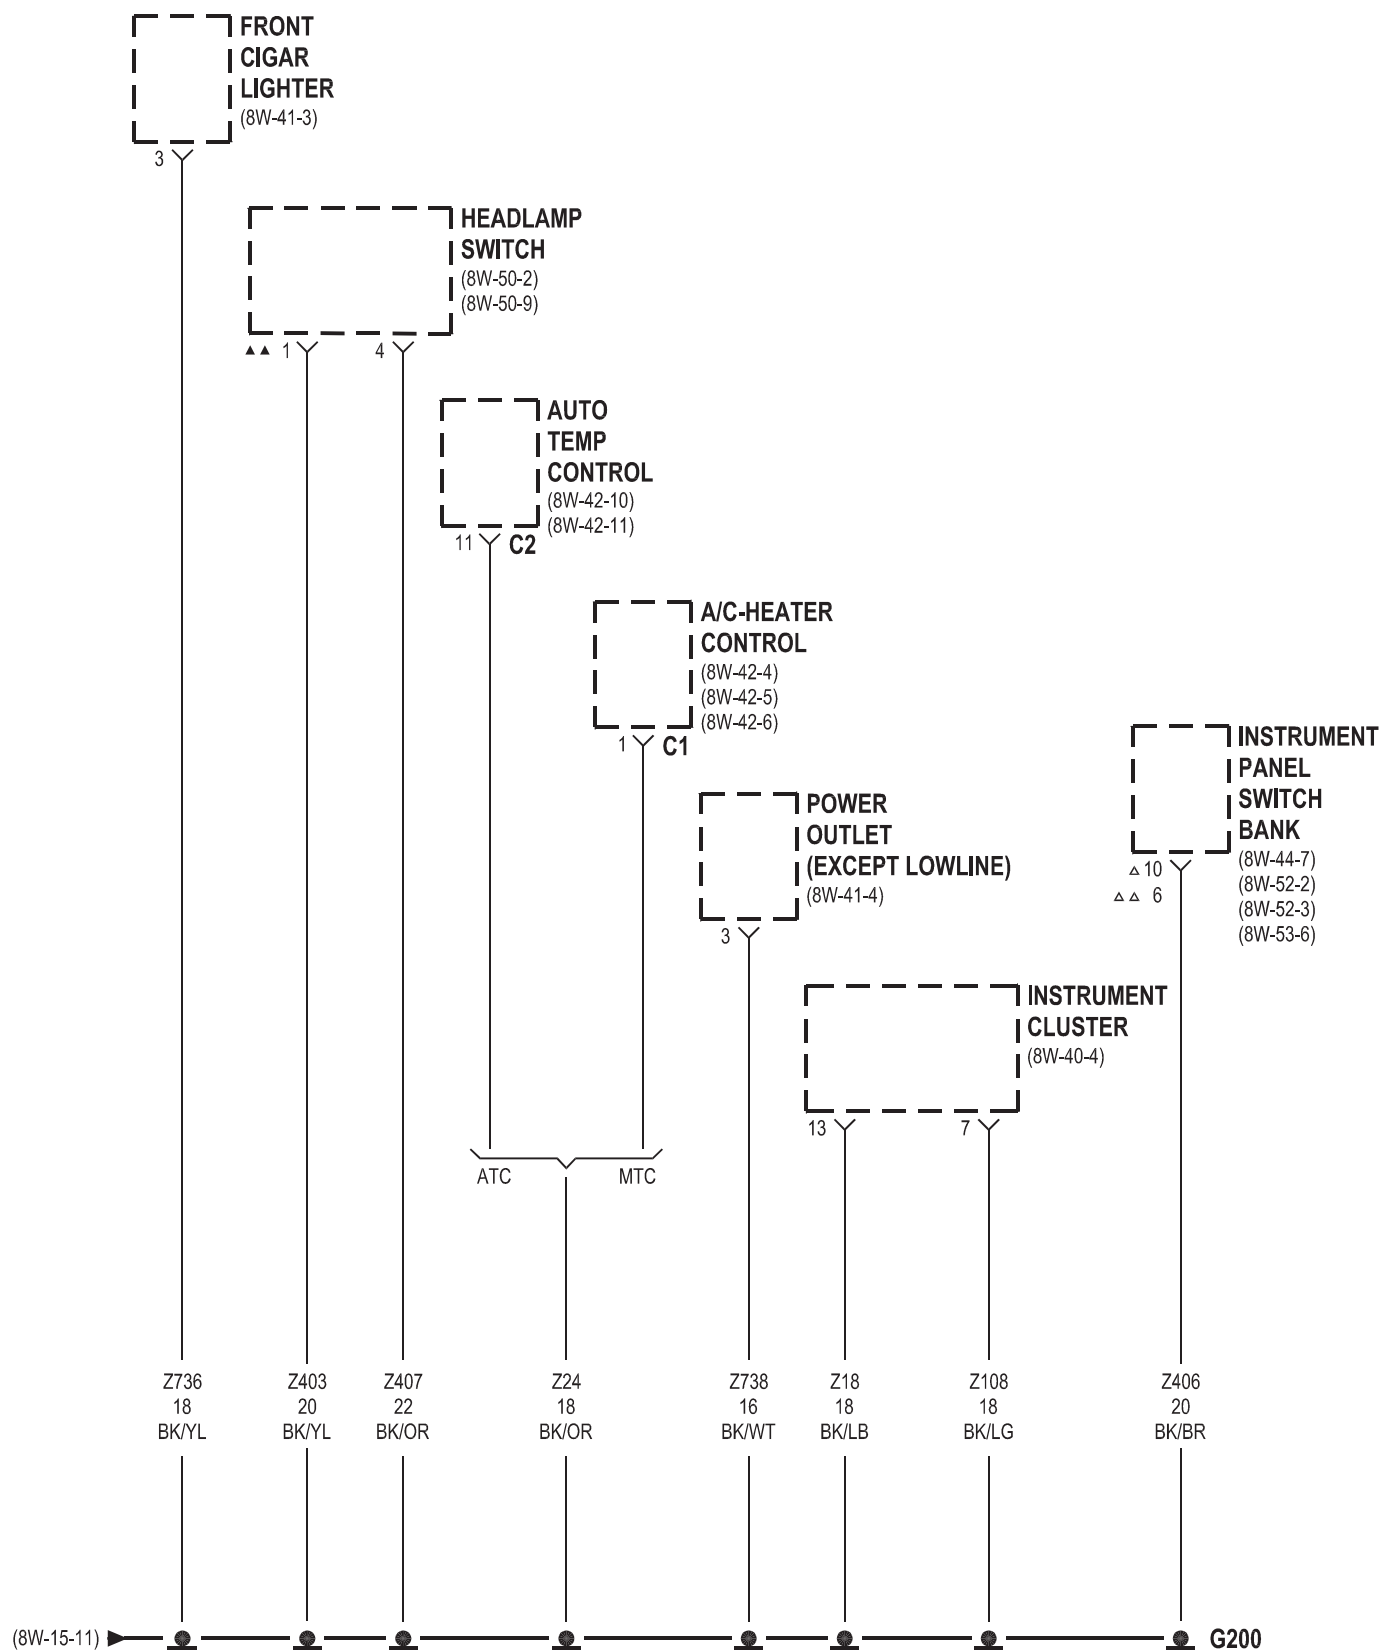


▲ HEATED SEATS
 ▲▲ EXCEPT HEATED SEATS
 ▲▲ EXPORT

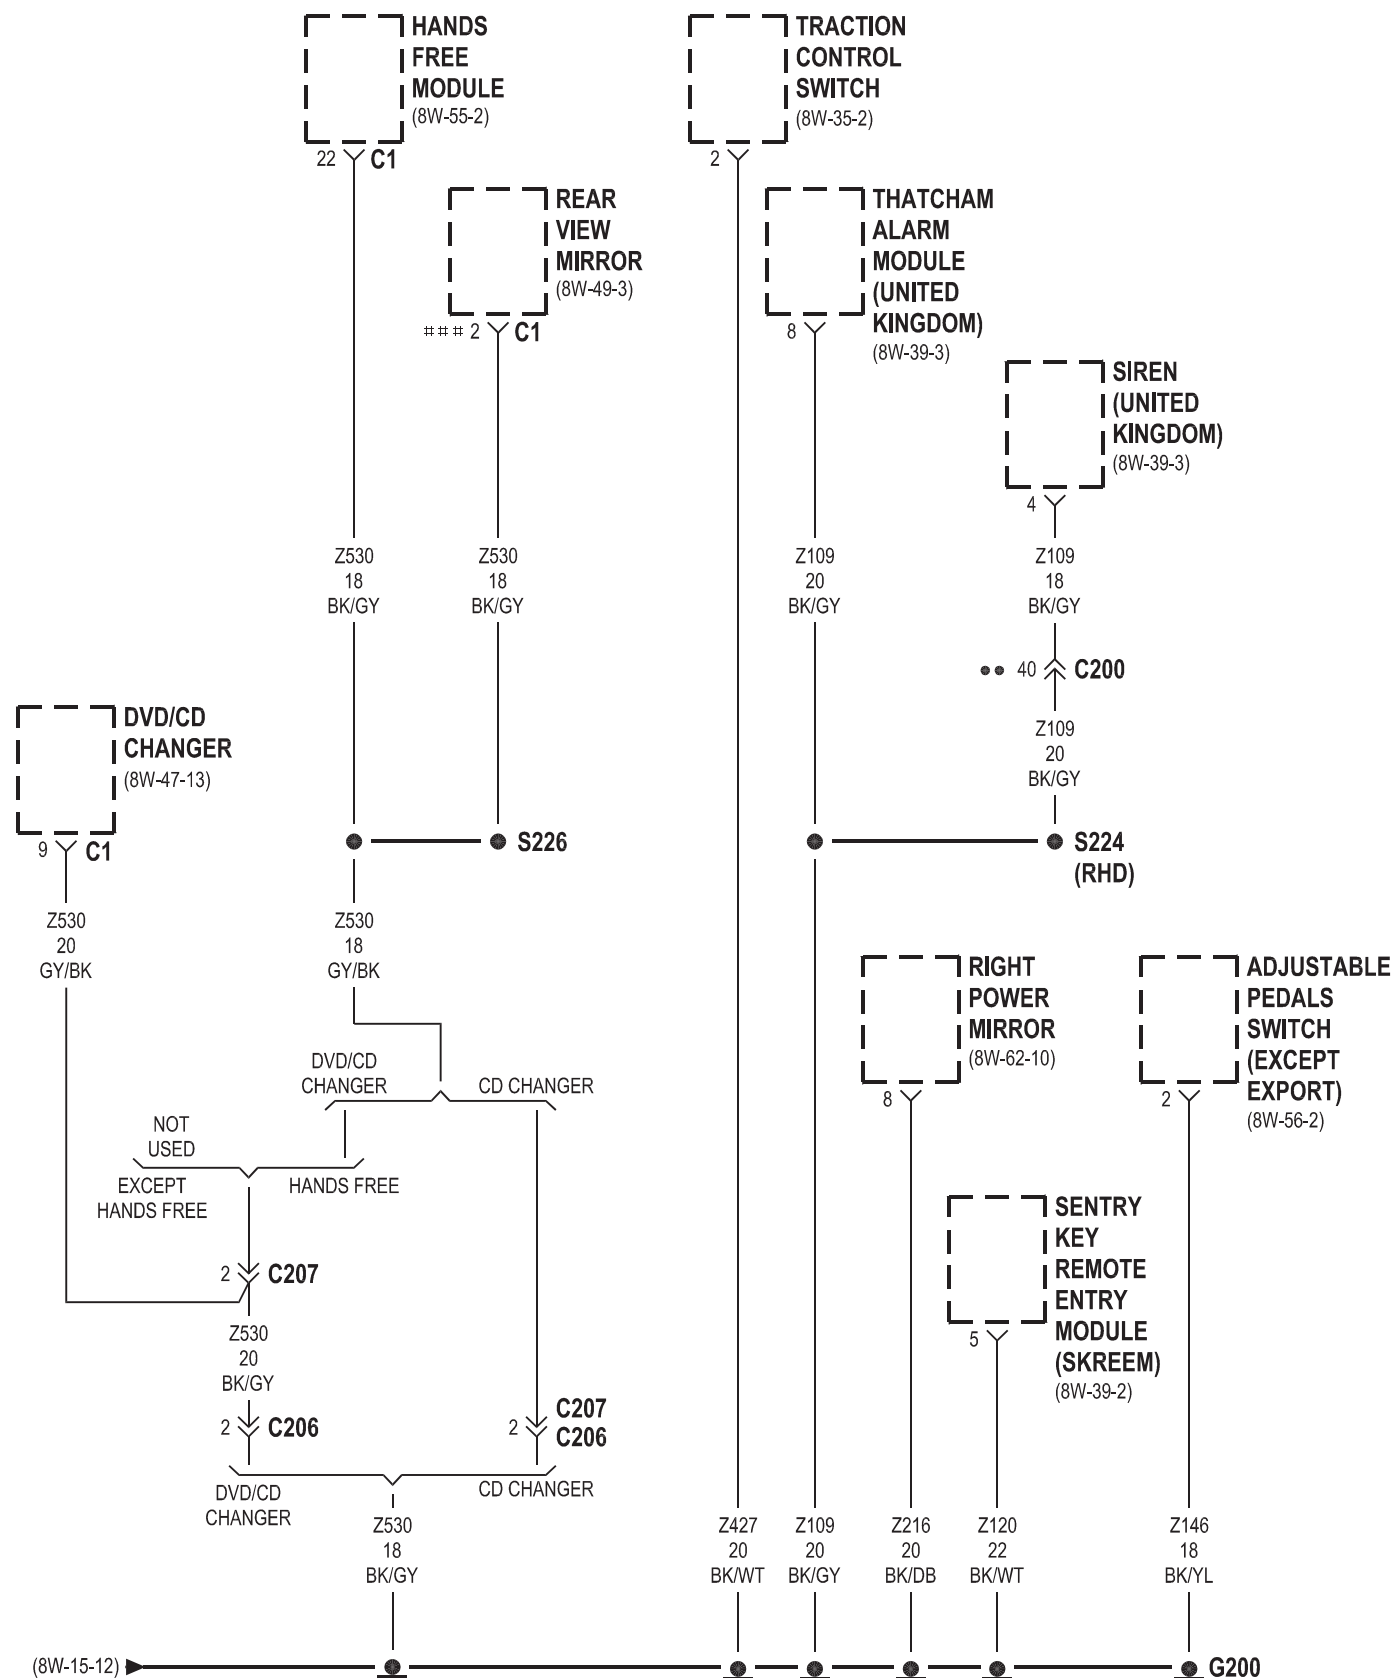

•• RHD
HANDS FREE
LUXURY



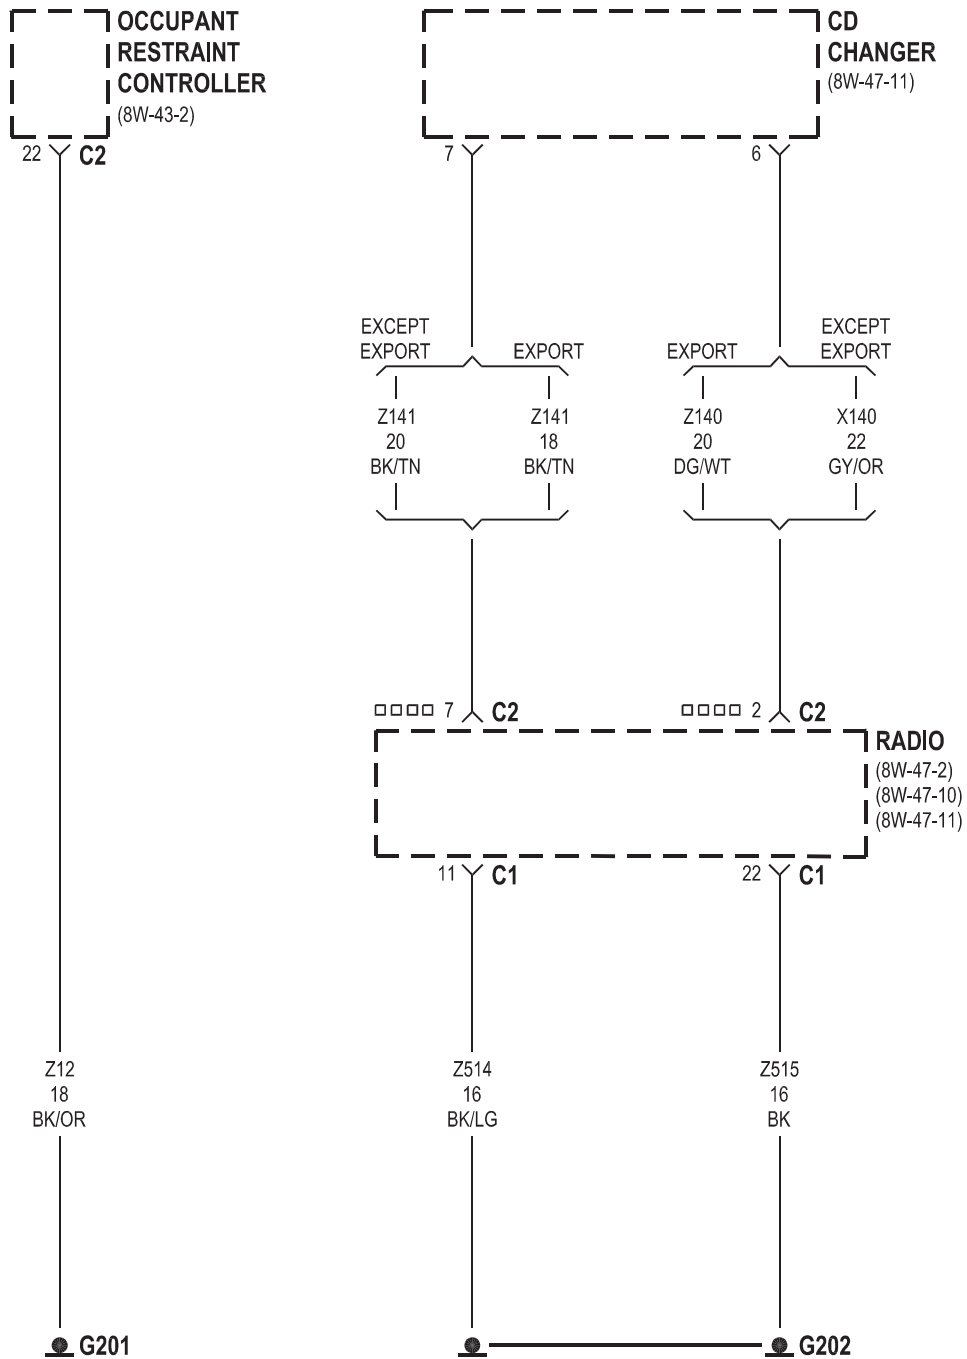

□□□□ CD CHANGER

