

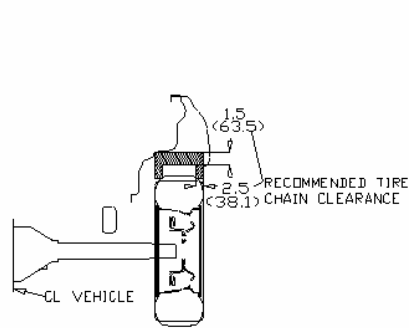


TIRE & AXLE DETAIL


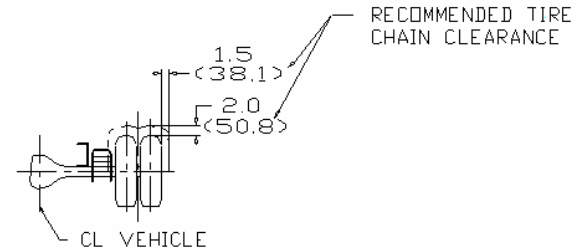


CL REAR AXLE SECTION
SHOWING REAR AXLE
IN JOUNCE POSITION

(BASE VEHICLE ONLY)
(SEE TIRE CHART)

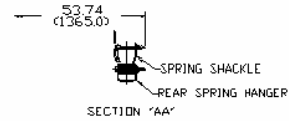

CL REAR AXLE SECTION
SHOWING REAR AXLE
IN JOUNCE POSITION

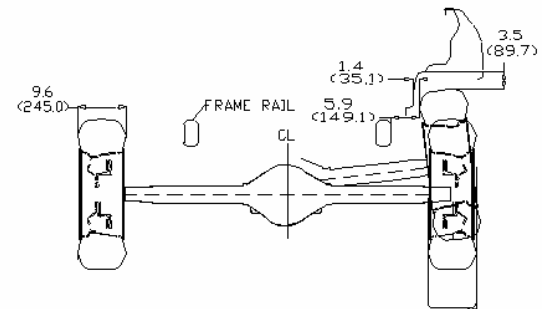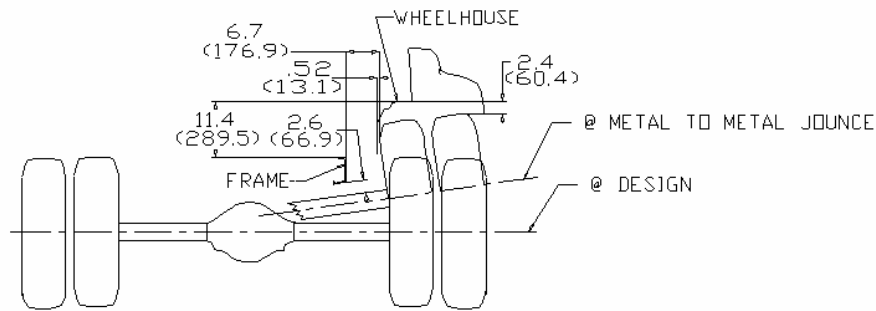

CL REAR AXLE SECTION
SHOWING REAR AXLE
IN JOUNCE POSITION
(BASE VEHICLE ONLY)
(SEE TIRE CHART)