


## 8W-56 CONVENIENCE SYSTEMS

<b>Component</b>	<b>Page</b>
Adjustable Pedals Motor . . . . .	8W-56-2, 3
Adjustable Pedals Relay . . . . .	8W-56-2
Adjustable Pedals Sensor . . . . .	8W-56-3
Adjustable Pedals Switch . . . . .	8W-56-2
Driver Heated Seat Module . . . . .	8W-56-3
Front Control Module . . . . .	8W-56-2, 4
Fuse 14 . . . . .	8W-56-2
Fuse 18 . . . . .	8W-56-2
Fuse 22 . . . . .	8W-56-3
G200 . . . . .	8W-56-2
G300 . . . . .	8W-56-3
G302 . . . . .	8W-56-4
Ignition Switch . . . . .	8W-56-4

<b>Component</b>	<b>Page</b>
Integrated Power Module . . . . .	8W-56-2, 3, 4
Left Sliding Door Control Module . . . . .	8W-56-2
Memory Seat/Mirror/Adjustable Pedals Module . . . . .	8W-56-2, 3
Park Assist Display . . . . .	8W-56-4
Park Assist Module . . . . .	8W-56-4, 5, 6
Park Assist Sensor No. 7 . . . . .	8W-56-5, 6
Park Assist Sensor No. 8 . . . . .	8W-56-5, 6
Park Assist Sensor No. 9 . . . . .	8W-56-5, 6
Park Assist Sensor No. 10 . . . . .	8W-56-5, 6
Power Seat Circuit Breaker . . . . .	8W-56-3
Sentry Key Remote Entry Module . . . . .	8W-56-4

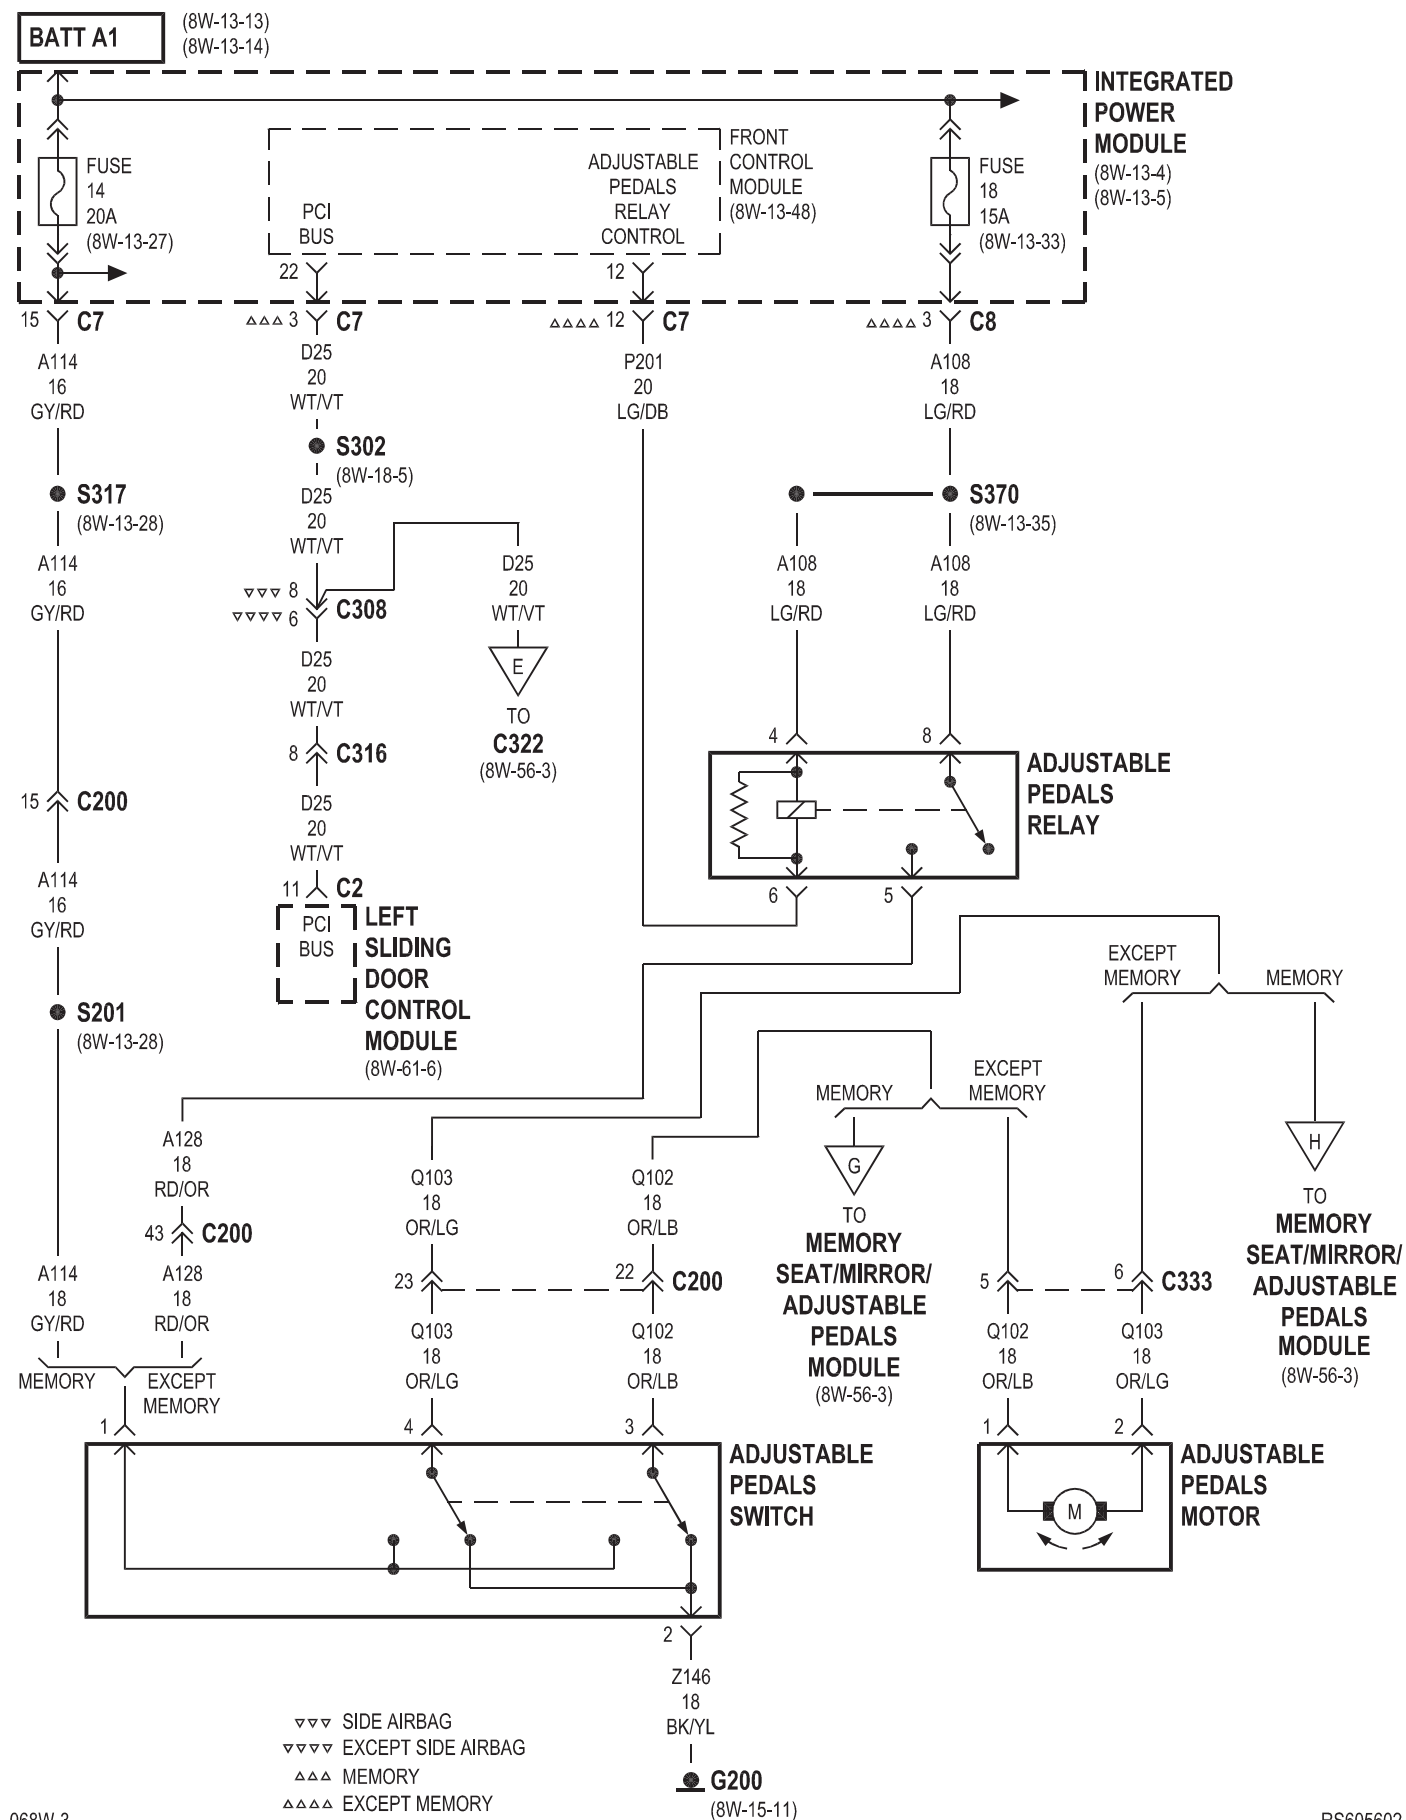

# ADJUSTABLE PEDALS/MEMORY/EXCEPT EXPORT

