



8W-31 TRANSMISSION CONTROL SYSTEM


Component	Page
Assembly-Line Pressure Sensor/Variable Force Solenoid	8W-31-2, 9
Assembly-Shift Motor/Mode Sensor	8W-31-6
Assembly-Transmission Solenoid/Pressure Switch	8W-31-2, 7
Assembly-Transmission Solenoid/TRS	8W-31-2, 3, 4, 5
Cluster	8W-31-10
Fuse 19	8W-31-2, 10
G100	8W-31-11
G113	8W-31-2
G208	8W-31-10
Junction Block	8W-31-10
Module-Front Control	8W-31-6


Component	Page
Module-Integrated Power	8W-31-6
Module-Powertrain Control	8W-31-2, 3, 4, 5, 7, 8, 9, 10, 11
Power Distribution Center	8W-31-2
Relay-Transmission Control	8W-31-2, 3, 4, 7, 9
Sensor-Input Speed	8W-31-11
Sensor-Line Pressure	8W-31-5
Sensor-Output Speed	8W-31-11
Sensor-Transmission Range	8W-31-8
Solenoid-Brake Transmission Shift Interlock	8W-31-10
Switch-Tow/Haul Overdrive	8W-31-10
Switch-Transfer Case Selector	8W-31-10
Transducer-A/C Pressure	8W-31-6

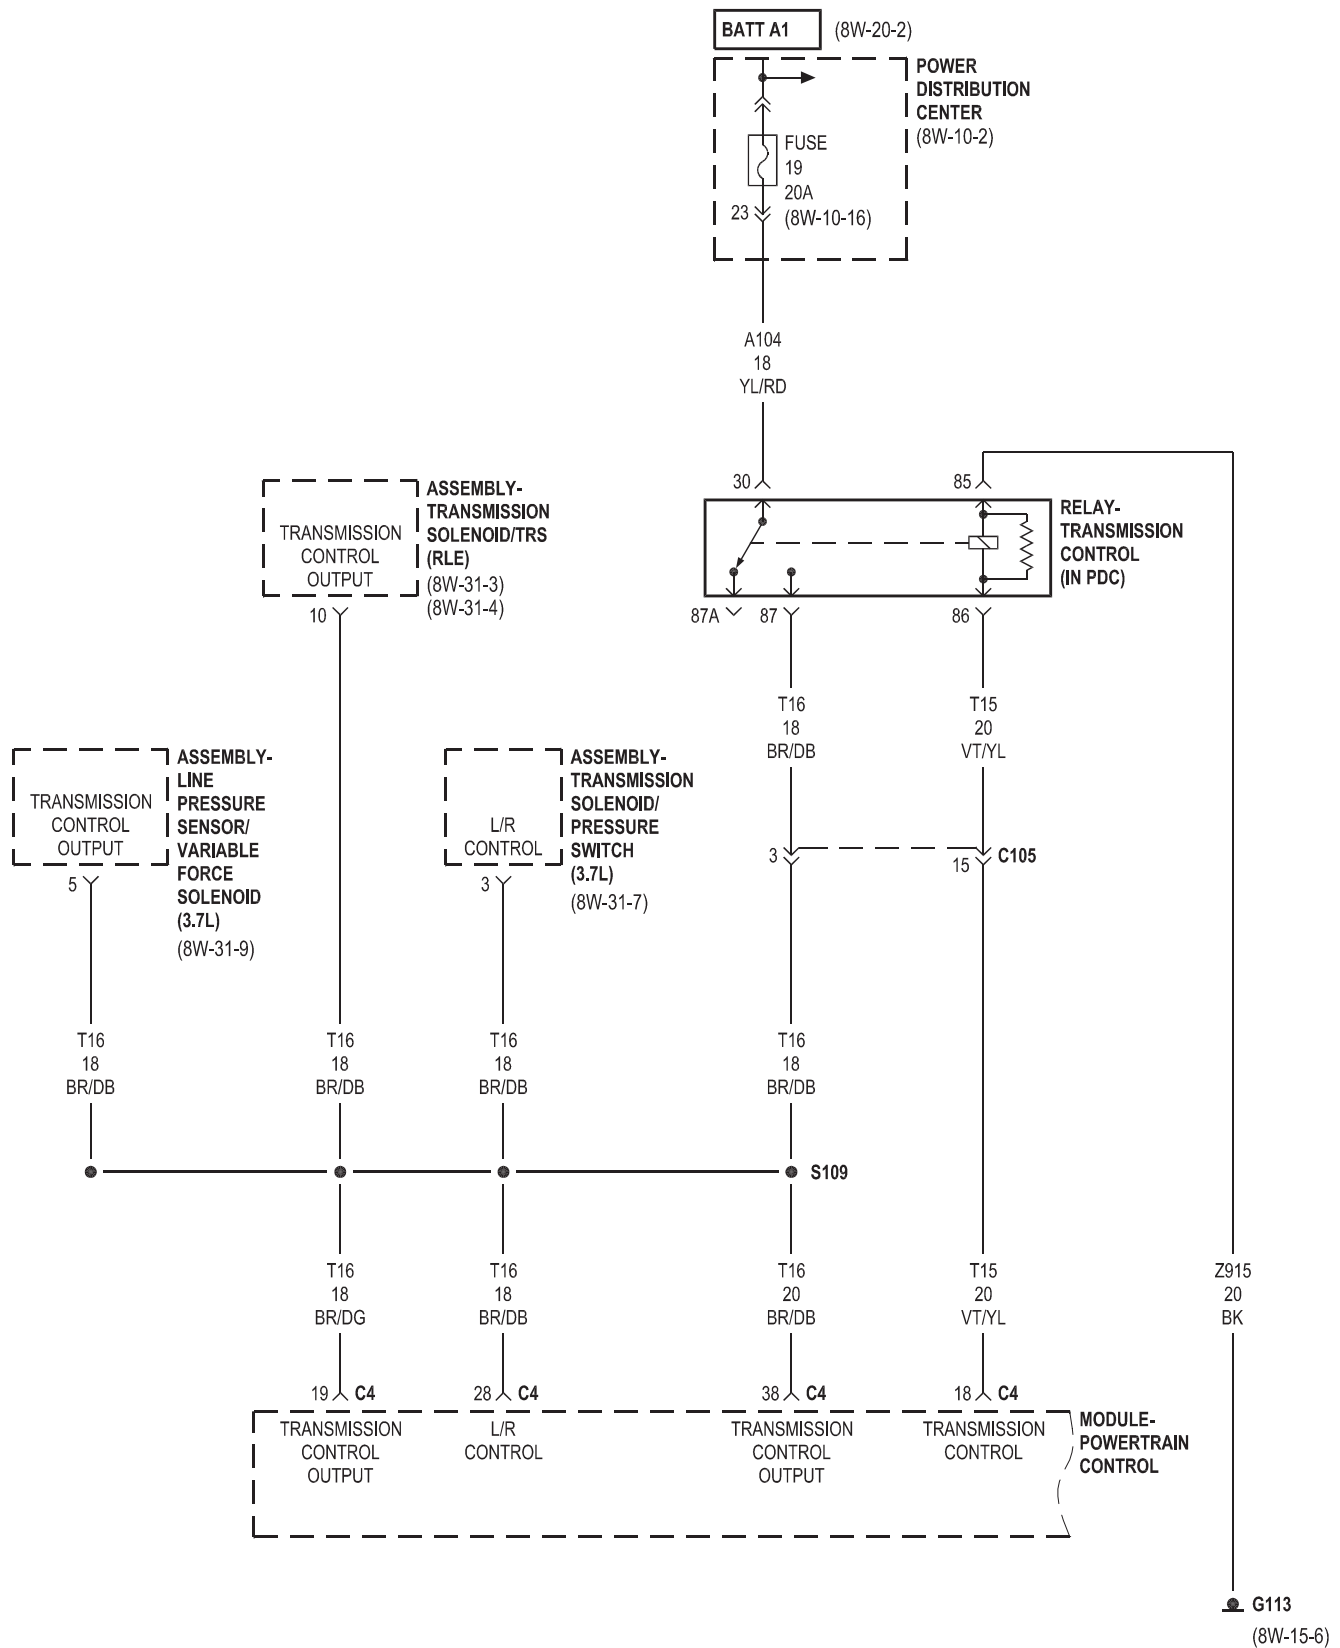


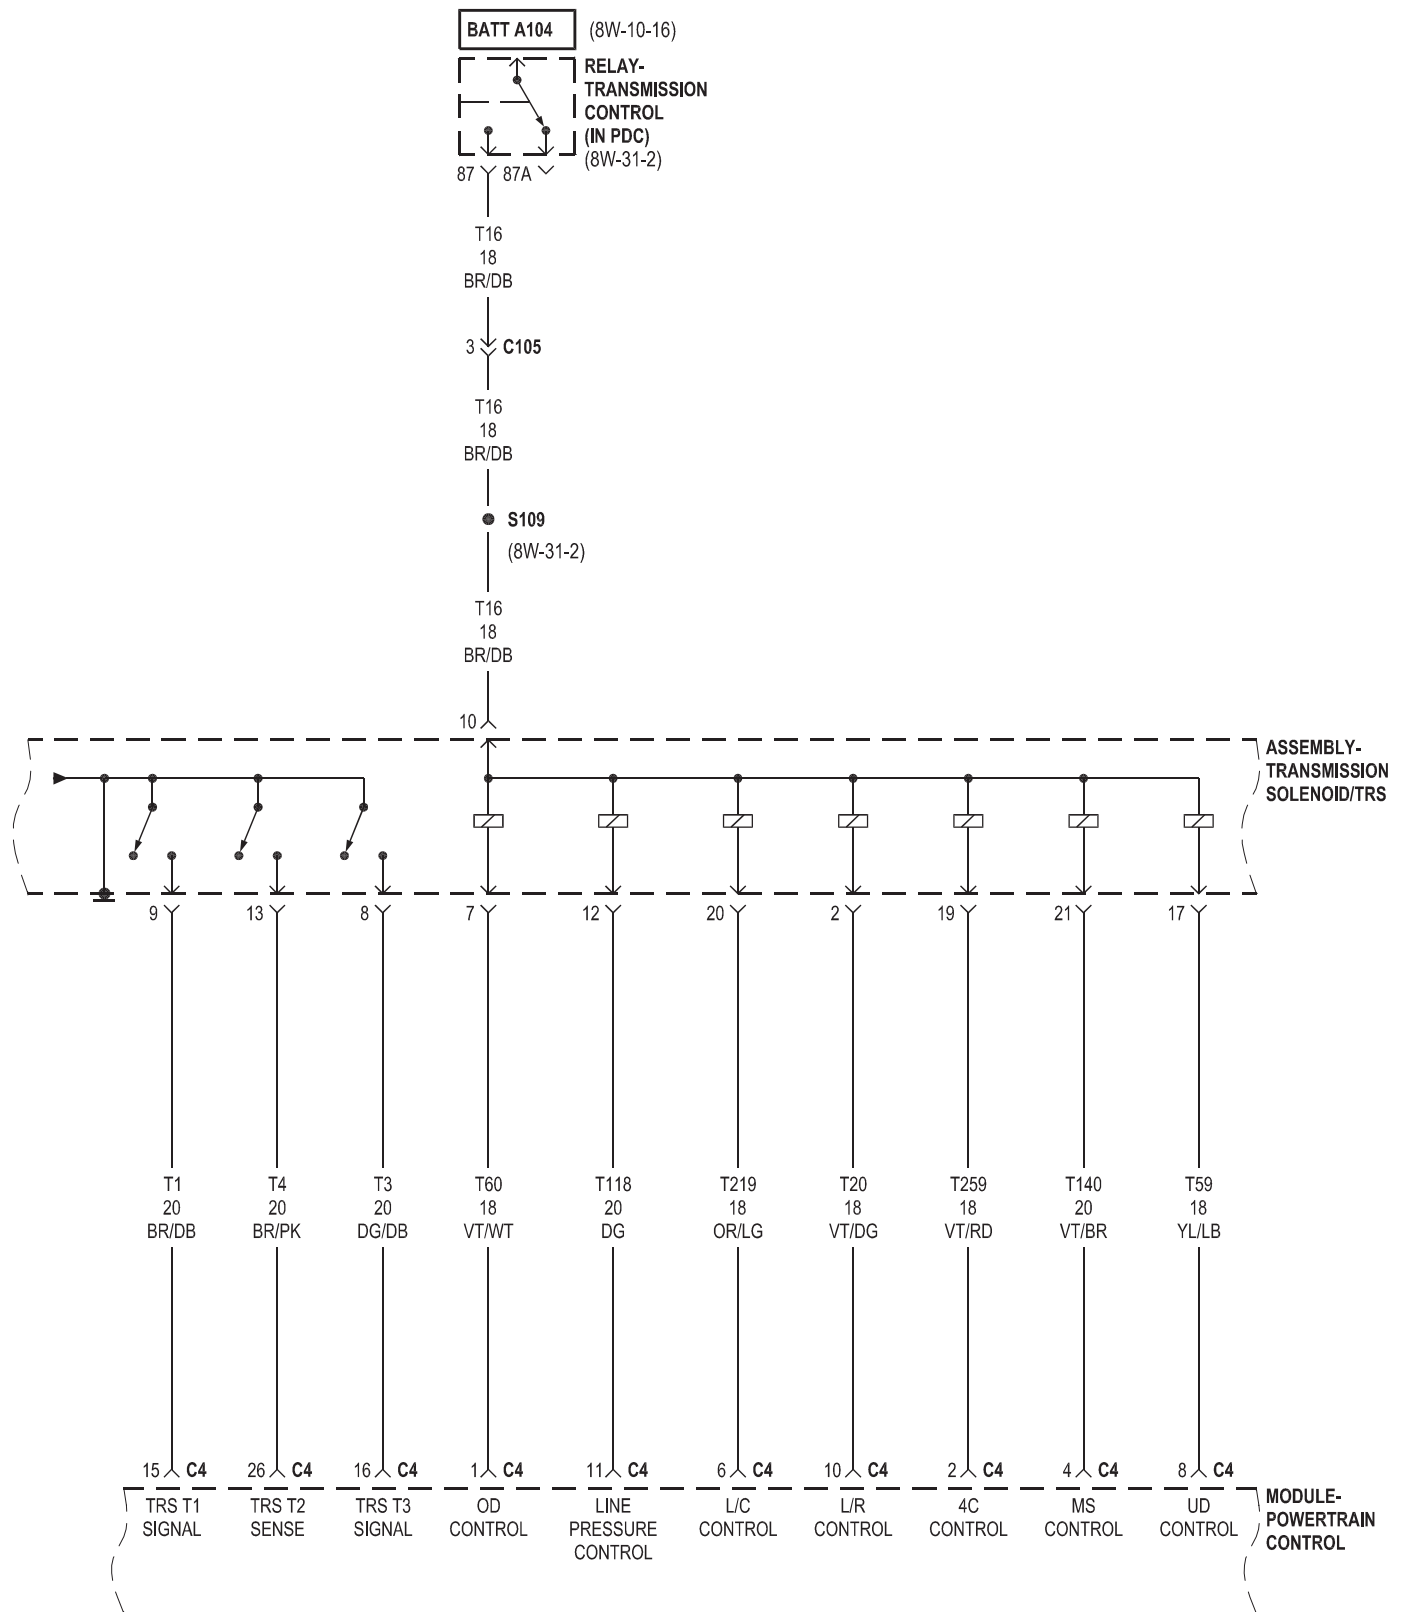

RFE

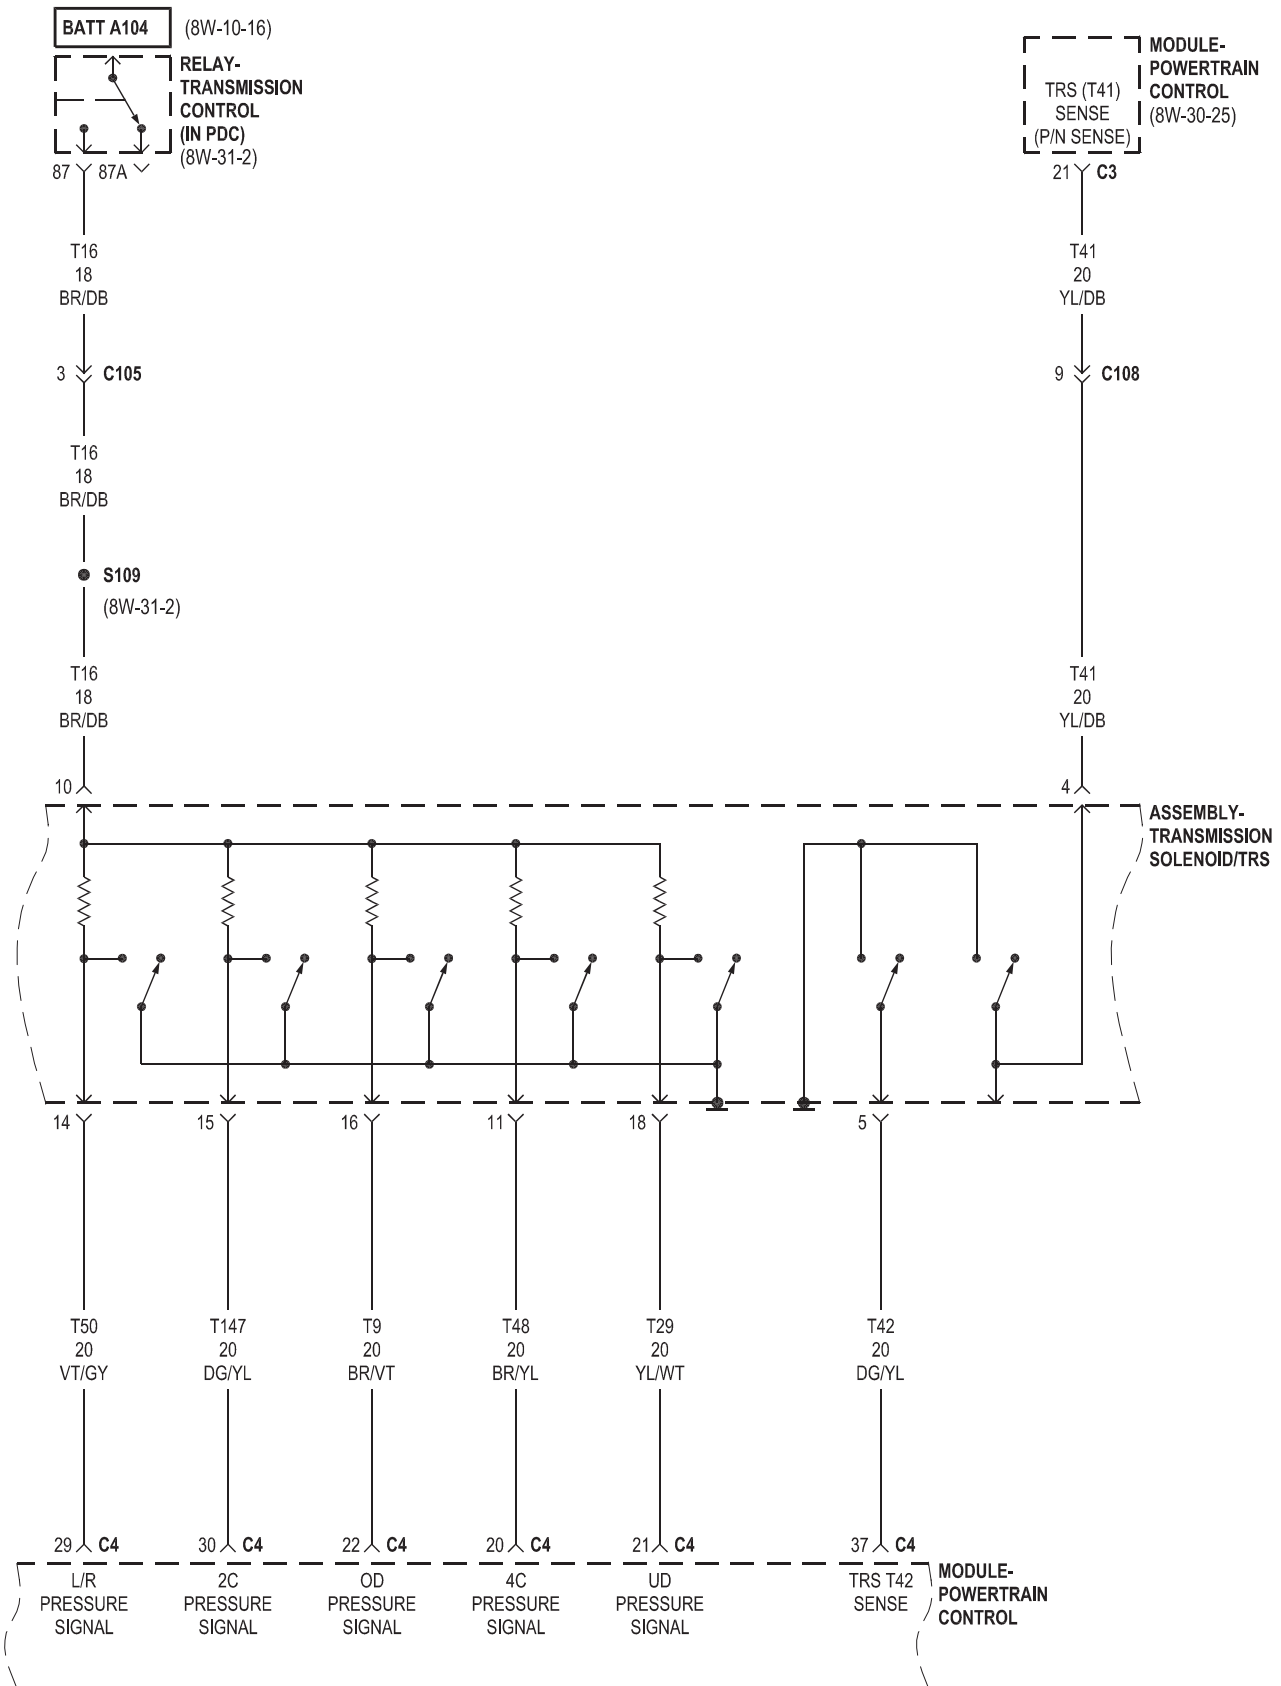

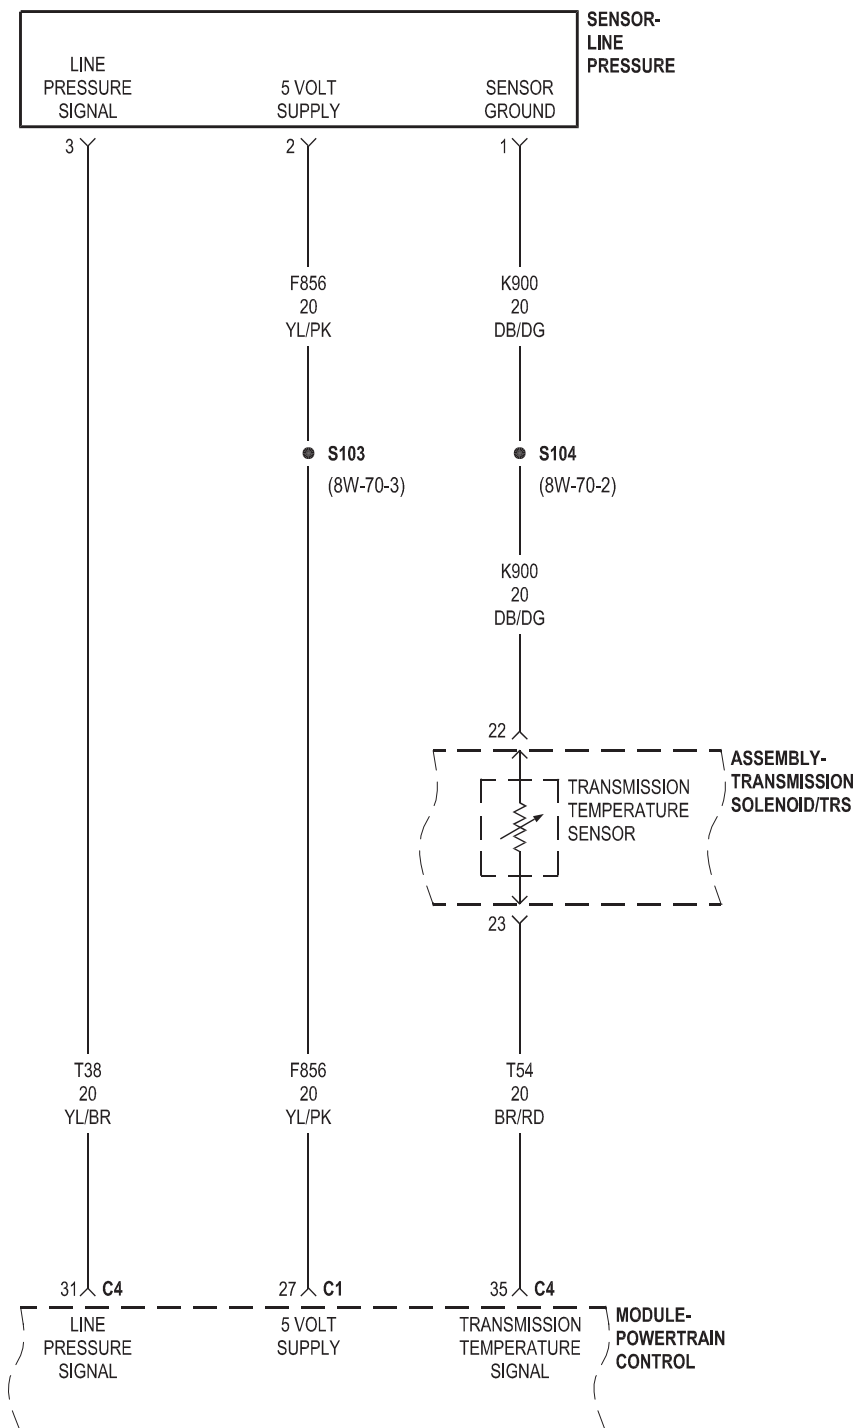

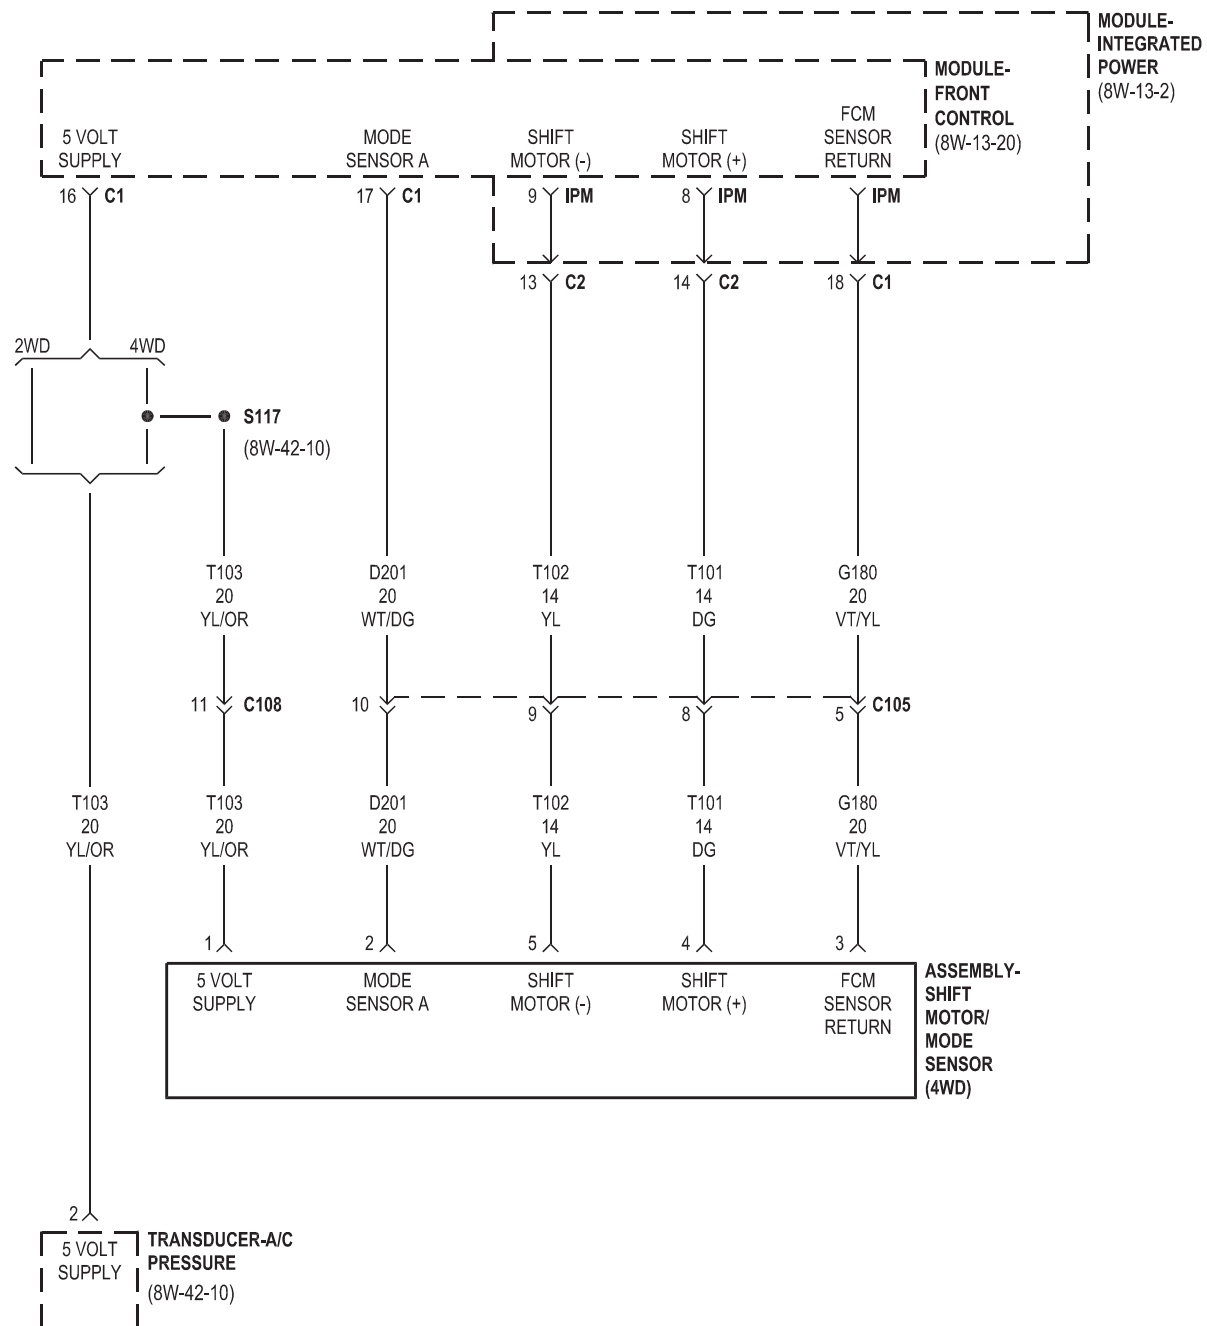

RLE

