





8W-30 FUEL/IGNITION SYSTEM


Component	Page	Component	Page
Assembly-EGR Valve	8W-30-16	Relay-Auto Shut Down	8W-30-6, 7
Assembly-Transmission Solenoid/TRS . . .	8W-30-25	Relay-Fuel Pump	8W-30-3
Capacitor-Ignition	8W-30-7	Relay-Radiator Fan High	8W-30-5
Clockspring	8W-30-22, 24	Relay-Radiator Fan Low	8W-30-5
Cluster	8W-30-4	Relay-Starter Motor	8W-30-25
Coil-Ignition-No. 1	8W-30-9	Resistor-Radiator Fan	8W-30-5
Coil-Ignition-No. 2	8W-30-9	Sensor-Accelerator Pedal Position . . .	8W-30-21, 23
Coil-Ignition-No. 3	8W-30-9	Sensor-Camshaft Position	8W-30-13
Coil-Ignition-No. 4	8W-30-9, 10	Sensor-Crankshaft Position	8W-30-13
Coil-Ignition-No. 5	8W-30-7	Sensor-Engine Coolant Temperature . .	8W-30-15, 16
Coil-Ignition-No. 6	8W-30-10	Sensor-Engine Oil Temperature	8W-30-19
Coil-Ignition-No. 7	8W-30-7	Sensor-Intake Air Temperature	8W-30-15, 16
Coil-Ignition-No. 8	8W-30-10	Sensor-Knock	8W-30-15
Fan Module-Condenser Cooling	8W-30-5	Sensor-Knock No. 1	8W-30-17
Fuse 10	8W-30-6	Sensor-Knock No. 2	8W-30-17
Fuse 18	8W-30-2, 3, 21, 23	Sensor-MAP	8W-30-14, 16
Fuse 22	8W-30-6	Sensor-Oil Pressure	8W-30-19
Fuse 23	8W-30-5	Sensor-Oxygen-Left Front	8W-30-12
G100	8W-30-2, 12, 16, 18	Sensor-Oxygen-Left Rear	8W-30-12
G112	8W-30-5	Sensor-Oxygen-Right Front	8W-30-12
G114	8W-30-4, 13	Sensor-Oxygen-Right Rear	8W-30-12
Generator	8W-30-13	Sensor-Throttle Position	8W-30-14
Injector-Fuel-No. 1	8W-30-9	Sensor-Transmission Range	8W-30-25
Injector-Fuel-No. 2	8W-30-8, 9	Servo-Speed Control	8W-30-25
Injector-Fuel-No. 3	8W-30-9	Solenoid-EVAP/Purge	8W-30-3
Injector-Fuel-No. 4	8W-30-9, 10	Solenoid-Multi Displacement System	
Injector-Fuel-No. 5	8W-30-7, 9	Cyl 1	8W-30-18
Injector-Fuel-No. 6	8W-30-8, 9	Solenoid-Multi Displacement System	
Injector-Fuel-No. 7	8W-30-8	Cyl 4	8W-30-18
Injector-Fuel-No. 8	8W-30-10	Solenoid-Multi Displacement System	
Junction Block	8W-30-2, 3, 4, 20, 21, 22, 23, 24	Cyl 6	8W-30-18
Module-Antilock Brakes	8W-30-20	Solenoid-Multi Displacement System	
Module-Front Control	8W-30-2, 5, 11	Cyl 7	8W-30-18
Module-Fuel Pump	8W-30-3, 4	Switch-EVAP System Monitor	8W-30-13
Module-Integrated Power	8W-30-2, 3, 5	Switch-Oil Pressure	8W-30-13
Module-Powertrain Control . . .	8W-30-2, 3, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25	Switch-Speed Control-Left	8W-30-22, 24
Motor-IAC	8W-30-15	Switch-Speed Control-Right	8W-30-22, 24
Power Distribution Center	8W-30-3, 6	Switch-Stop Lamp	8W-30-20
Relay-A/C Clutch	8W-30-21, 23	Throttle Body	8W-30-17, 25

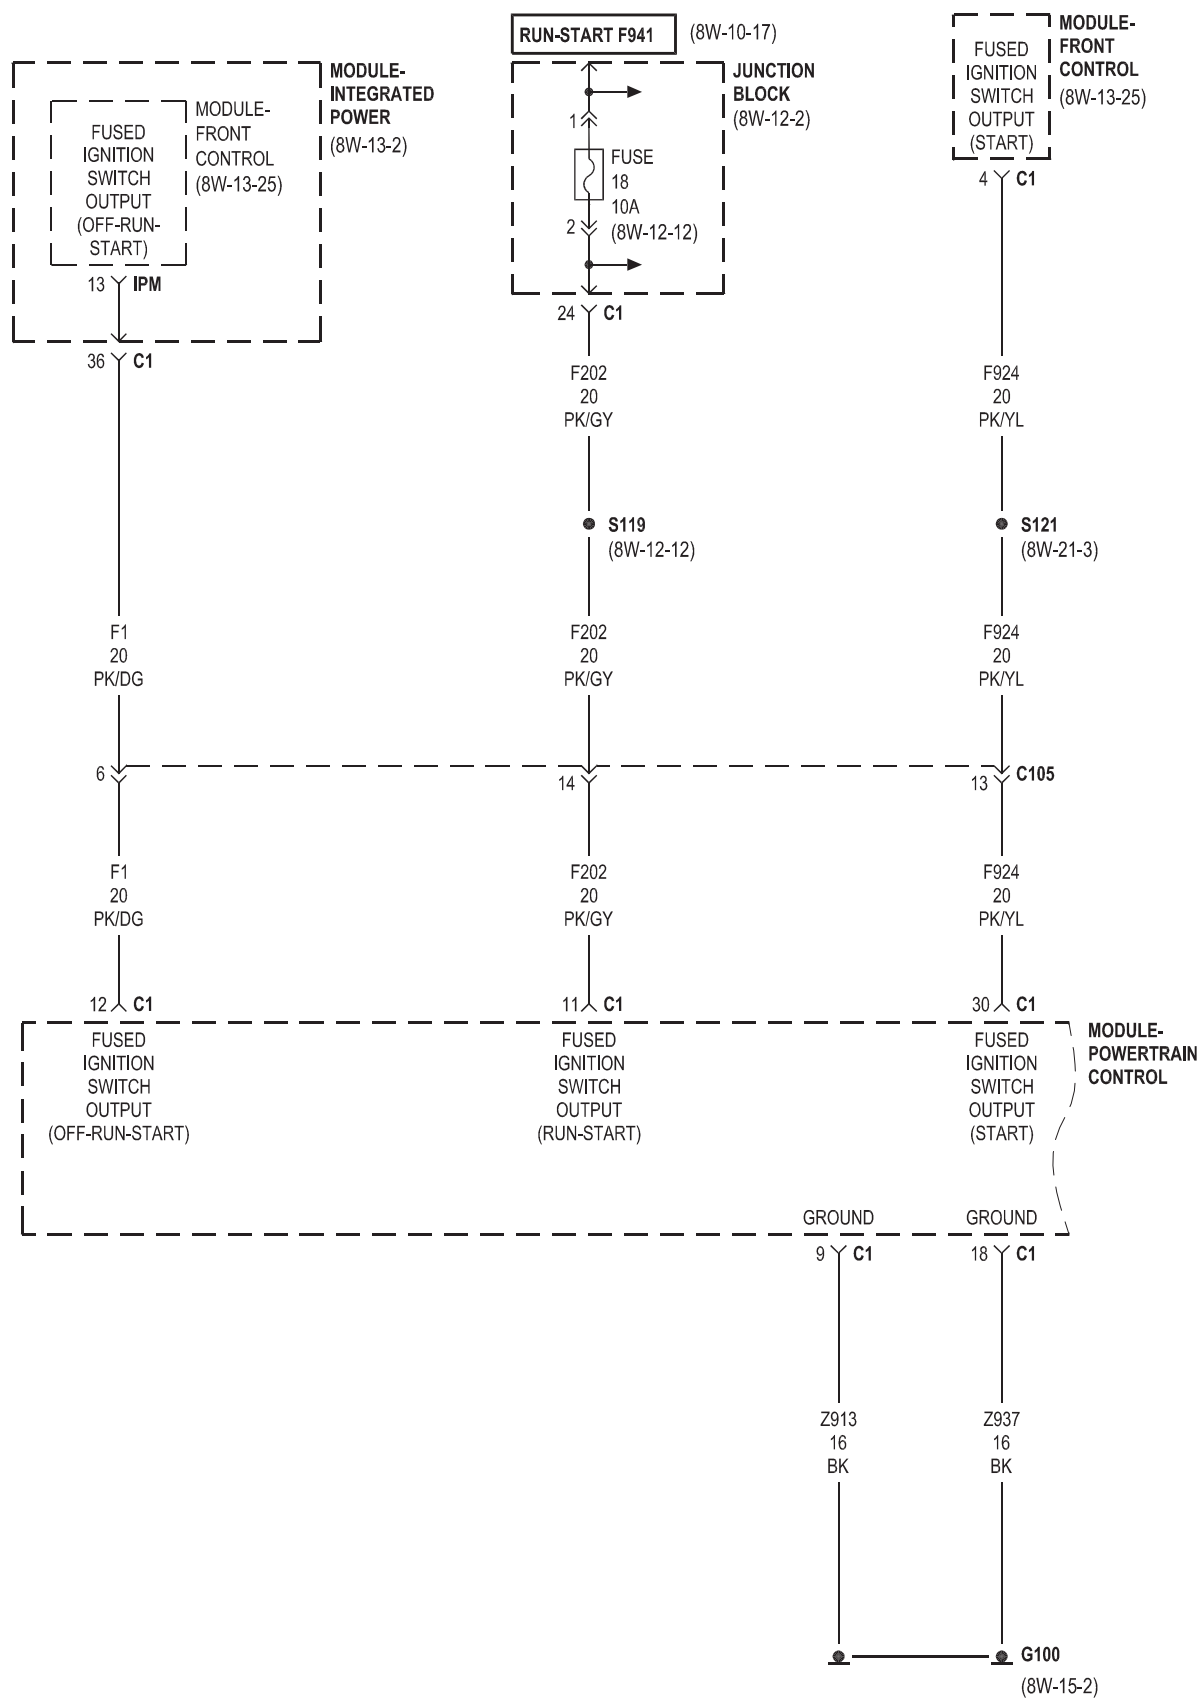


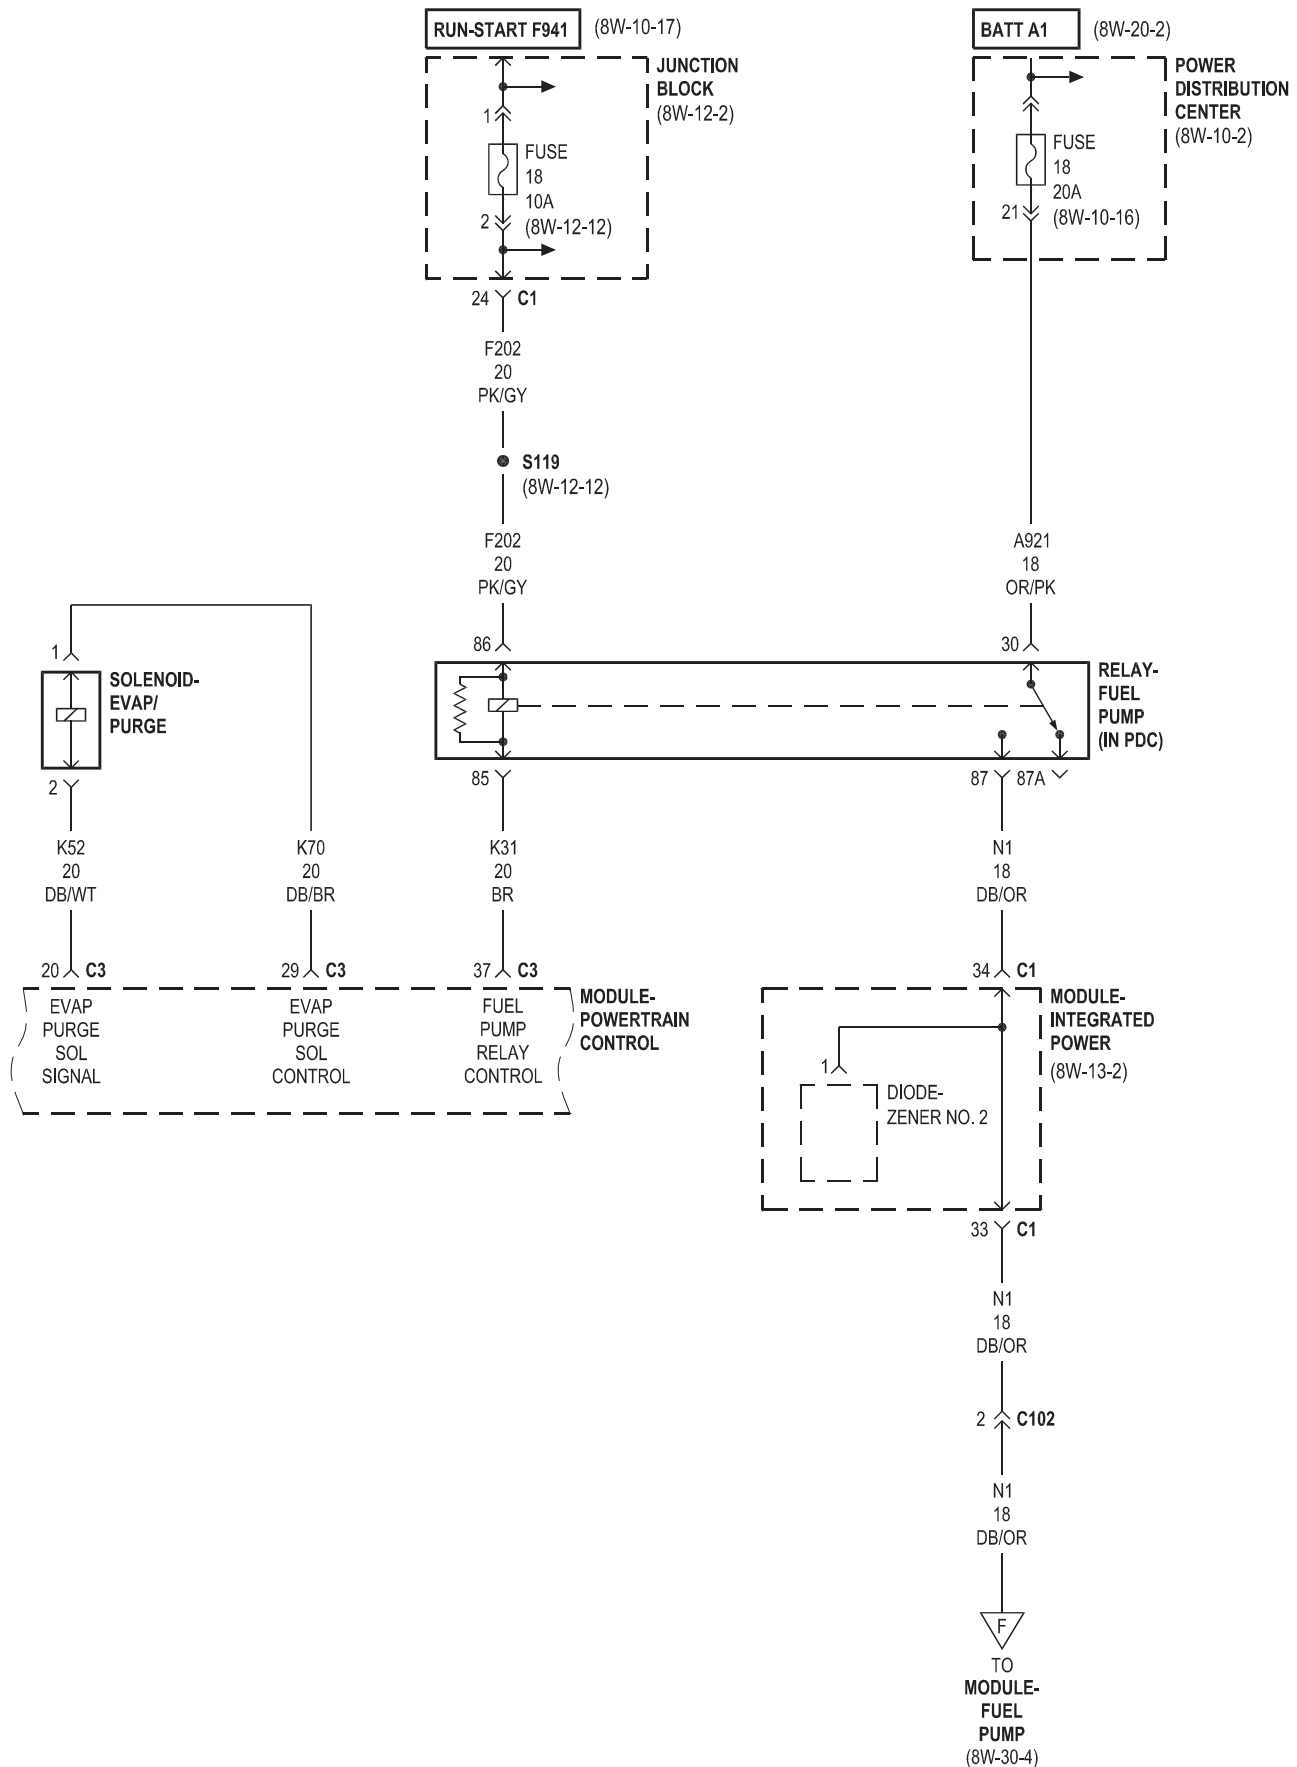


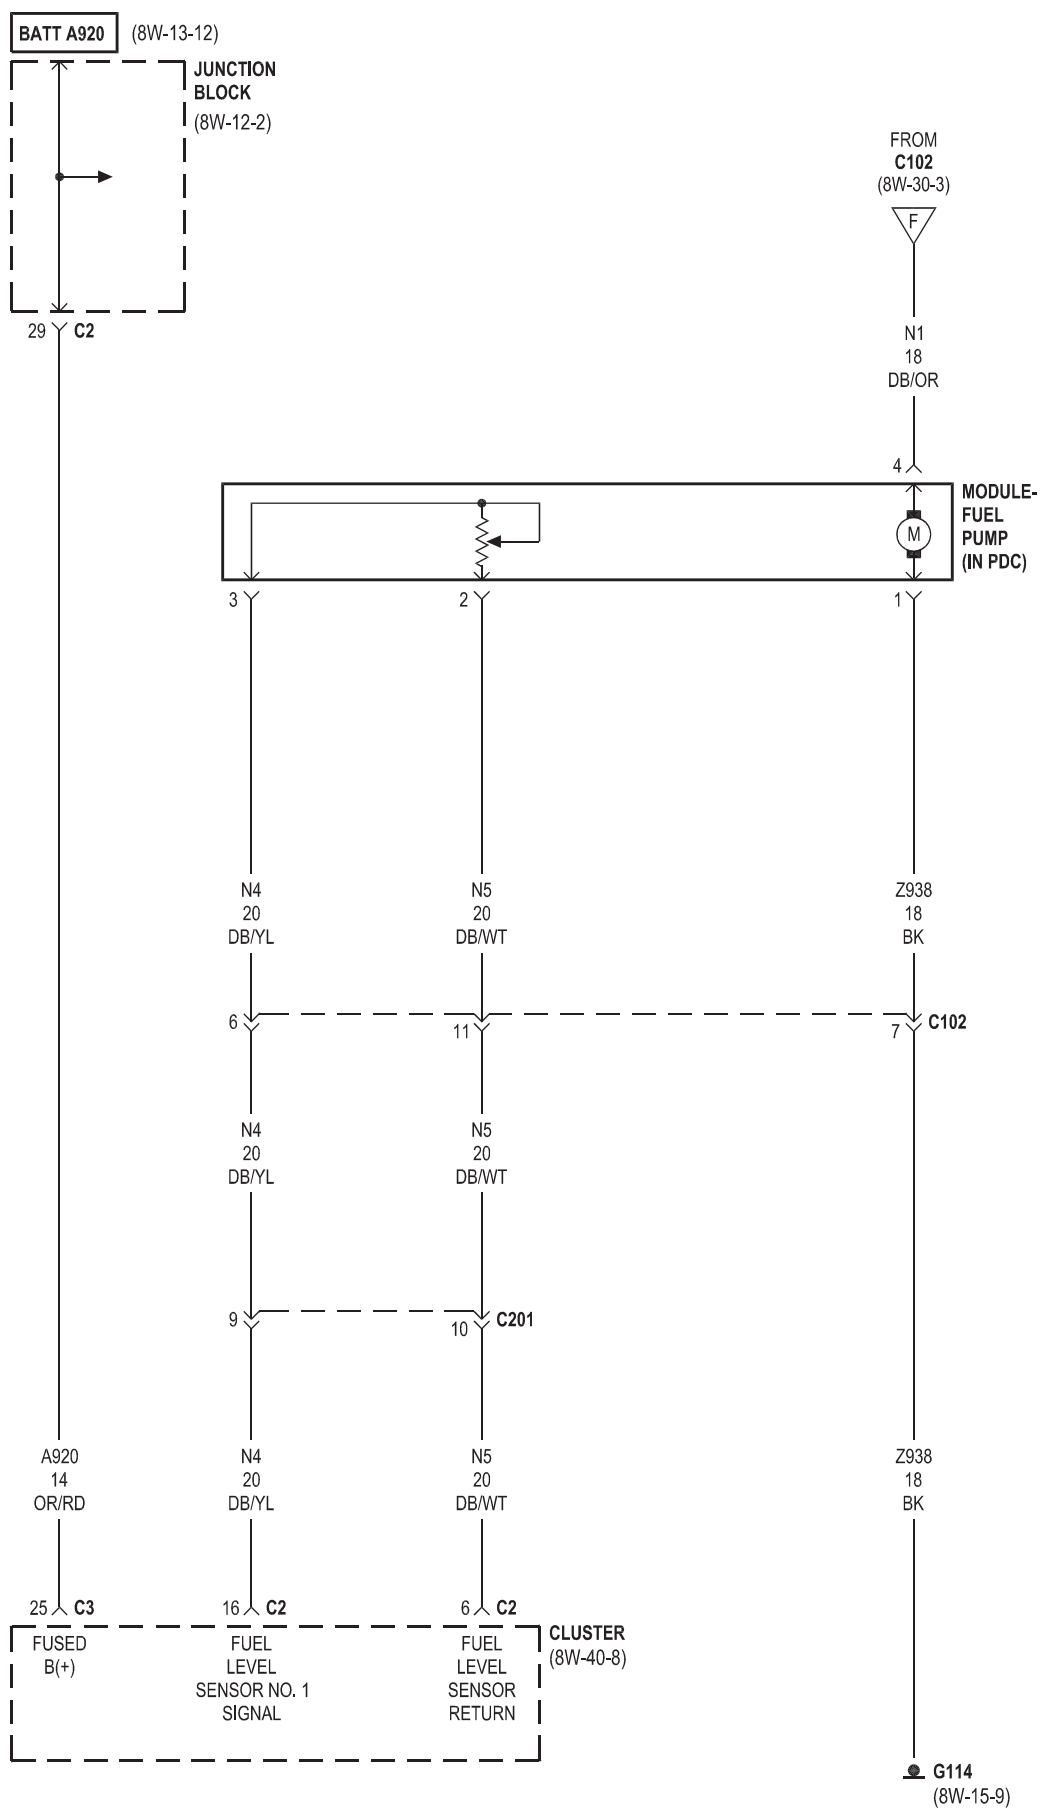


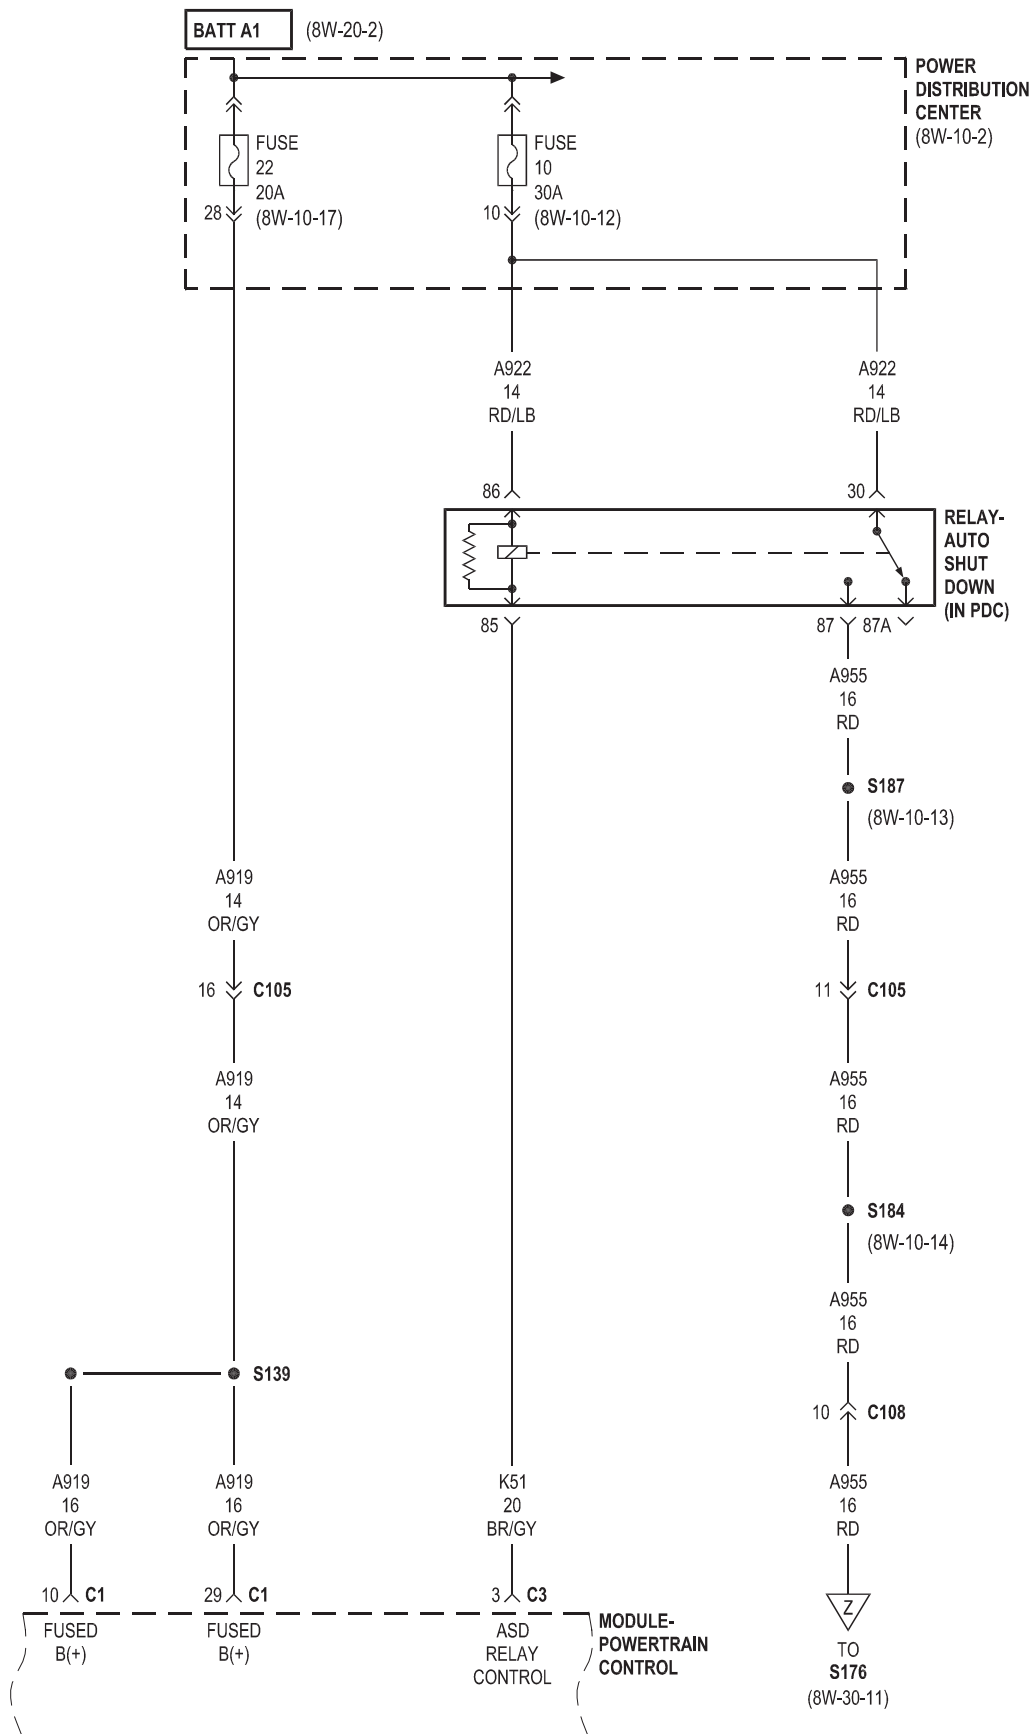


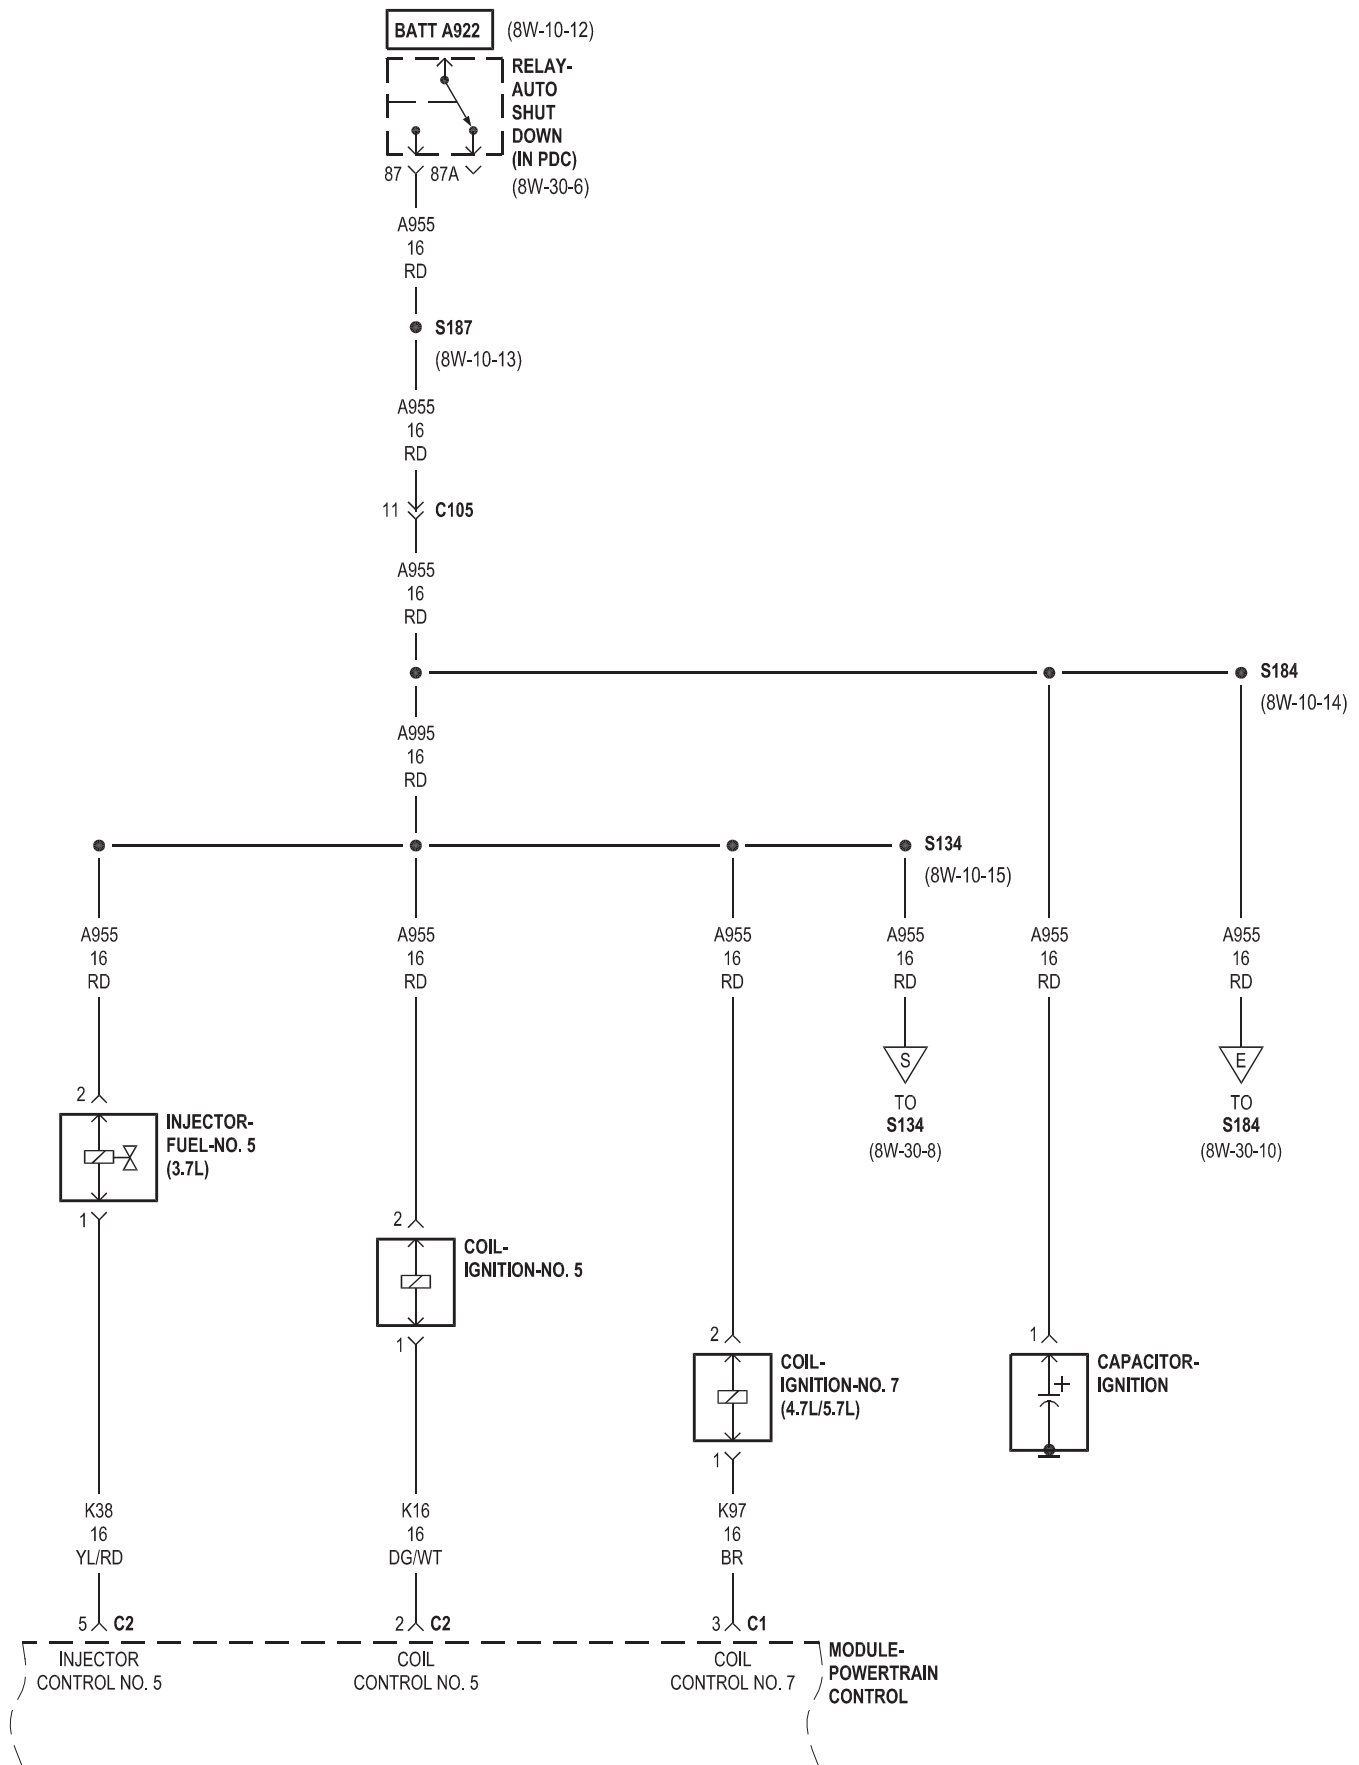


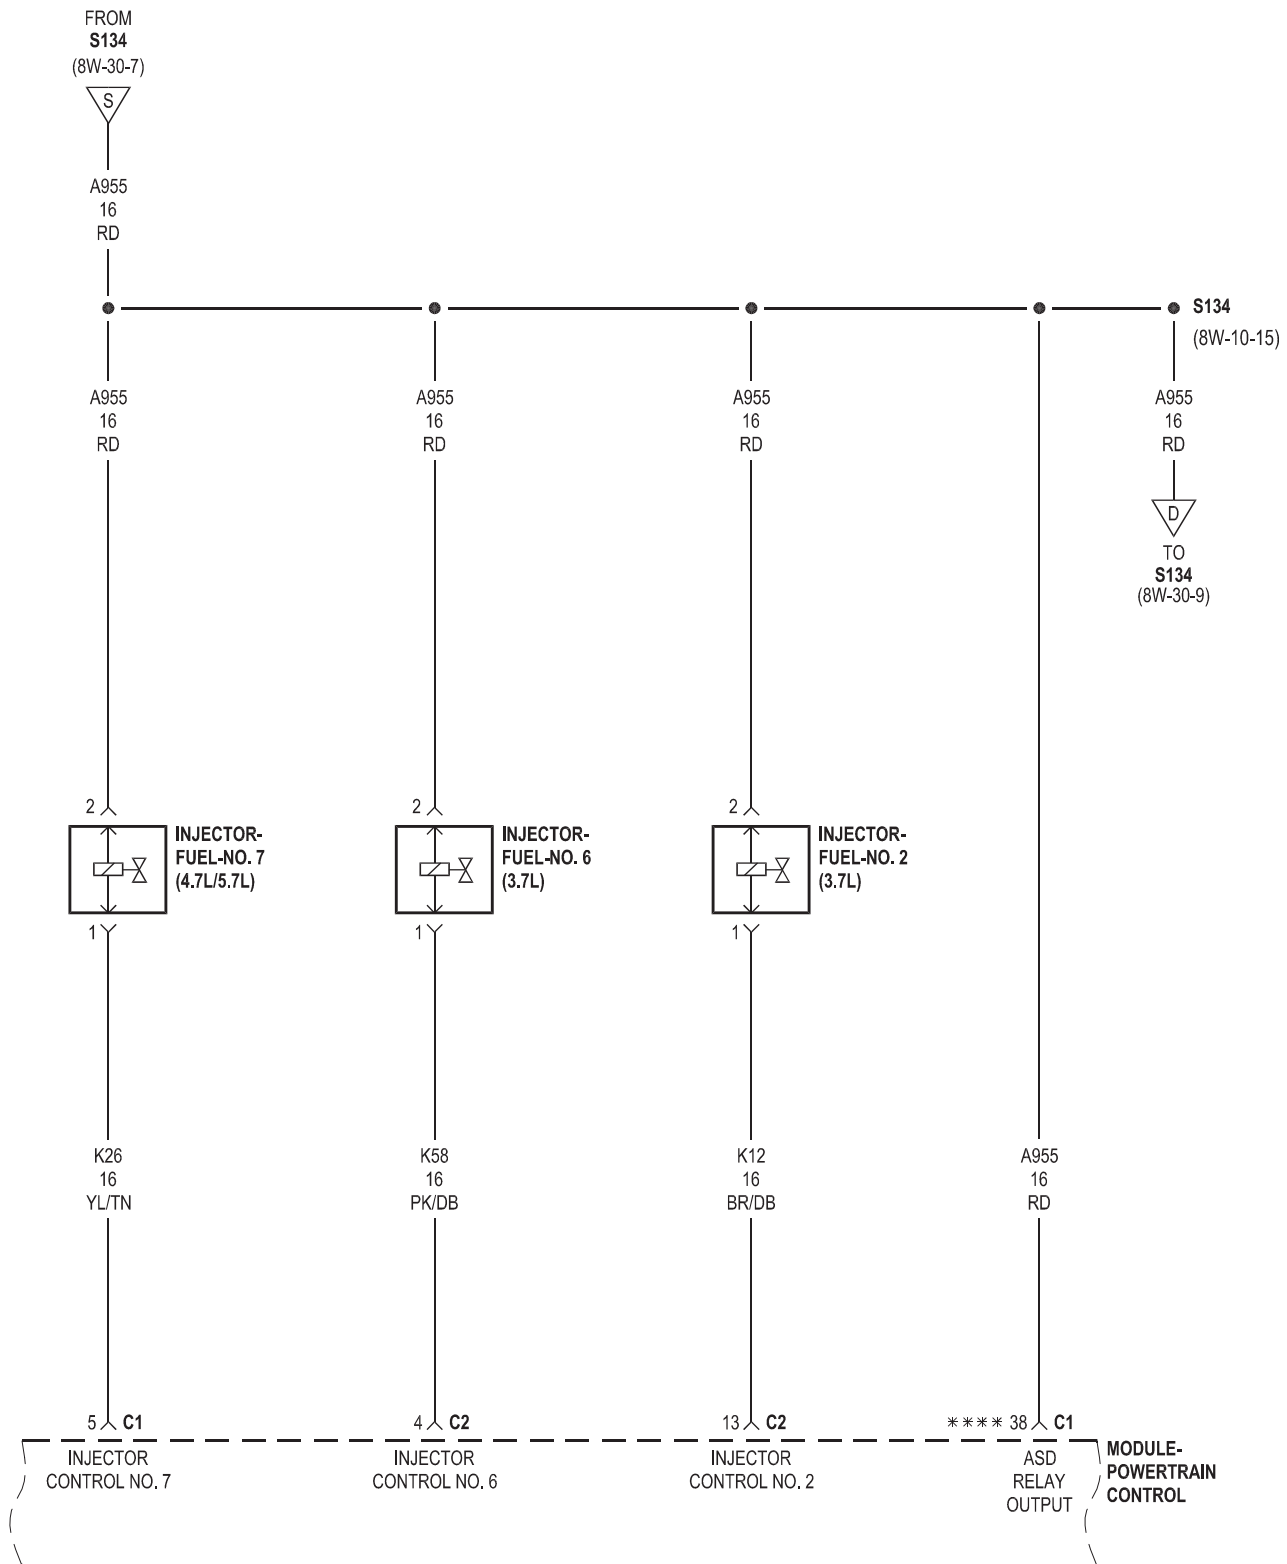


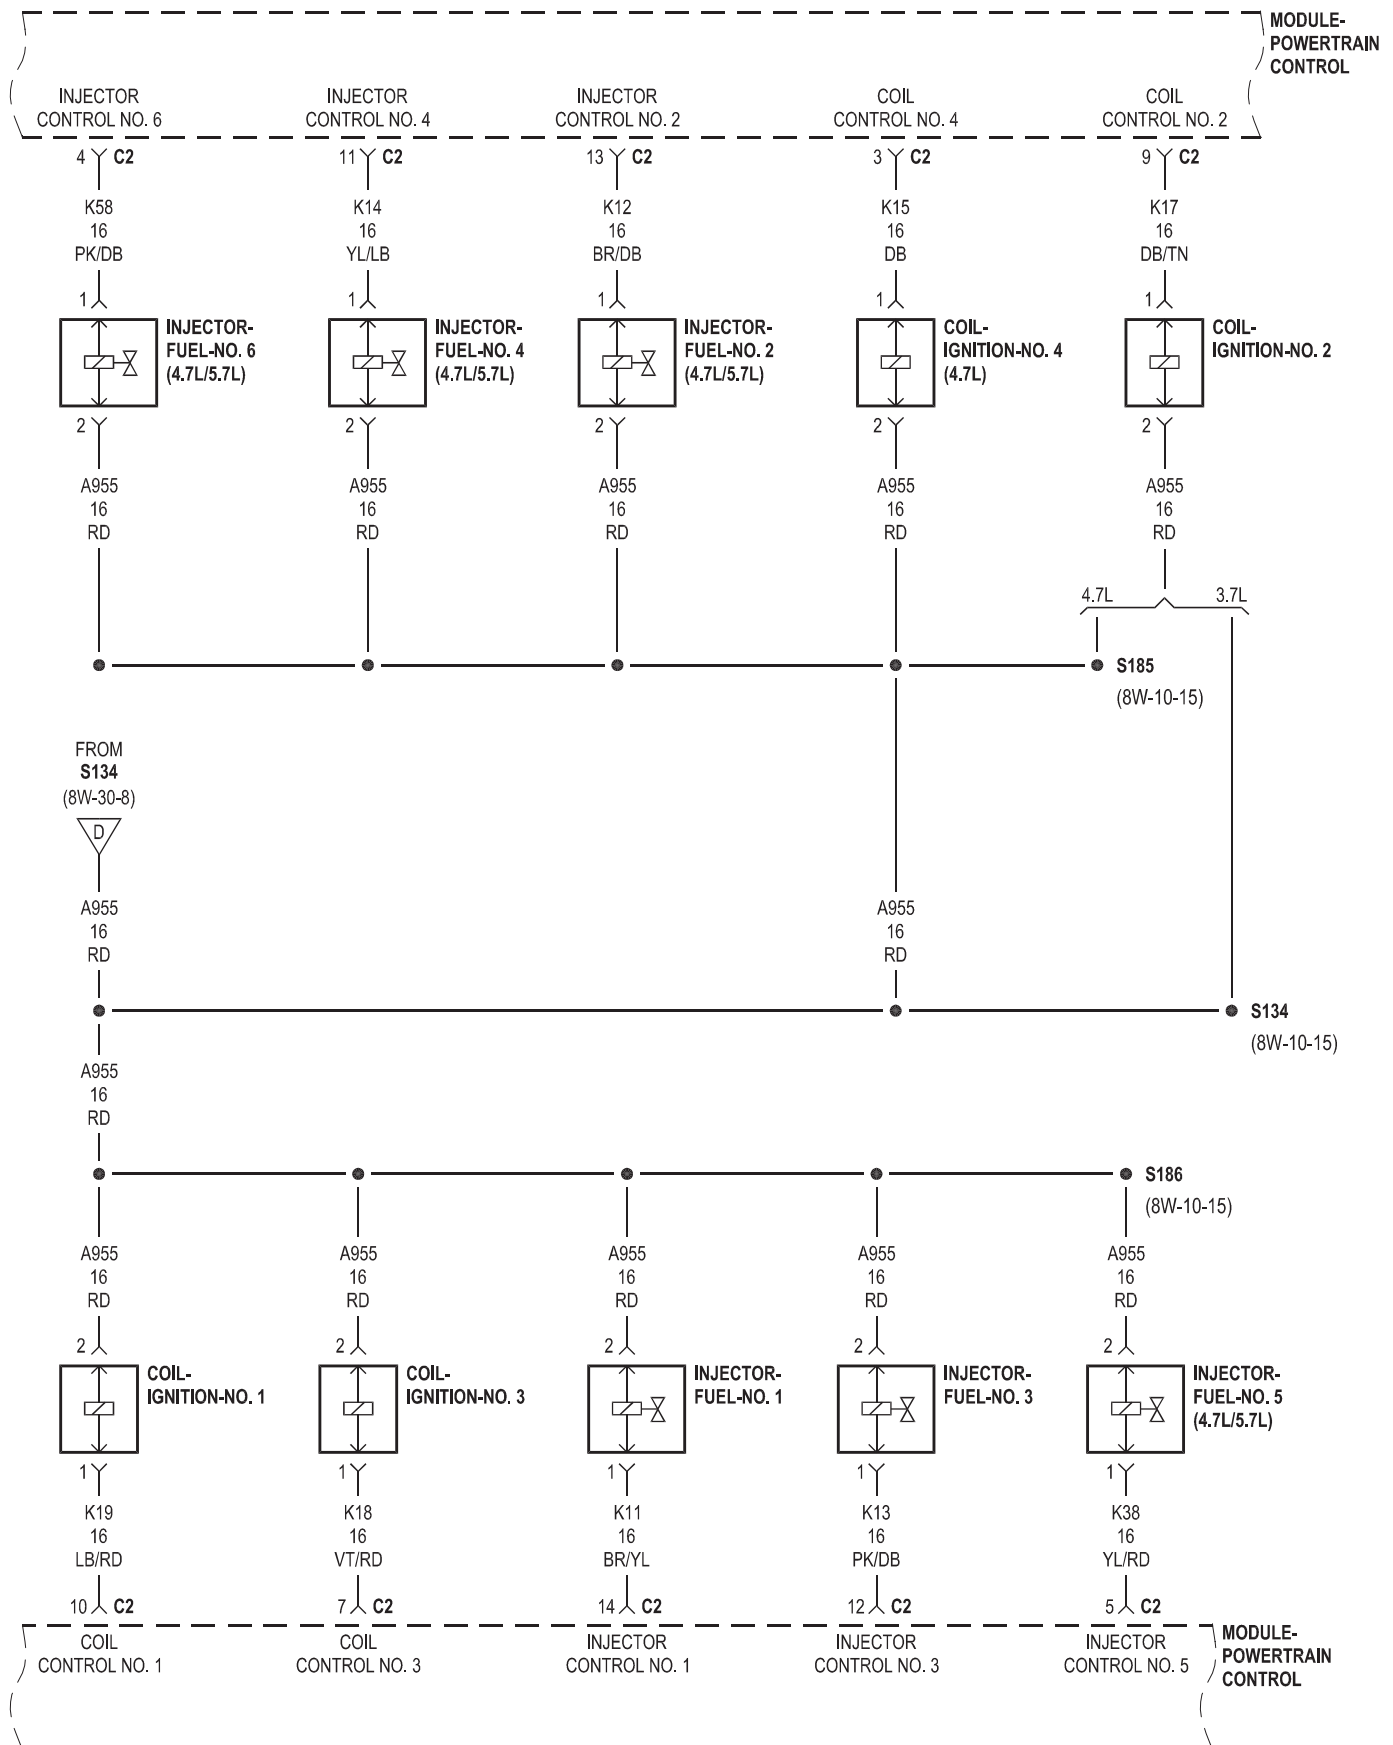

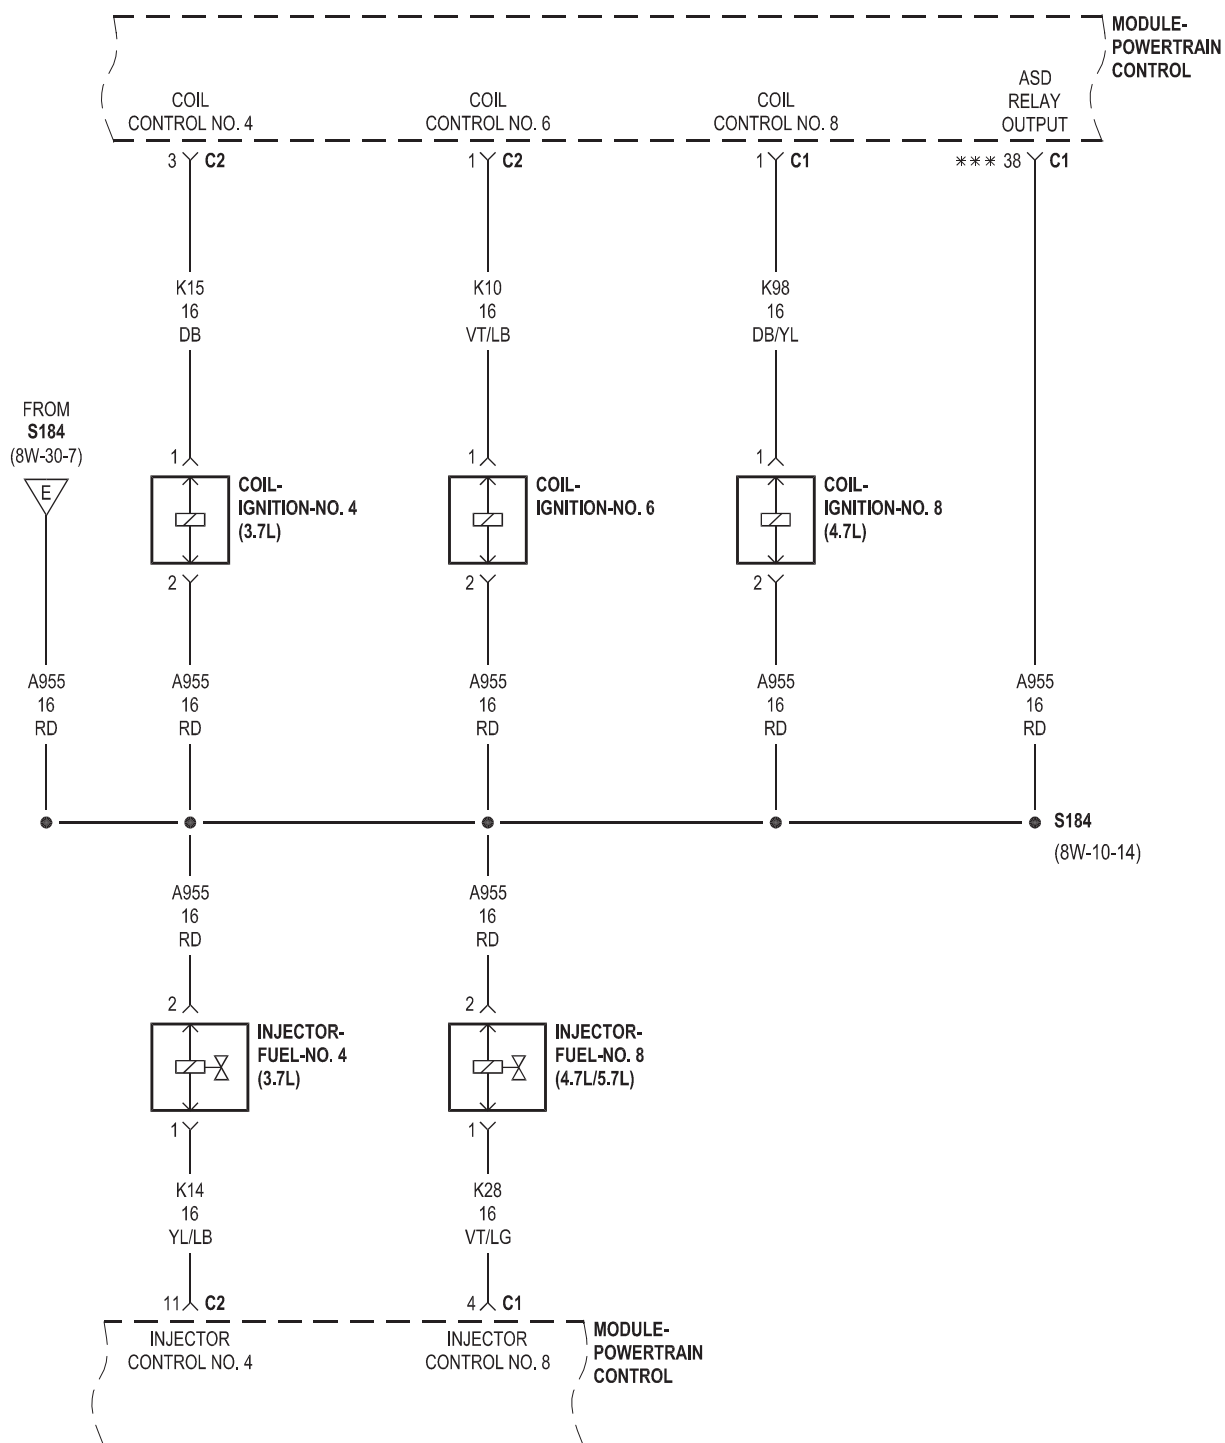


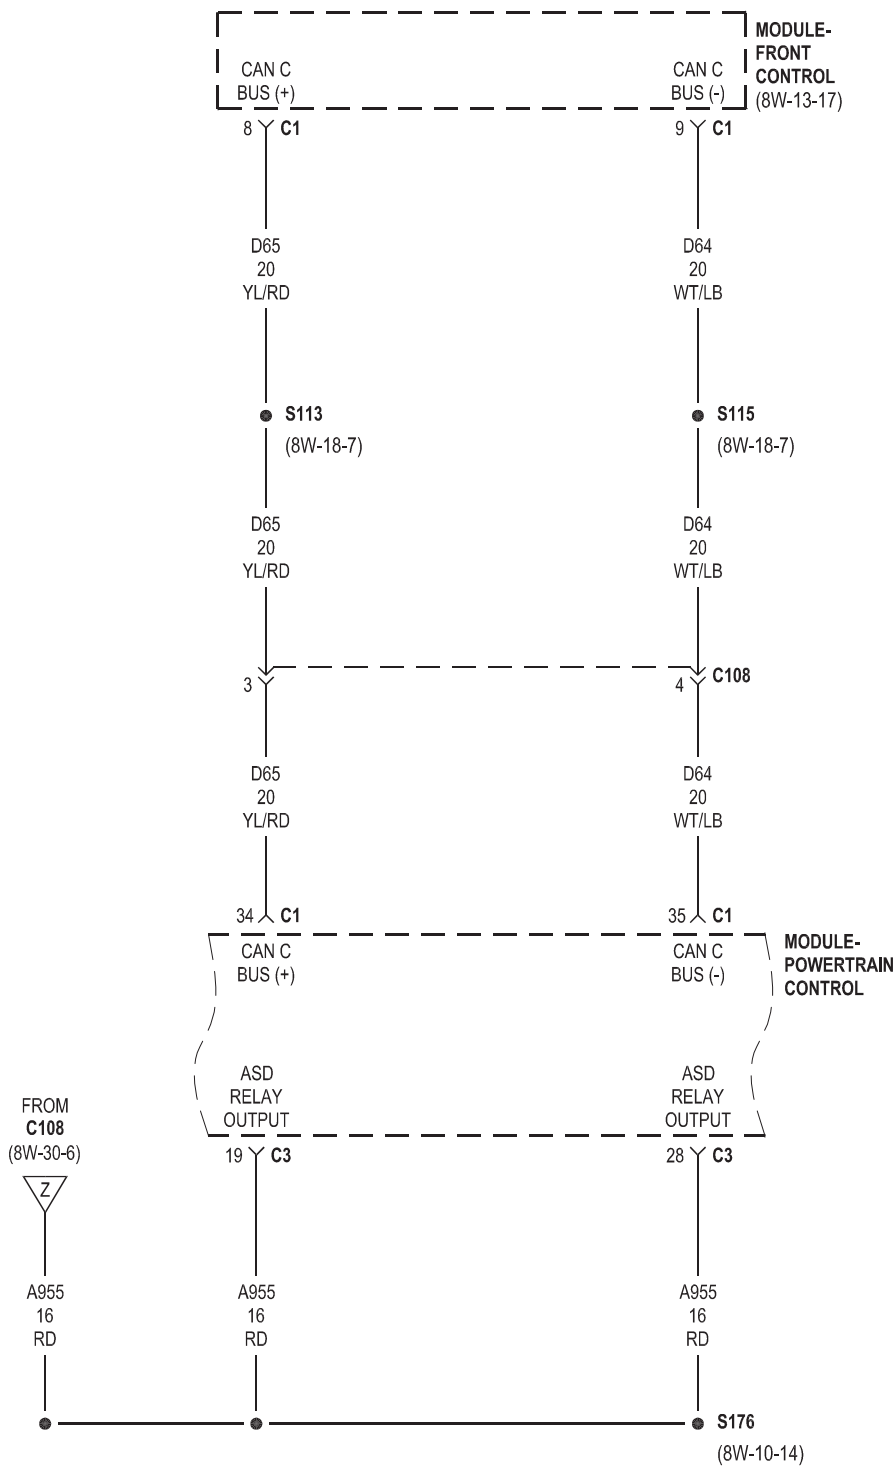


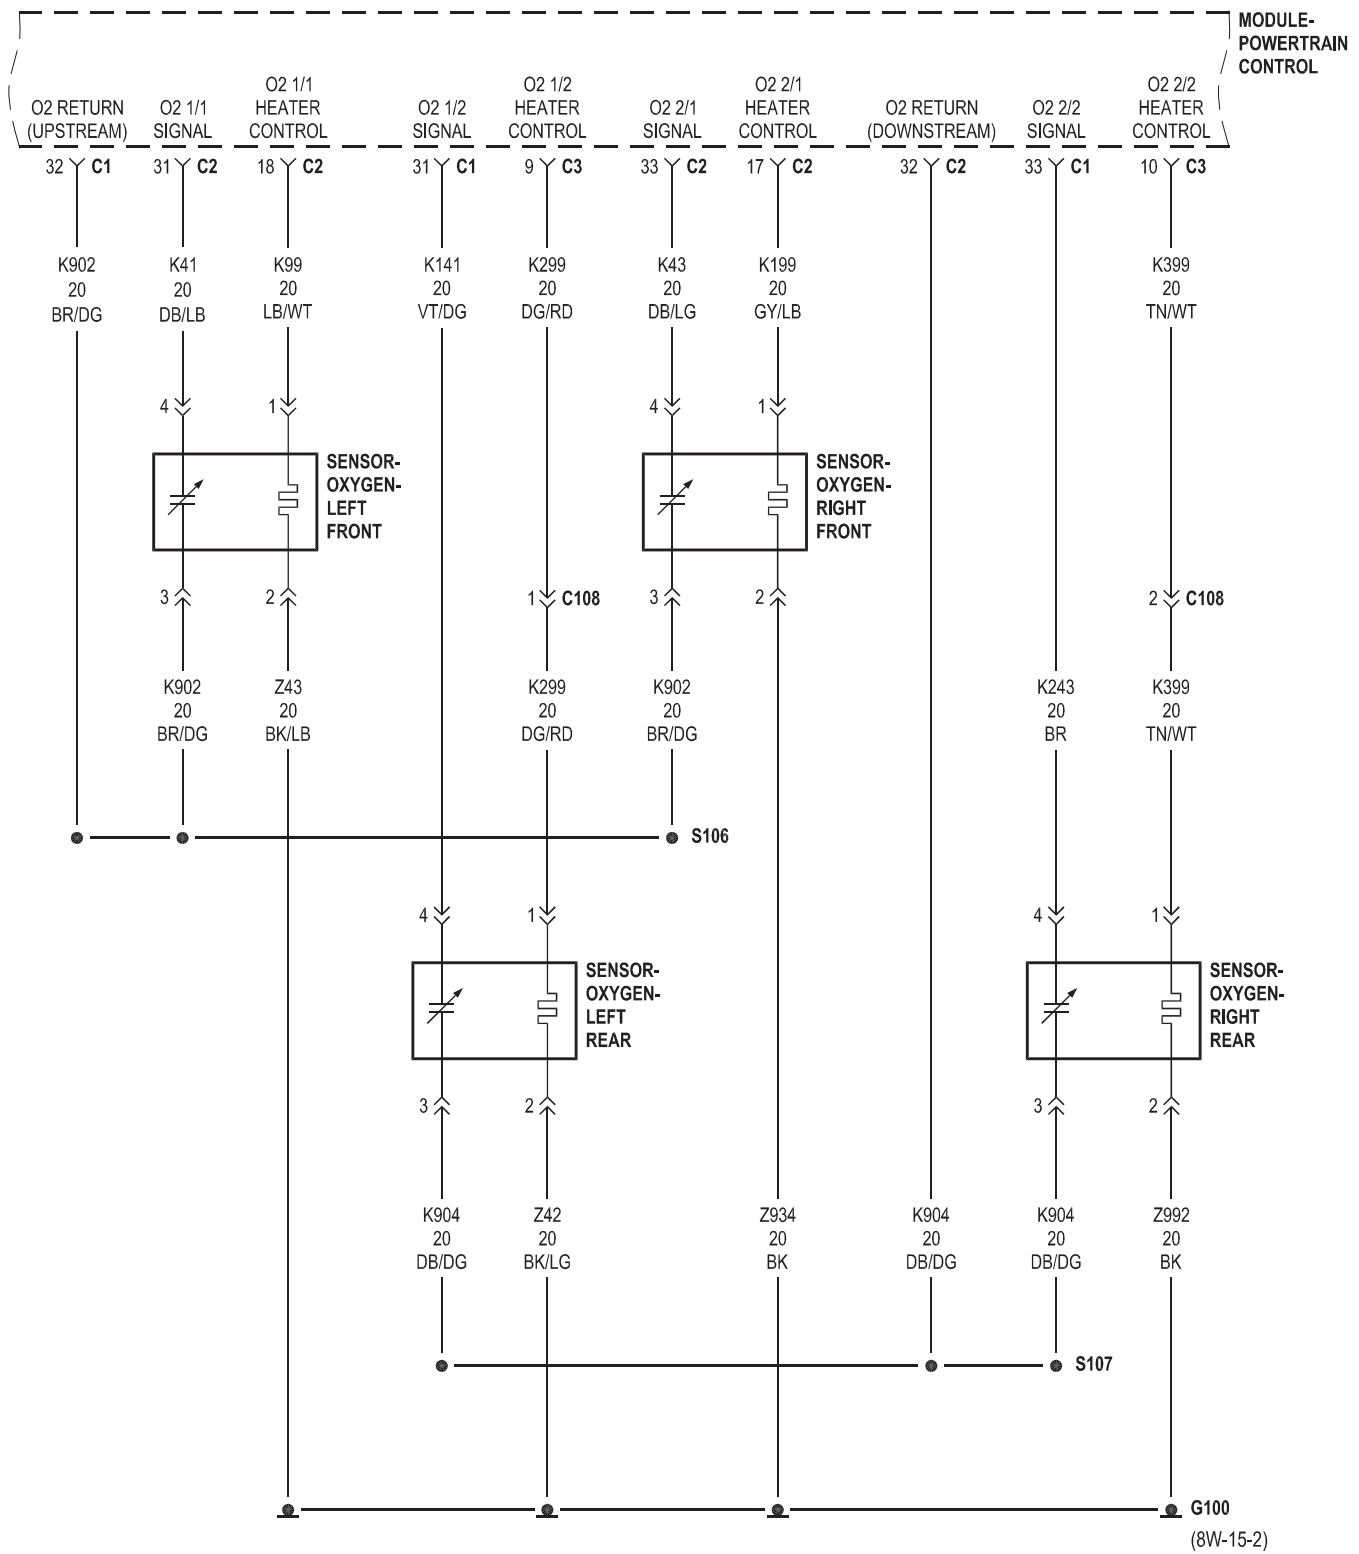

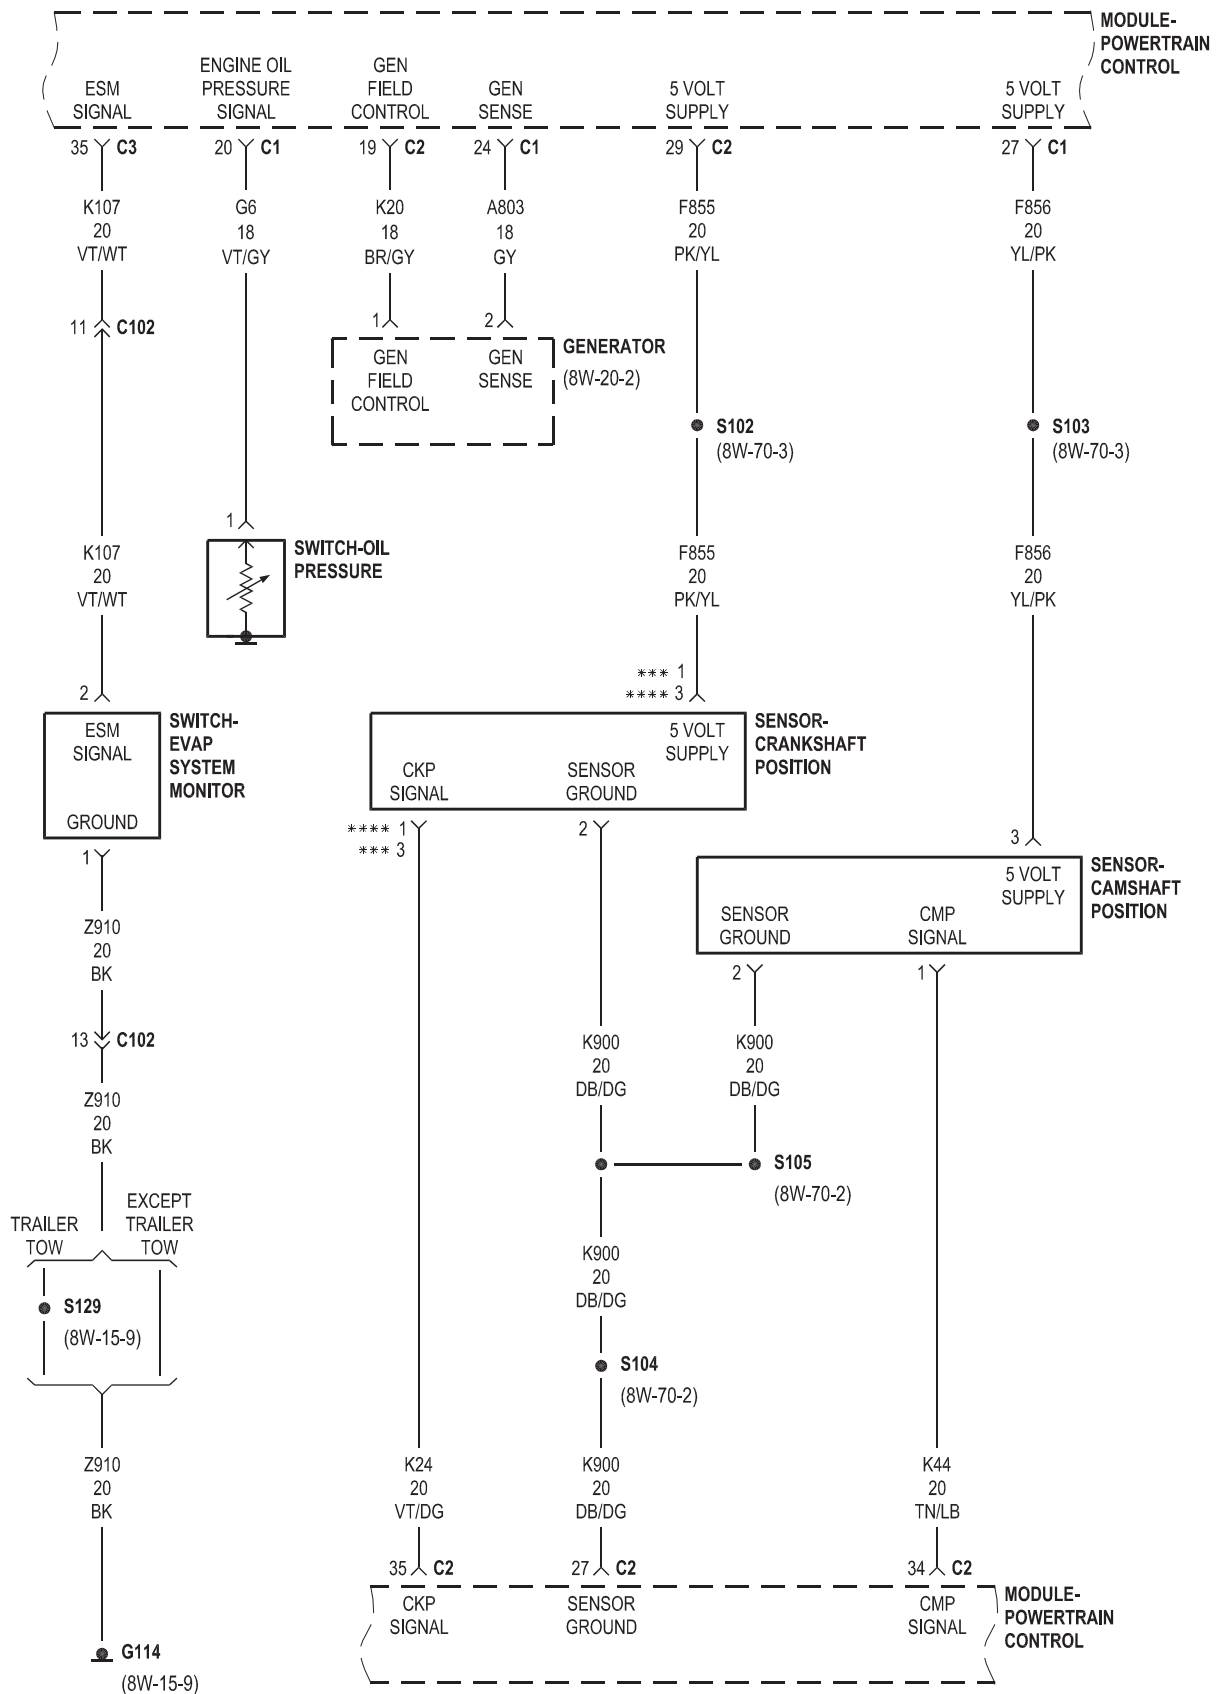



**** 3.7L/4.7L
 *** 5.7L

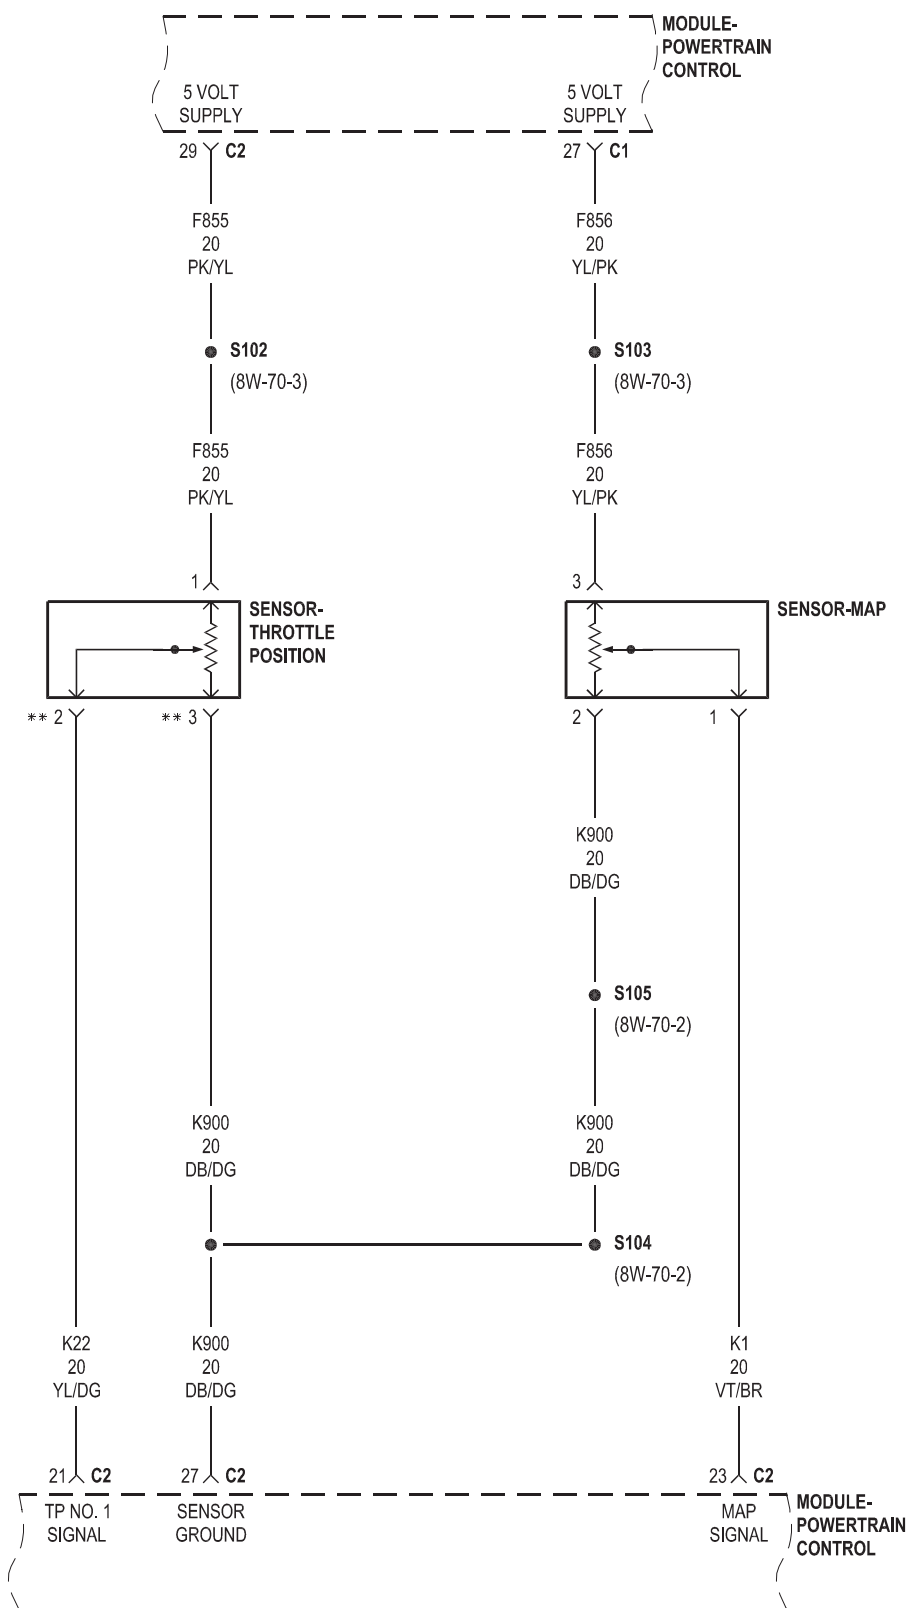


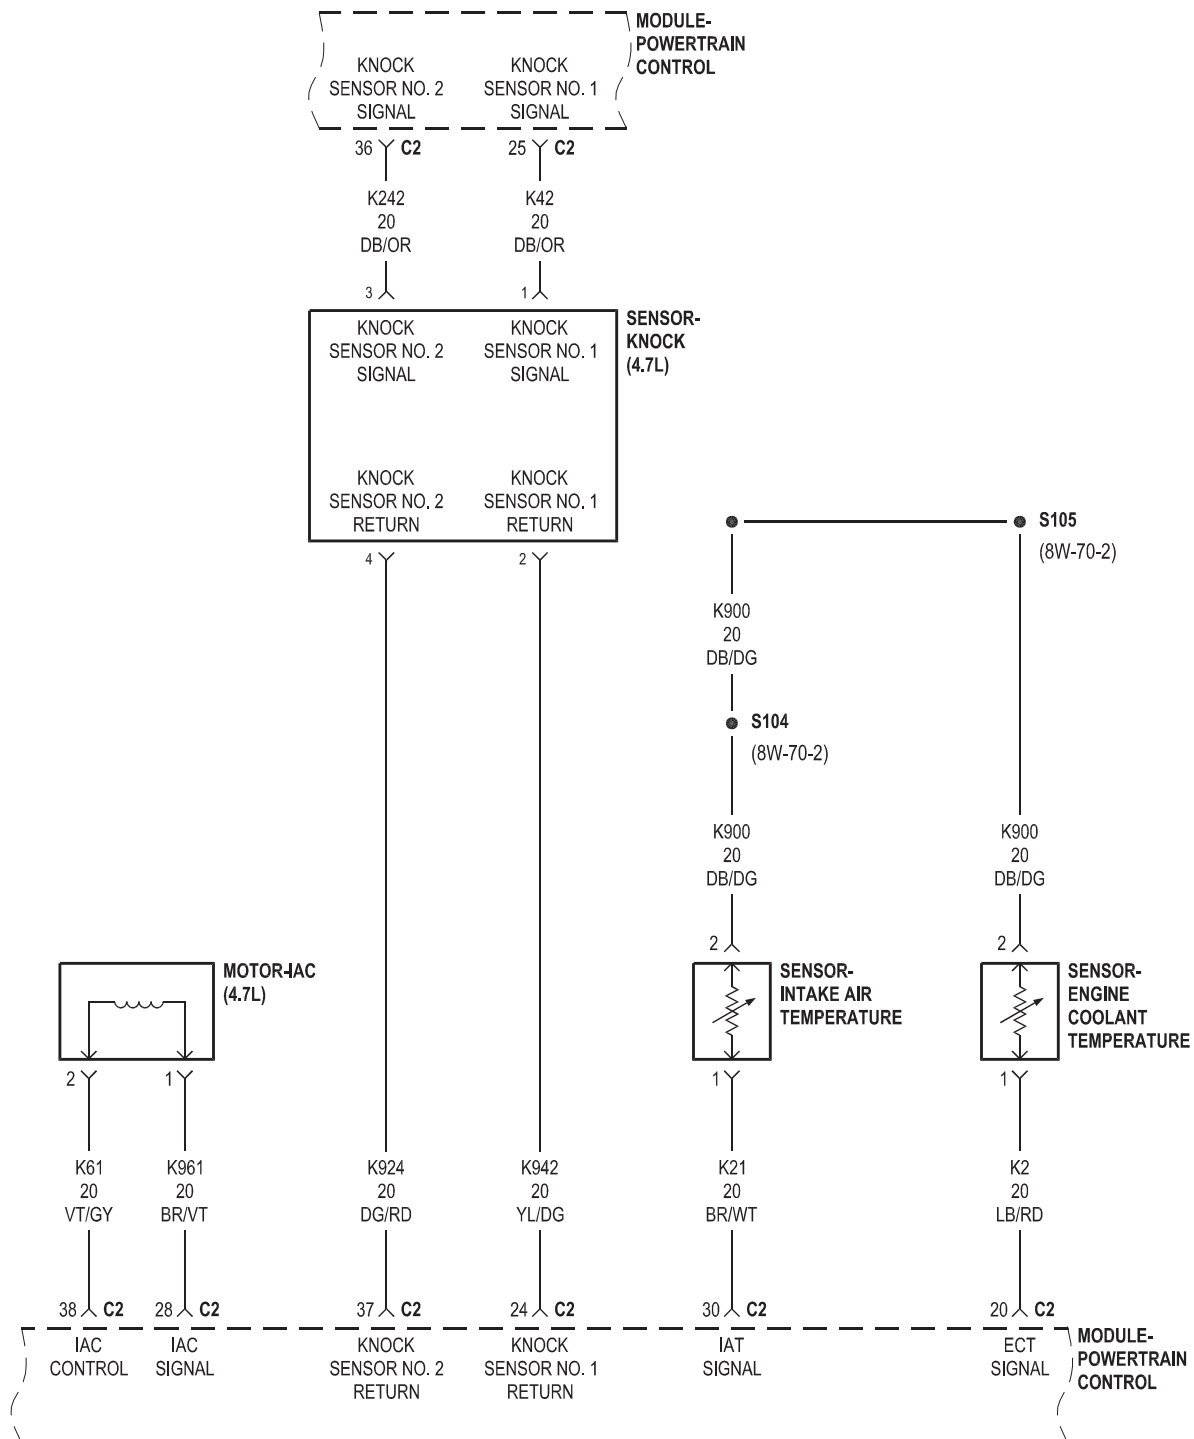



5.7L

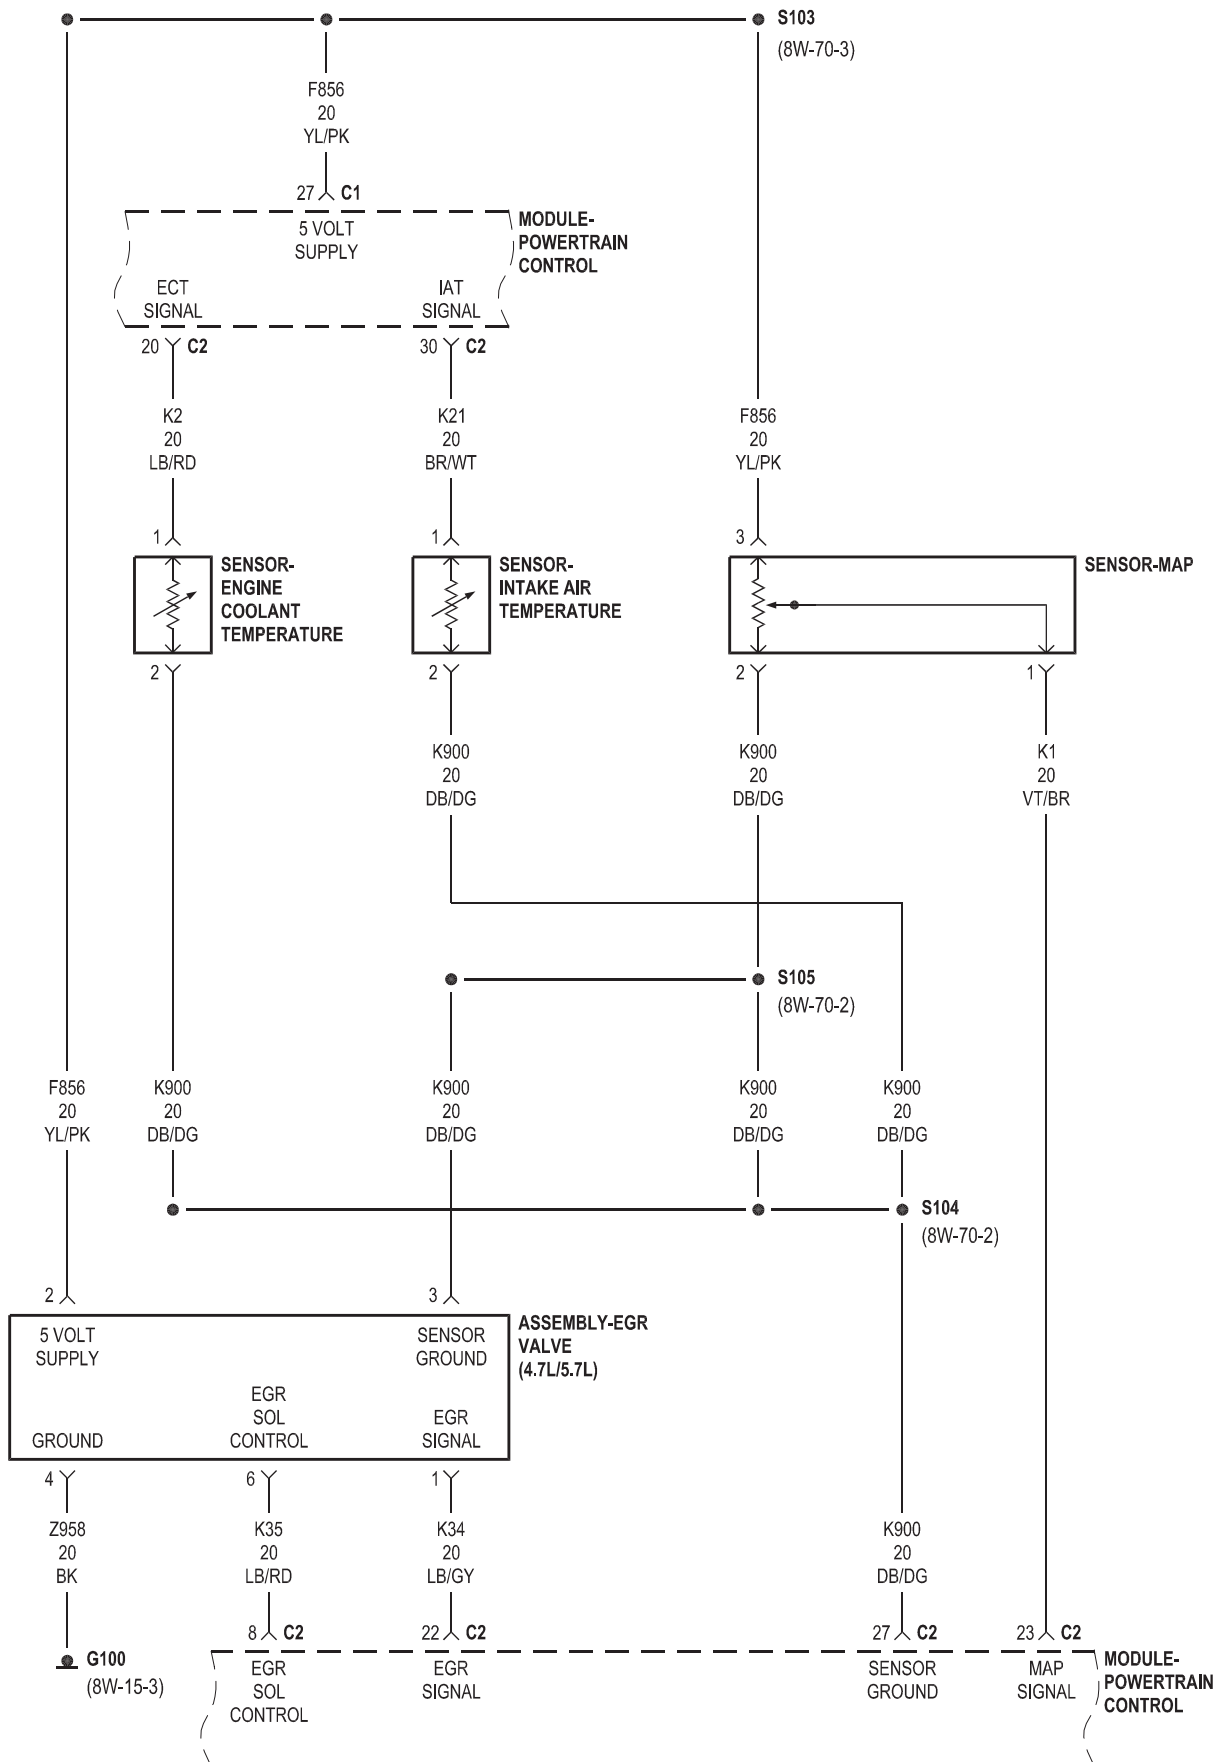

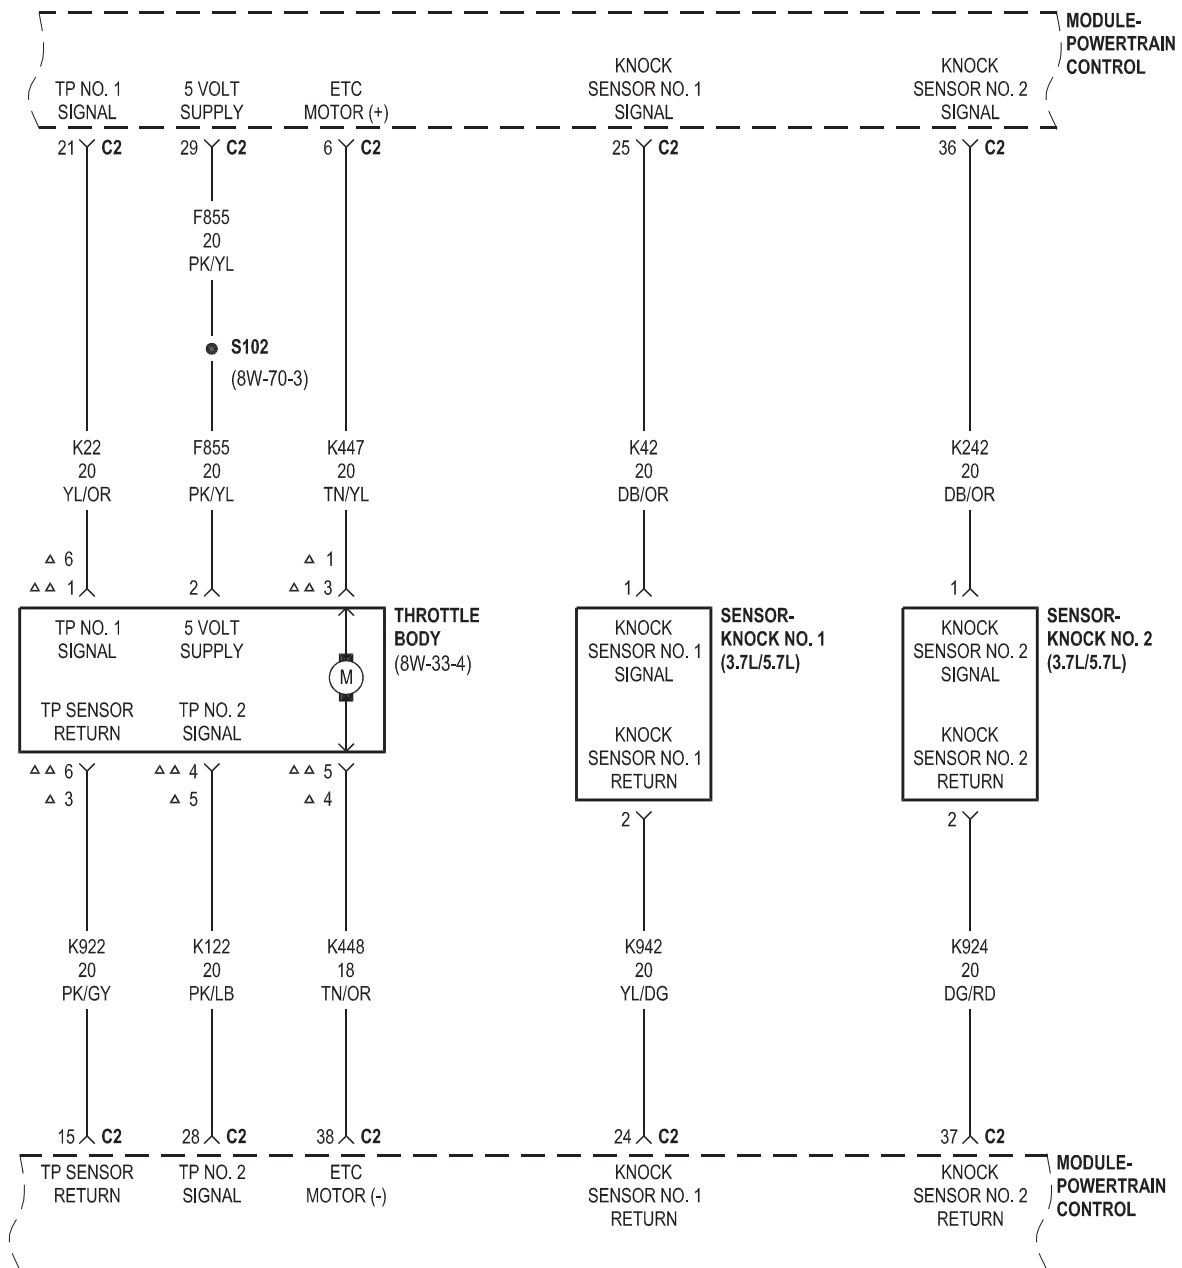

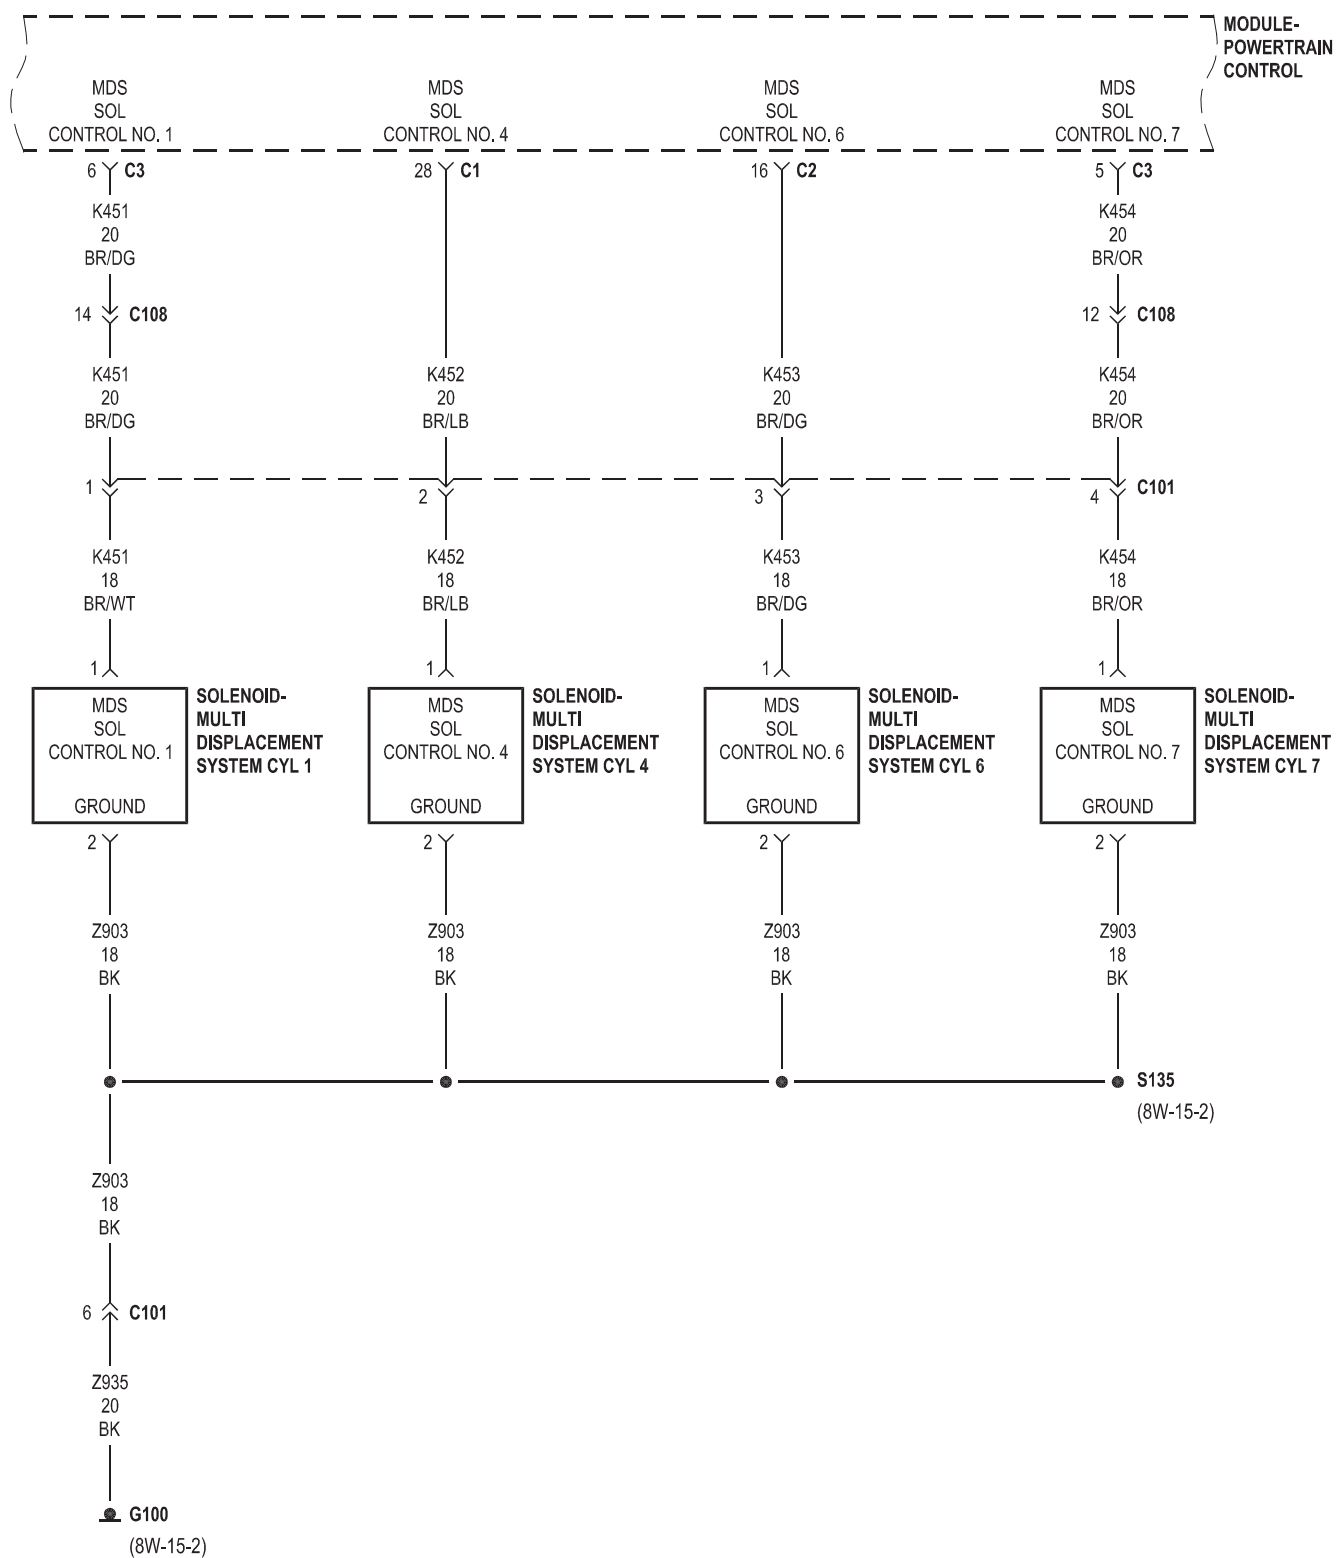

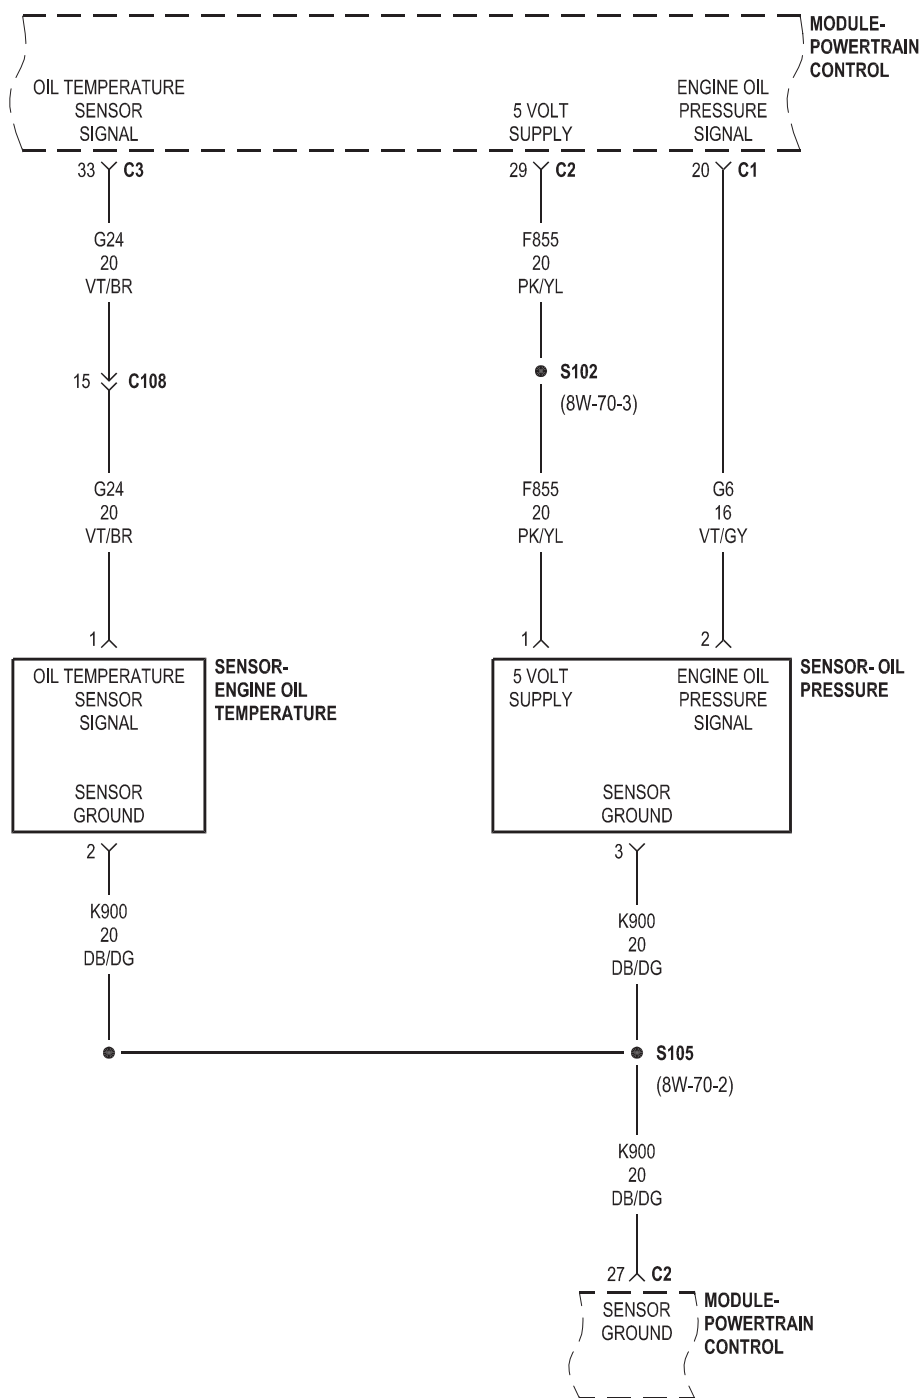

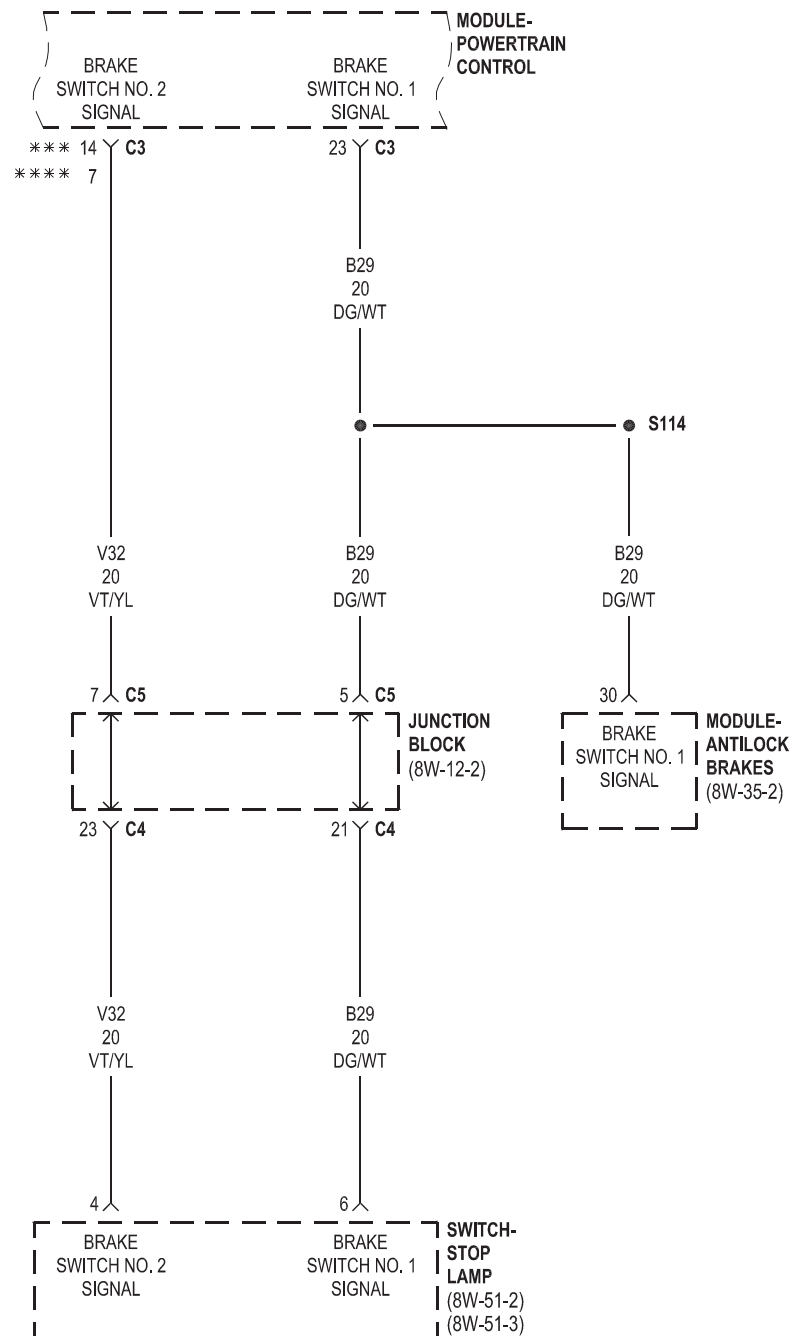

*** 5.7L

**** 3.7L/4.7L

