



## 8W-42 AIR CONDITIONING-HEATER


<b>Component</b>	<b>Page</b>
Actuator-Blend Door-Front . . . . .	8W-42-3
Actuator-Blend Door-Rear . . . . .	8W-42-6
Actuator-Mode Door-Floor To Defrost- Front . . . . .	8W-42-3
Actuator-Mode Door-Floor To Panel-Front .	8W-42-3
Actuator-Mode Door-Rear . . . . .	8W-42-6
Actuator-Recirculation Door . . . . .	8W-42-3
Assembly-Shift Motor/Mode Sensor . . . .	8W-42-10
Cluster . . . . .	8W-42-4, 5, 9, 12
Clutch-A/C Compressor . . . . .	8W-42-11
Control-A/C-Heater . . . . 8W-42-2, 3, 4, 5, 6, 8, 9, 12	
Control-A/C-Heater-Rear . . . . .	8W-42-9
Fuse 7 . . . . .	8W-42-4, 5
Fuse 13 . . . . .	8W-42-2
Fuse 18 . . . . .	8W-42-11
Fuse 19 . . . . .	8W-42-12
Fuse 24 . . . . .	8W-42-2, 7, 9, 11
G100 . . . . .	8W-42-11
G112 . . . . .	8W-42-6
G114 . . . . .	8W-42-7
G207 . . . . .	8W-42-2, 4, 5, 8

<b>Component</b>	<b>Page</b>
G306 . . . . .	8W-42-12
Junction Block . . . . .	8W-42-2, 4, 5, 6, 7, 9, 11, 12
Module-Electronic Overhead . . . . .	8W-42-12
Module-Front Control . . . . .	8W-42-2, 4, 5, 10
Module-Integrated Power . . . . .	8W-42-4, 5, 10
Module-Power-Blower Motor-Front . . . . .	8W-42-4
Module-Powertrain Control . . . . .	8W-42-11
Motor-Blower-Front . . . . .	8W-42-4, 5
Motor-Blower-Rear . . . . .	8W-42-7
Power Distribution Center . . . . .	8W-42-4, 5, 11
Pump-Auxiliary Coolant . . . . .	8W-42-6
Relay-A/C Clutch . . . . .	8W-42-11
Relay-Blower Motor-Front . . . . .	8W-42-4, 5
Relay-Blower Motor-Rear . . . . .	8W-42-7
Resistor-Blower Motor-Front . . . . .	8W-42-5
Resistor-Blower Motor-Rear . . . . .	8W-42-7, 8
Sensor-Ambient Air Temperature . . . . .	8W-42-10
Sensor-Evaporator Temperature . . . . .	8W-42-6, 12
Sensor-Infrared . . . . .	8W-42-12
Sensor-Sun . . . . .	8W-42-12
Transducer-A/C Pressure . . . . .	8W-42-10

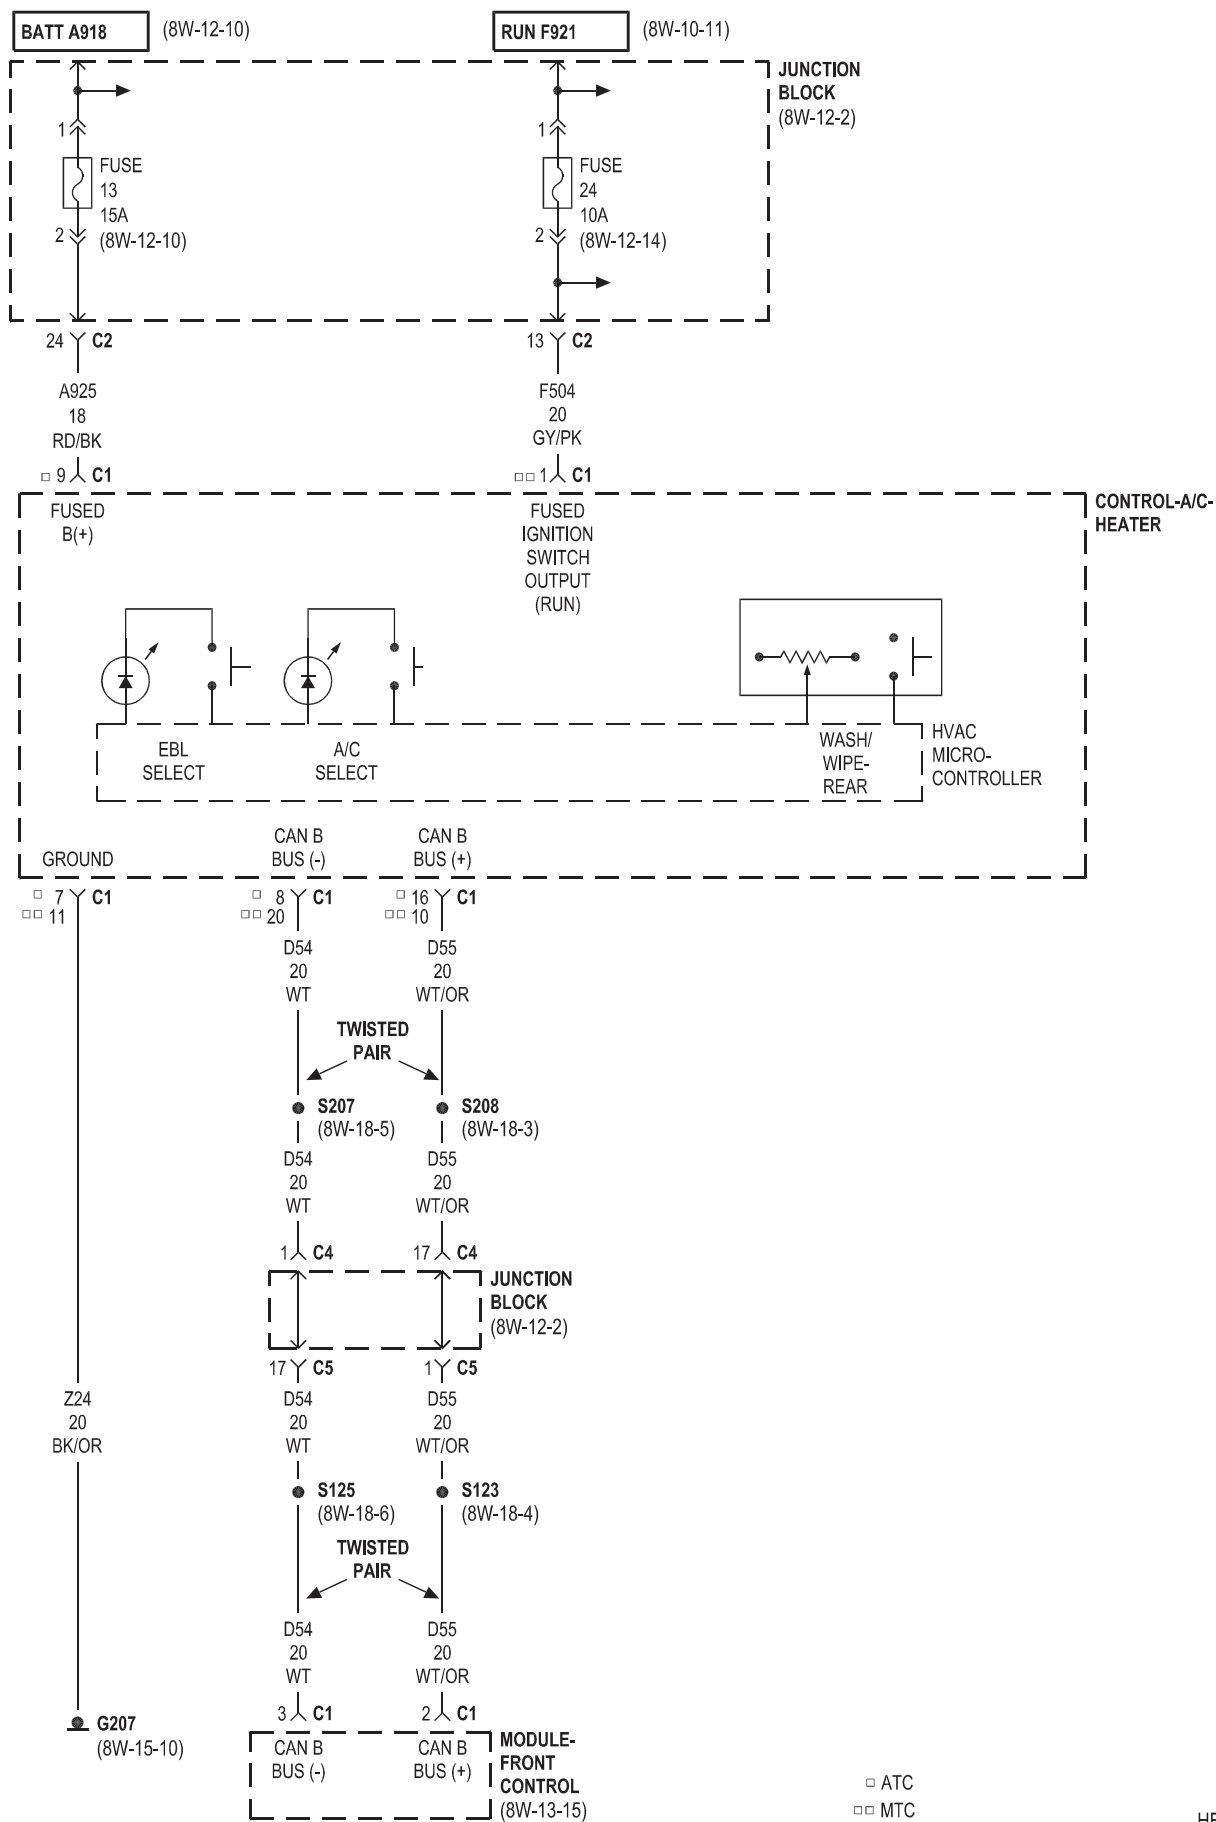

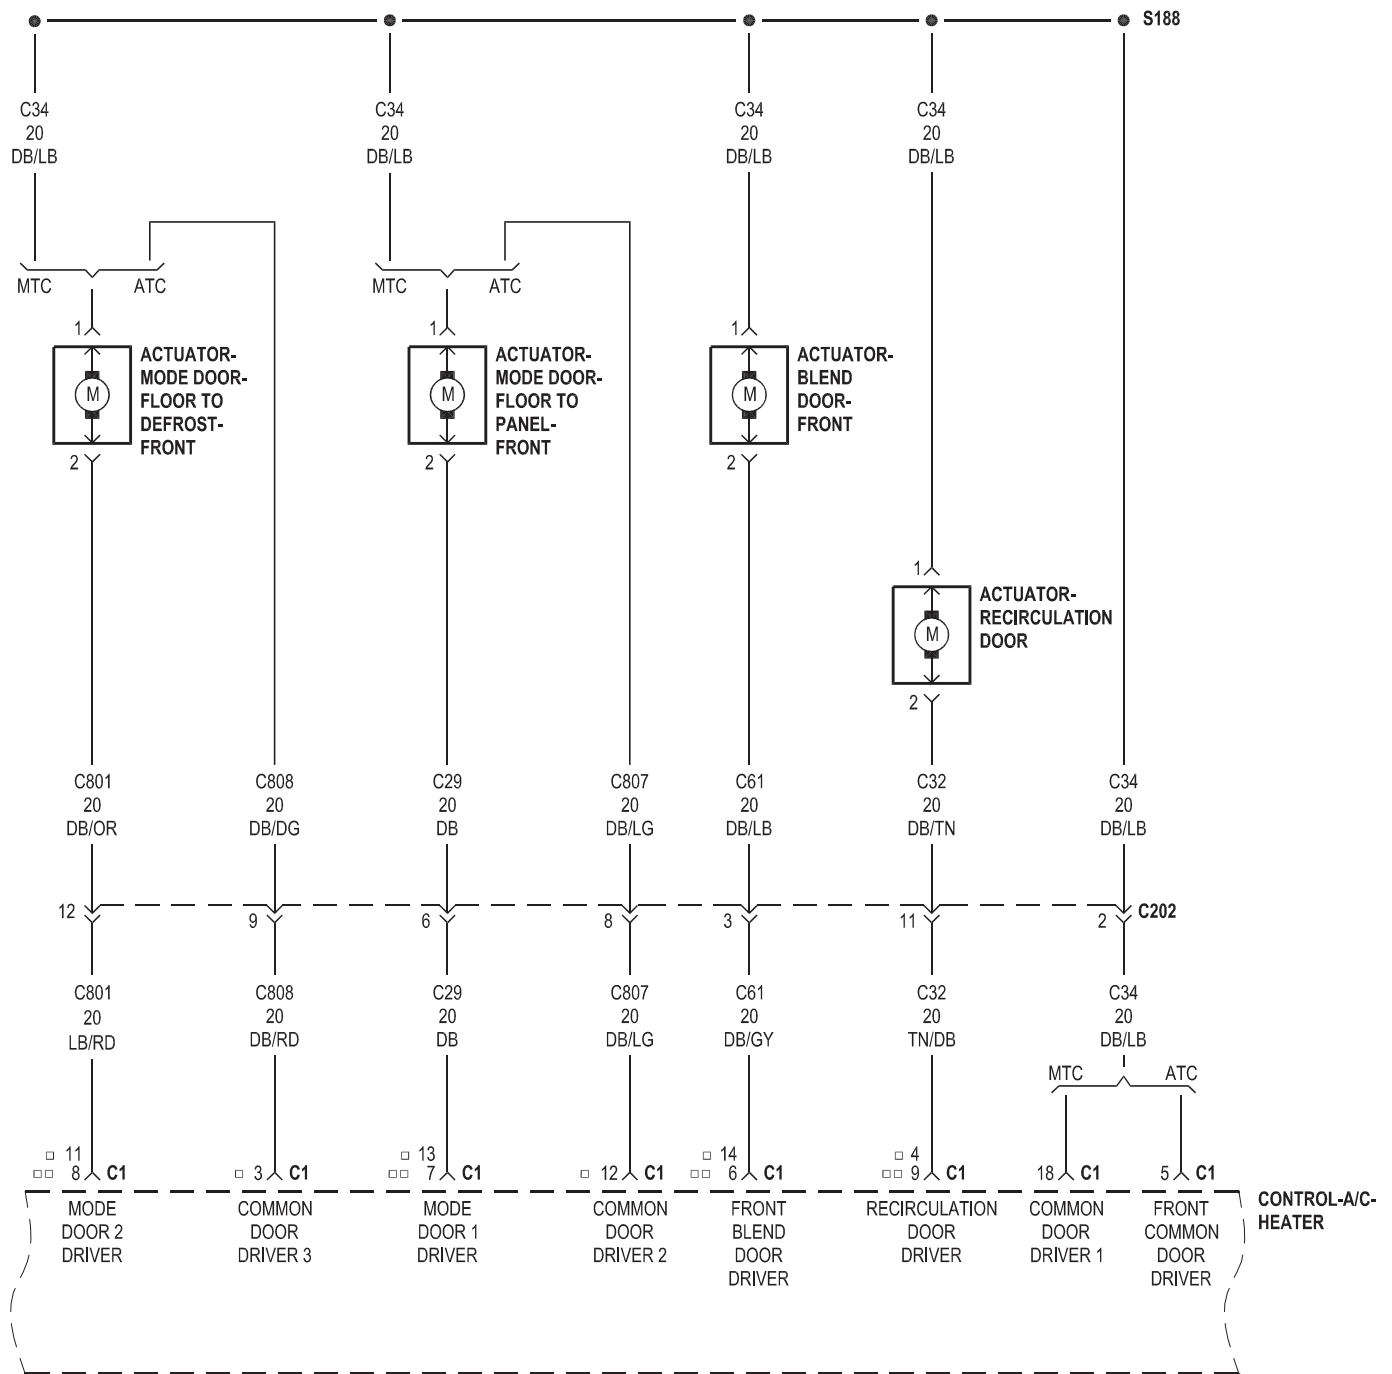



## ATC

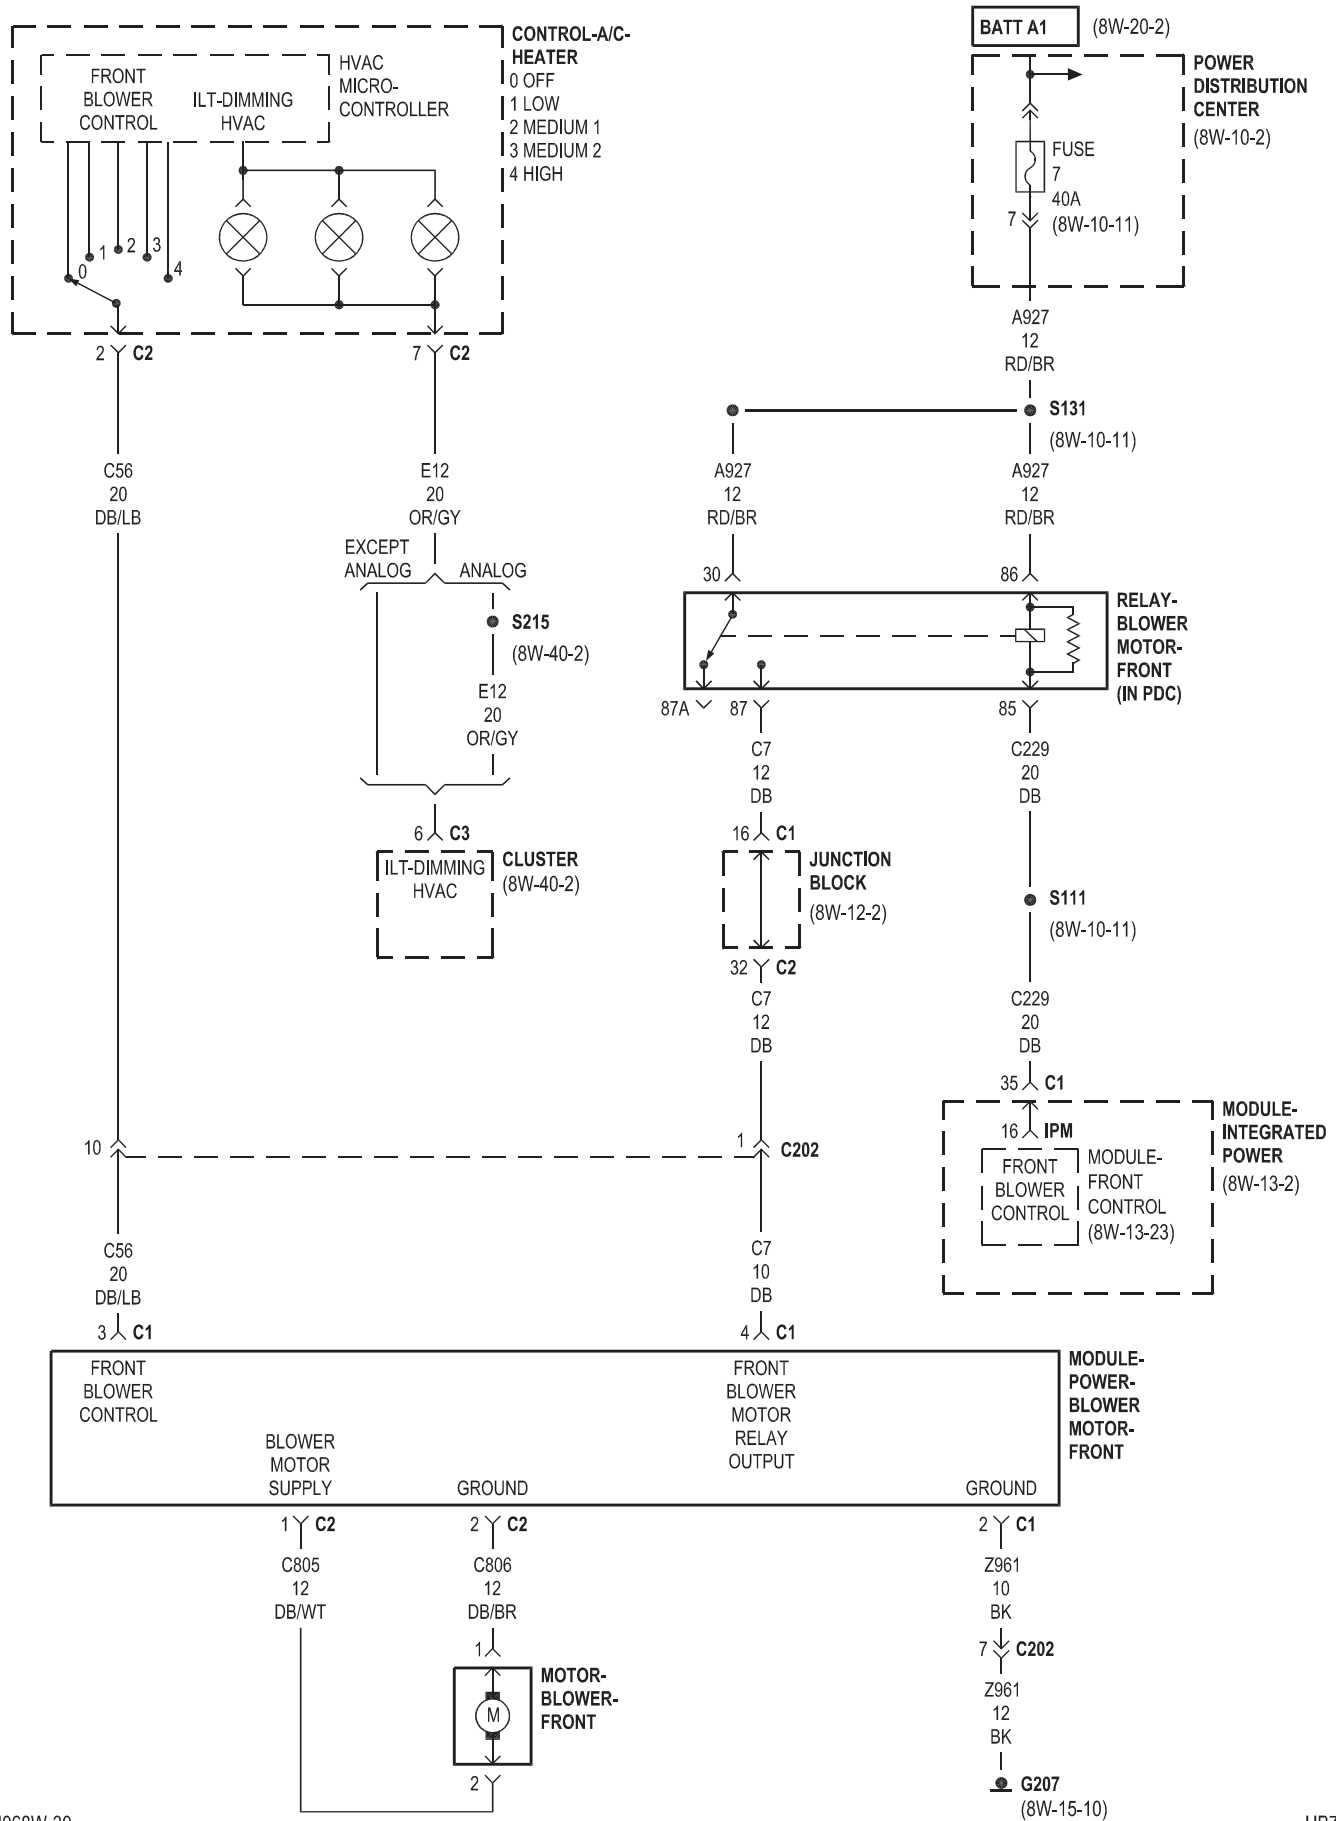

20-2)




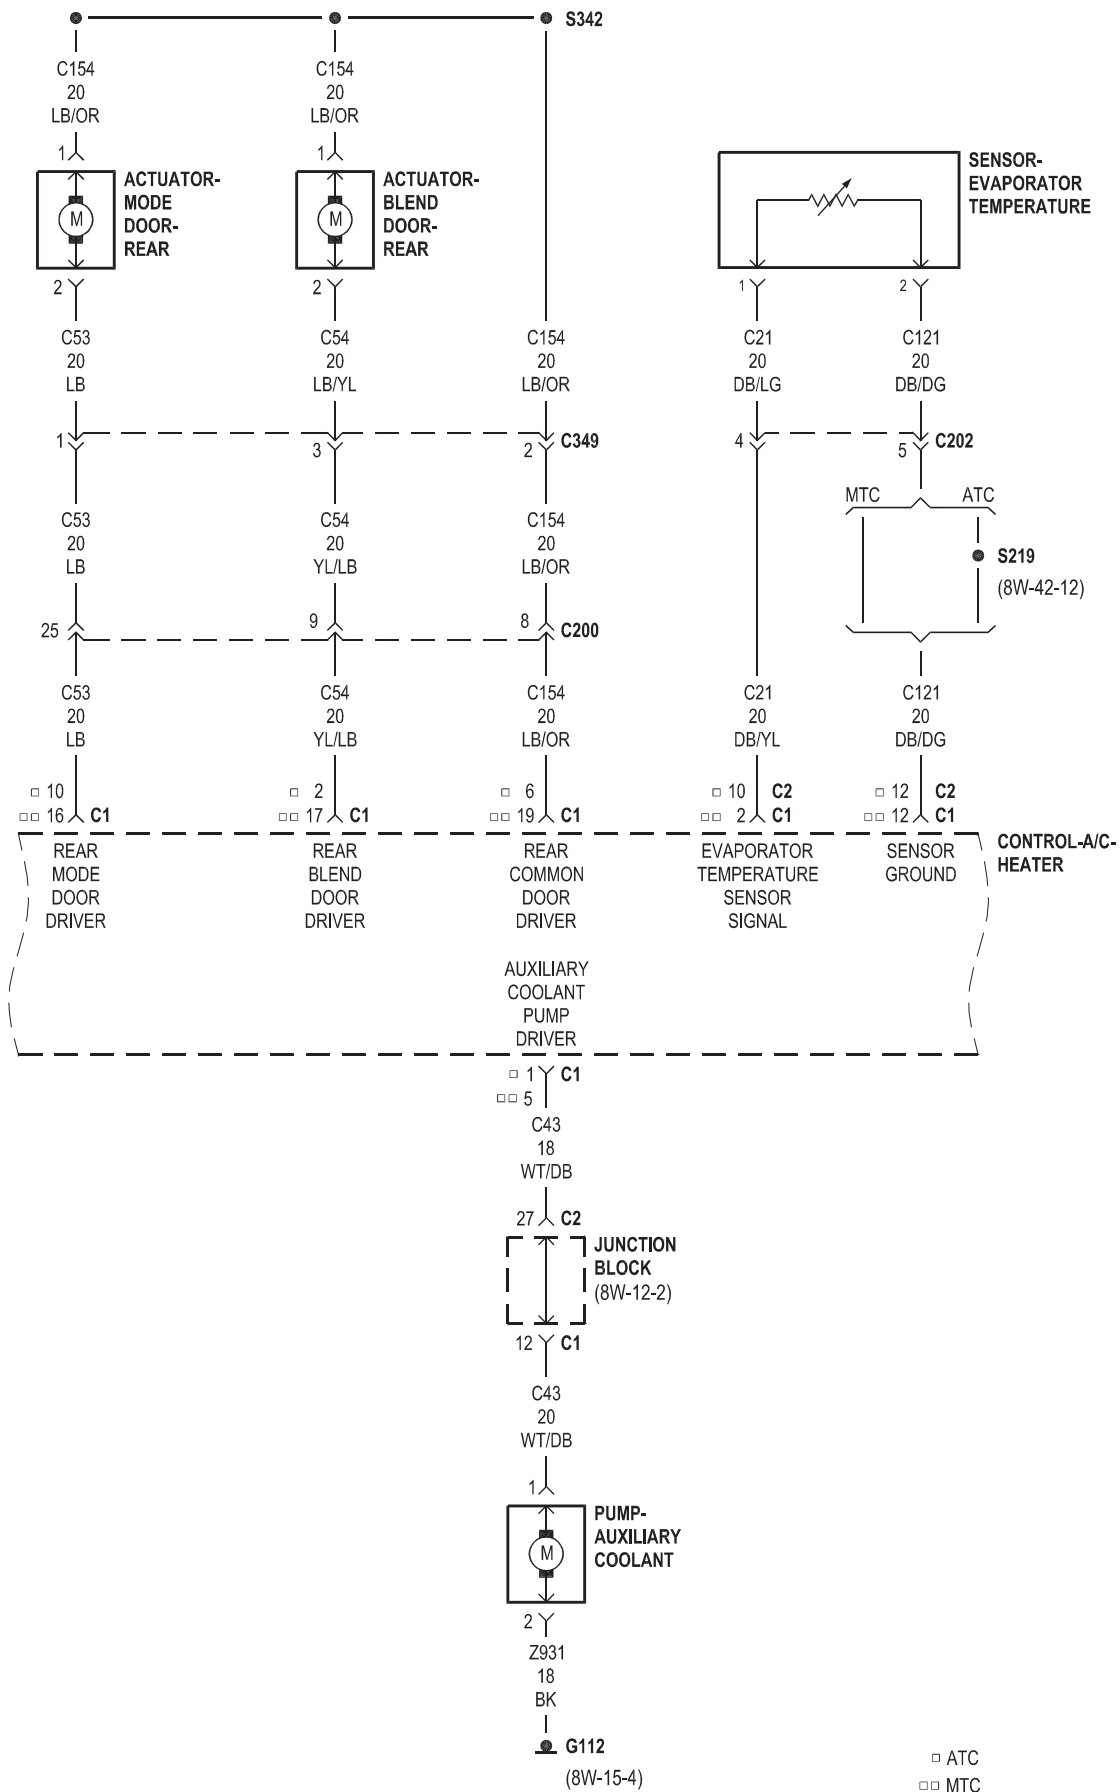


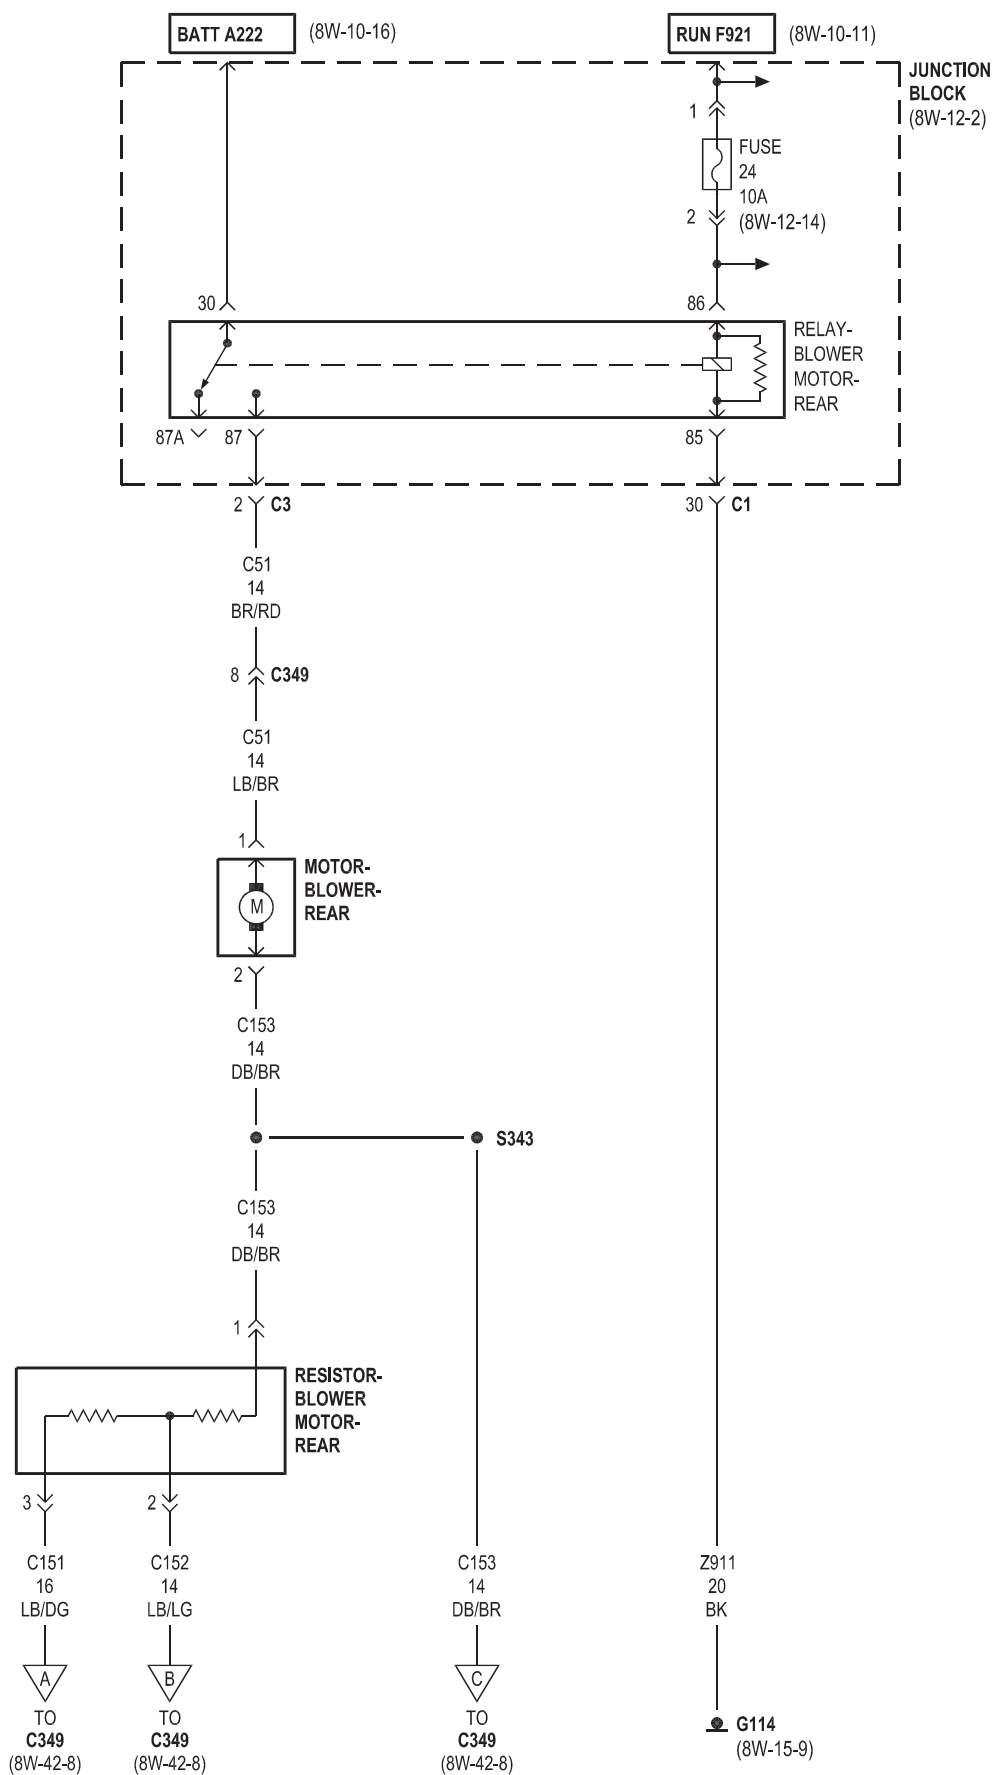







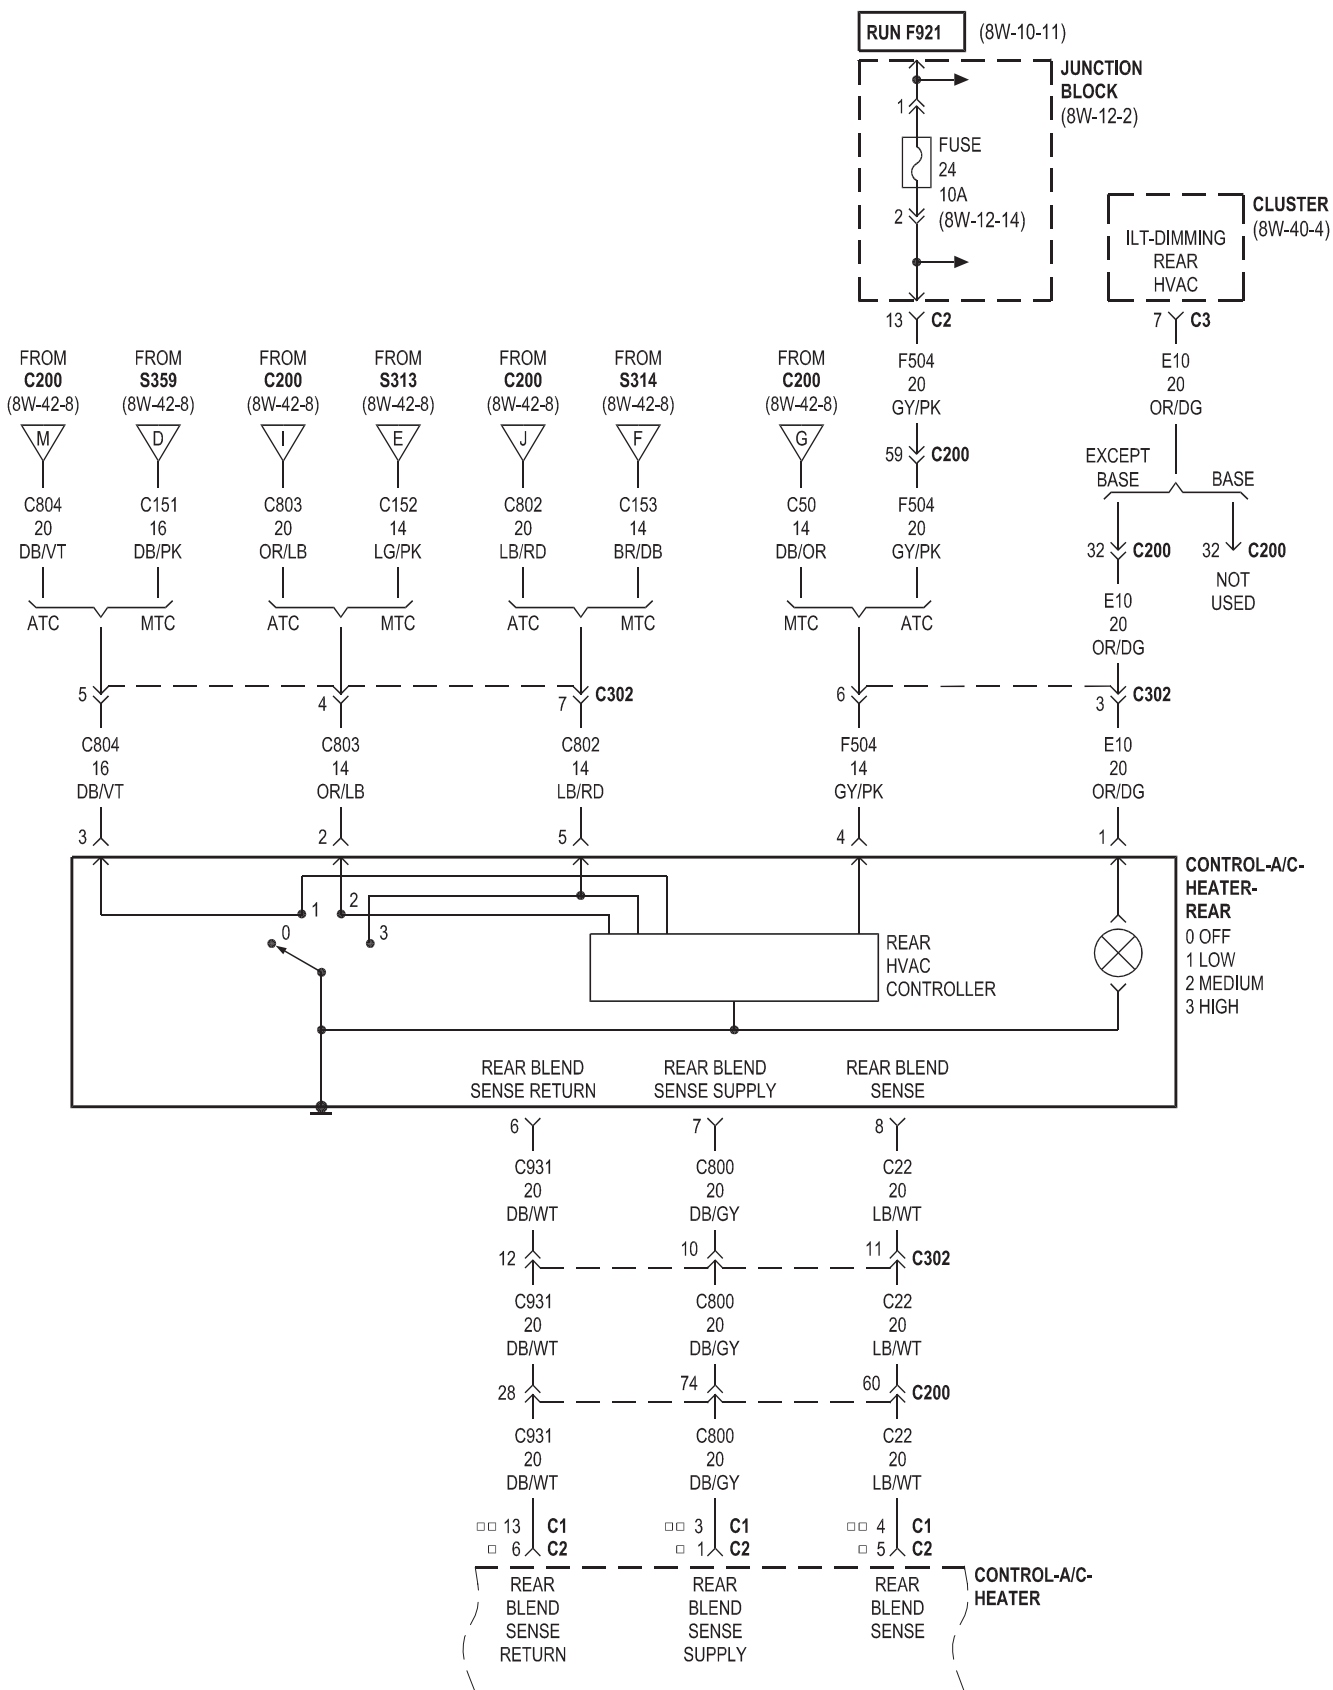

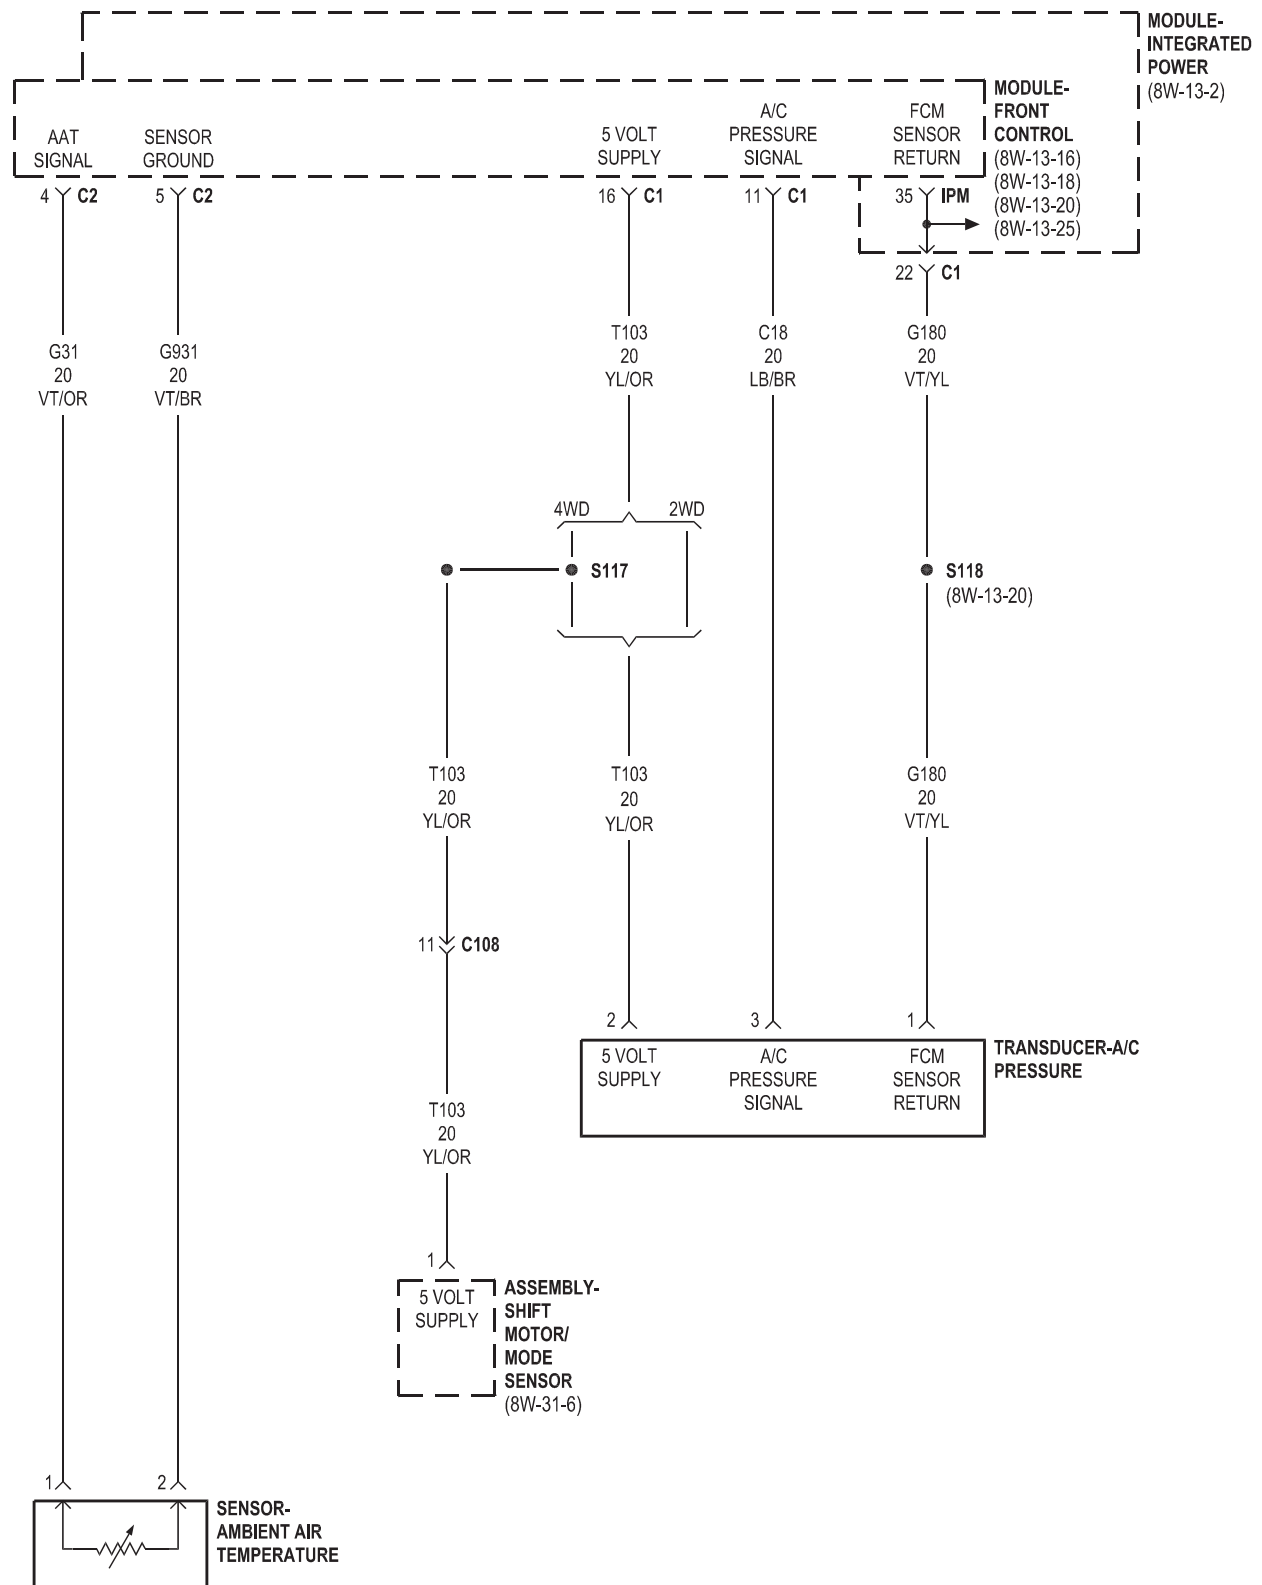

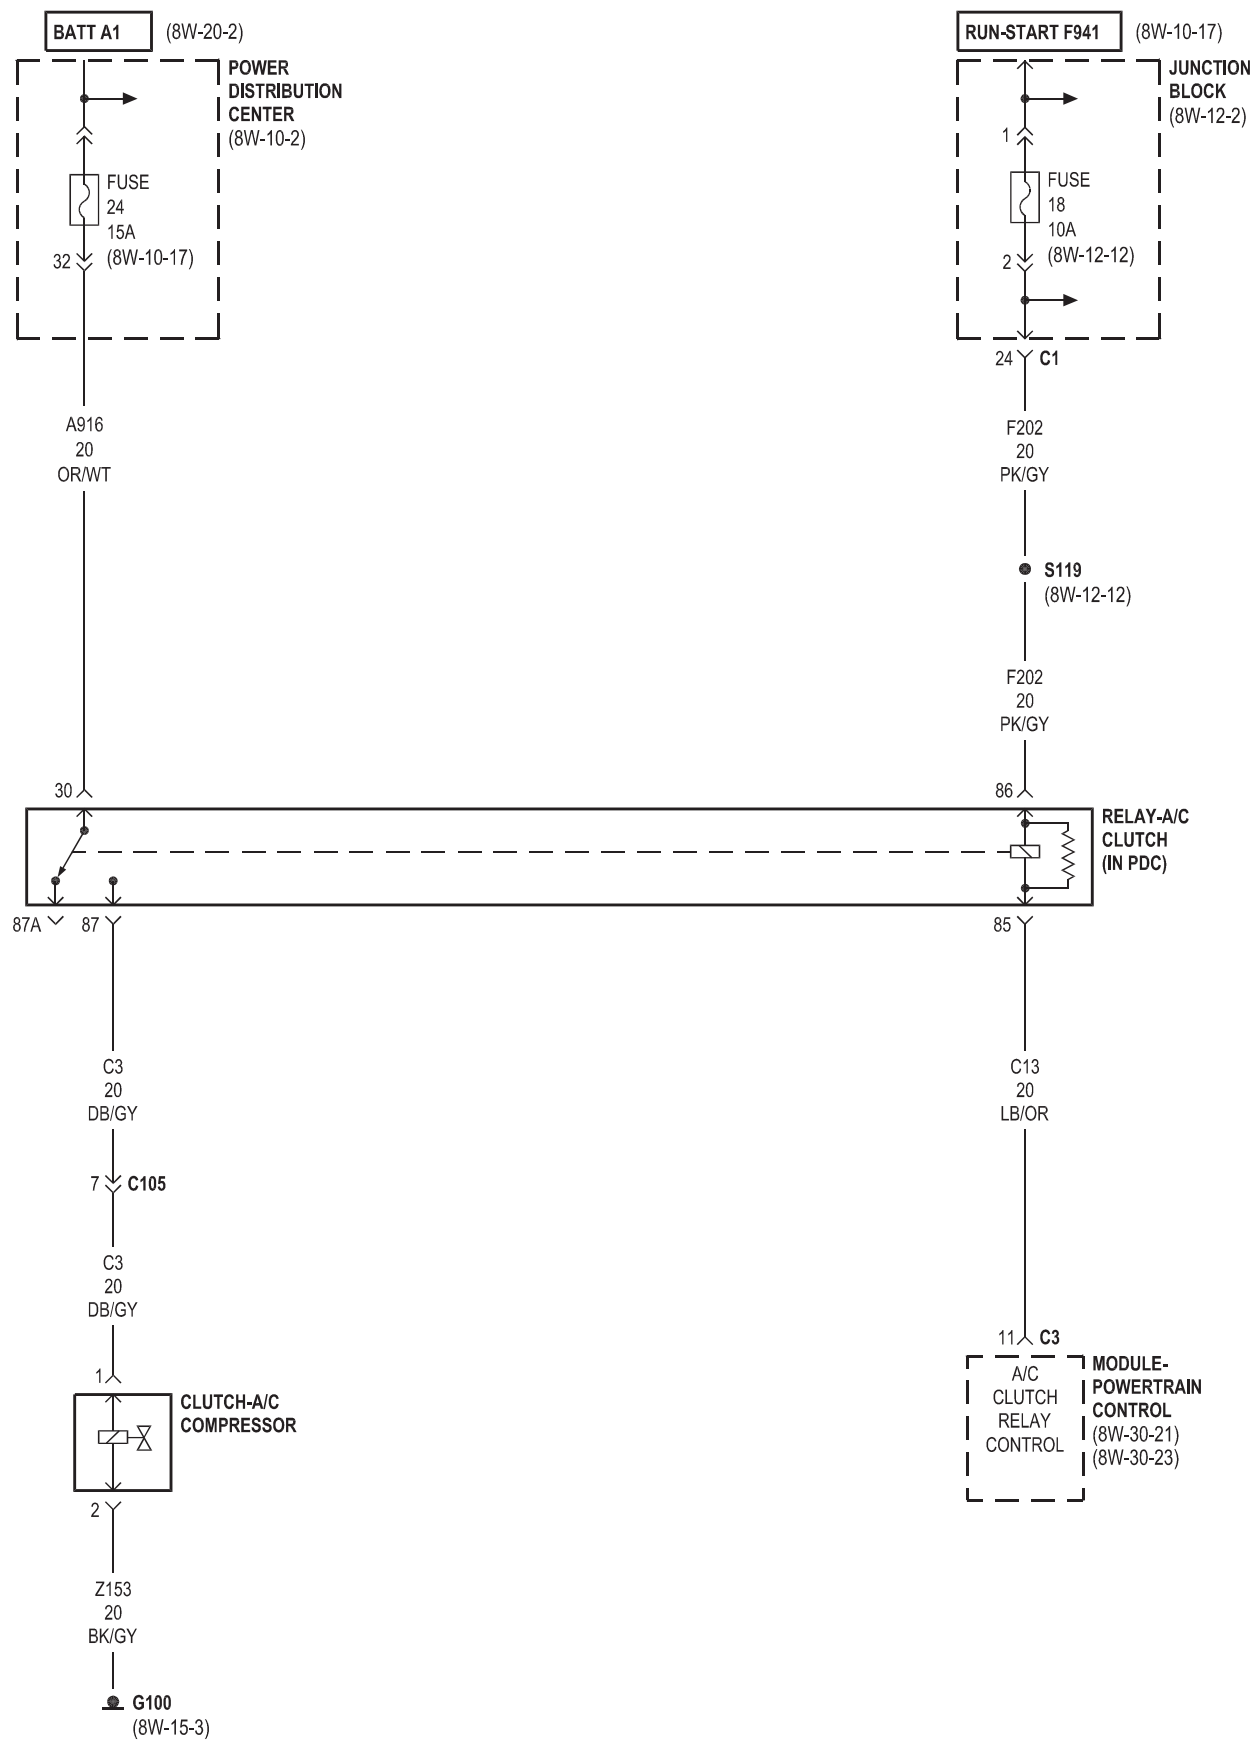

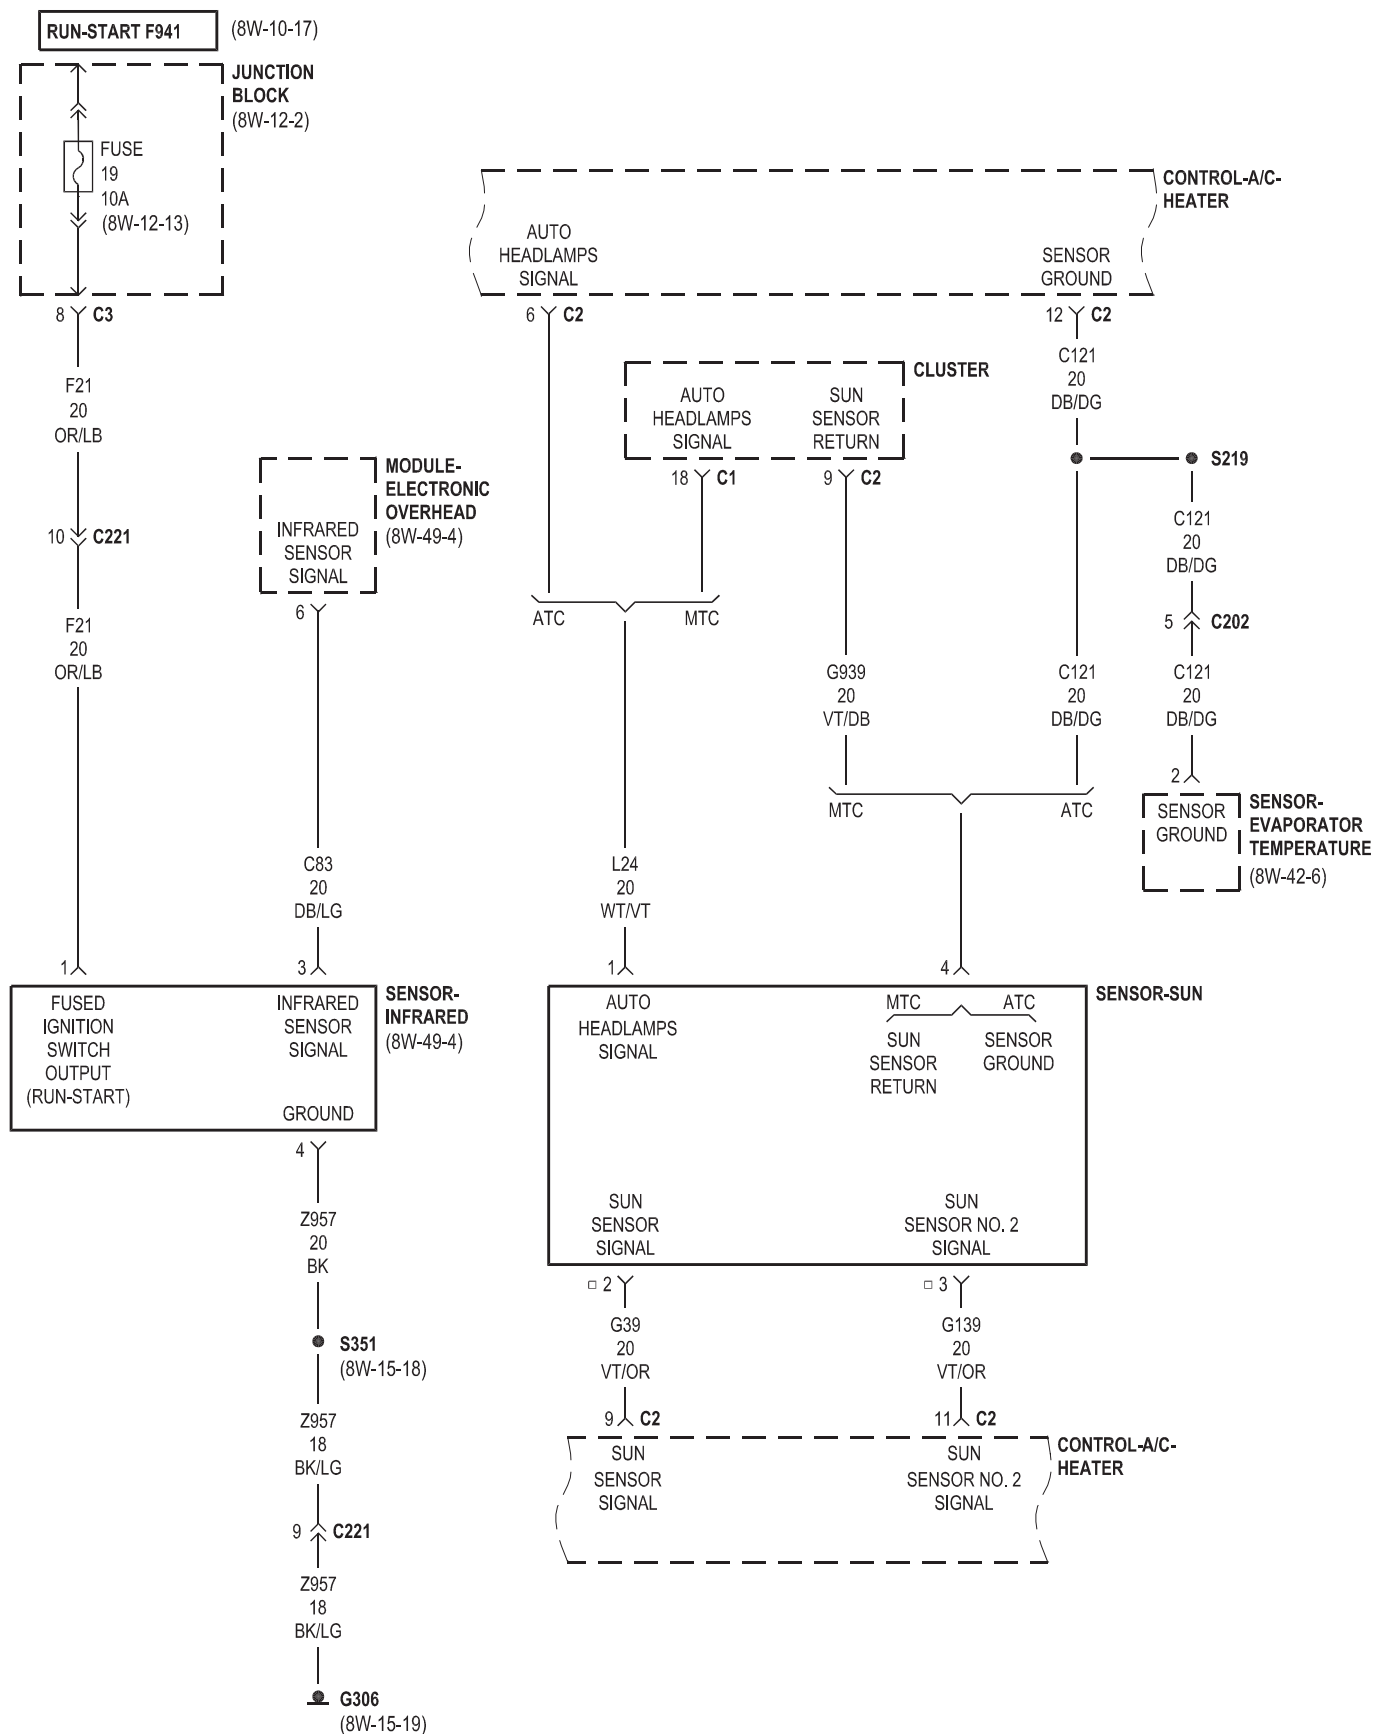

□ ATC