



8W-56 CONVENIENCE SYSTEMS


Component	Page
Cluster	8W-56-4
Display-Park Assist-Rear	8W-56-5
Fuse 5	8W-56-2
Fuse 14	8W-56-3
Fuse 16	8W-56-4
Fuse 29	8W-56-5
G208	8W-56-2, 3, 4
G304	8W-56-4, 5
Junction Block	8W-56-2, 3, 5
Module-110v Inverter	8W-56-4
Module-Front Control	8W-56-3, 4, 5
Module-Integrated Power	8W-56-3, 4

Component	Page
Module-Park Assist	8W-56-5, 6, 7
Module-Seat Memory	8W-56-2
Motor-Adjustable Pedals	8W-56-2, 3
Power Distribution Center	8W-56-2
Relay-Adjustable Pedals	8W-56-3
Sensor-Adjustable Pedals	8W-56-2
Sensor-Park Assist No. 8	8W-56-6
Sensor-Park Assist No. 9	8W-56-6, 7
Sensor-Park Assist No. 10	8W-56-6, 7
Sensor-Park Assist No. 11	8W-56-6
Switch-Adjustable Pedals	8W-56-2, 3
Switch-Inverter	8W-56-4

MEMORY

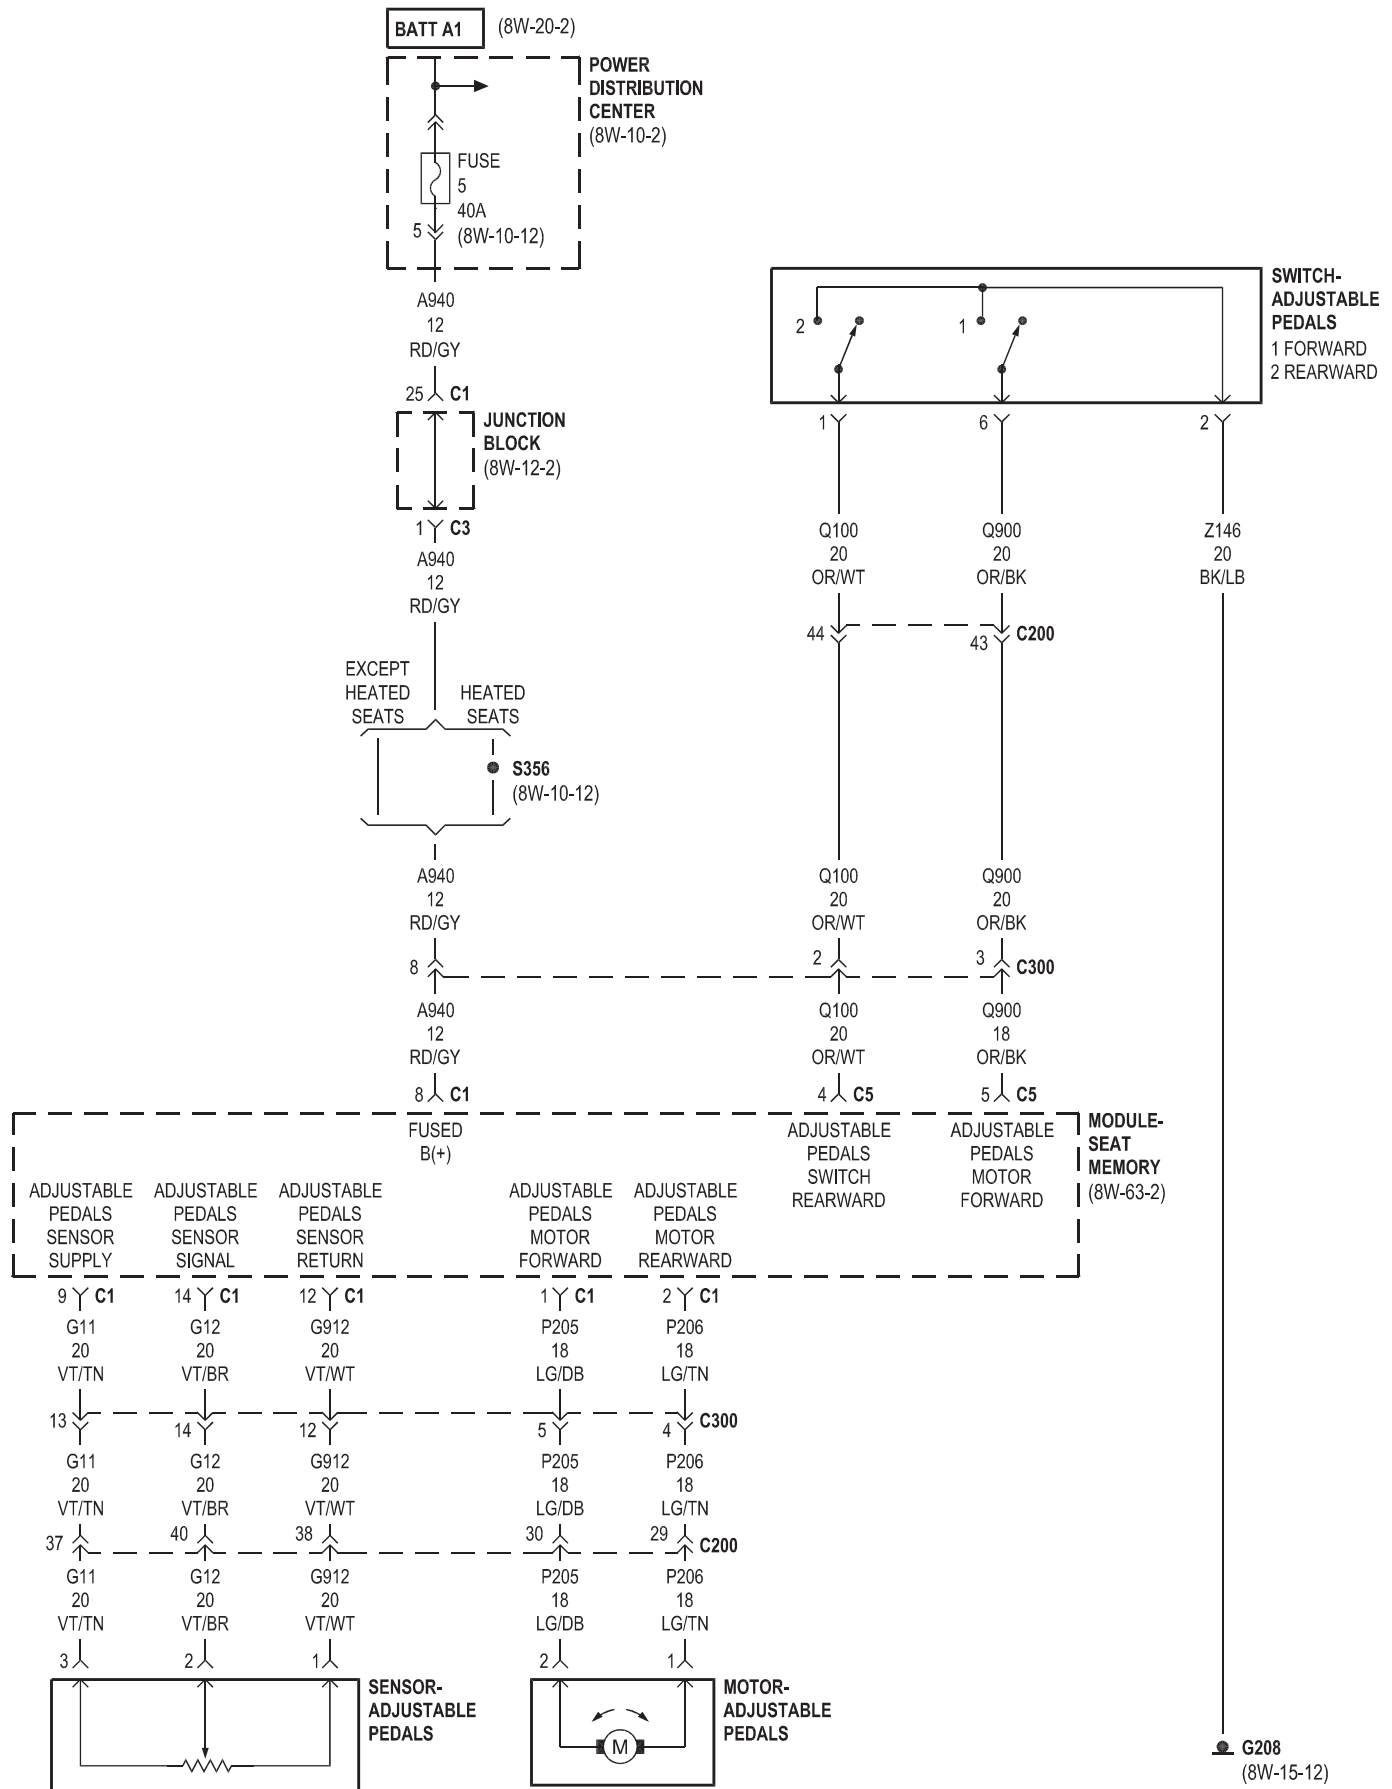

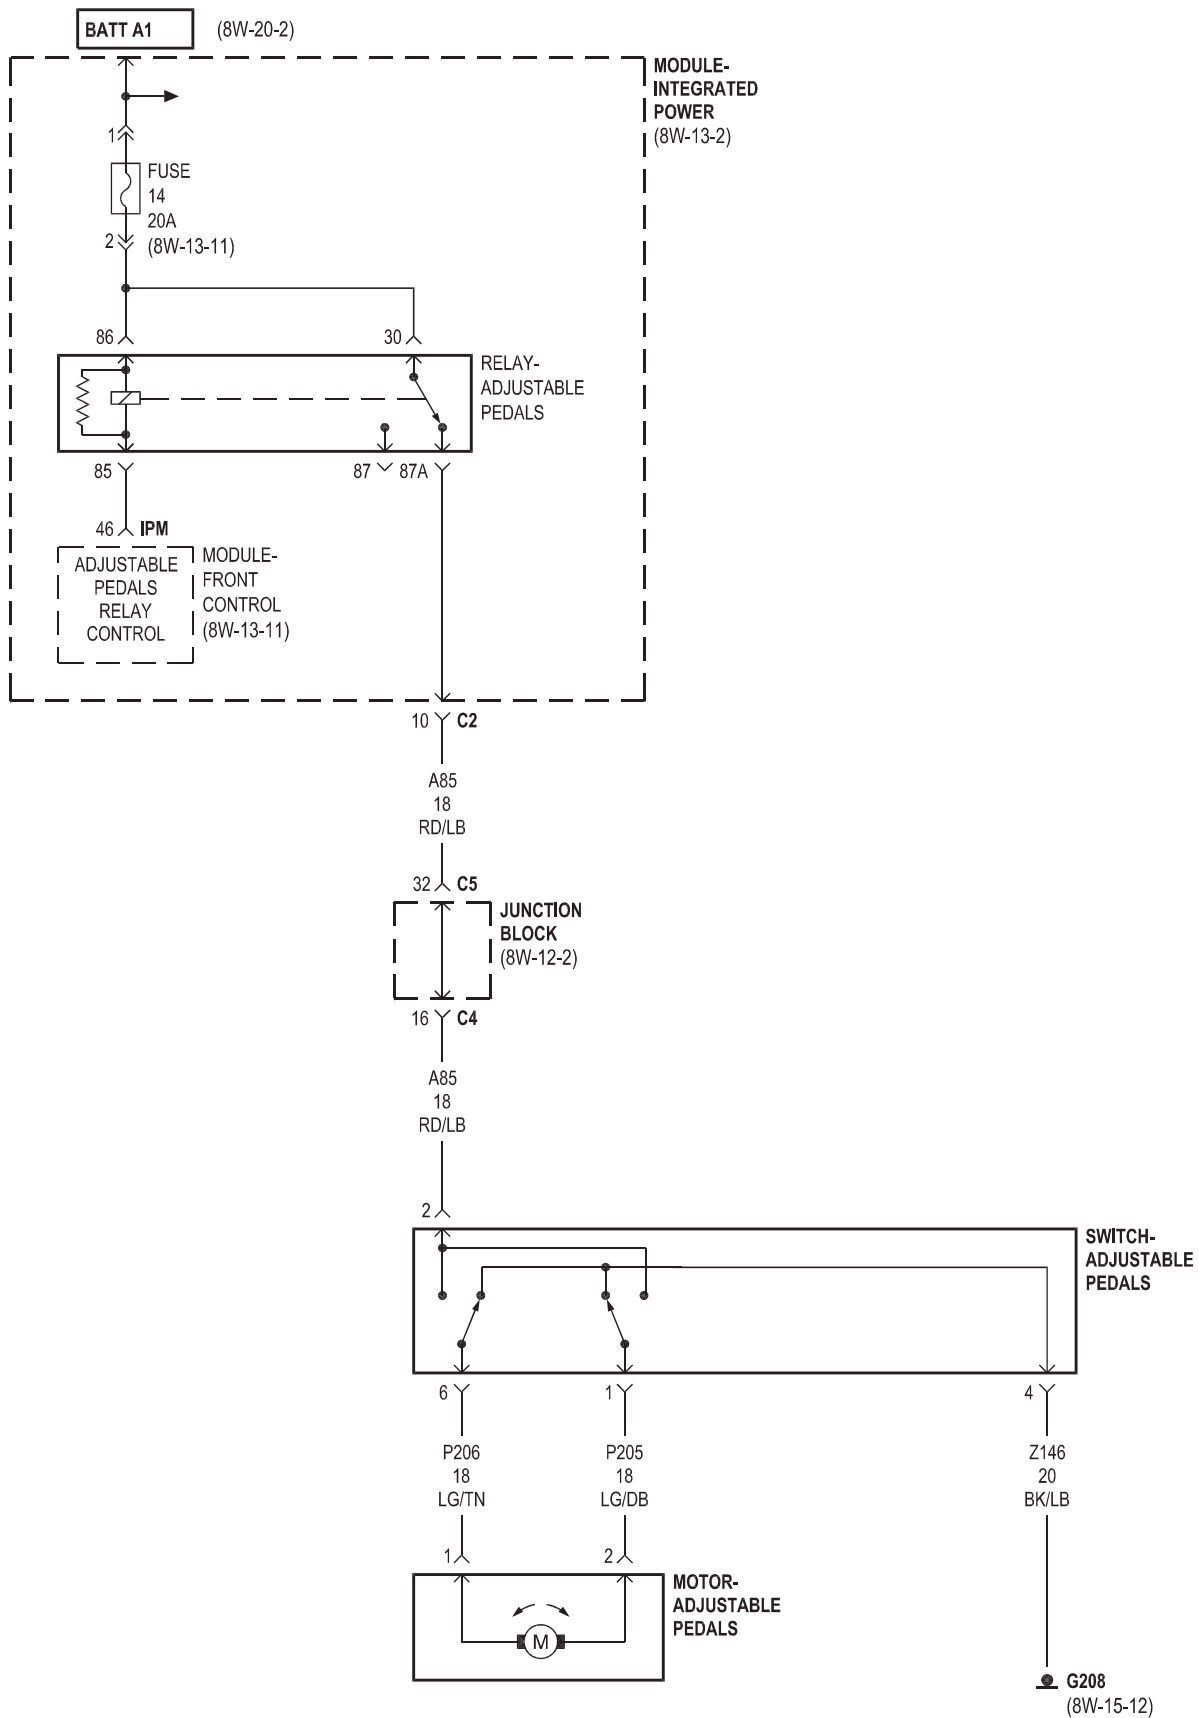

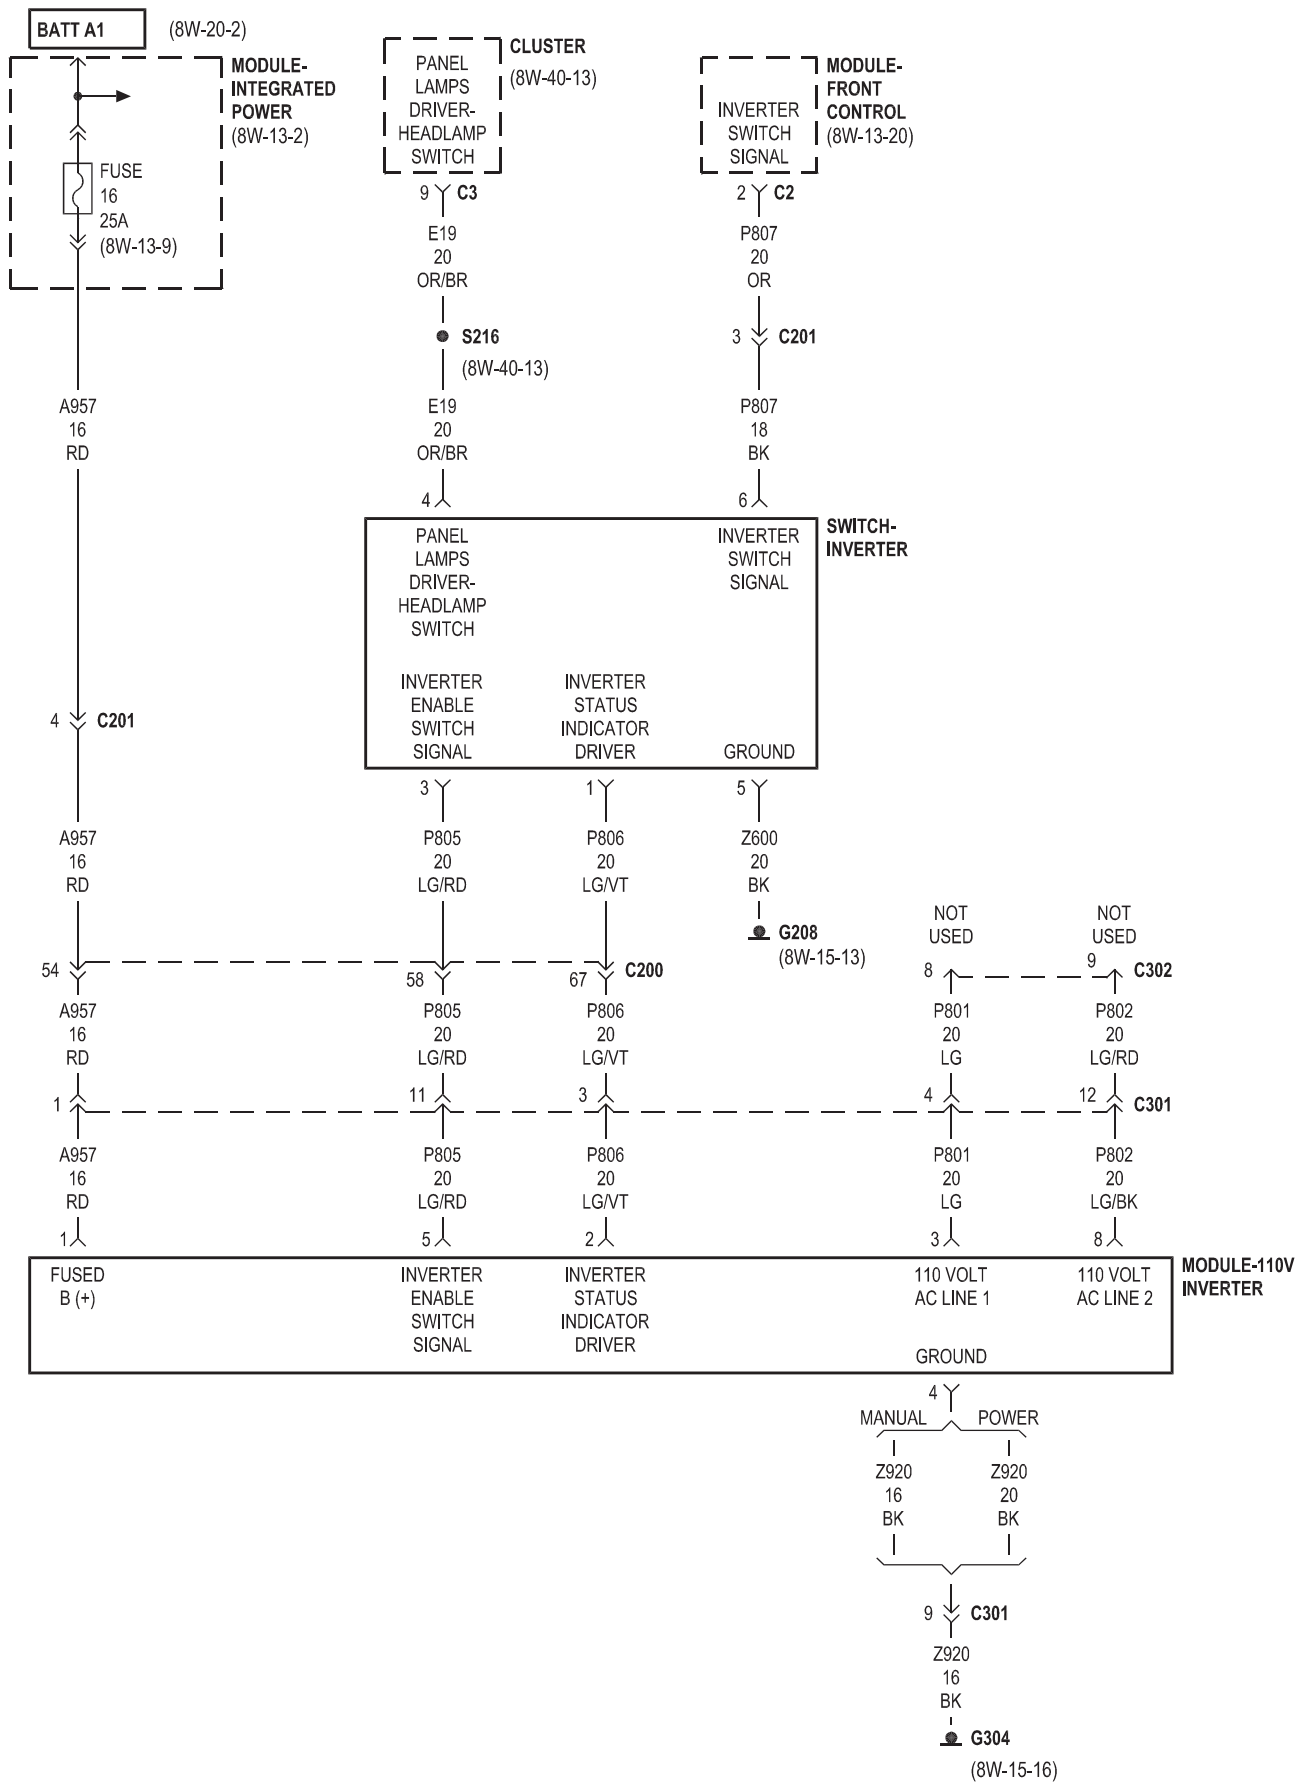

PARK ASSIST

