


## 8W-12 JUNCTION BLOCK

<b>Component</b>	<b>Page</b>	<b>Component</b>	<b>Page</b>
Acc Delay	8W-12-2	Module-Hands Free	8W-12-10
Amplifier-Radio	8W-12-8	Module-Heated Seat	8W-12-19
Circuit Breaker	8W-12-7	Module-Integrated	
Circuit Breaker (JB)	8W-12-6	Power	8W-12-6, 9, 10, 11, 14, 15, 16, 22
Clockspring	8W-12-21	Module-Occupant Restraint	
Cluster	8W-12-8, 13	Controller	8W-12-12, 14, 17, 18
Control-A/C-Heater	8W-12-10, 14, 22	Module-Park Assist	8W-12-17, 18, 24
Control-A/C-Heater-Rear	8W-12-14	Module-Power-Blower Motor-Front	8W-12-12
Data Link Connector	8W-12-10	Module-Powertrain Control	8W-12-12, 15, 20, 21, 23
Fuse 2	8W-12-5	Module-Seat Memory	8W-12-19
Fuse 3	8W-12-6	Module-Wireless Control	8W-12-10, 11
Fuse 4	8W-12-15	Motor-Blower-Rear	8W-12-20
Fuse 5	8W-12-19	Motor-Rear Window Wiper	8W-12-16
Fuse 7	8W-12-8	Motor-Sunroof	8W-12-7, 15
Fuse 8	8W-12-6, 8, 16	Power Distribution Center	8W-12-5, 6, 8, 15, 19, 20
Fuse 9	8W-12-8	Power Outlet-Console	8W-12-15
Fuse 10	8W-12-8, 16	Power Outlet-Instrument Panel	8W-12-6
Fuse 11	8W-12-9	Power Outlet-Rear	8W-12-15
Fuse 12	8W-12-5, 9	Power Outlet-Rear Seat	8W-12-15
Fuse 13	8W-12-10, 20	Pump-Auxiliary Coolant	8W-12-22
Fuse 14	8W-12-10, 16	Radio	8W-12-9
Fuse 15	8W-12-8	Receiver-Satellite	8W-12-9
Fuse 16	8W-12-12	Relay-A/C Clutch	8W-12-12
Fuse 17	8W-12-16	Relay-Accessory Delay	8W-12-6, 15
Fuse 18	8W-12-12	Relay-Adjustable Pedals	8W-12-16
Fuse 19	8W-12-13	Relay-Blower Motor-Front	8W-12-12
Fuse 24	8W-12-14	Relay-Blower Motor-Rear	8W-12-14, 20
Fuse 25	8W-12-14, 20	Relay-Fuel Pump	8W-12-12
Fuse 26	8W-12-14, 17	Relay-Park Lamp	8W-12-16
Fuse 27	8W-12-9	Relay-Rear Window Defogger	8W-12-5, 14
Fuse 28	8W-12-10	Relay-Stop Lamp Inhibit	8W-12-14, 18
Fuse 29	8W-12-14, 17, 24	Relay-Wiper Rear	8W-12-16
Fuse 33	8W-12-8	Sensor-Accelerator Pedal Position	8W-12-23
Fuse 34	8W-12-11	Sensor-Dynamics	8W-12-14
Fuse 35	8W-12-6, 15	Sensor-Infrared	8W-12-13
G114	8W-12-14	Sensor-Steering Angle	8W-12-14
G208	8W-12-11	Servo-Speed Control	8W-12-20
Glass-Liftgate-Heated	8W-12-5	Spare	8W-12-2
Junction Block	8W-12-2, 5, 6, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24	Switch-Adjustable Pedals	8W-12-16
Lamp-High Mounted Stop	8W-12-18	Switch-Heated Seat-Driver	8W-12-13
Lamp-License Plate	8W-12-16	Switch-Heated Seat-Left Rear	8W-12-17, 24
Lamp-Tail/Stop/Turn-Left	8W-12-16, 18, 22	Switch-Heated Seat-Passenger	8W-12-13
Lamp-Tail/Stop/Turn-Right	8W-12-16, 18, 22	Switch-Heated Seat-Right Rear	8W-12-24
Media System-Monitor/Dvd	8W-12-9	Switch-Ignition	8W-12-11
Mirror-Inside Rearview	8W-12-5, 13	Switch-Seat-Driver	8W-12-19
Mirror-Outside Rearview-Driver	8W-12-5	Switch-Seat-Passenger	8W-12-19
Mirror-Outside Rearview-Passenger	8W-12-5	Switch-Speed Control-Left	8W-12-21
Module-Antilock Brakes	8W-12-14	Switch-Speed Control-Right	8W-12-21
Module-Brake Provision	8W-12-18	Switch-Stop Lamp	8W-12-18, 20
Module-Clock-Analog	8W-12-8	Switch-Tow/Haul Overdrive	8W-12-23
Module-Door-Driver	8W-12-5, 7, 8	Switch-Transfer Case Selector	8W-12-13
Module-Door-Passenger	8W-12-7, 8	Switch-Window/Door Lock-Driver	8W-12-7
Module-Electronic Overhead	8W-12-10	Switch-Window/Door Lock-Passenger	8W-12-7
Module-Front Control	8W-12-6, 11, 14, 15, 16, 17, 18, 22	Wiring-Trailer Tow 7-Way	8W-12-22

## JUNCTION BLOCK

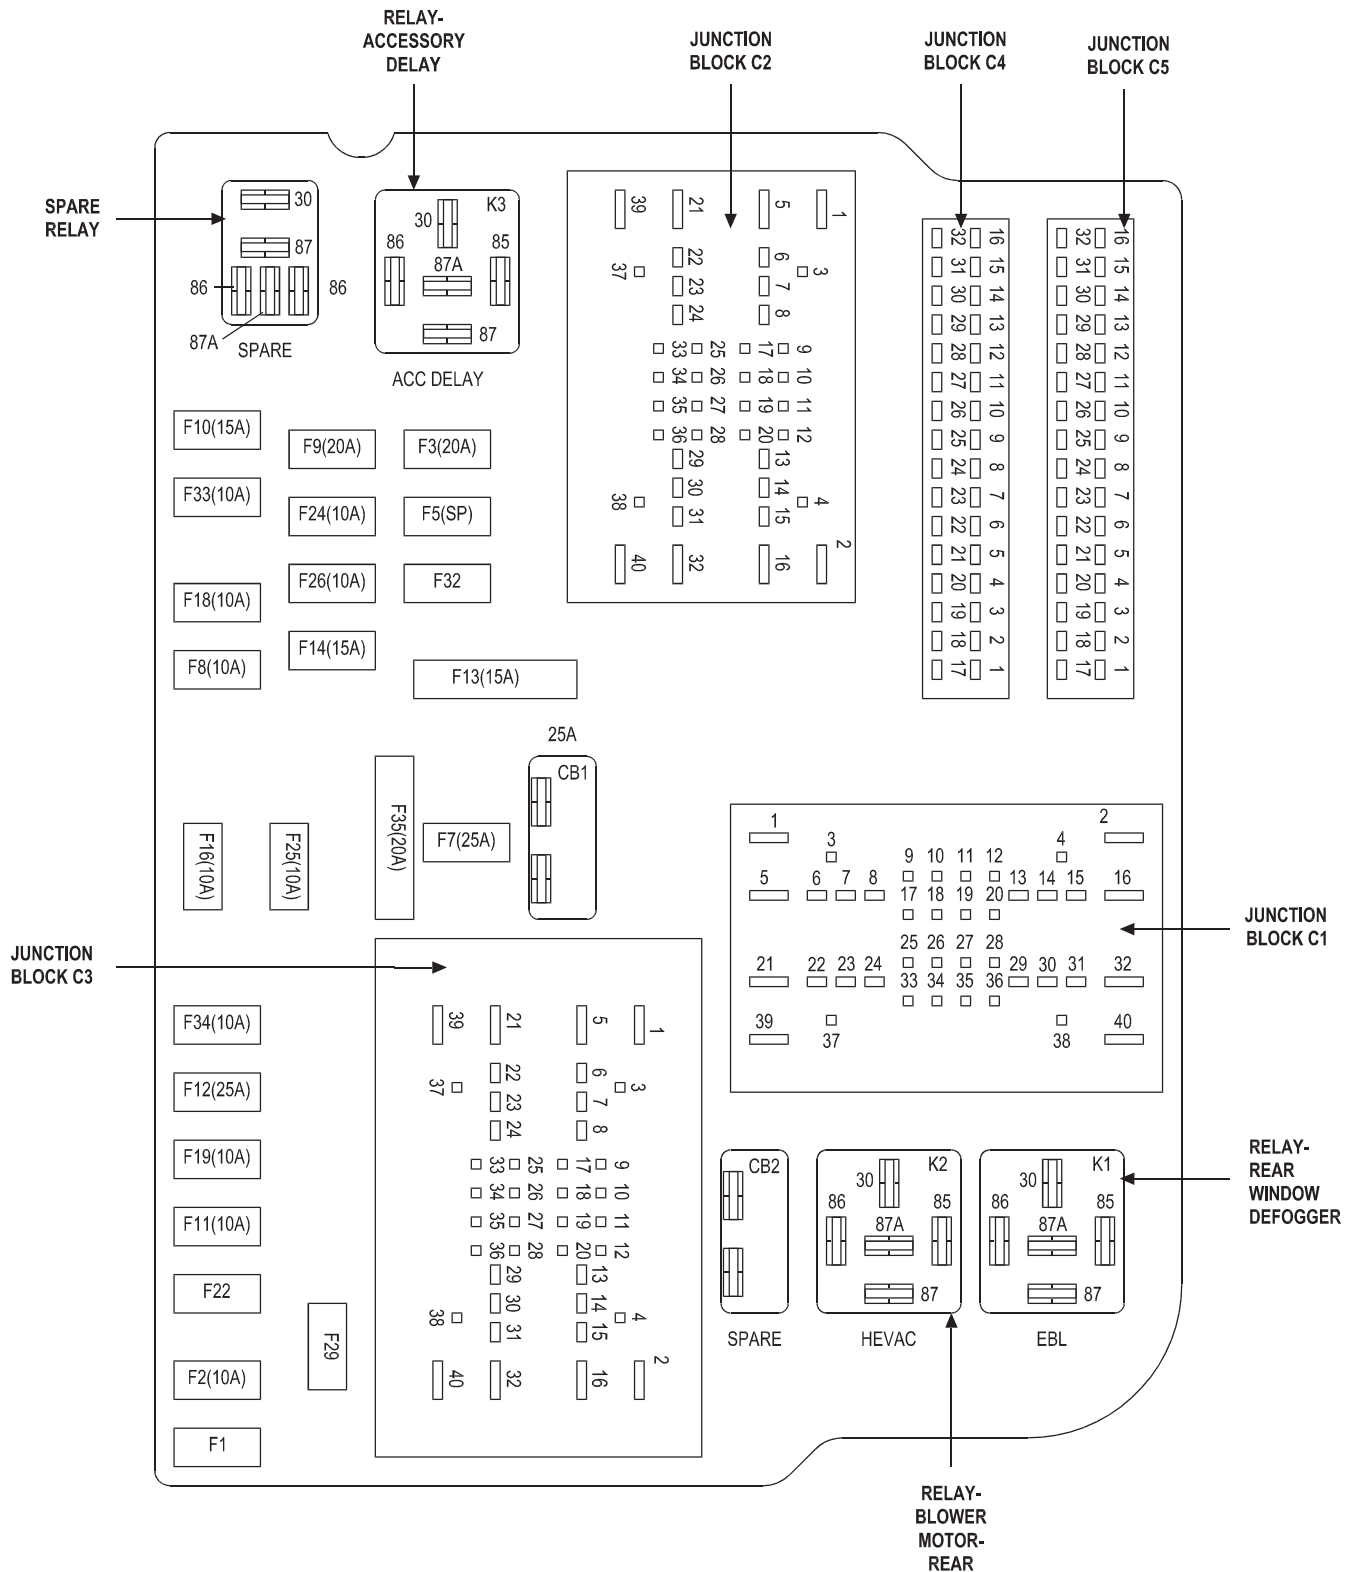

# FUSES

FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	-	-	-
2	10A	C16 20DB/GY	FUSED REAR WINDOW DEFOGGER RELAY OUTPUT
3	20A	F306 18DB/PK	FUSED ACCESSORY RELAY OUTPUT
4	-	-	-
5	-	-	-
6	-	-	-
7	25A	A116 16YL/RD	FUSED B(+)
8	10A	A215 20RD/LG	FUSED B(+)
9	20A	A924 16RD/LG	FUSED B(+)
10	15A	A117 18RD/DG	FUSED B(+)
11	10A	A300 20GY/LG	FUSED B(+)
12	25A	A114 16GY/RD	FUSED B(+)
13	15A	A925 18RD/BK	FUSED B(+)
14	15A	A926 18RD	FUSED B(+)
15	-	-	-
16	10A	F201 20PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
17	-	-	-
18	10A	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
19	10A	F21 20OR/LB	FUSED IGNITION SWITCH OUTPUT (RUN-START)
20	-	-	-
21	-	-	-
22	-	-	-
23	-	-	-
24	10A	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
25	10A	F100 20PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
26	10A	F500 20DG/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
27	-	-	-
28	-	-	-
29	20A	F922 16PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN)
30	-	-	-
31	-	-	-
32	-	-	-
33	10A	A956 20RD/BL	FUSED B(+)
34	10A	A106 18LB/RD	FUSED IGNITION SWITCH OUTPUT (OFF-RUN-START)
35	20A	F307 18LB/PK	FUSED ACCESSORY RELAY OUTPUT

# CIRCUIT BREAKER

C.B.	AMPS	FUSED CIRCUIT	FUNCTION
1	25A	F30 14PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)

## RELAYS

RELAY-  
ACCESSORY  
DELAY


CAVITY	CIRCUIT	FUNCTION
30	A901 12RD/PK	FUSED B(+)
85	P305 20LG/LB	ACCESSORY DELAY RELAY CONTROL
86	A901 12RD/PK	FUSED B(+)
87	INTERNAL	ACCESSORY DELAY RELAY OUTPUT
87A	-	-


RELAY-  
BLOWER  
MOTOR-  
REAR


CAVITY	CIRCUIT	FUNCTION
30	A222 14RD/LB	FUSED B(+)
85	Z911 20BK	GROUND
86	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
87	C51 14BR/RD	FUSED REAR BLOWER MOTOR RELAY OUTPUT
87A	-	-


RELAY-  
REAR  
WINDOW  
DEFOGGER

CAVITY	CIRCUIT	FUNCTION
30	A915 12OR/BR	FUSED B(+)
85	C115 20DB	DEFOGGER RELAY CONTROL
86	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
87	C15 12DB/WT	REAR WINDOW DEFOGGER RELAY OUTPUT
87A	-	-

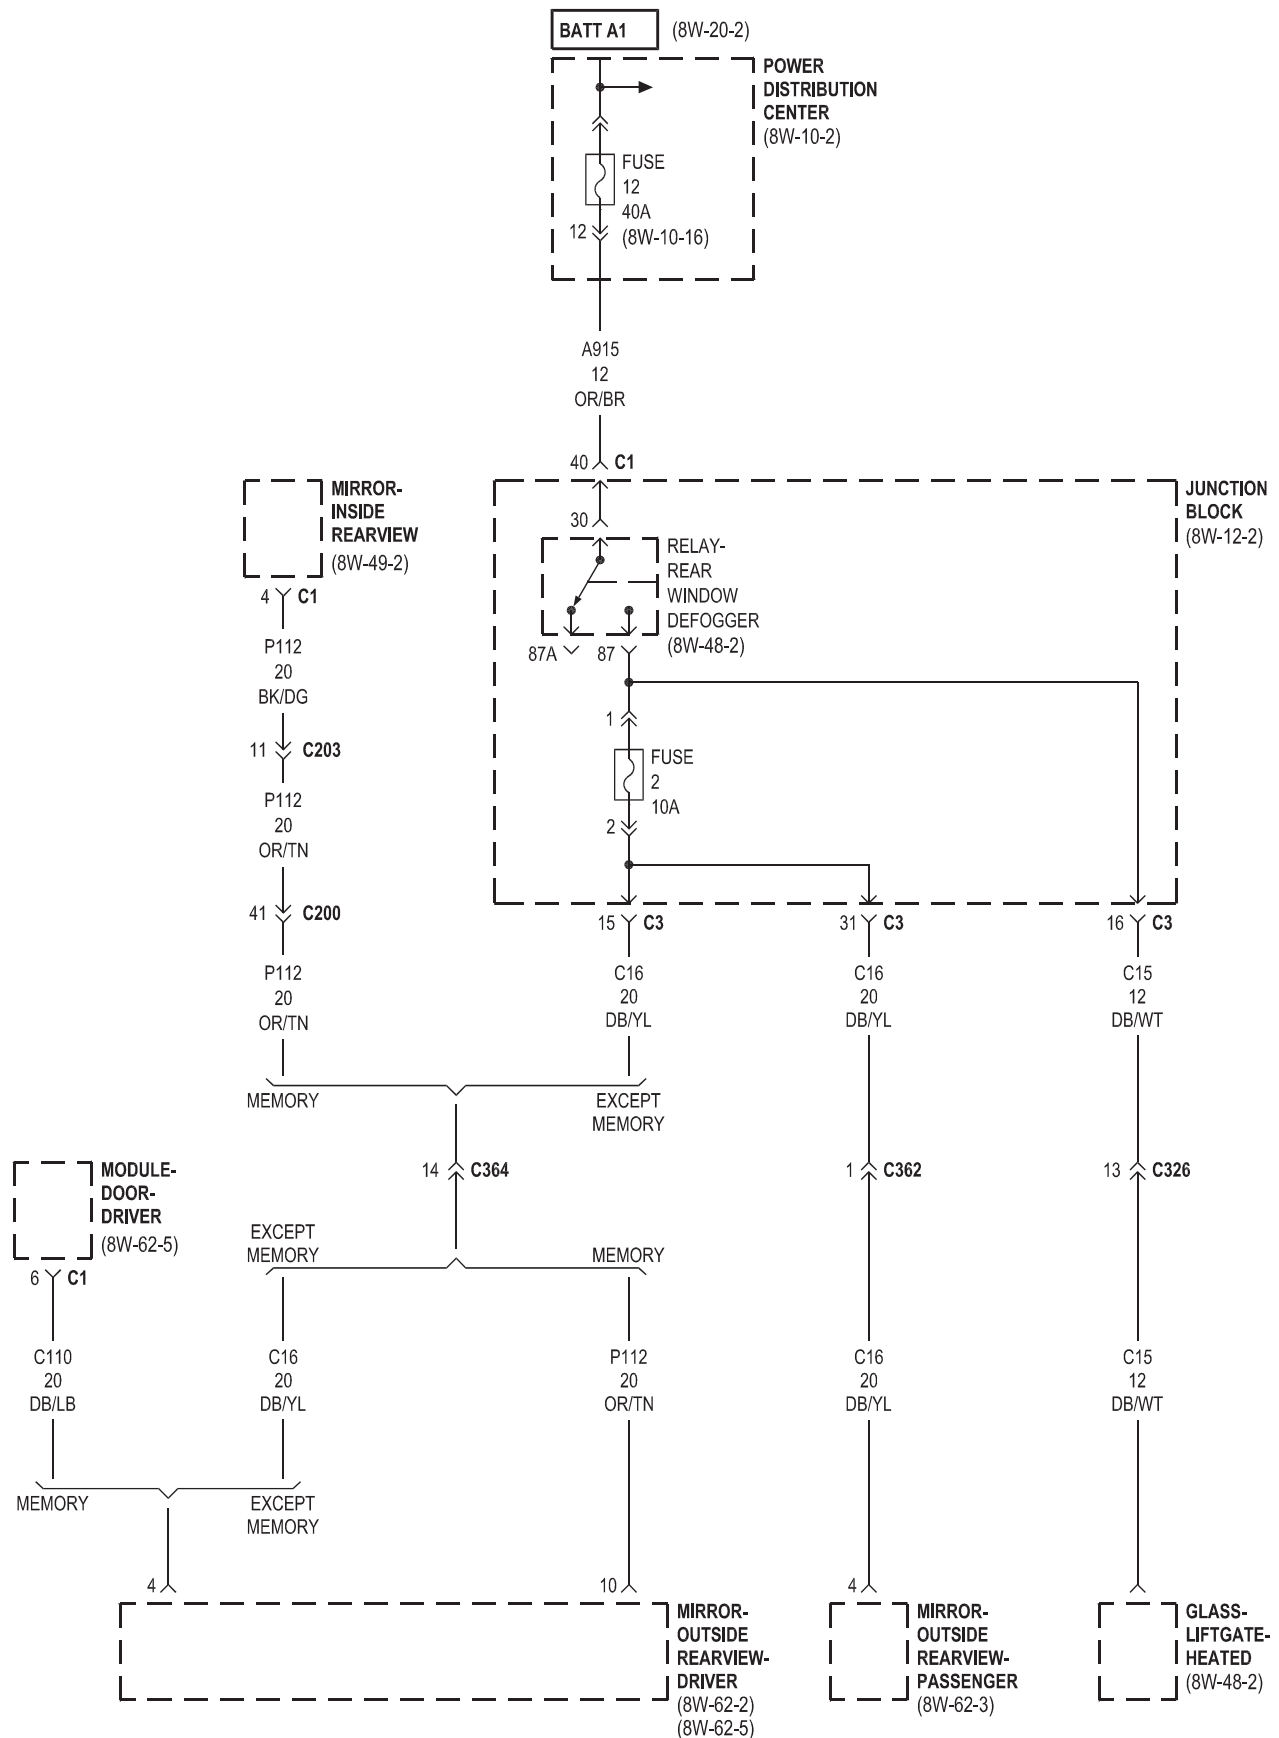


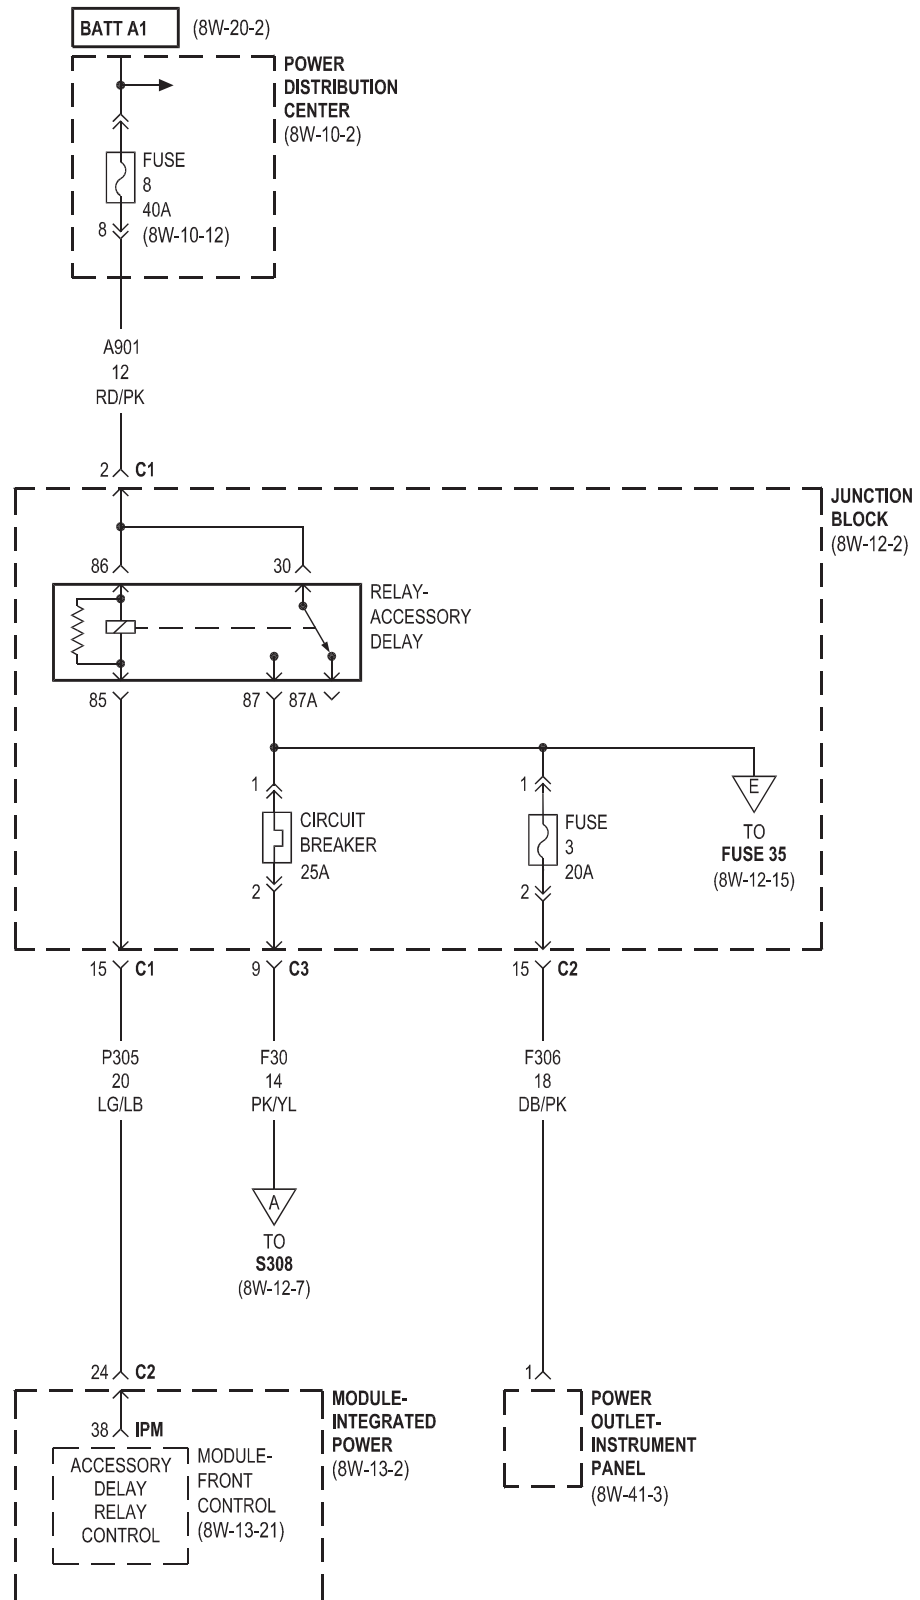


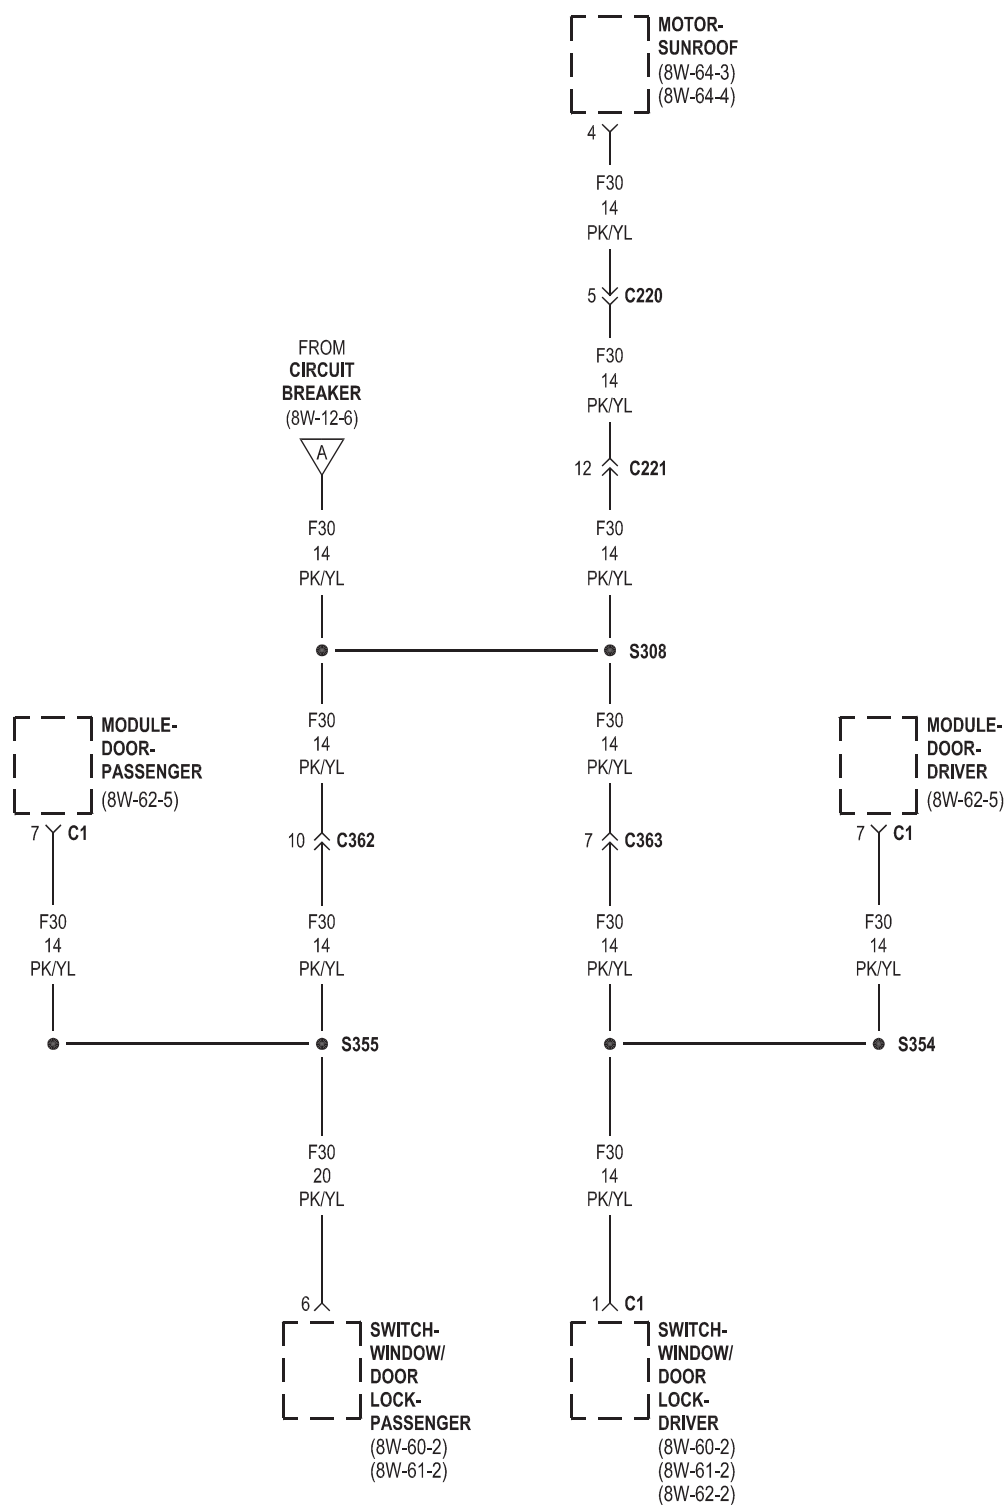


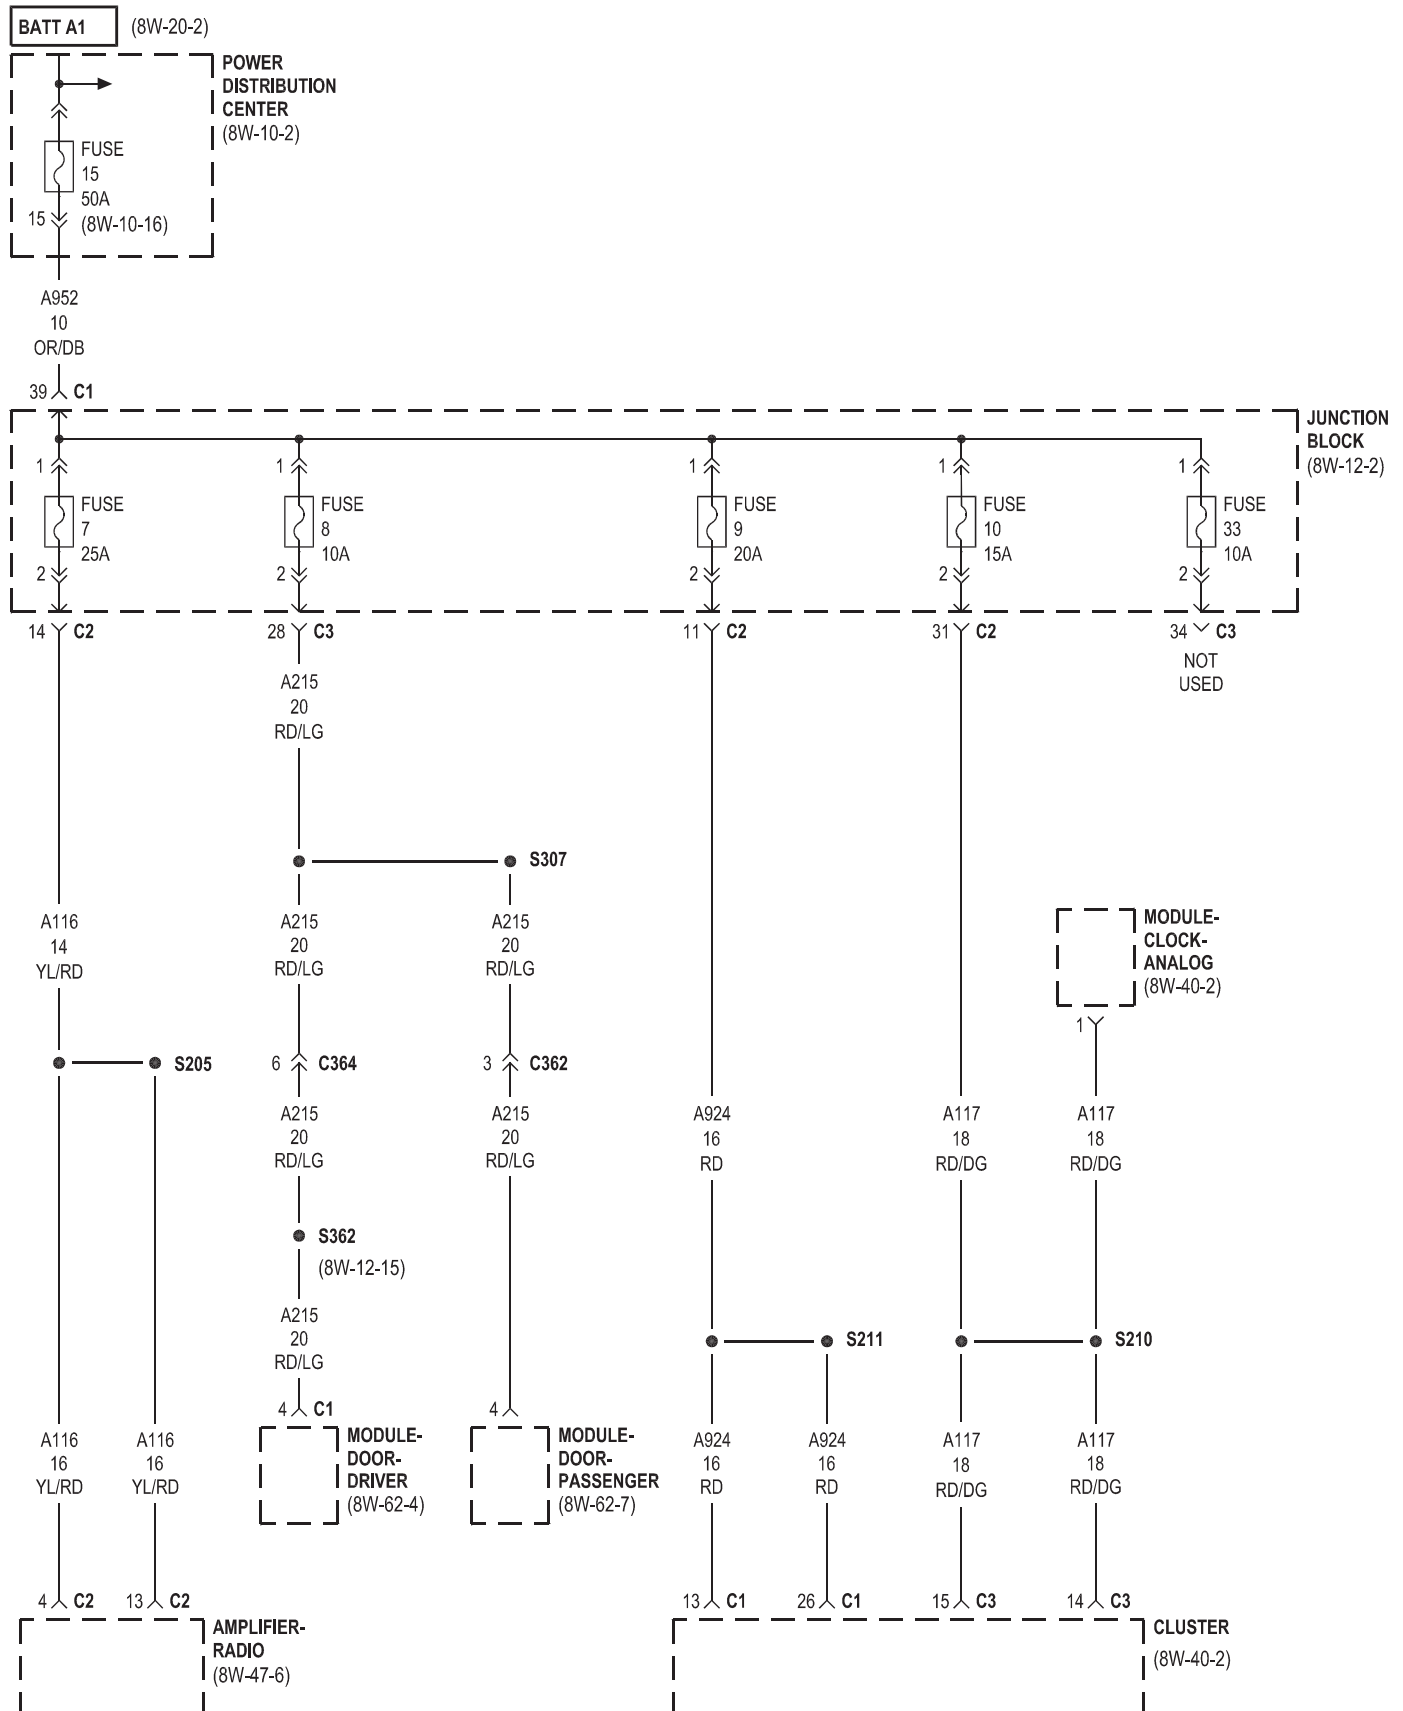





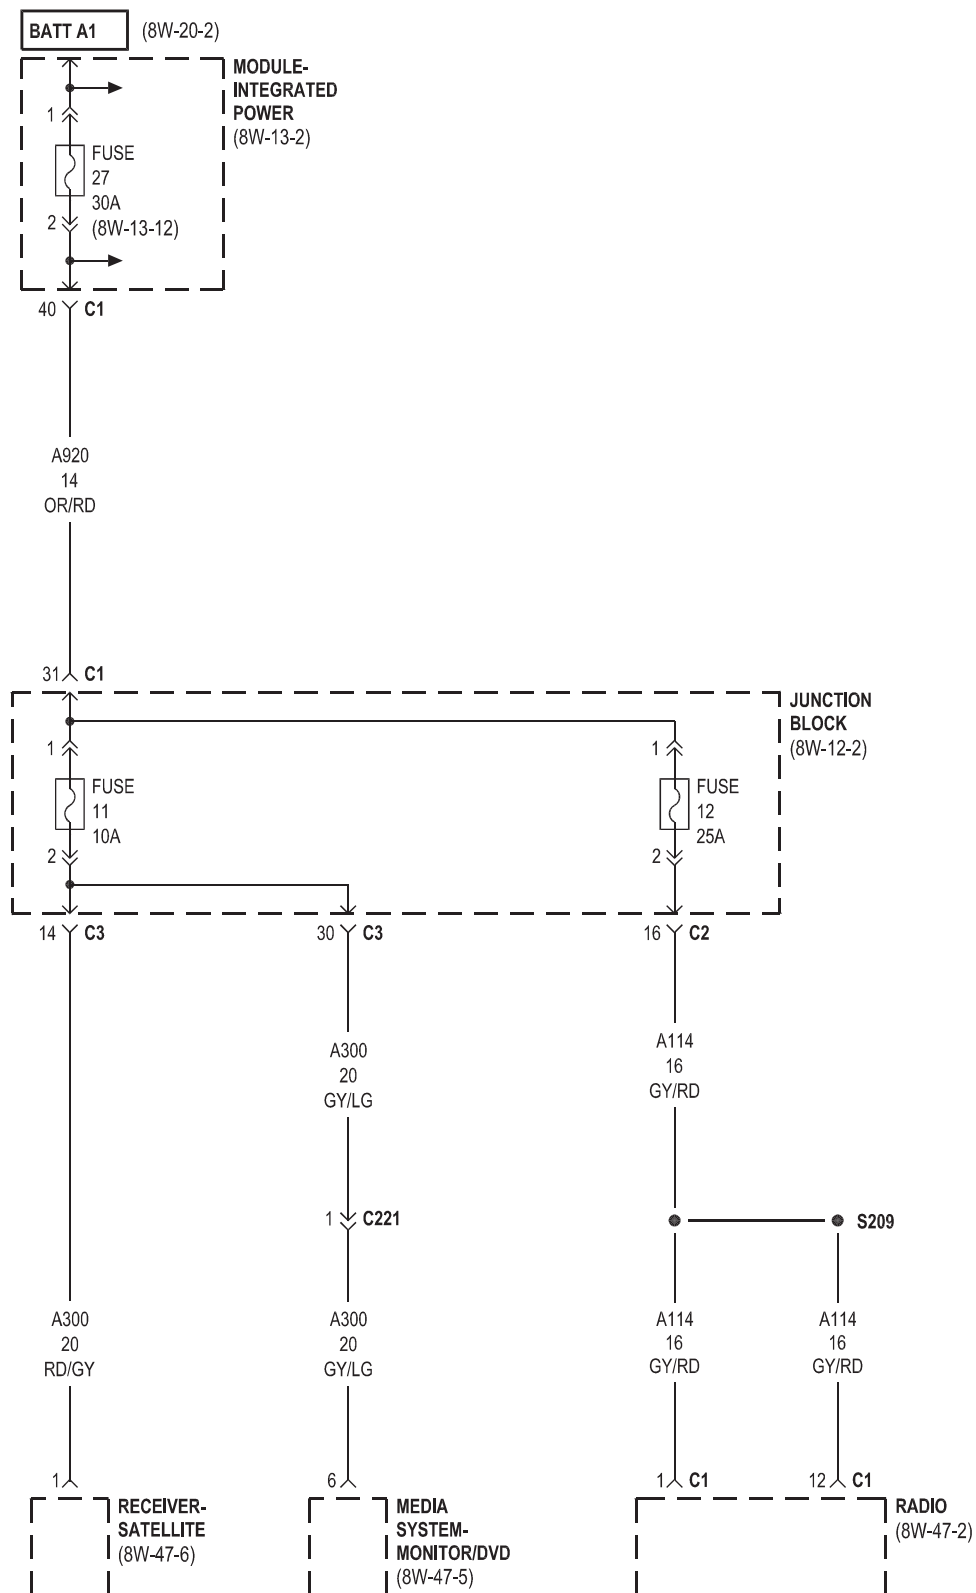


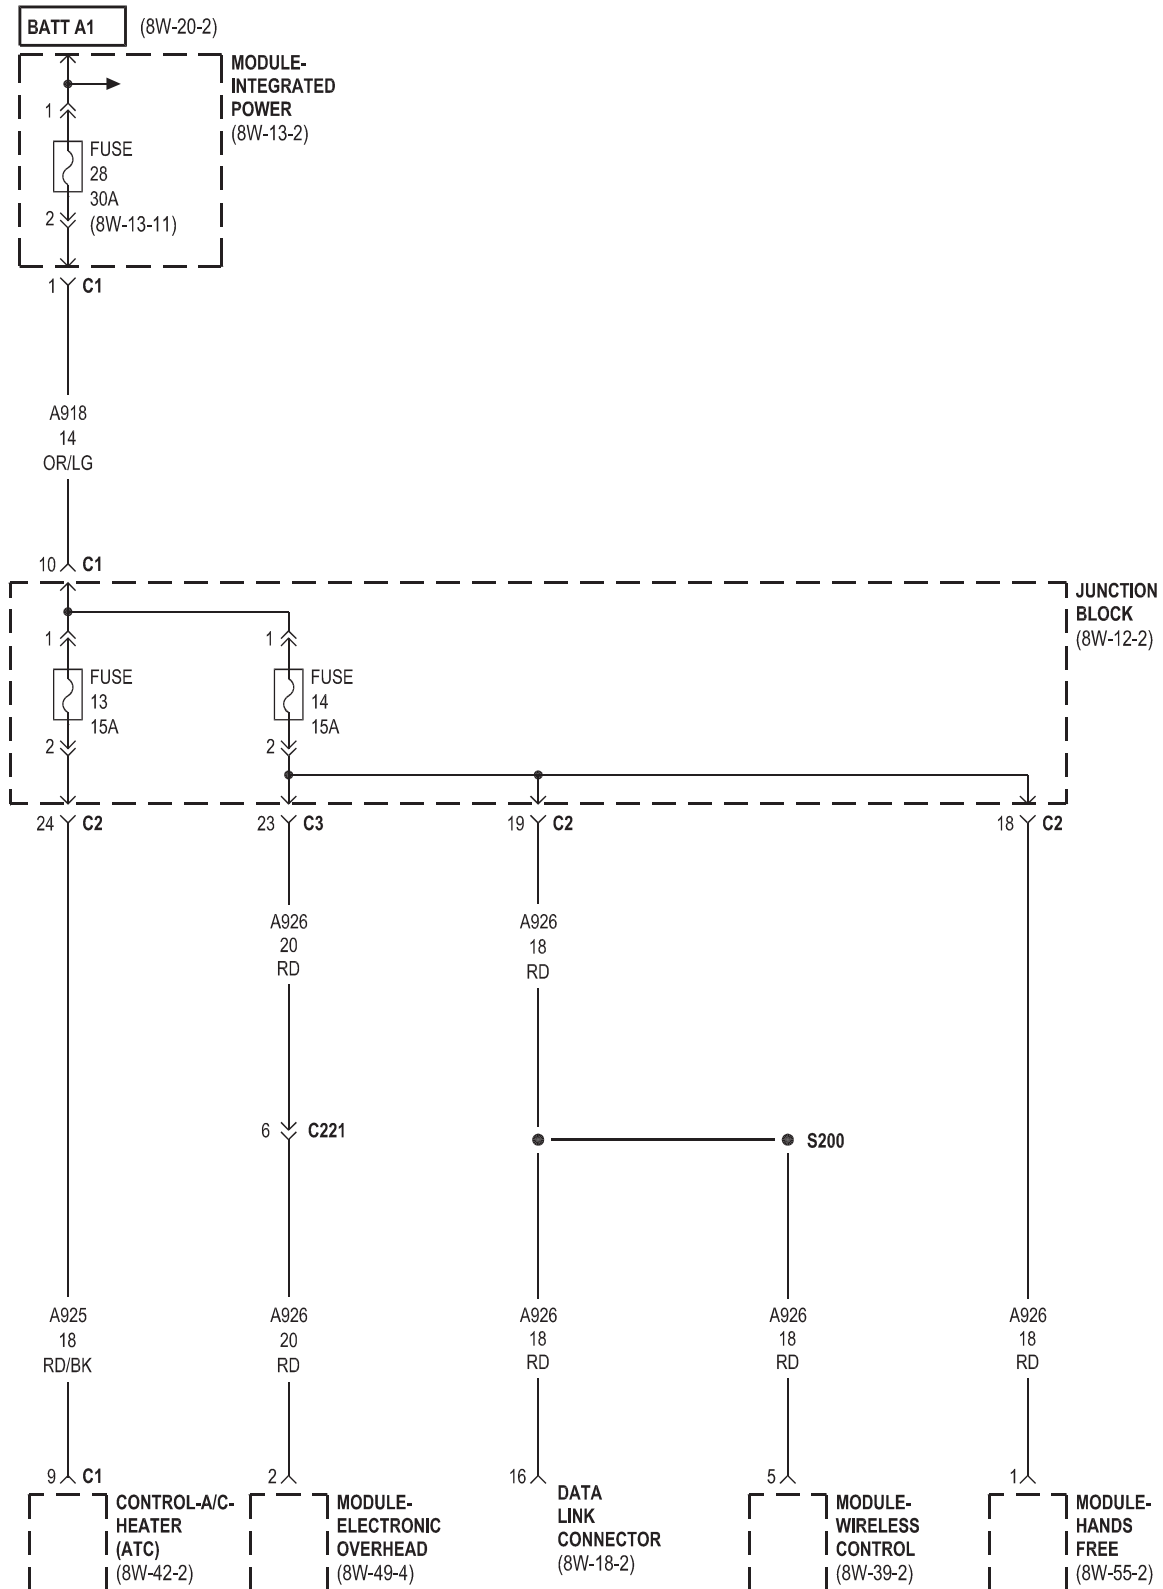

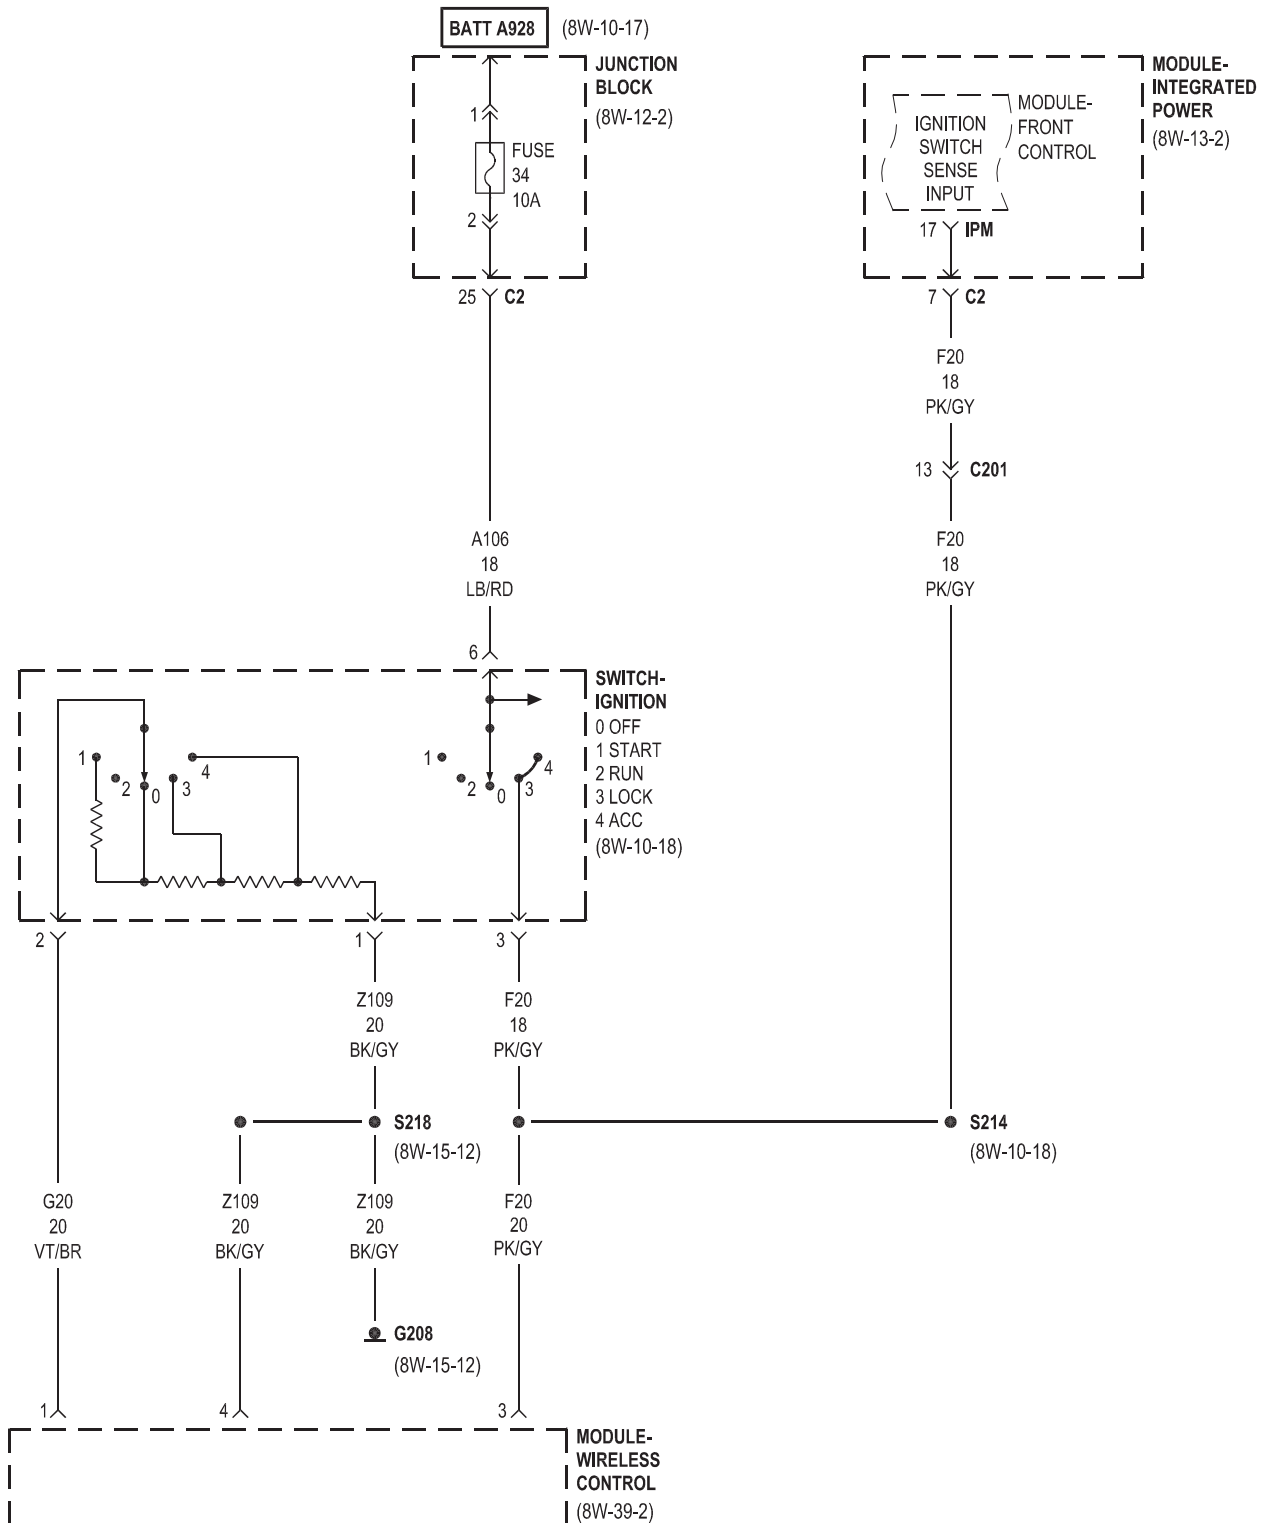


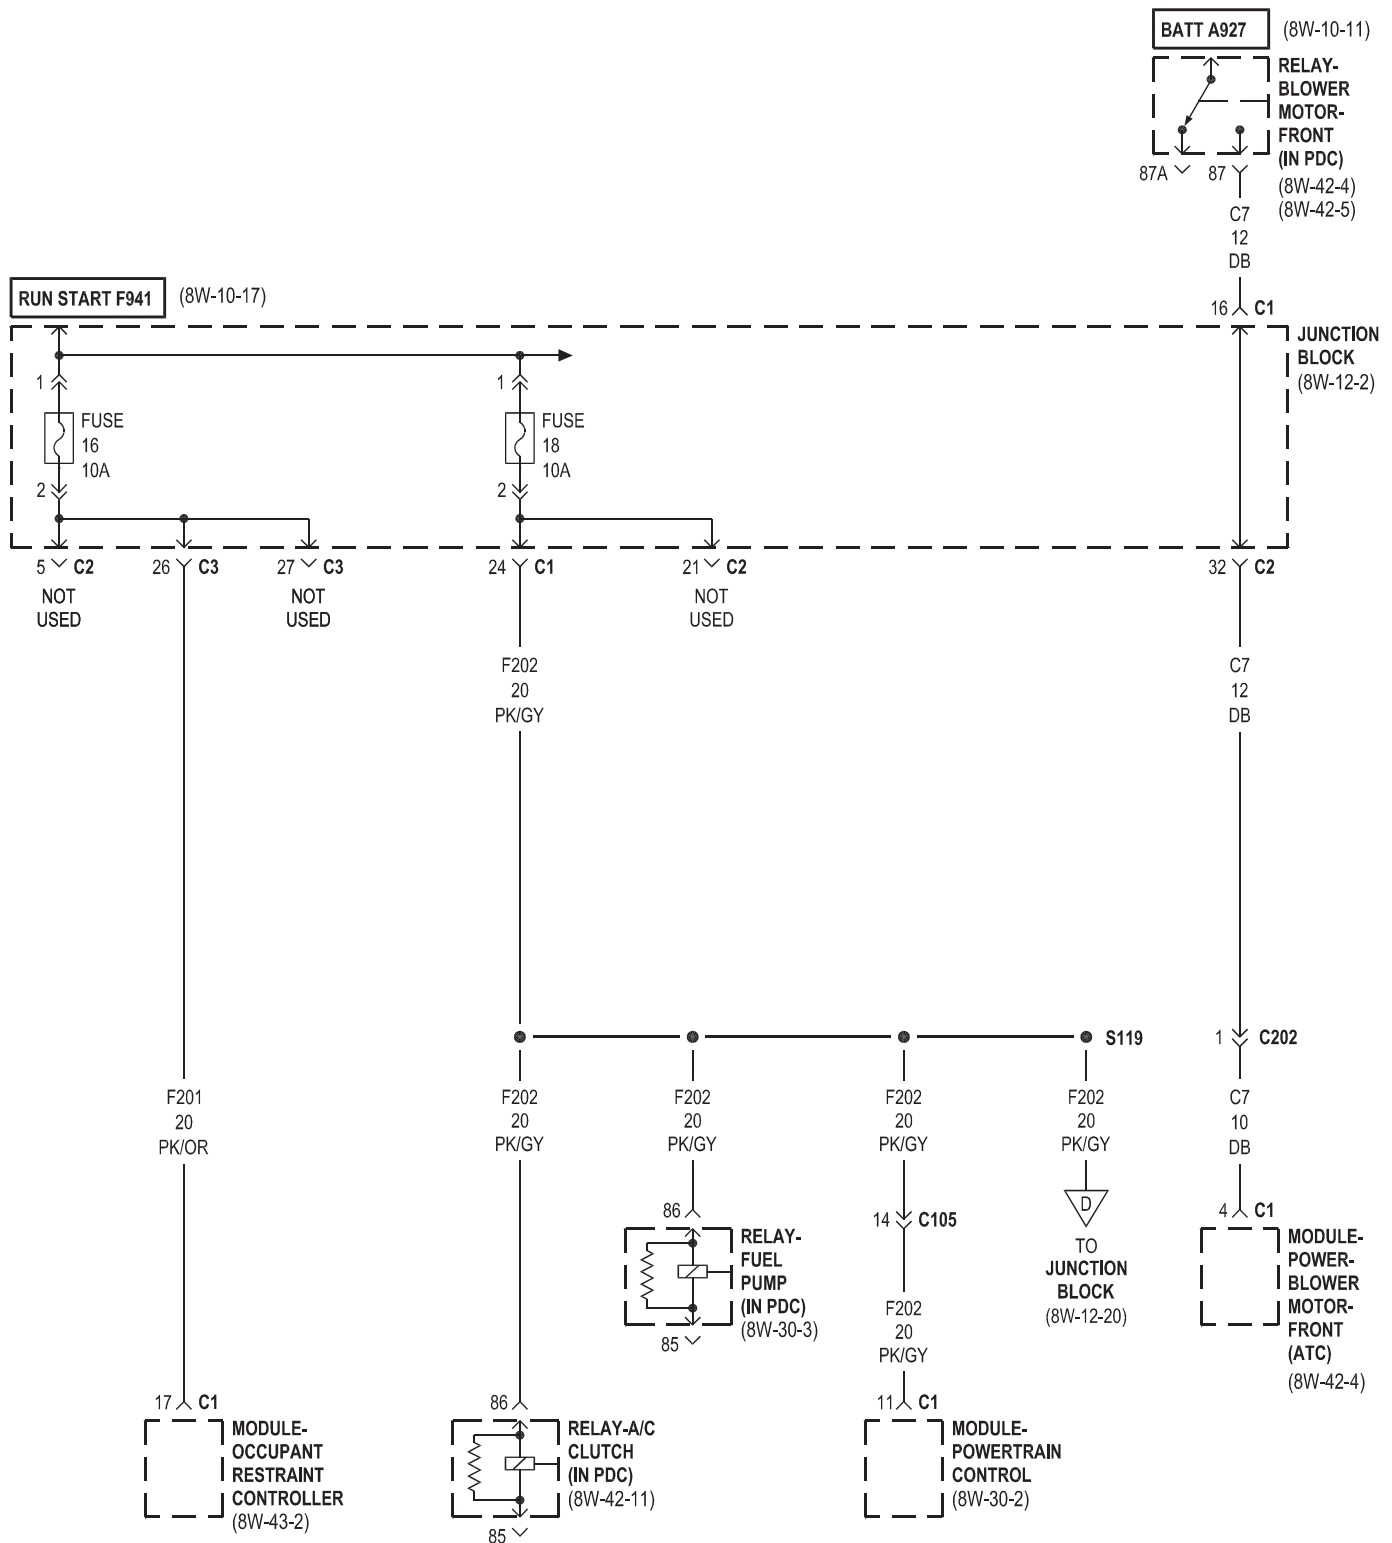

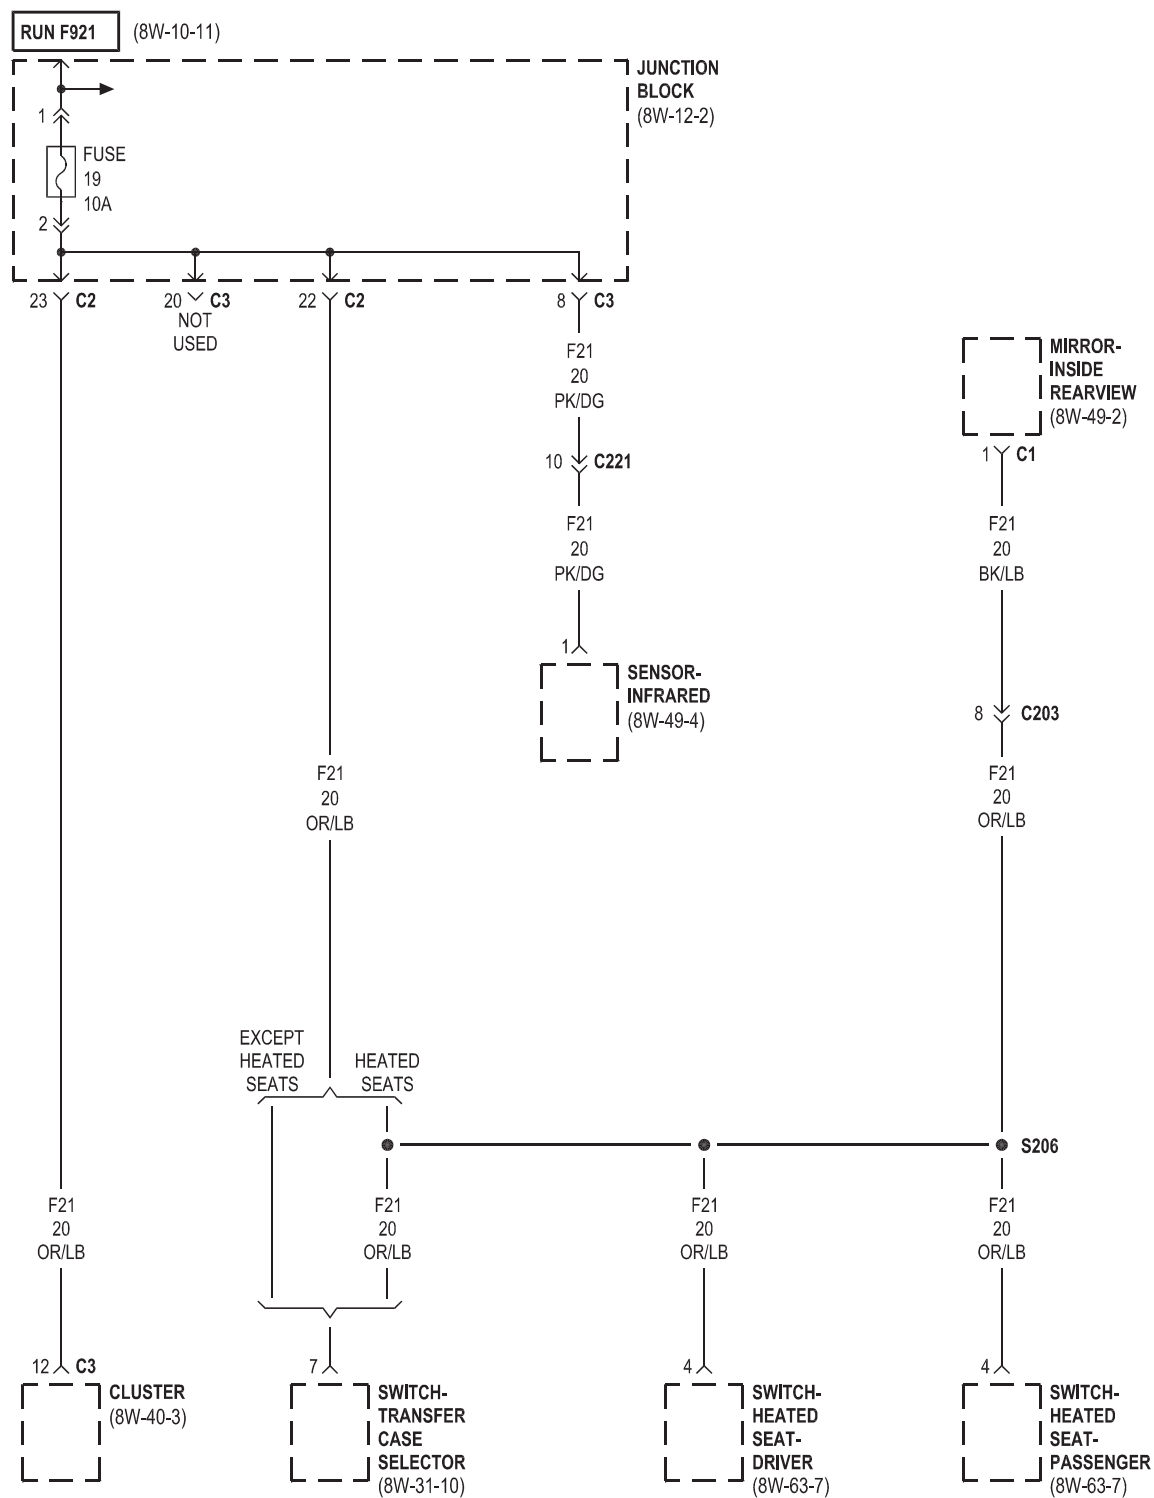


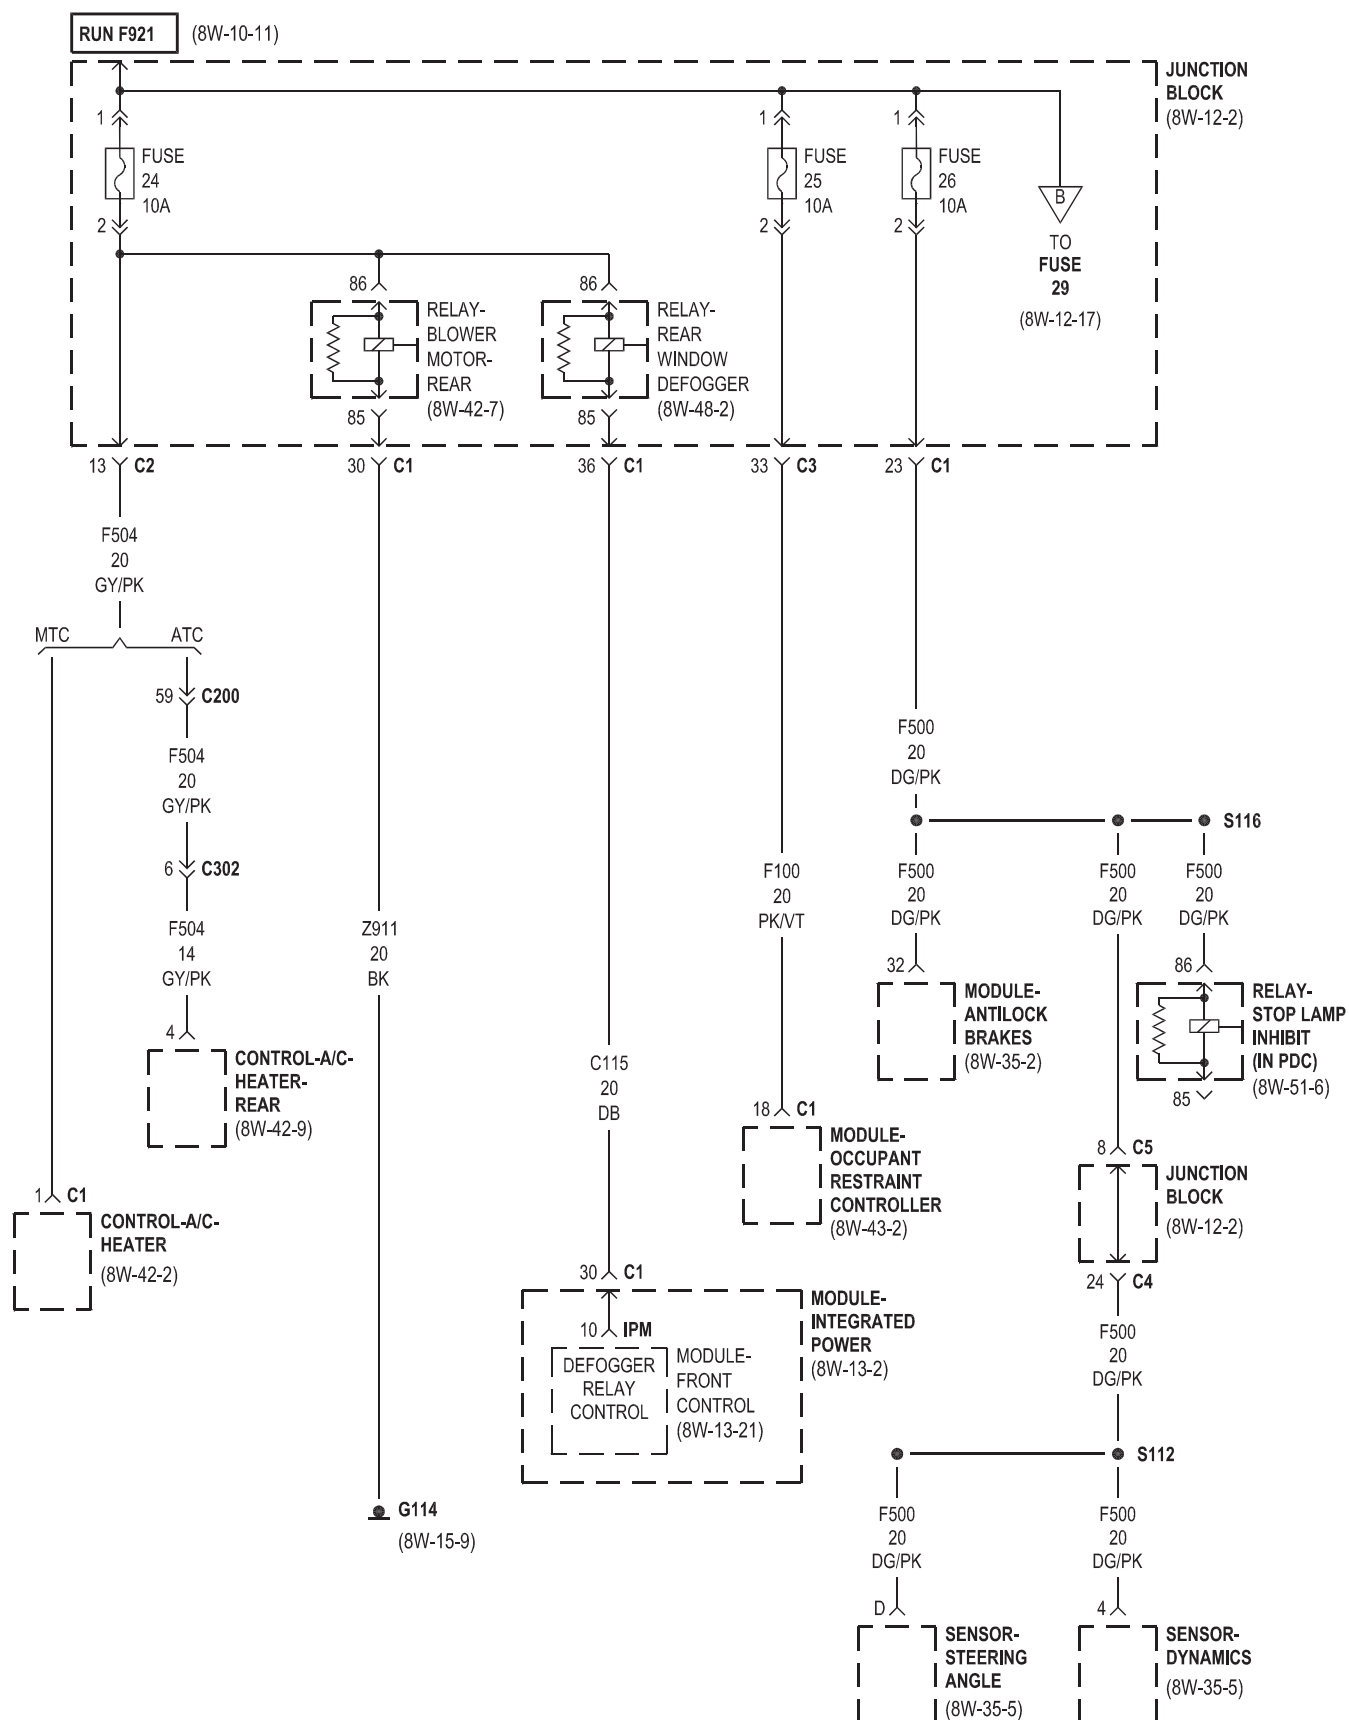





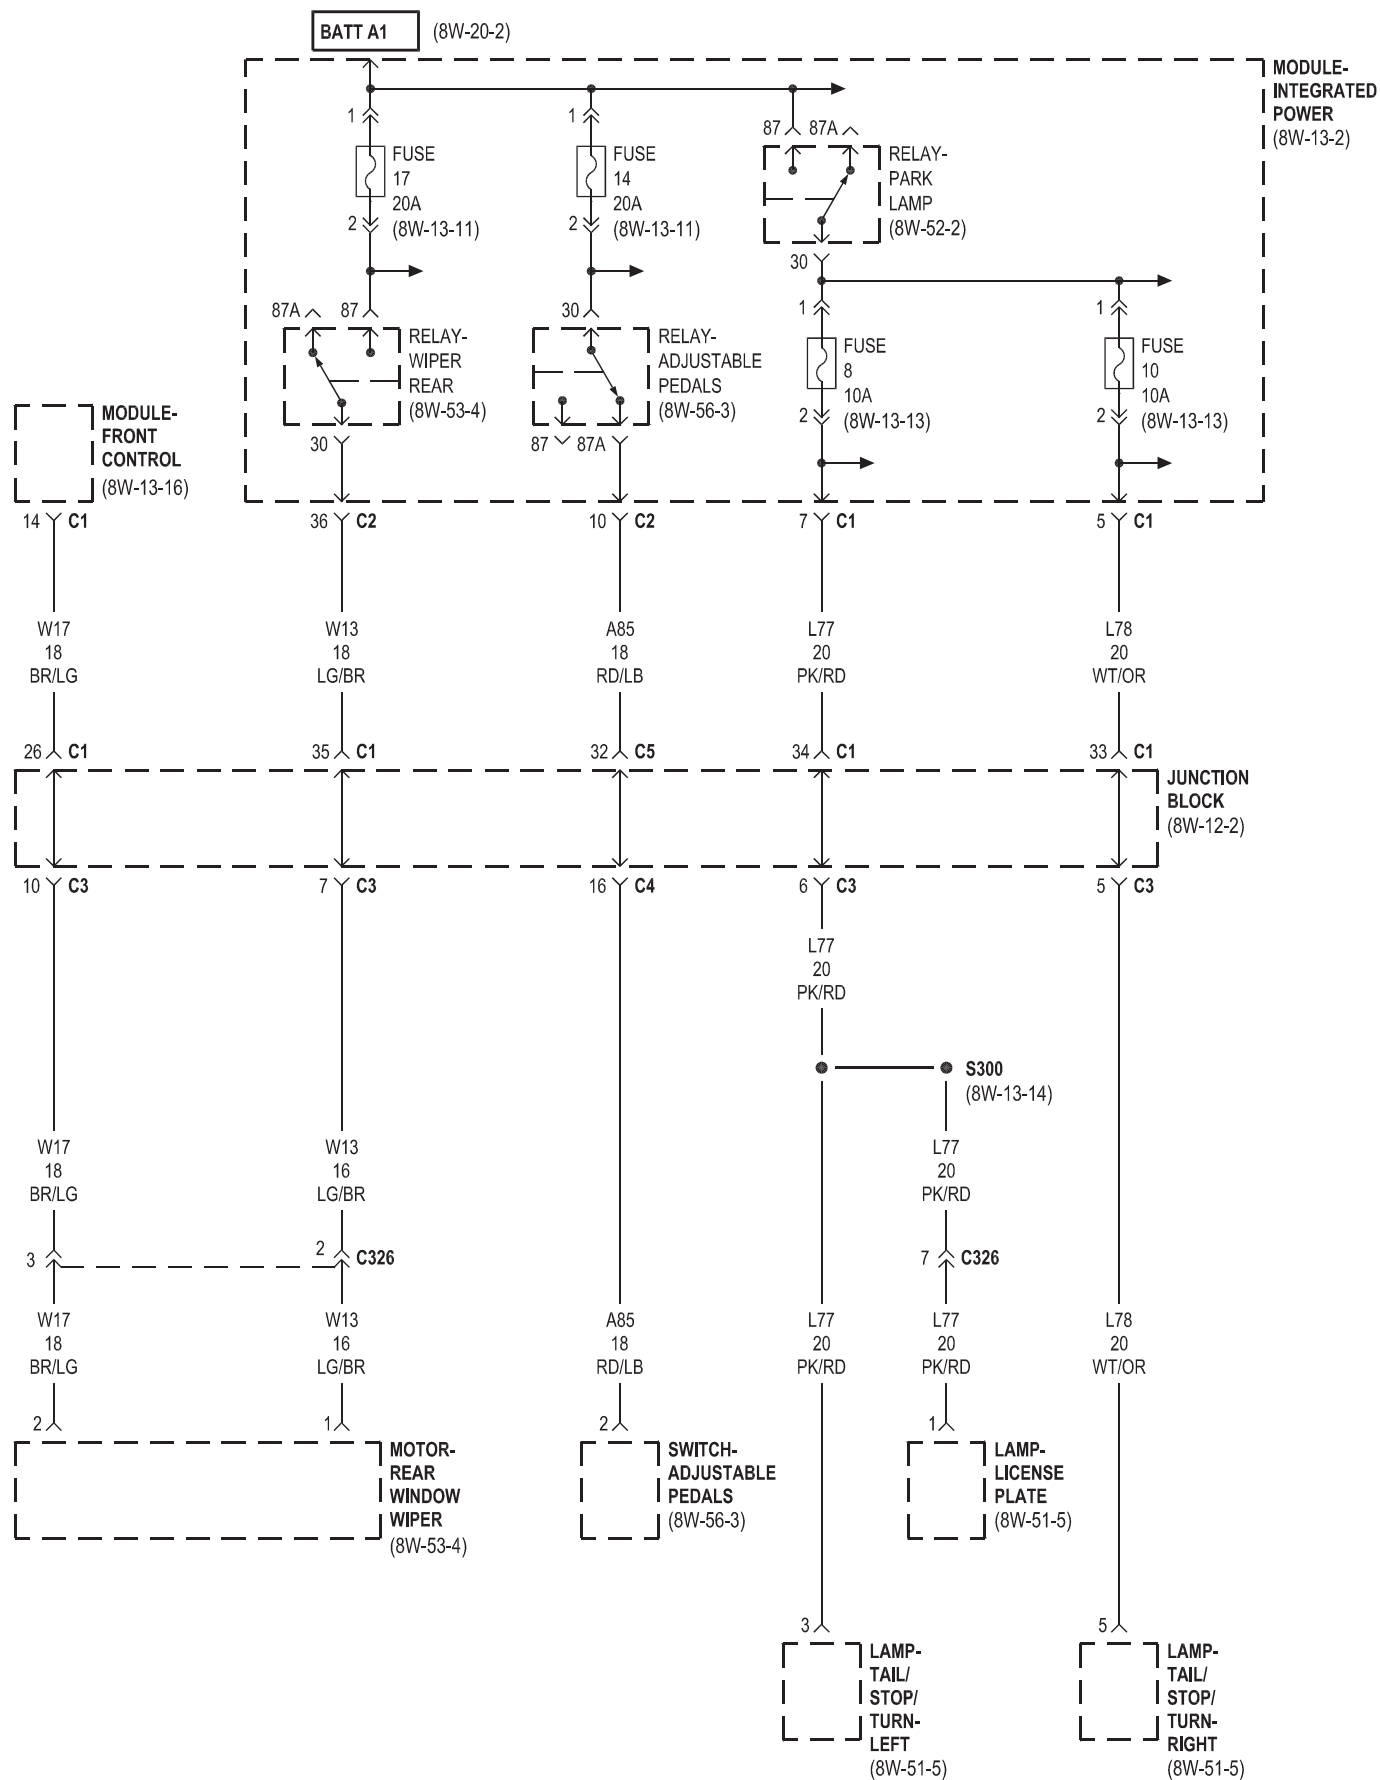




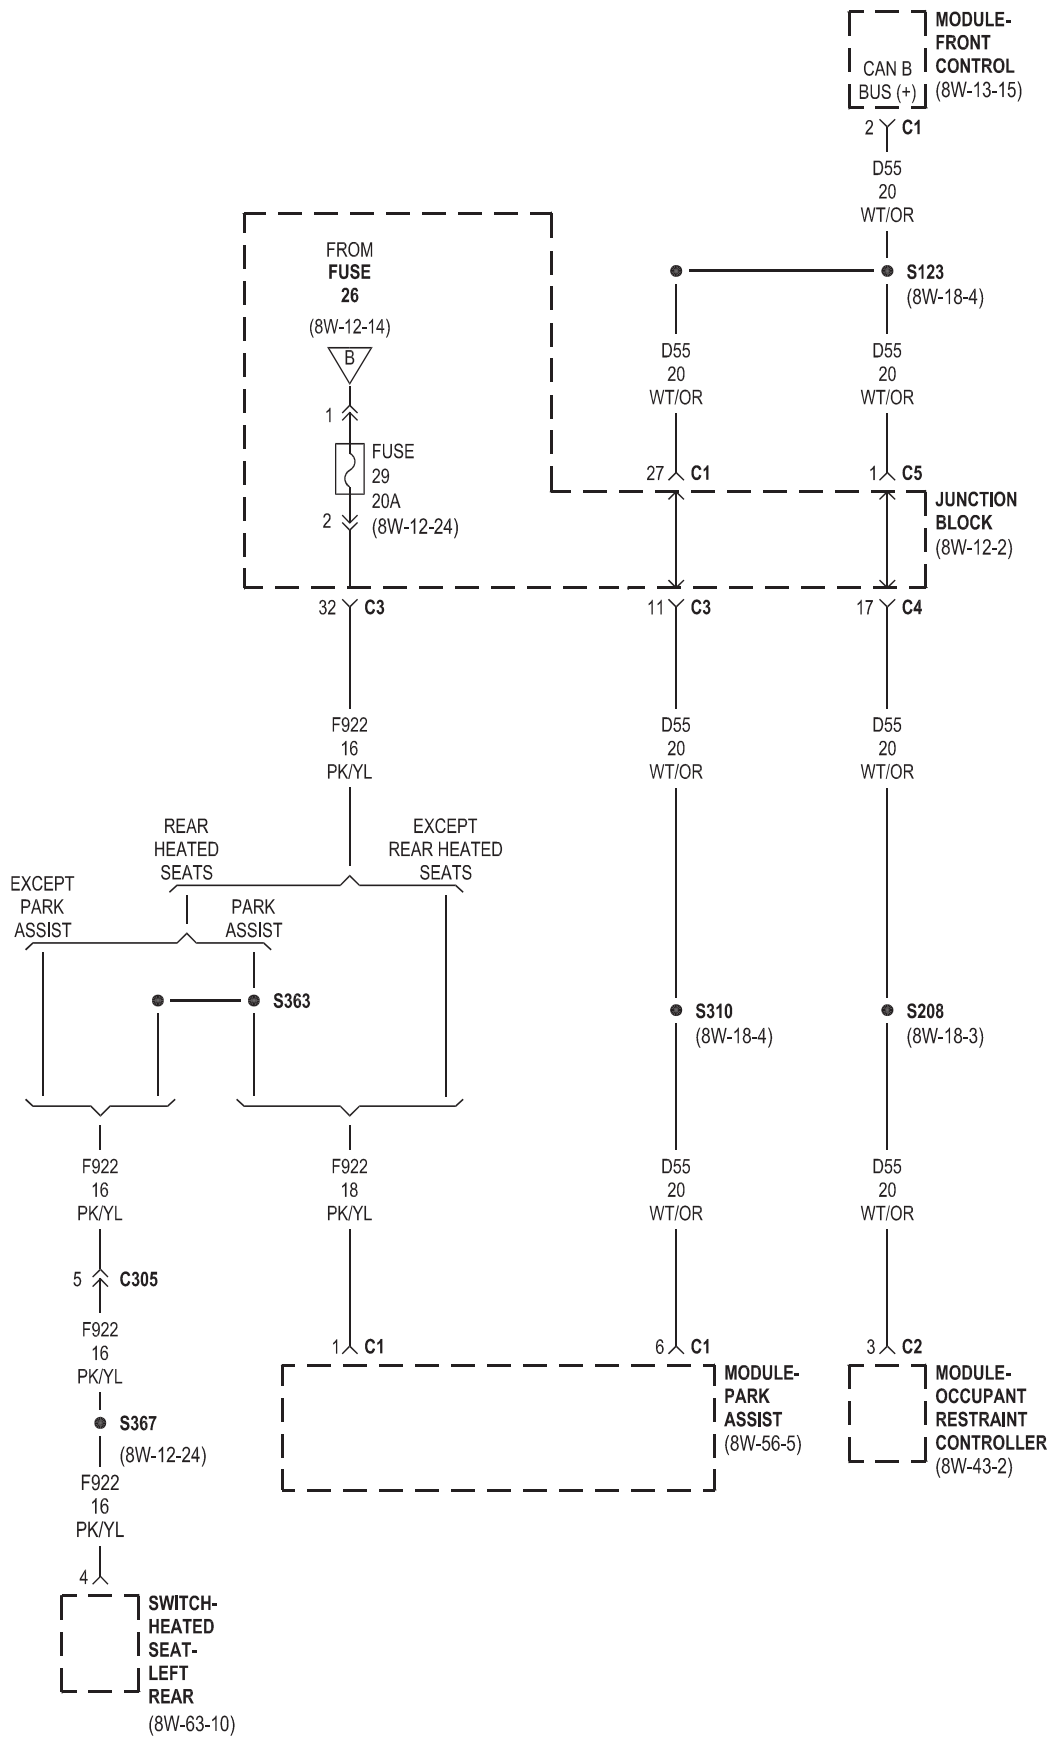

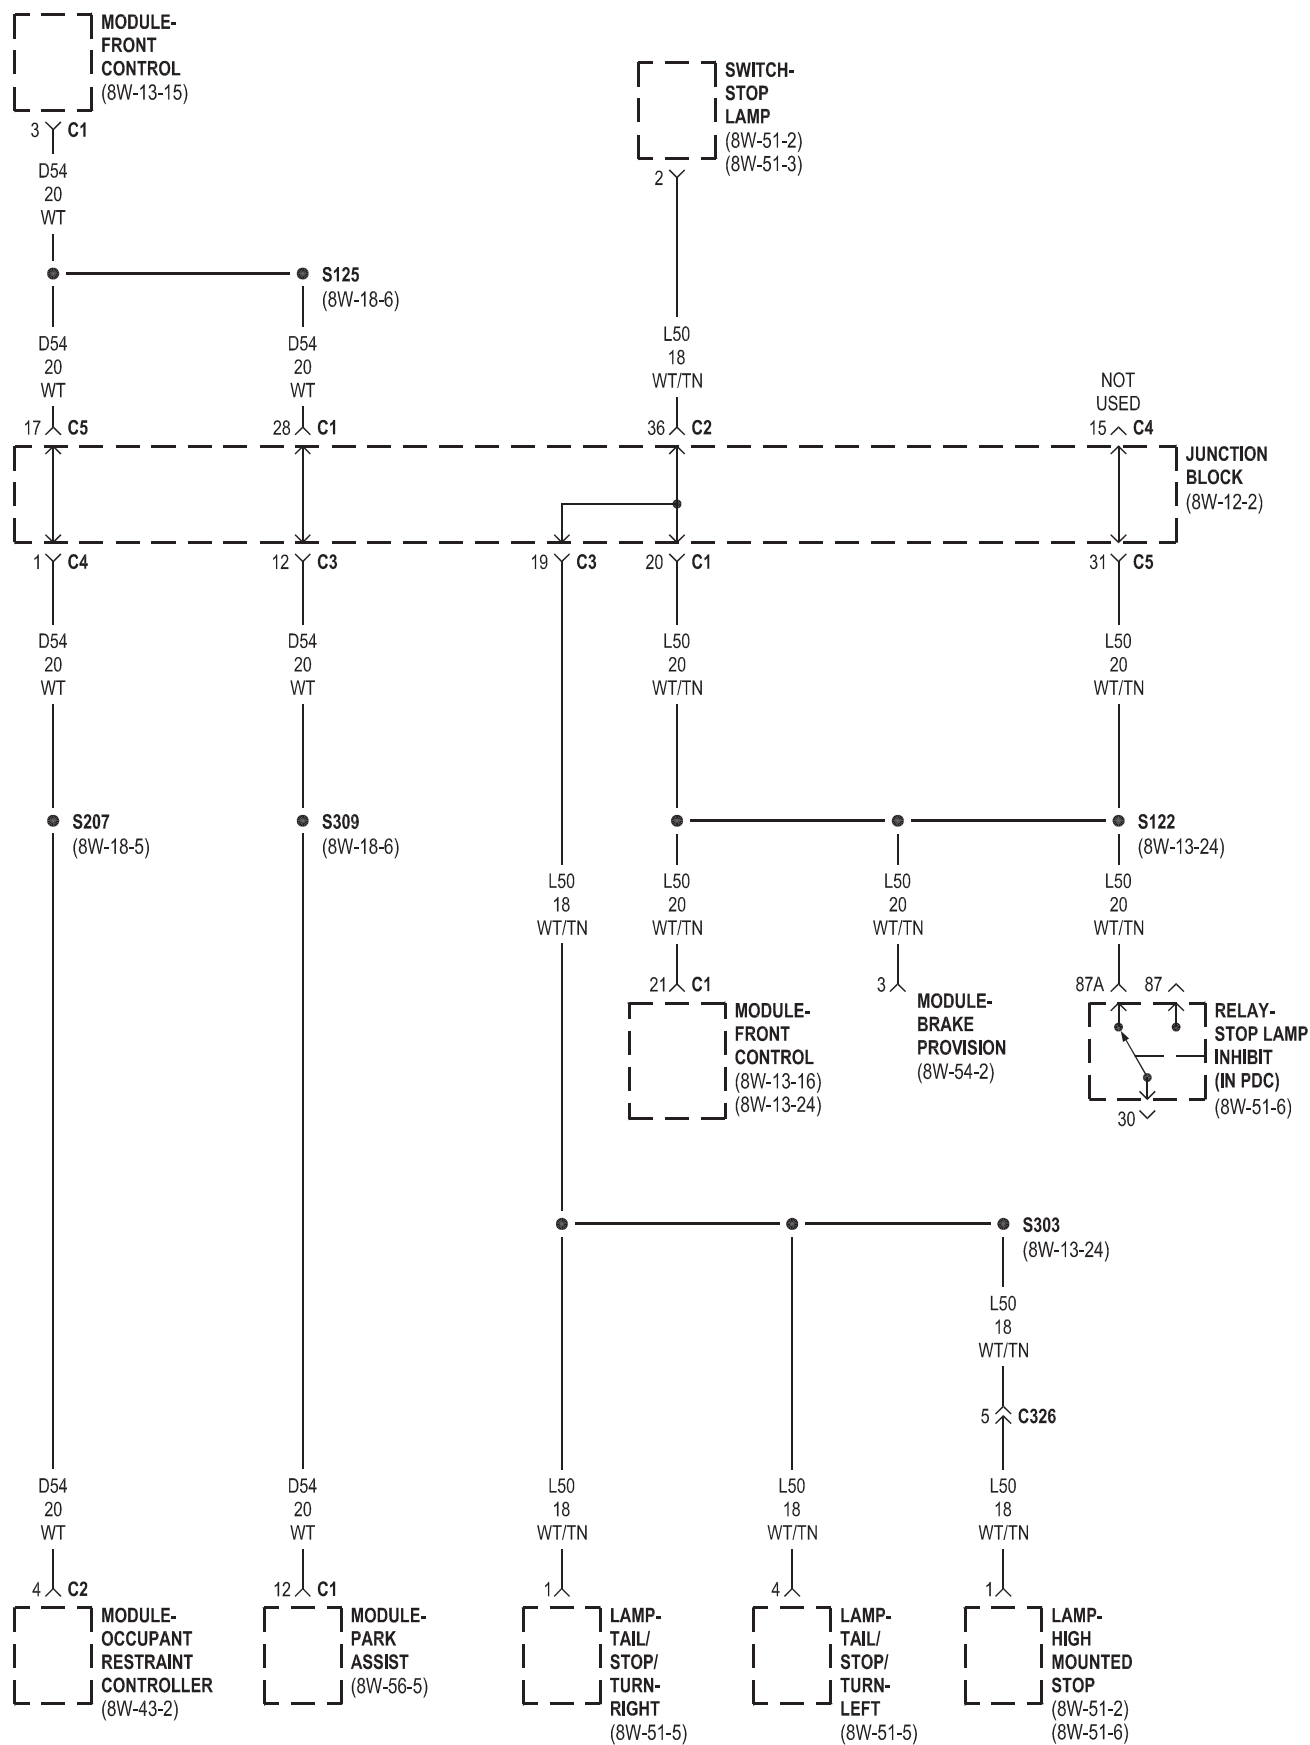

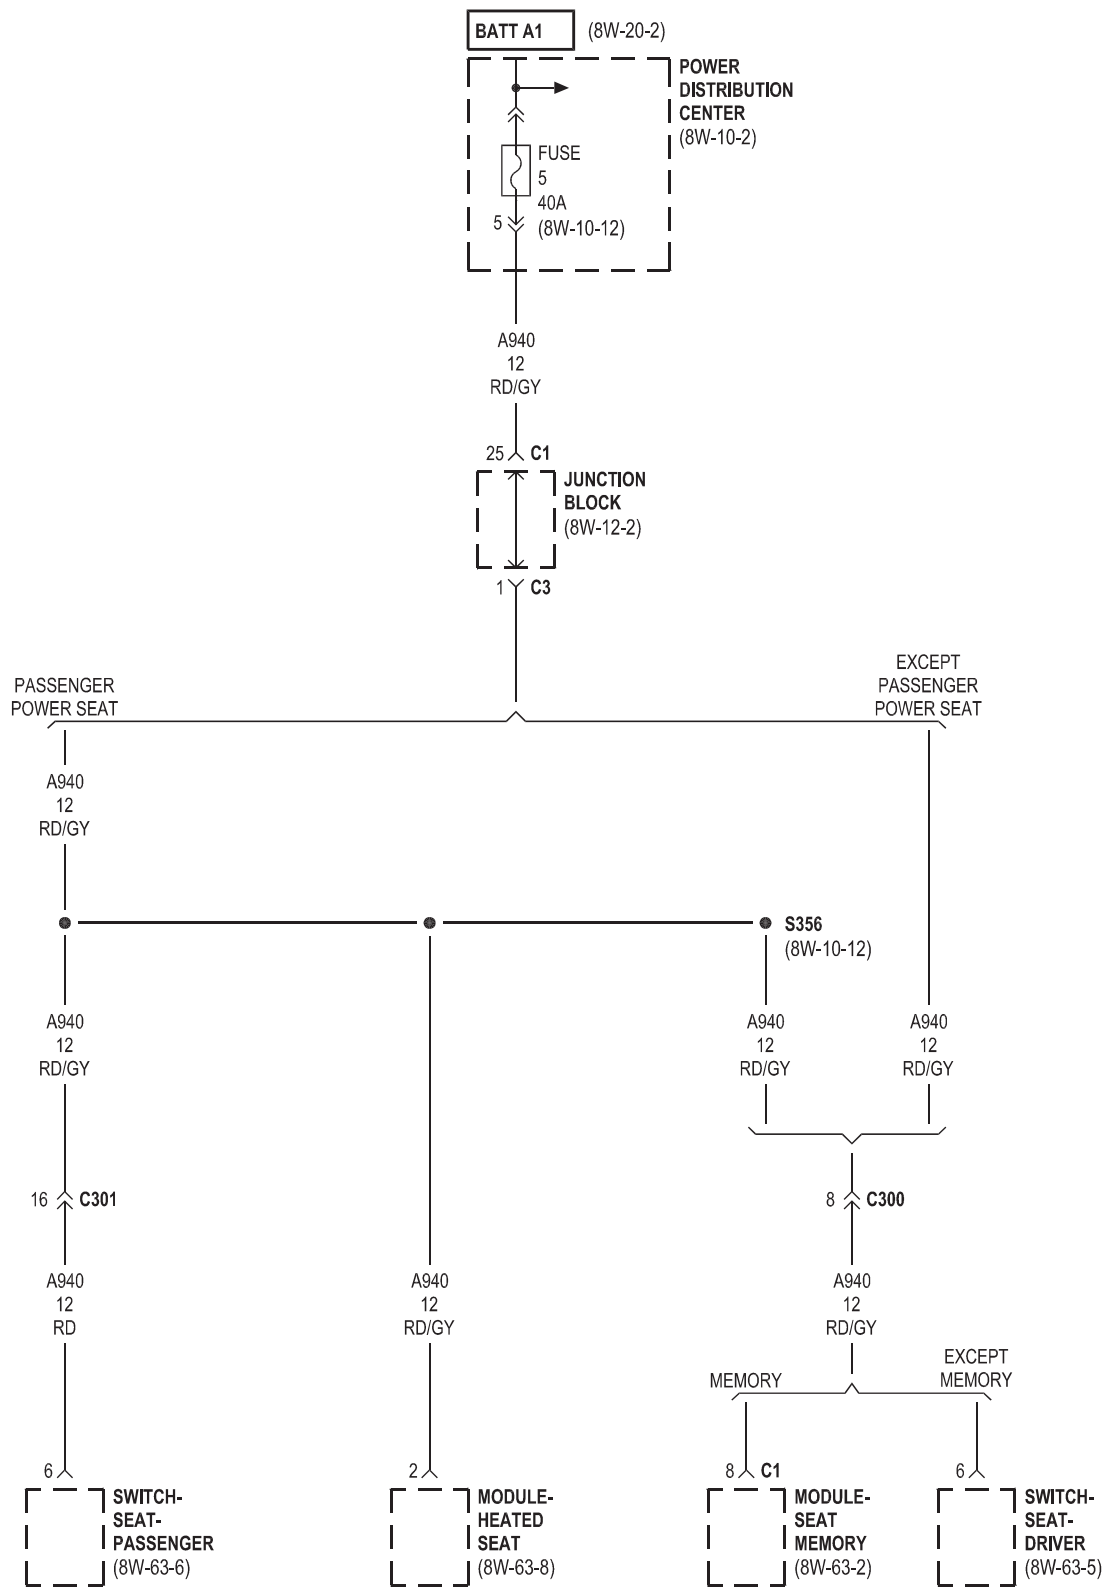

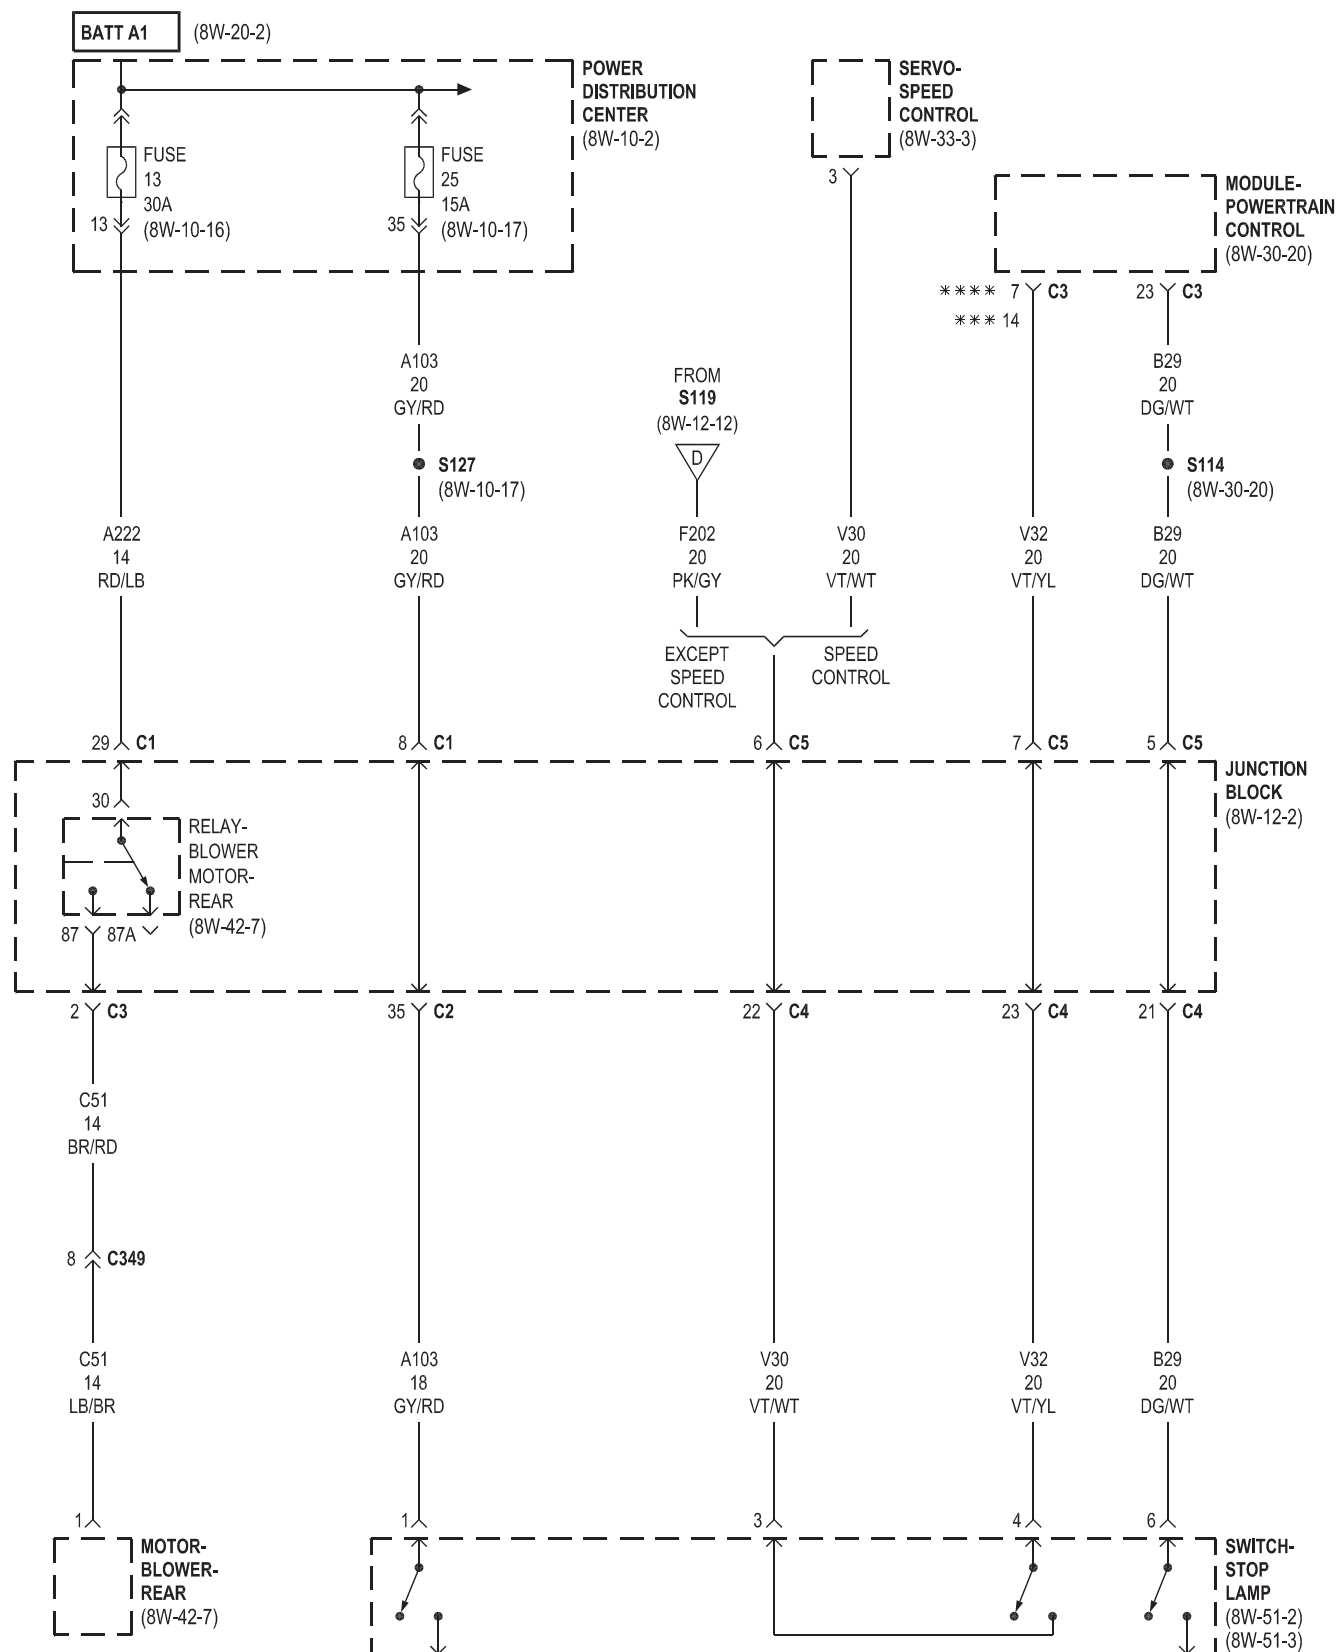

\*\*\* 5.7L

\*\*\* 3.7L/4.7L

