



8W - 42 AIR CONDITIONING / HEATER


Component	Page
A/C Compressor Clutch	8W-42-16, 19
A/C Compressor Clutch Relay	8W-42-16, 19
A/C Pressure Sensor	8W-42-16, 19
A/C-Heater Control	8W-42-2, 3, 4, 5, 6, 7, 9
ATC Remote Sensor	8W-42-13
Auto Temp Control	8W-42-10, 11, 12, 13, 14, 15
Battery	8W-42-17
Blower Motor Resistor	8W-42-2, 3
Body Control Module	8W-42-6, 9, 11, 15
Driver Blend Door Actuator	8W-42-7, 12
ECM/PCM Relay	8W-42-17
Engine Control Module	8W-42-16, 17
Evaporator Temperature Sensor	8W-42-7, 12
Front Blower Module	8W-42-13
Front Blower Motor	8W-42-2, 3, 13
Front Blower Motor Relay	8W-42-2, 3, 13
Front Control Module	8W-42-2, 3, 8, 13, 14
Fuse 10	8W-42-2, 3, 13
Fuse 12	8W-42-8, 14
Fuse 14	8W-42-10
Fuse 16	8W-42-17
Fuse 18	8W-42-16, 19
Fuse 27	8W-42-18, 20
Fusible Link	8W-42-17
G101	8W-42-19
G102	8W-42-18, 20


Component	Page
G103	8W-42-16
G200	8W-42-2, 3, 4, 5, 6, 8, 10, 11, 13
G300	8W-42-9, 15
G302	8W-42-14
Integrated Power Module	8W-42-2, 3, 8, 10, 13, 14, 16, 17, 18, 19, 20
Mode Door Actuator	8W-42-7, 12
Passenger Blend Door Actuator	8W-42-7, 12
Powertrain Control Module	8W-42-19, 20
Radiator Fan No. 1	8W-42-17, 18, 20
Radiator Fan No. 2	8W-42-18, 20
Radiator Fan Relay	8W-42-20
Radiator Fan Relay No. 1	8W-42-17, 18
Radiator Fan Relay No. 2	8W-42-18
Radiator Fan Relay No. 3	8W-42-18
Rear A/C-Heater Unit	8W-42-8, 9
Rear Auto Temp Control Switch	8W-42-15
Rear Blower Front Control Switch	8W-42-8
Rear Blower Motor	8W-42-14
Rear Blower Motor Power Module	8W-42-14
Rear Blower Motor Relay	8W-42-8, 14
Rear Blower Rear Control Switch	8W-42-8, 9
Rear Mode Motor	8W-42-14
Rear Temperature Motor	8W-42-14
Recirculation Door Actuator	8W-42-7, 12

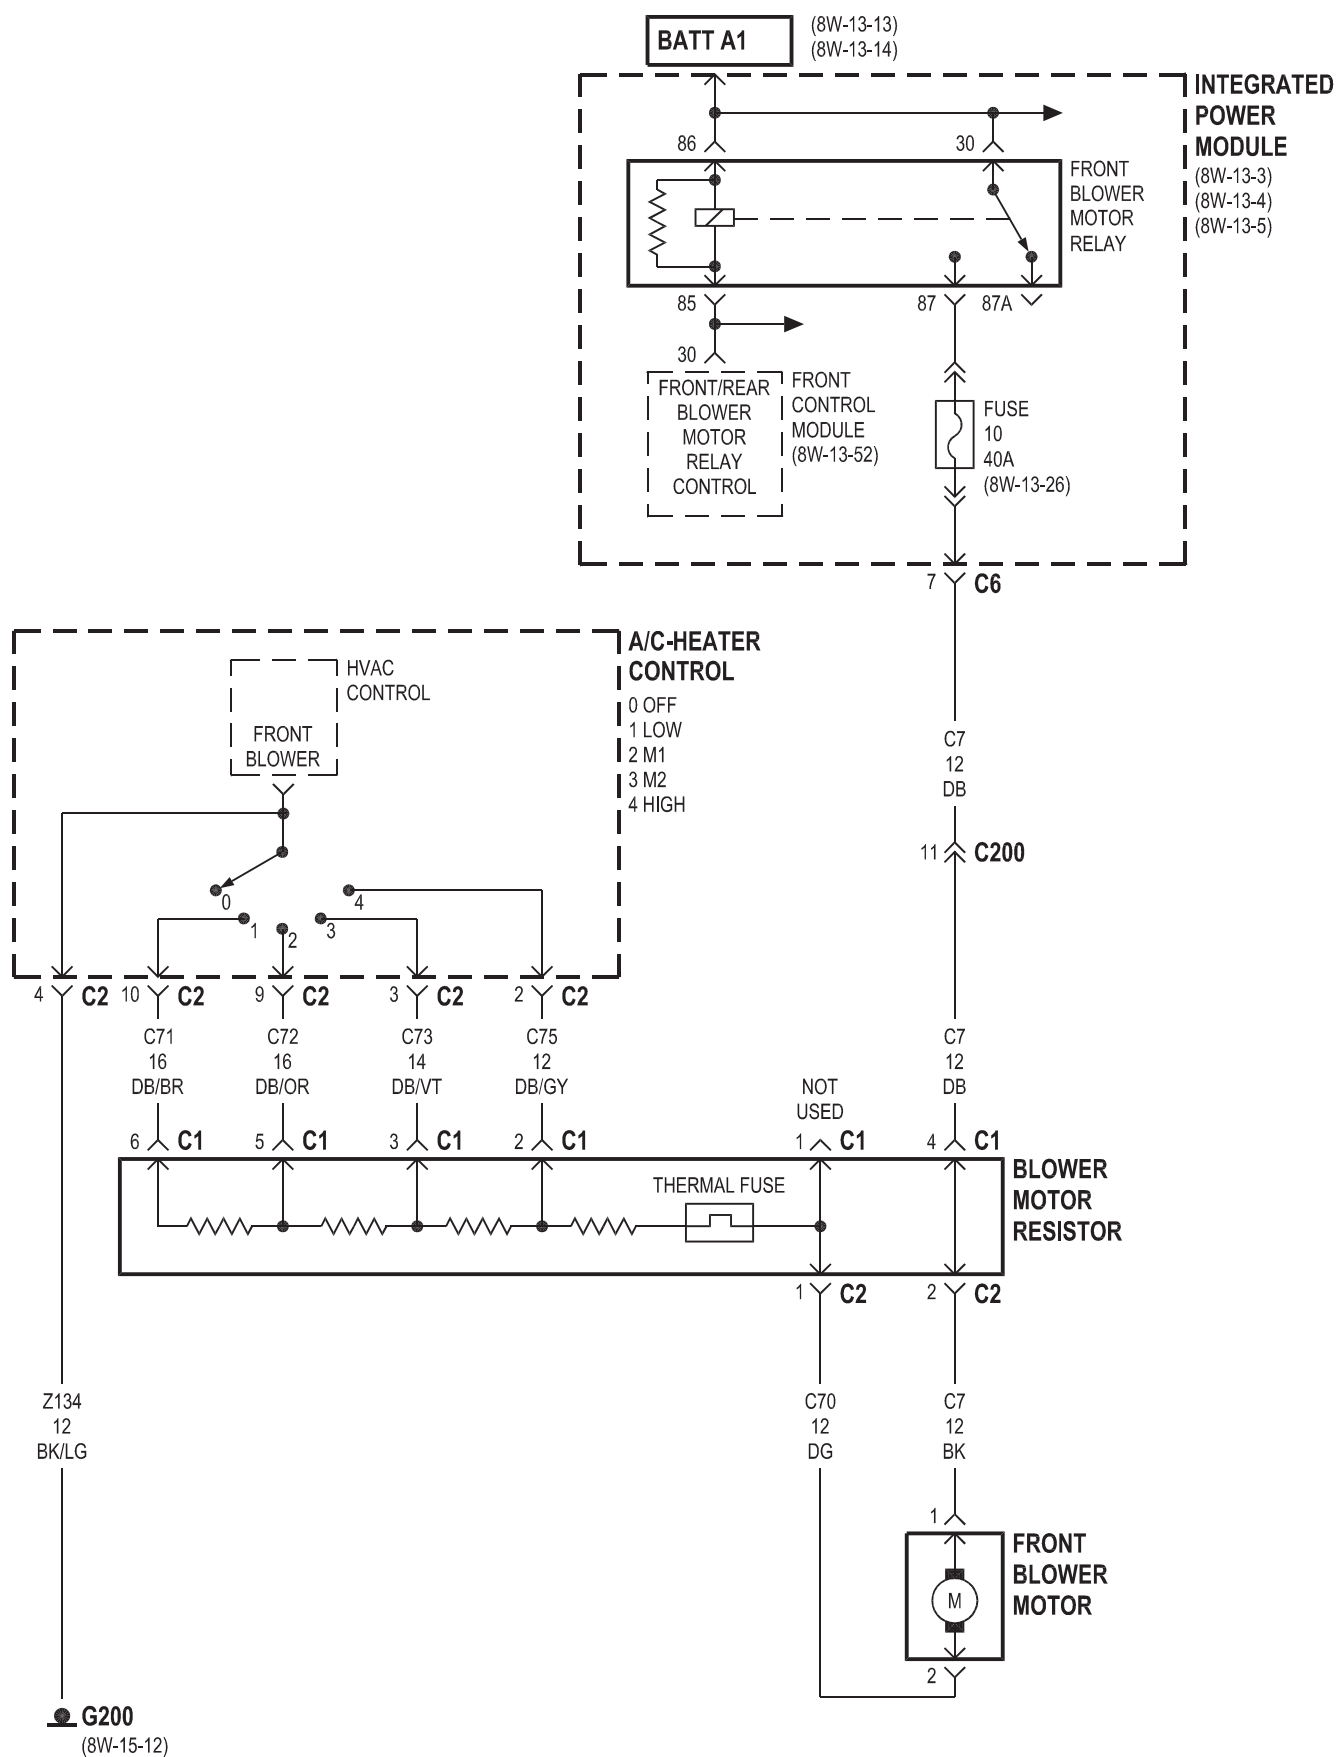

MTC EXPORT

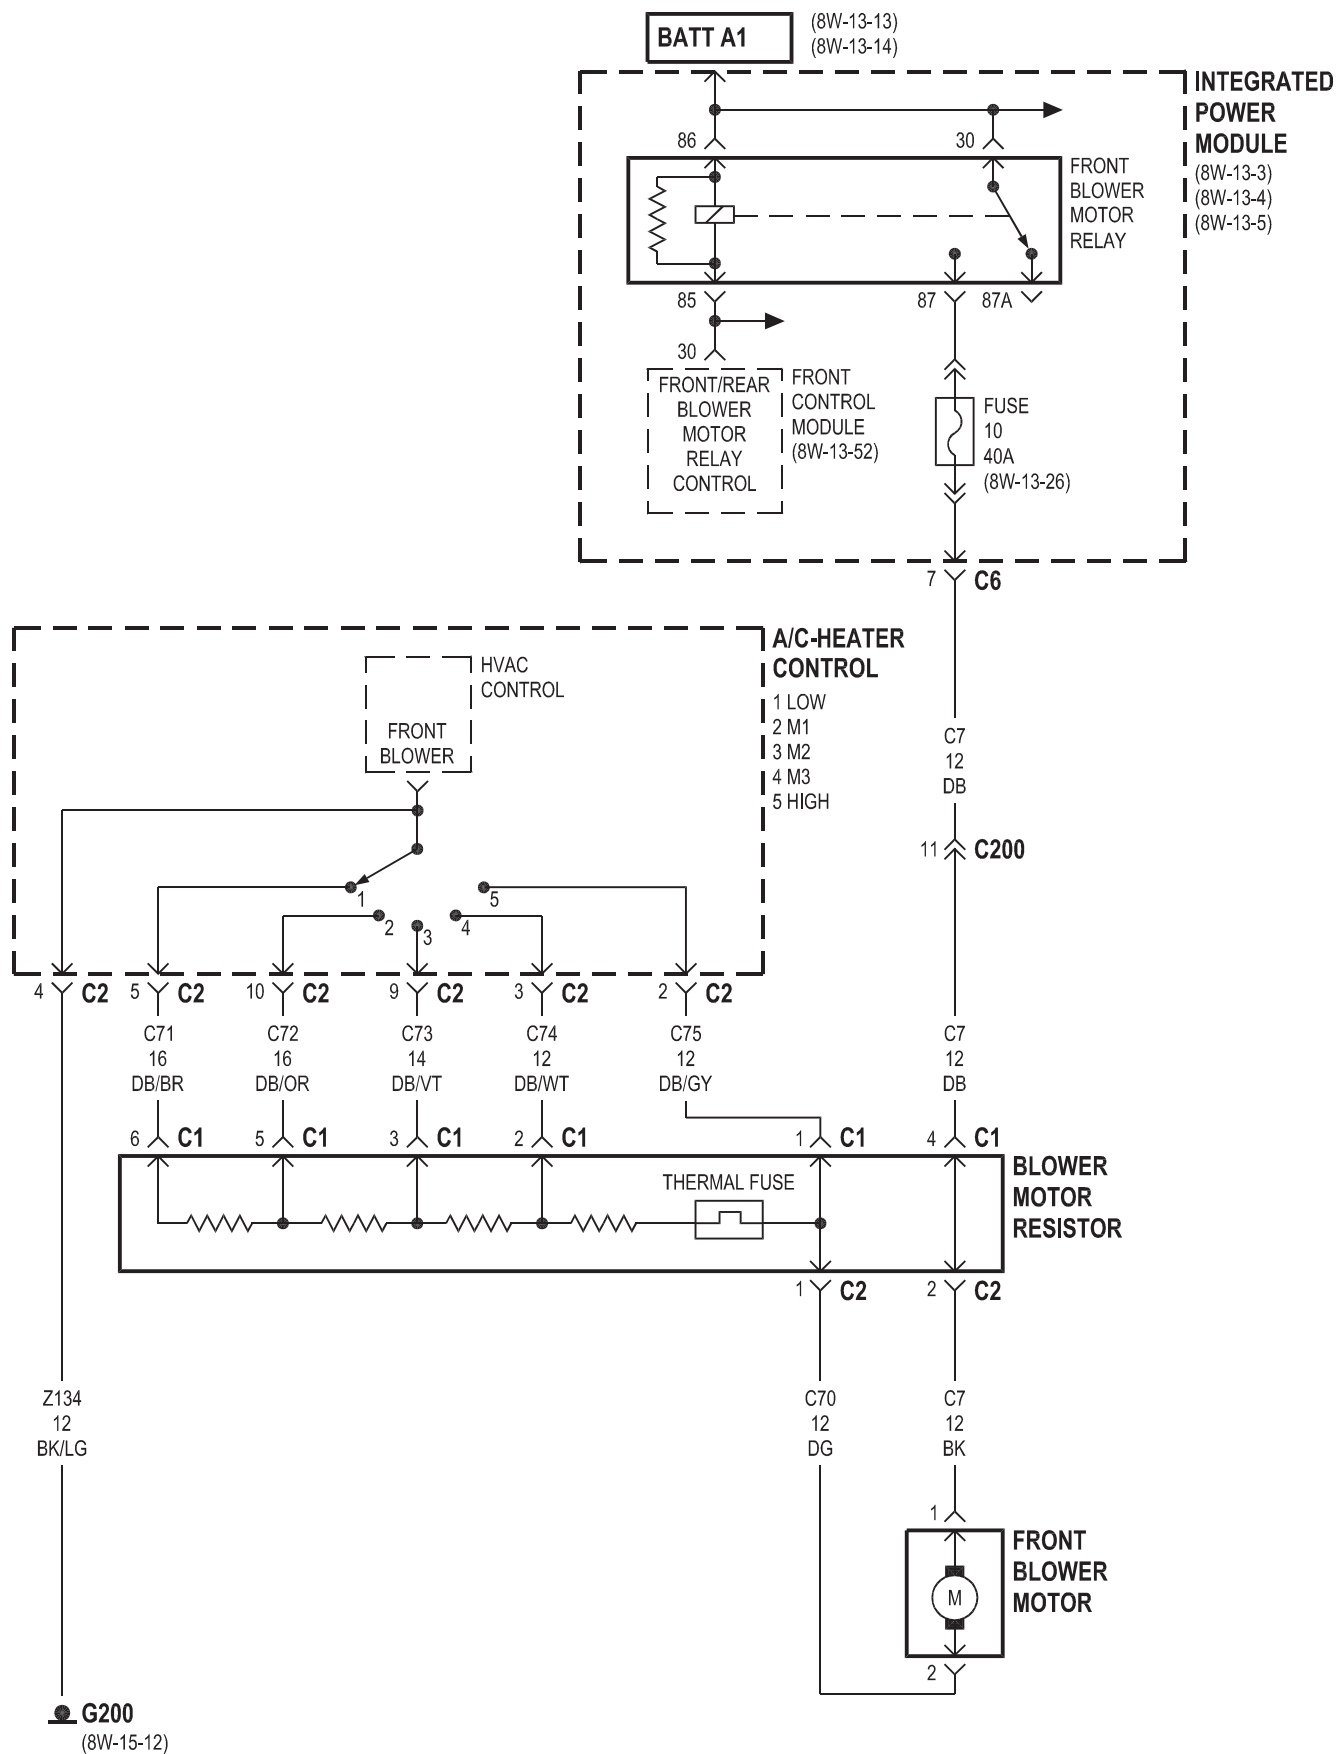


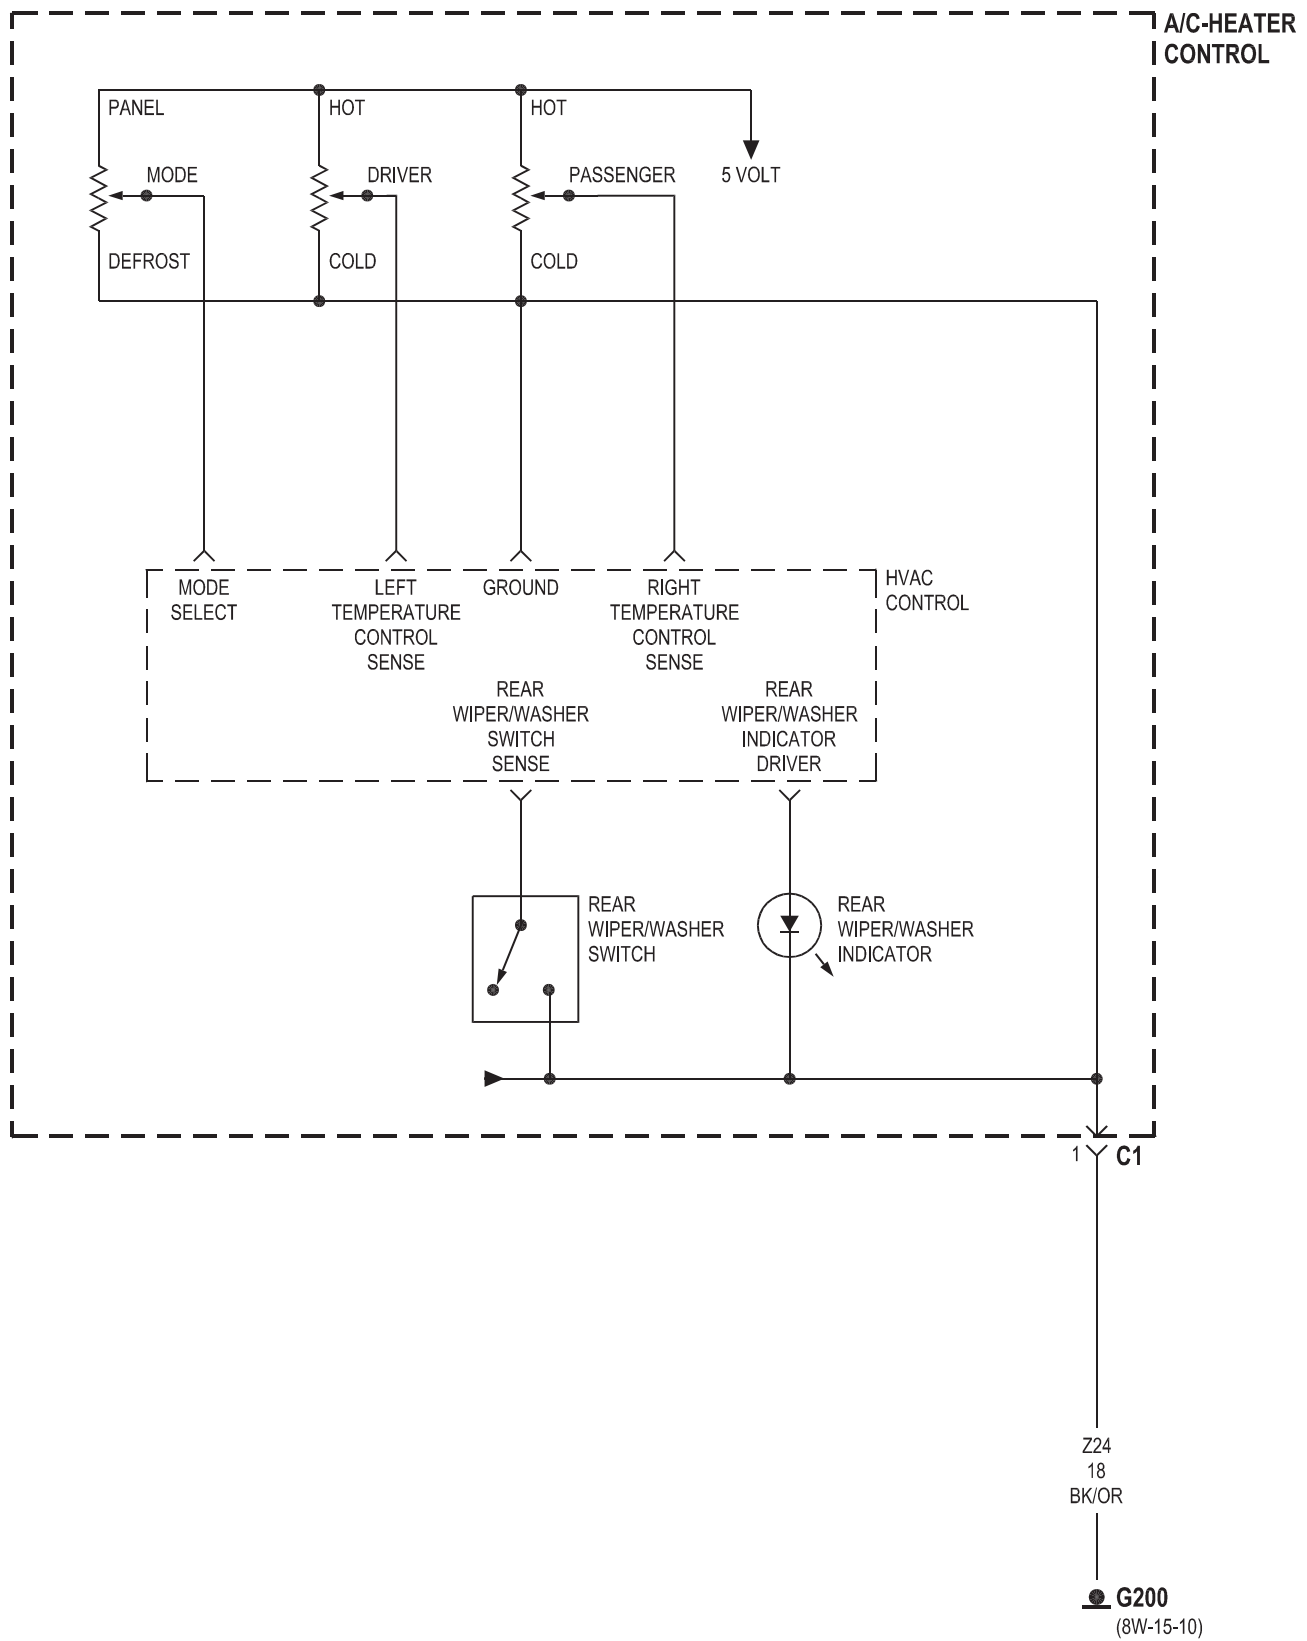

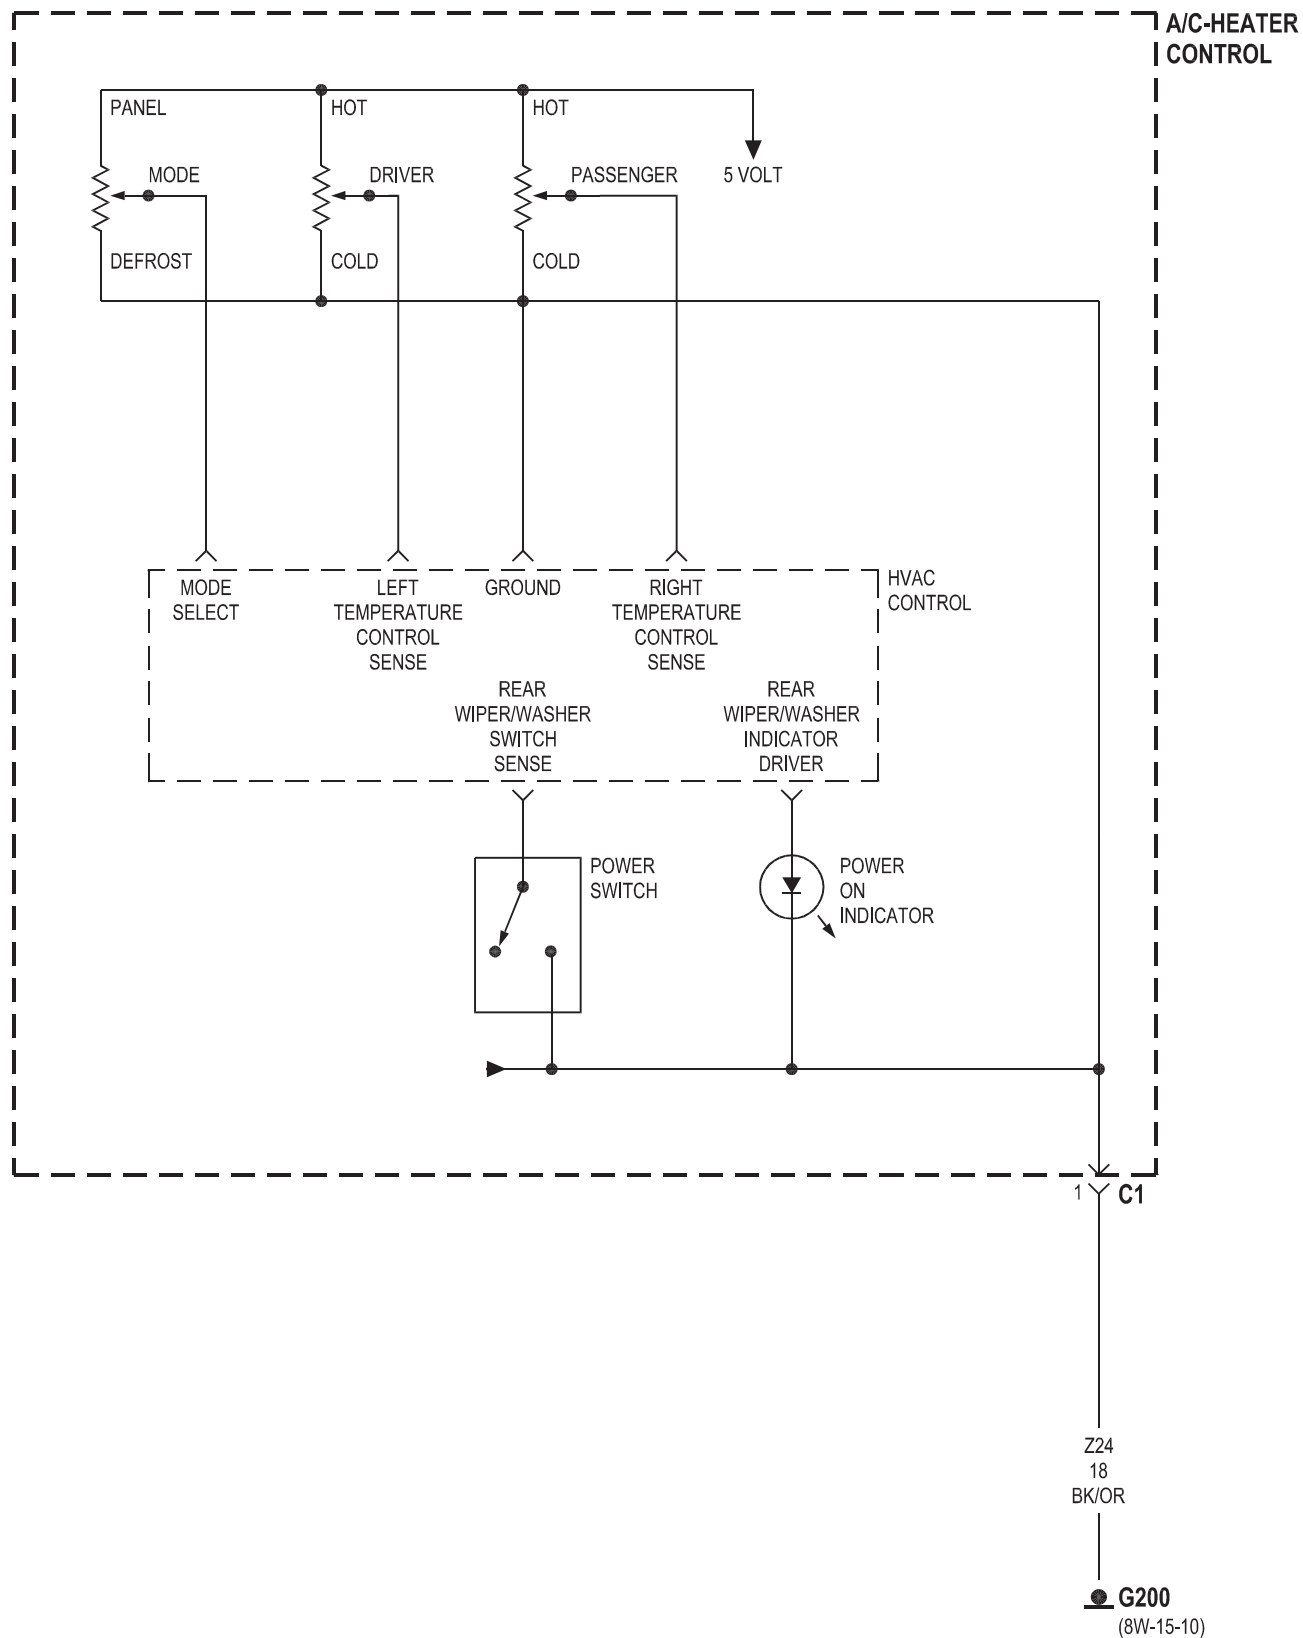



**BODY
CONTROL
MODULE**
(8W-45-3)
(8W-45-16)
(8W-45-19)




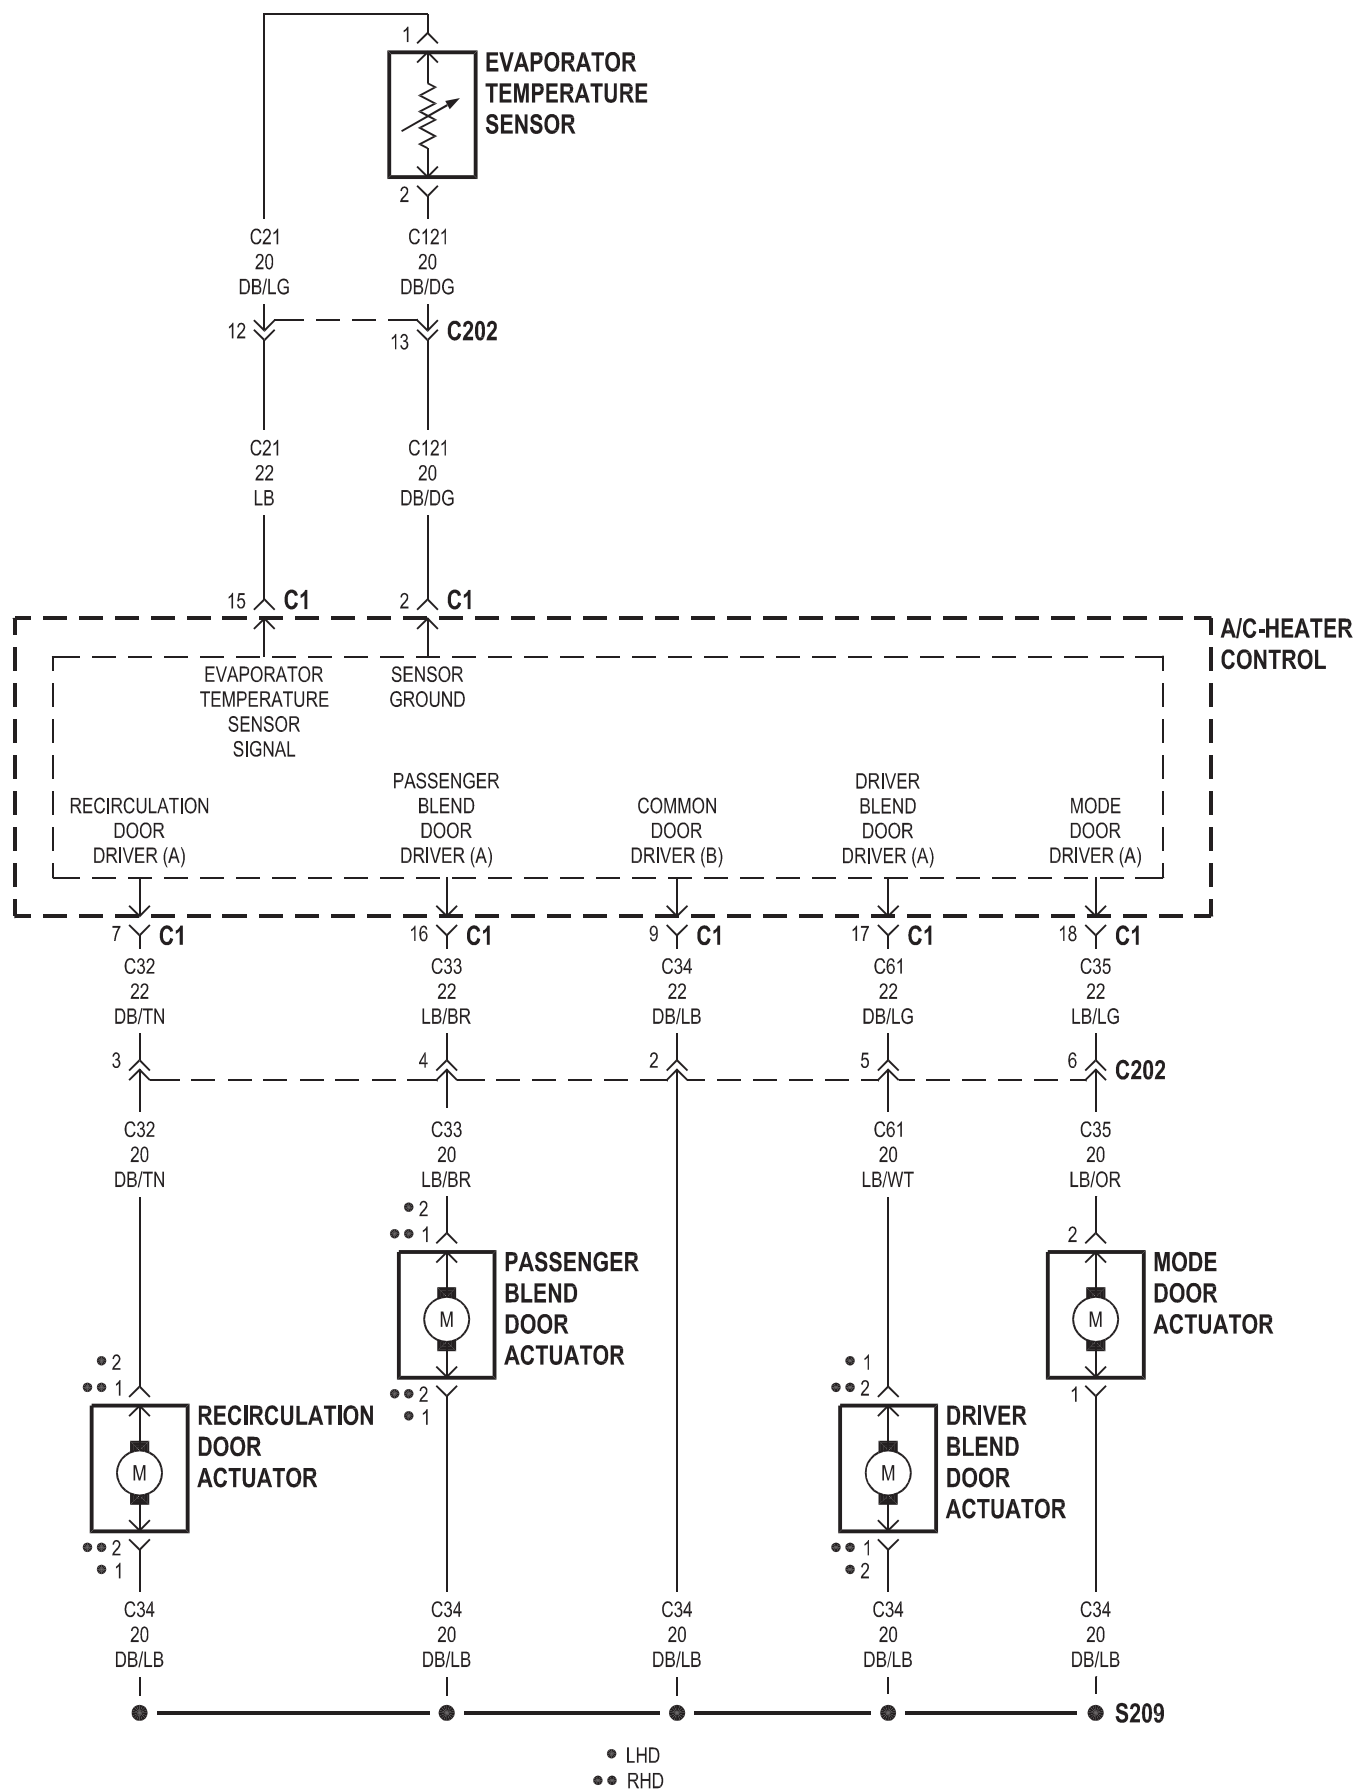


3 ZONE MTC

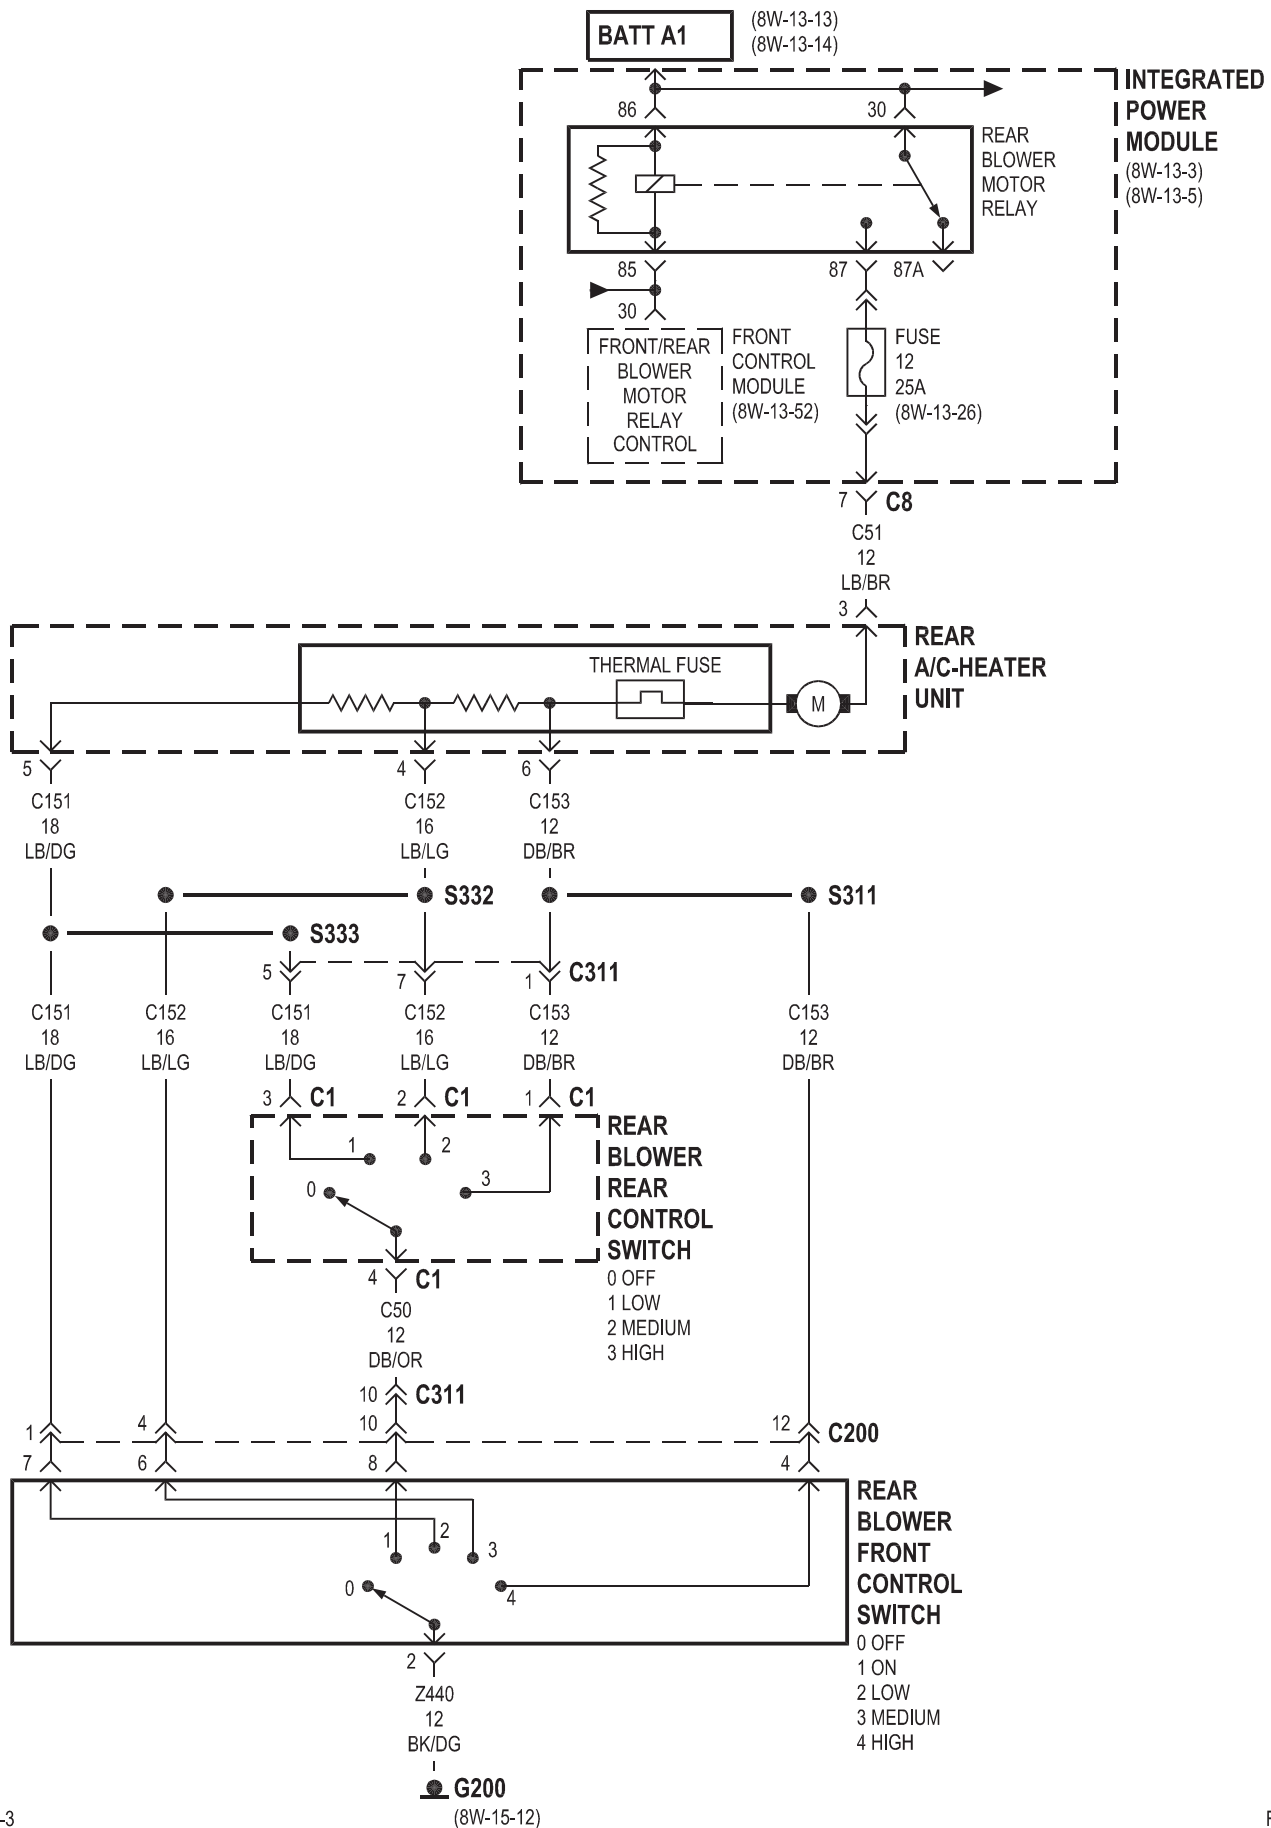


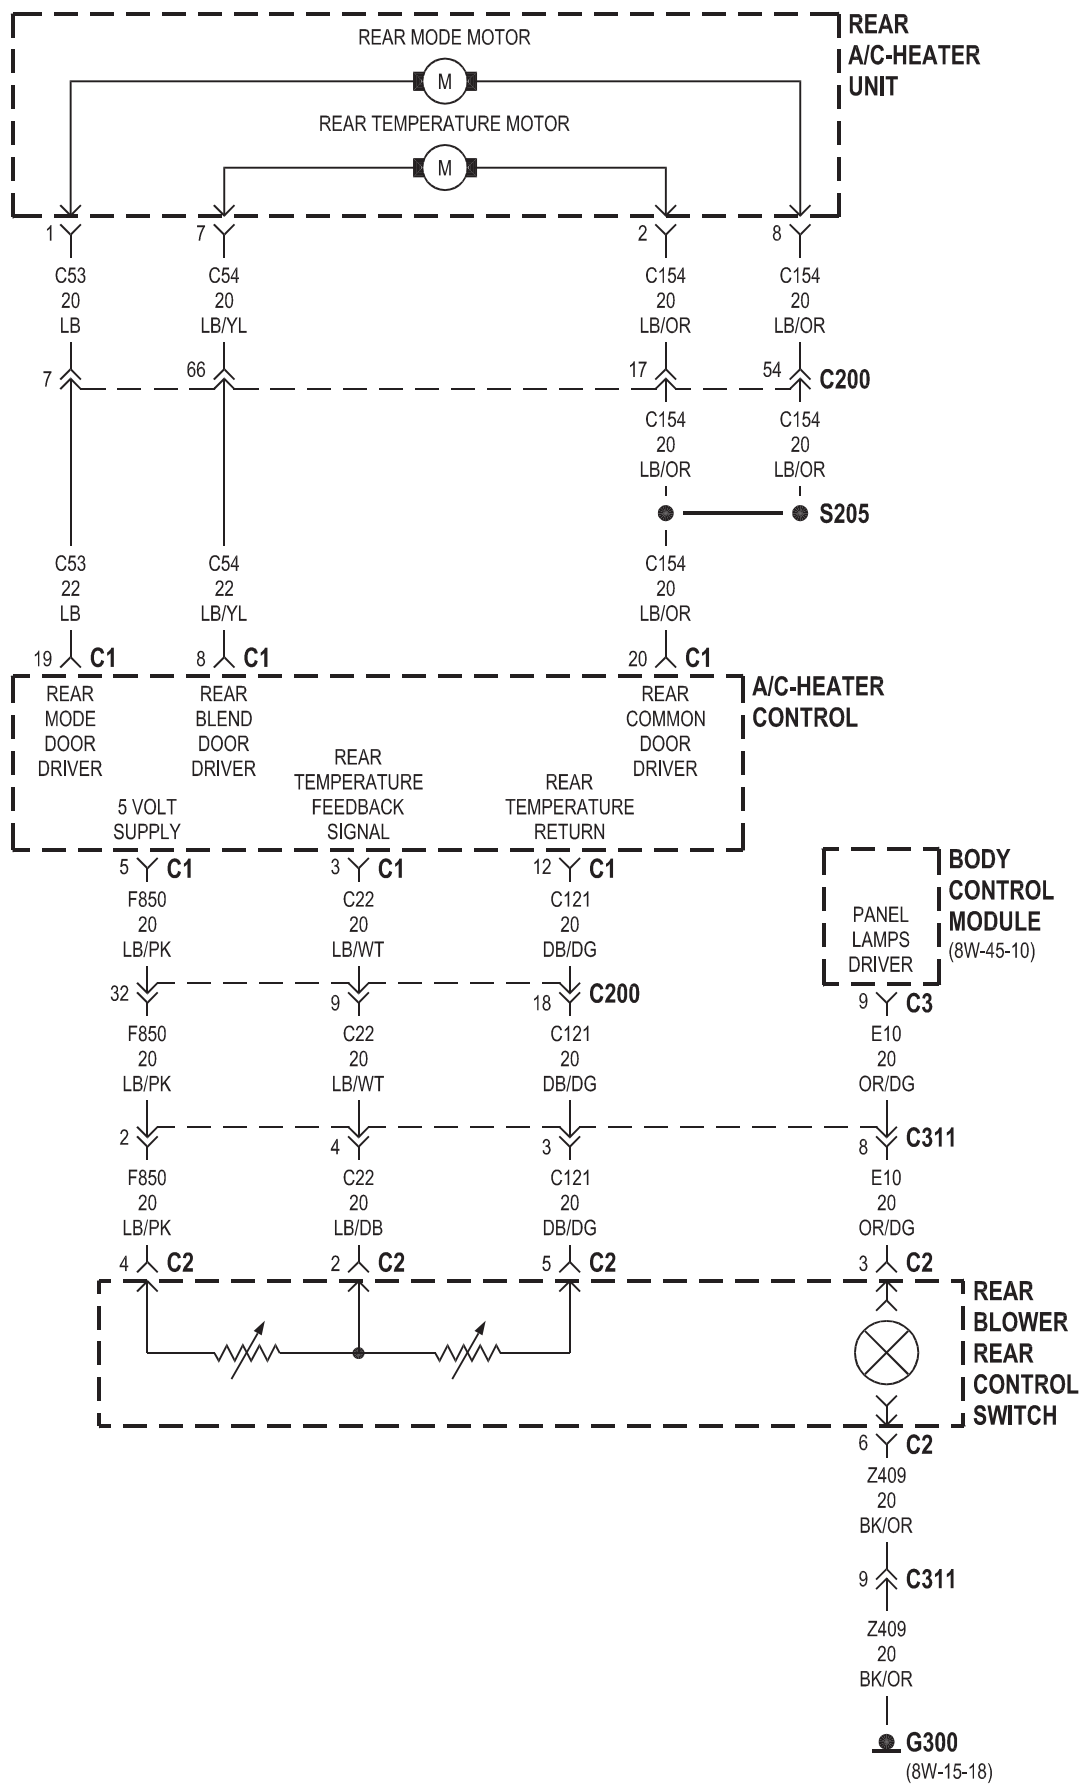


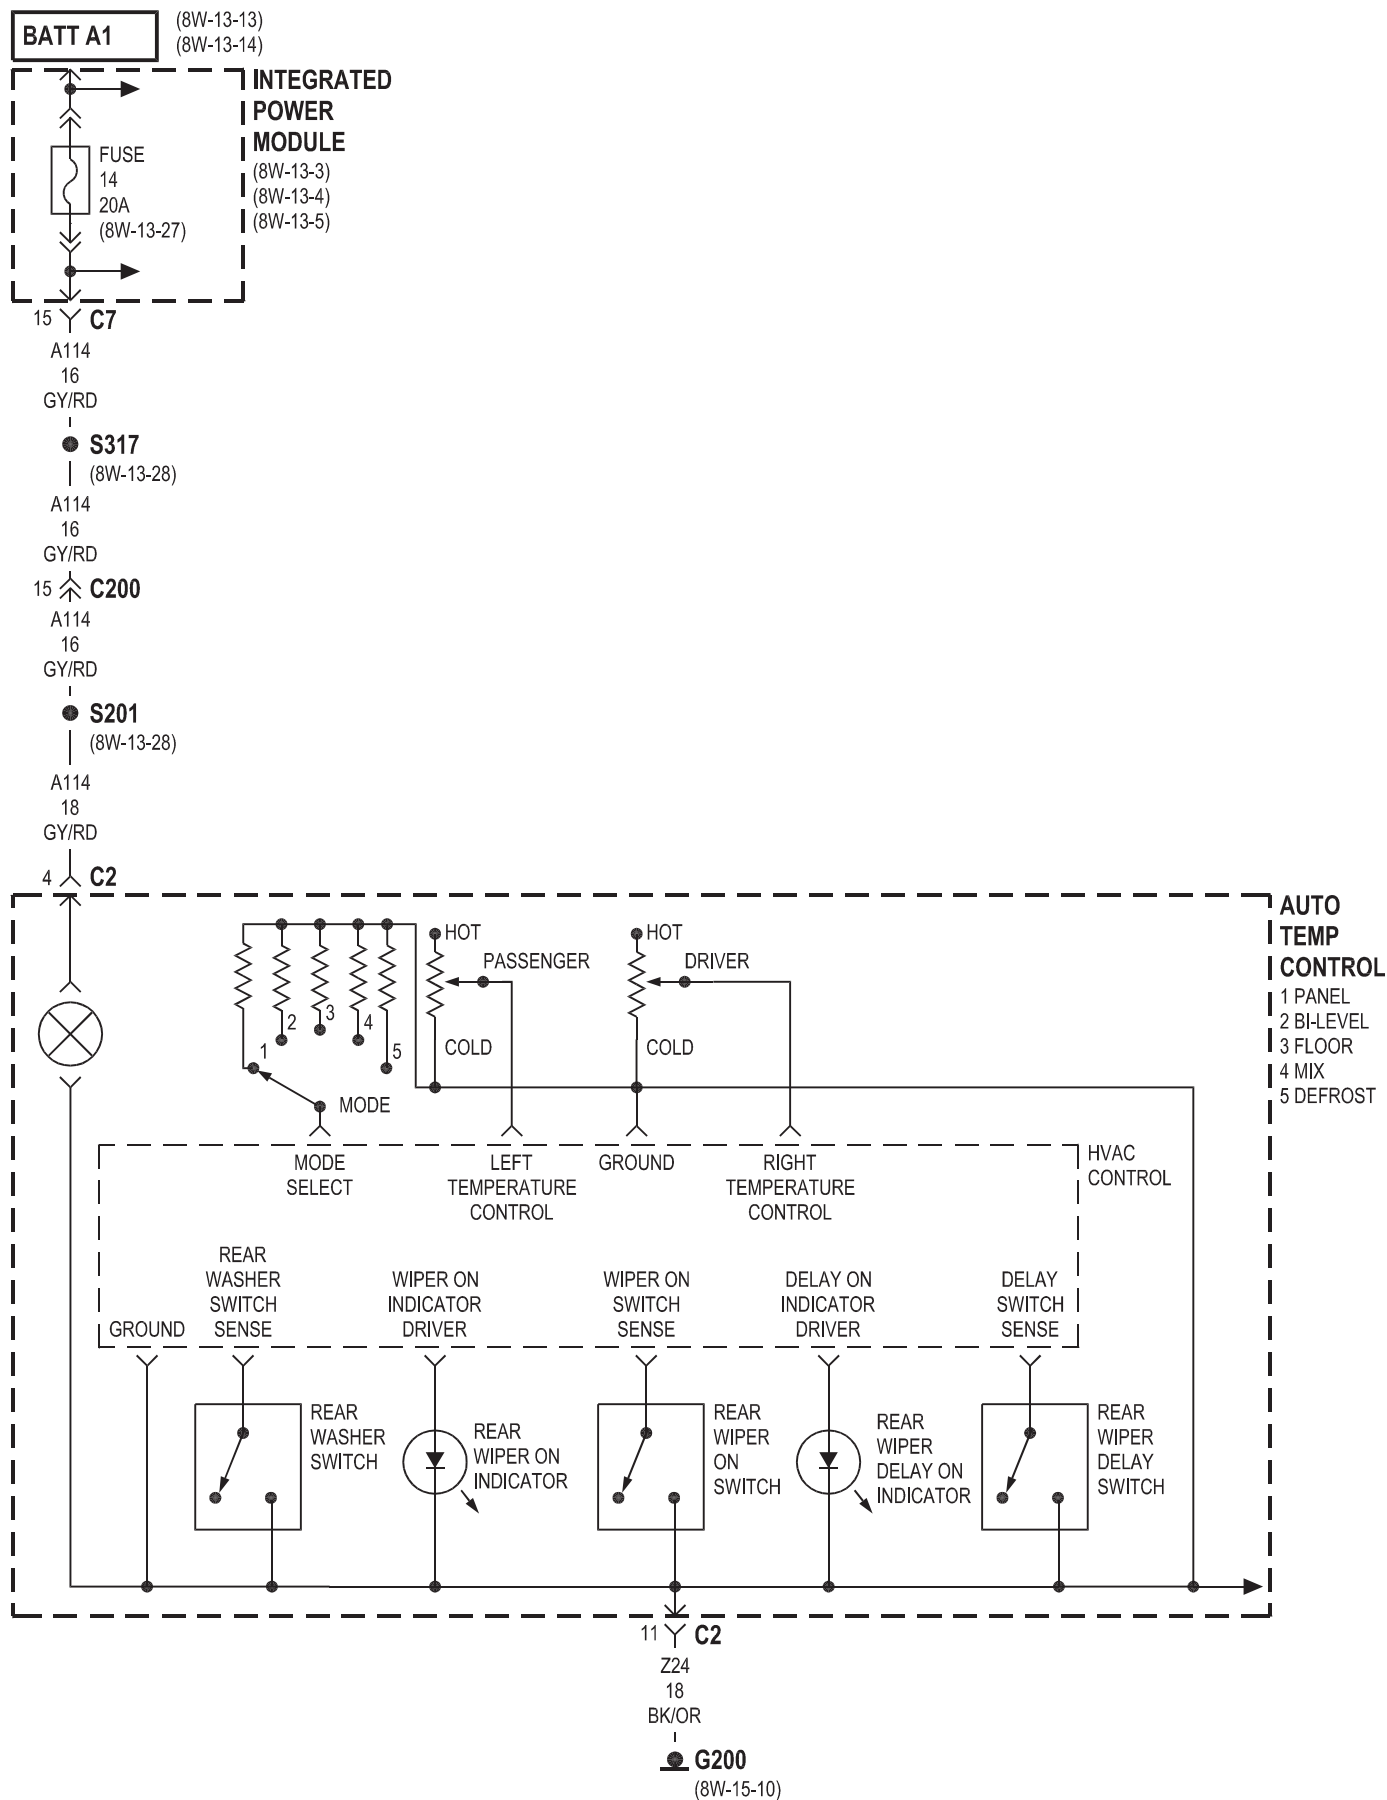



ATC

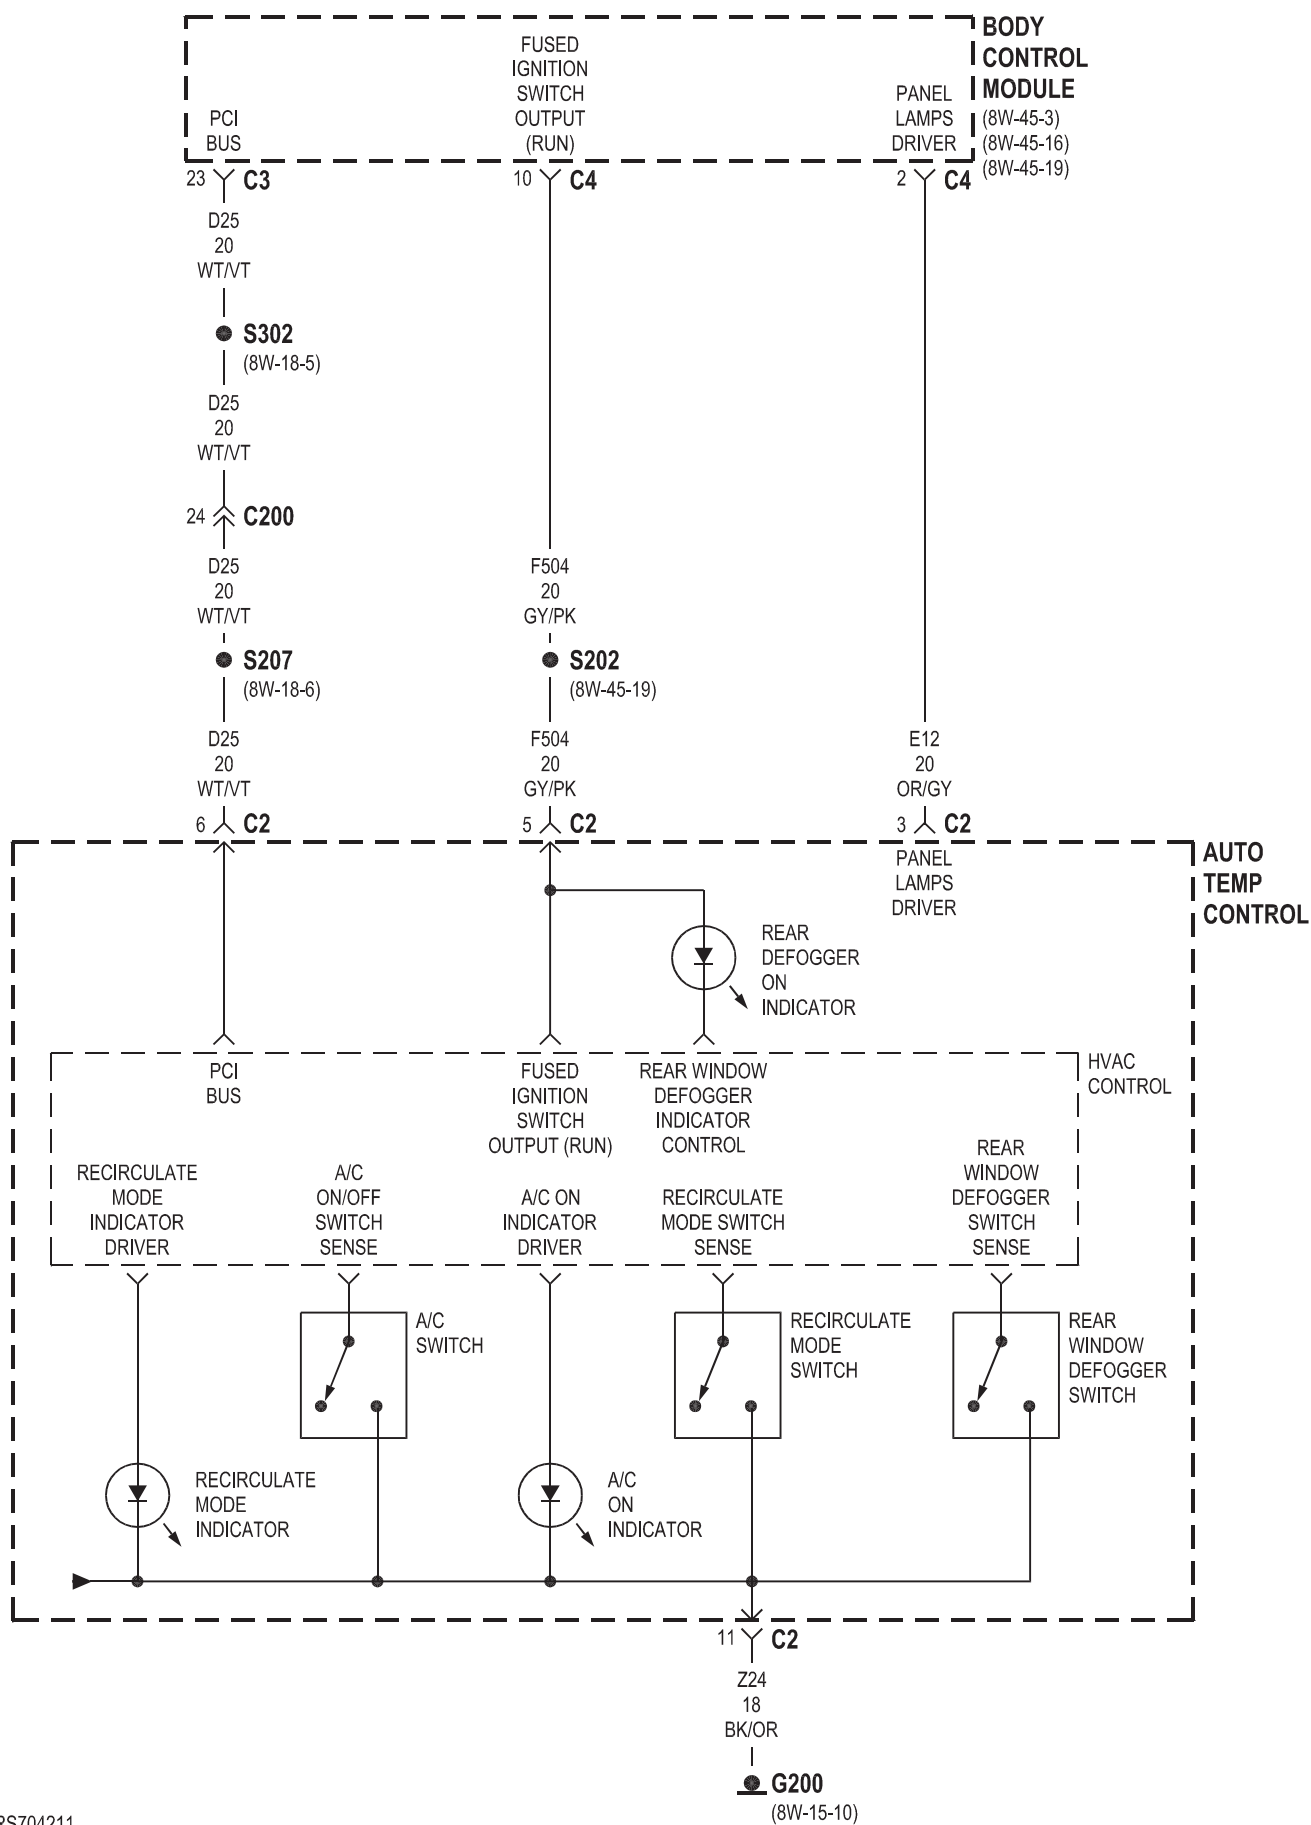


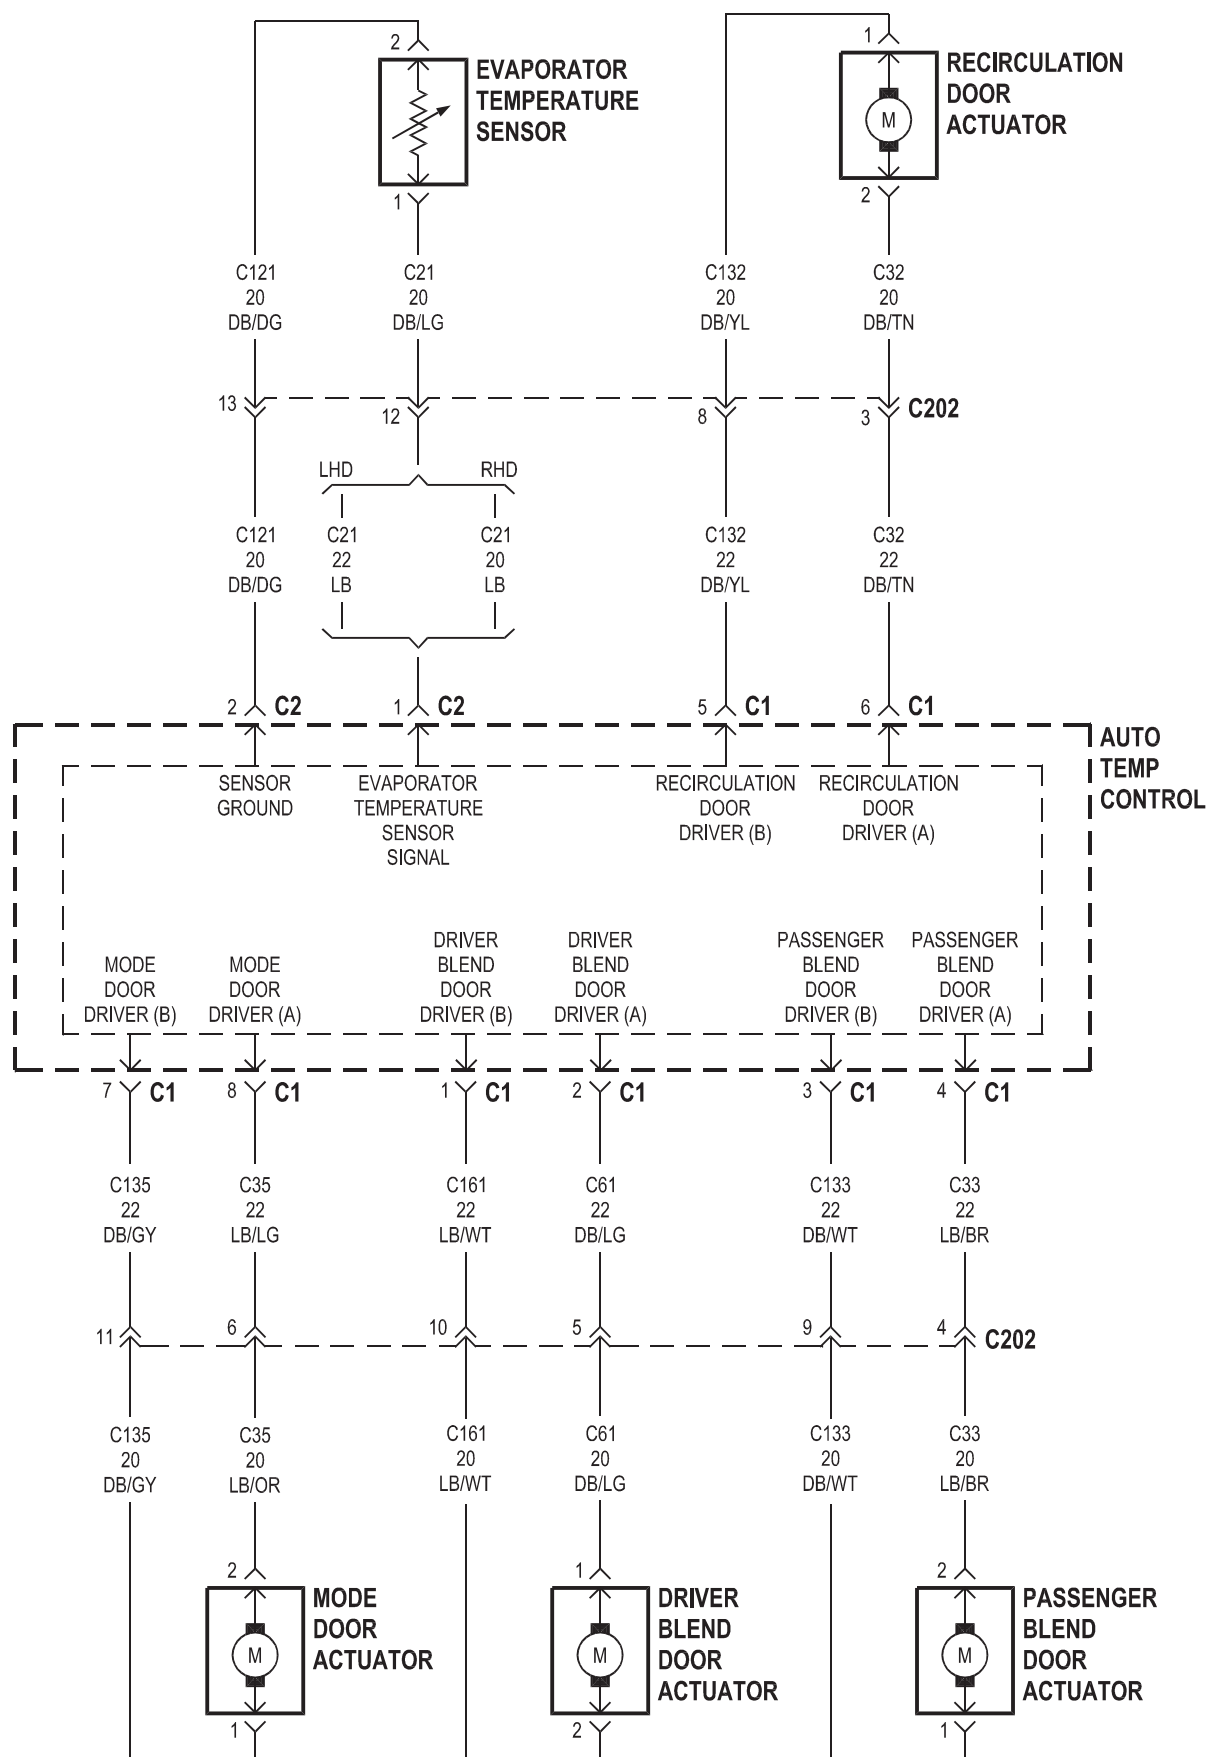

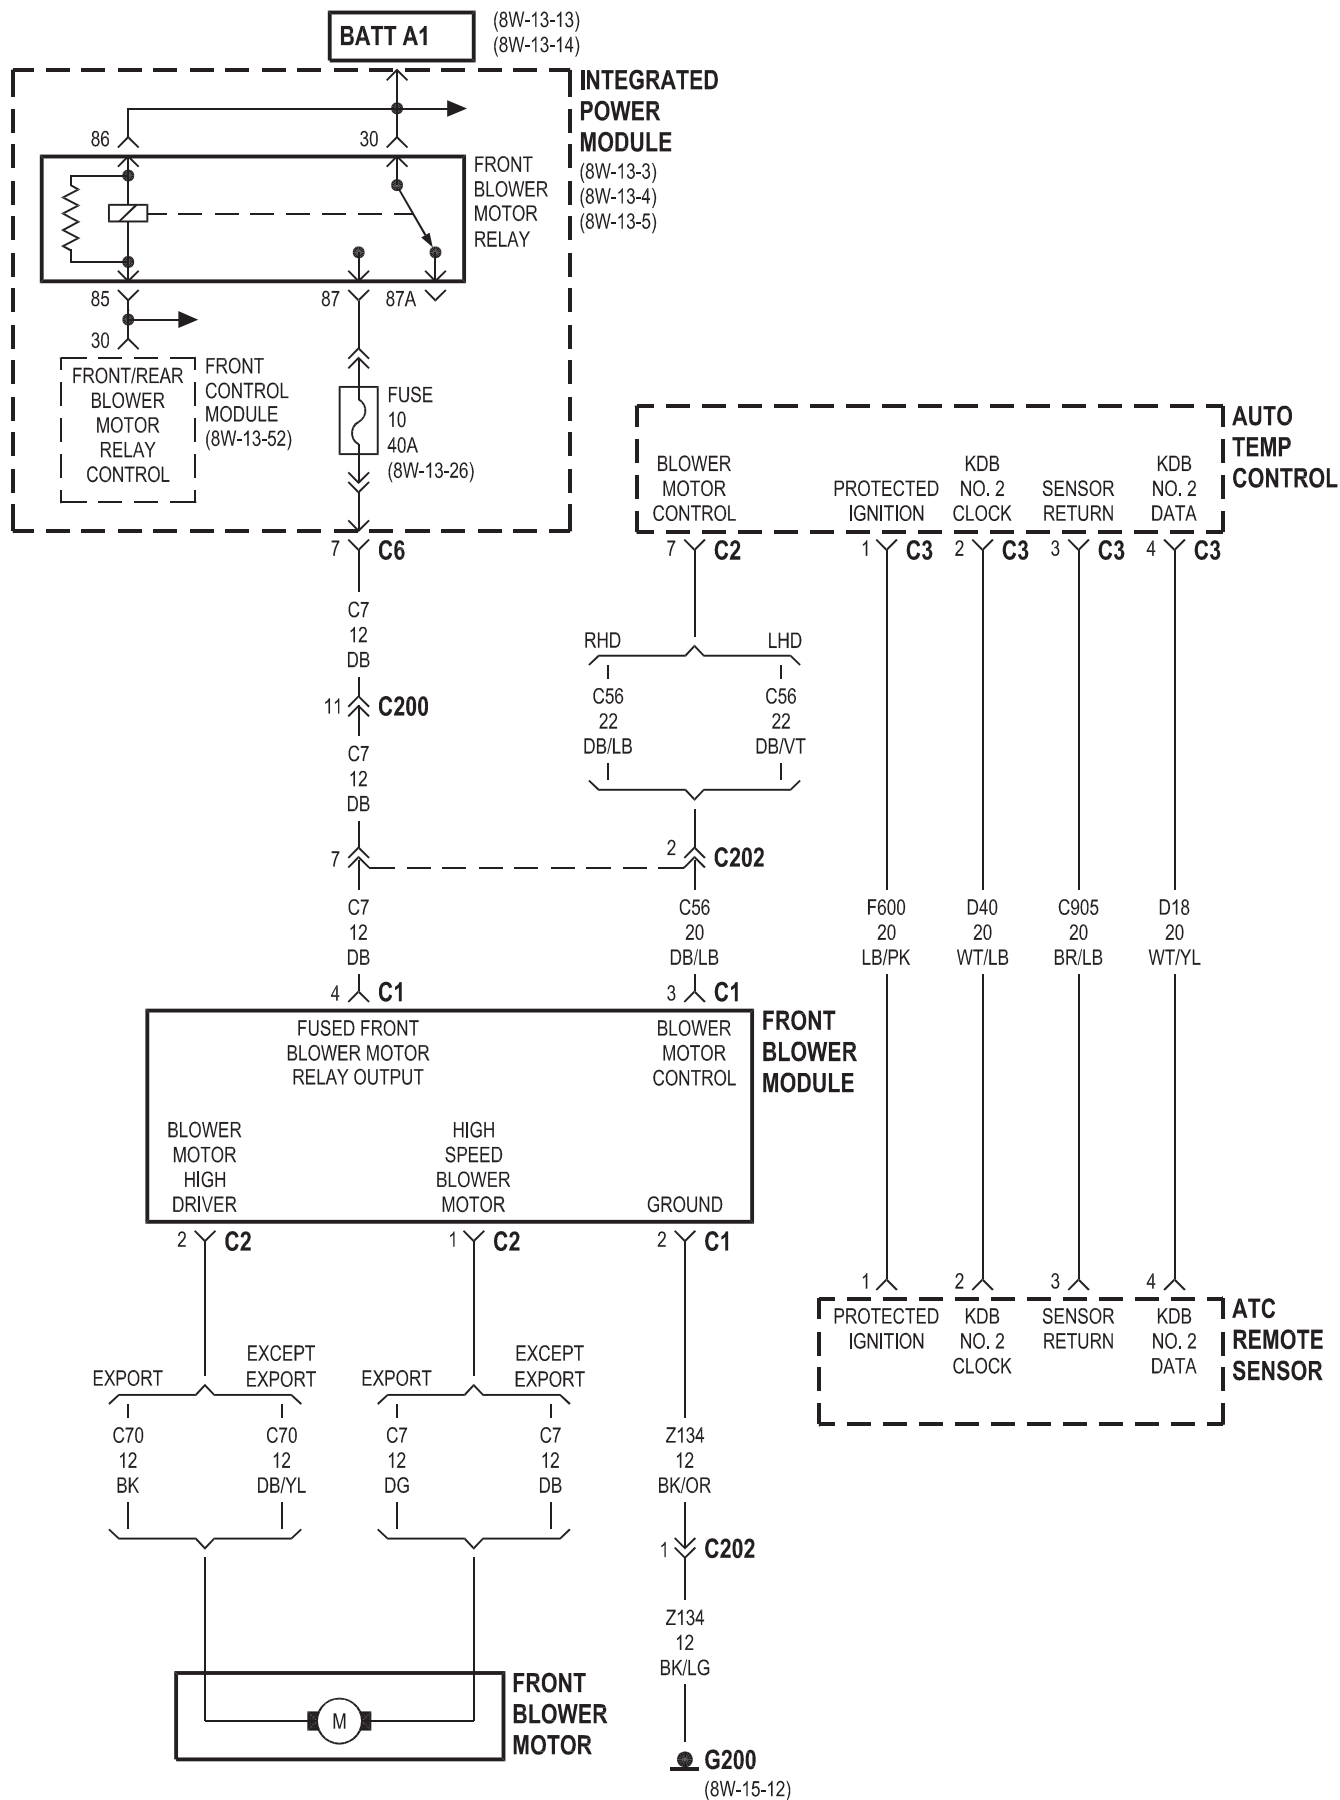



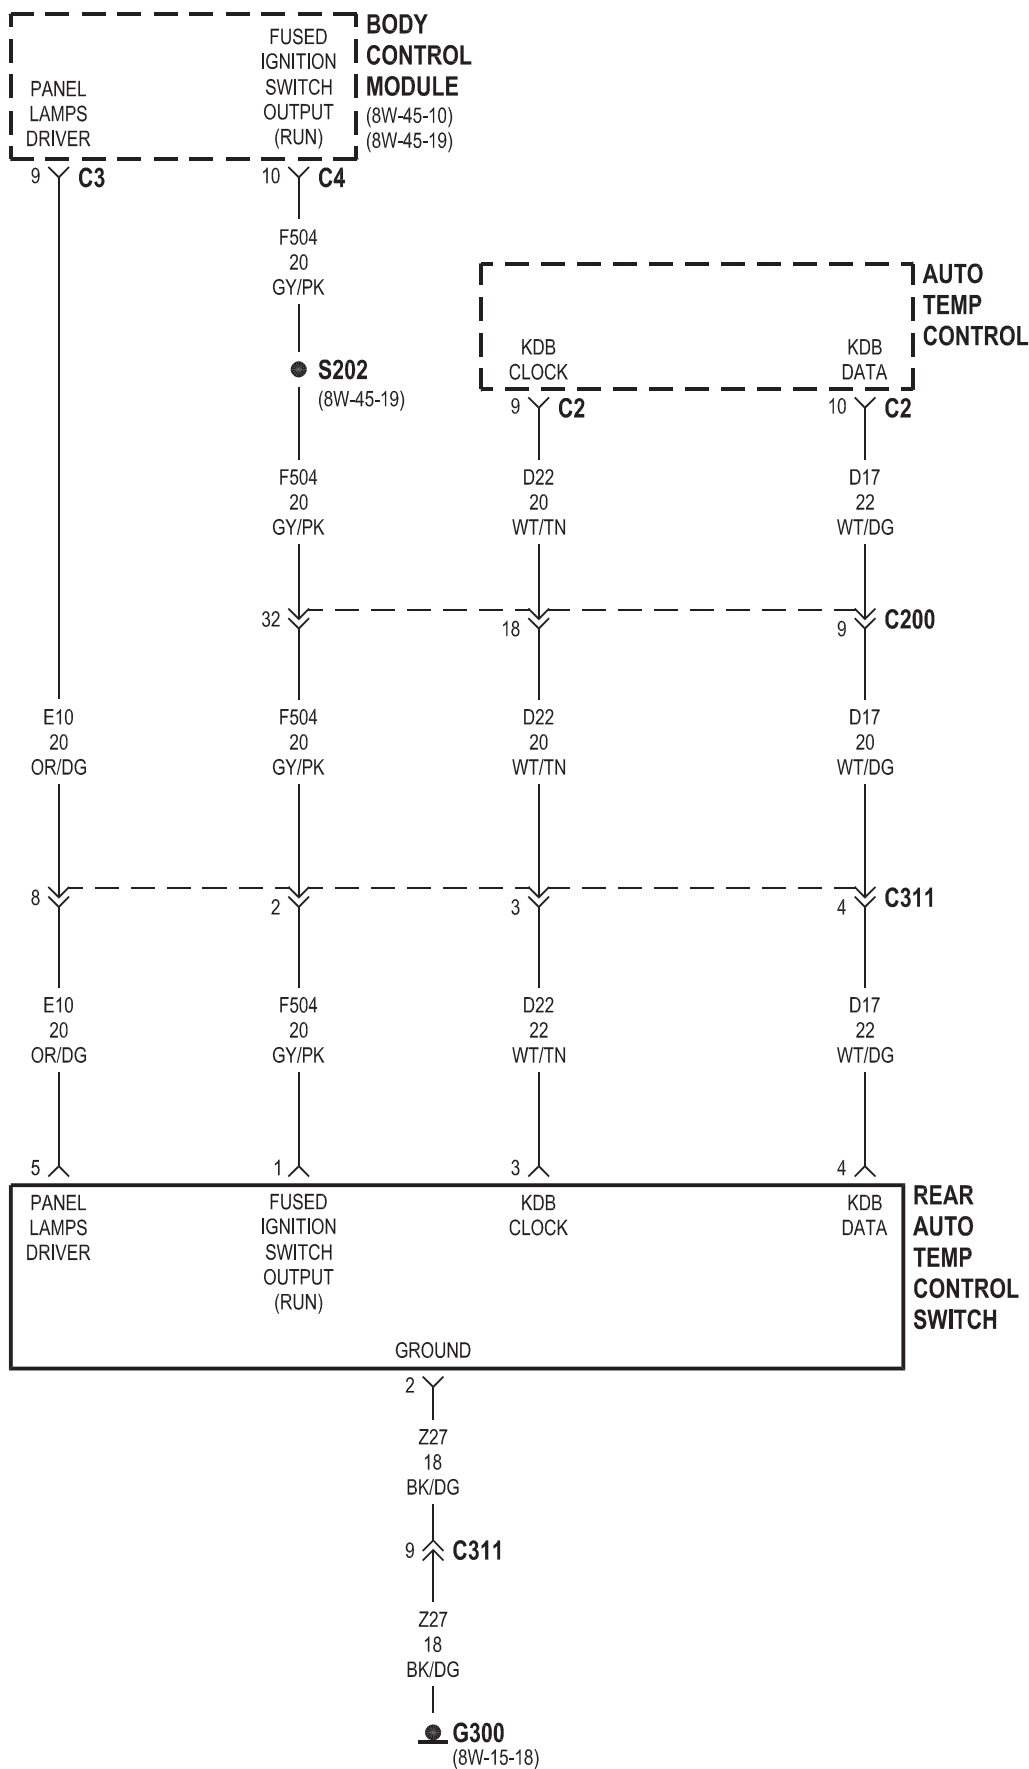

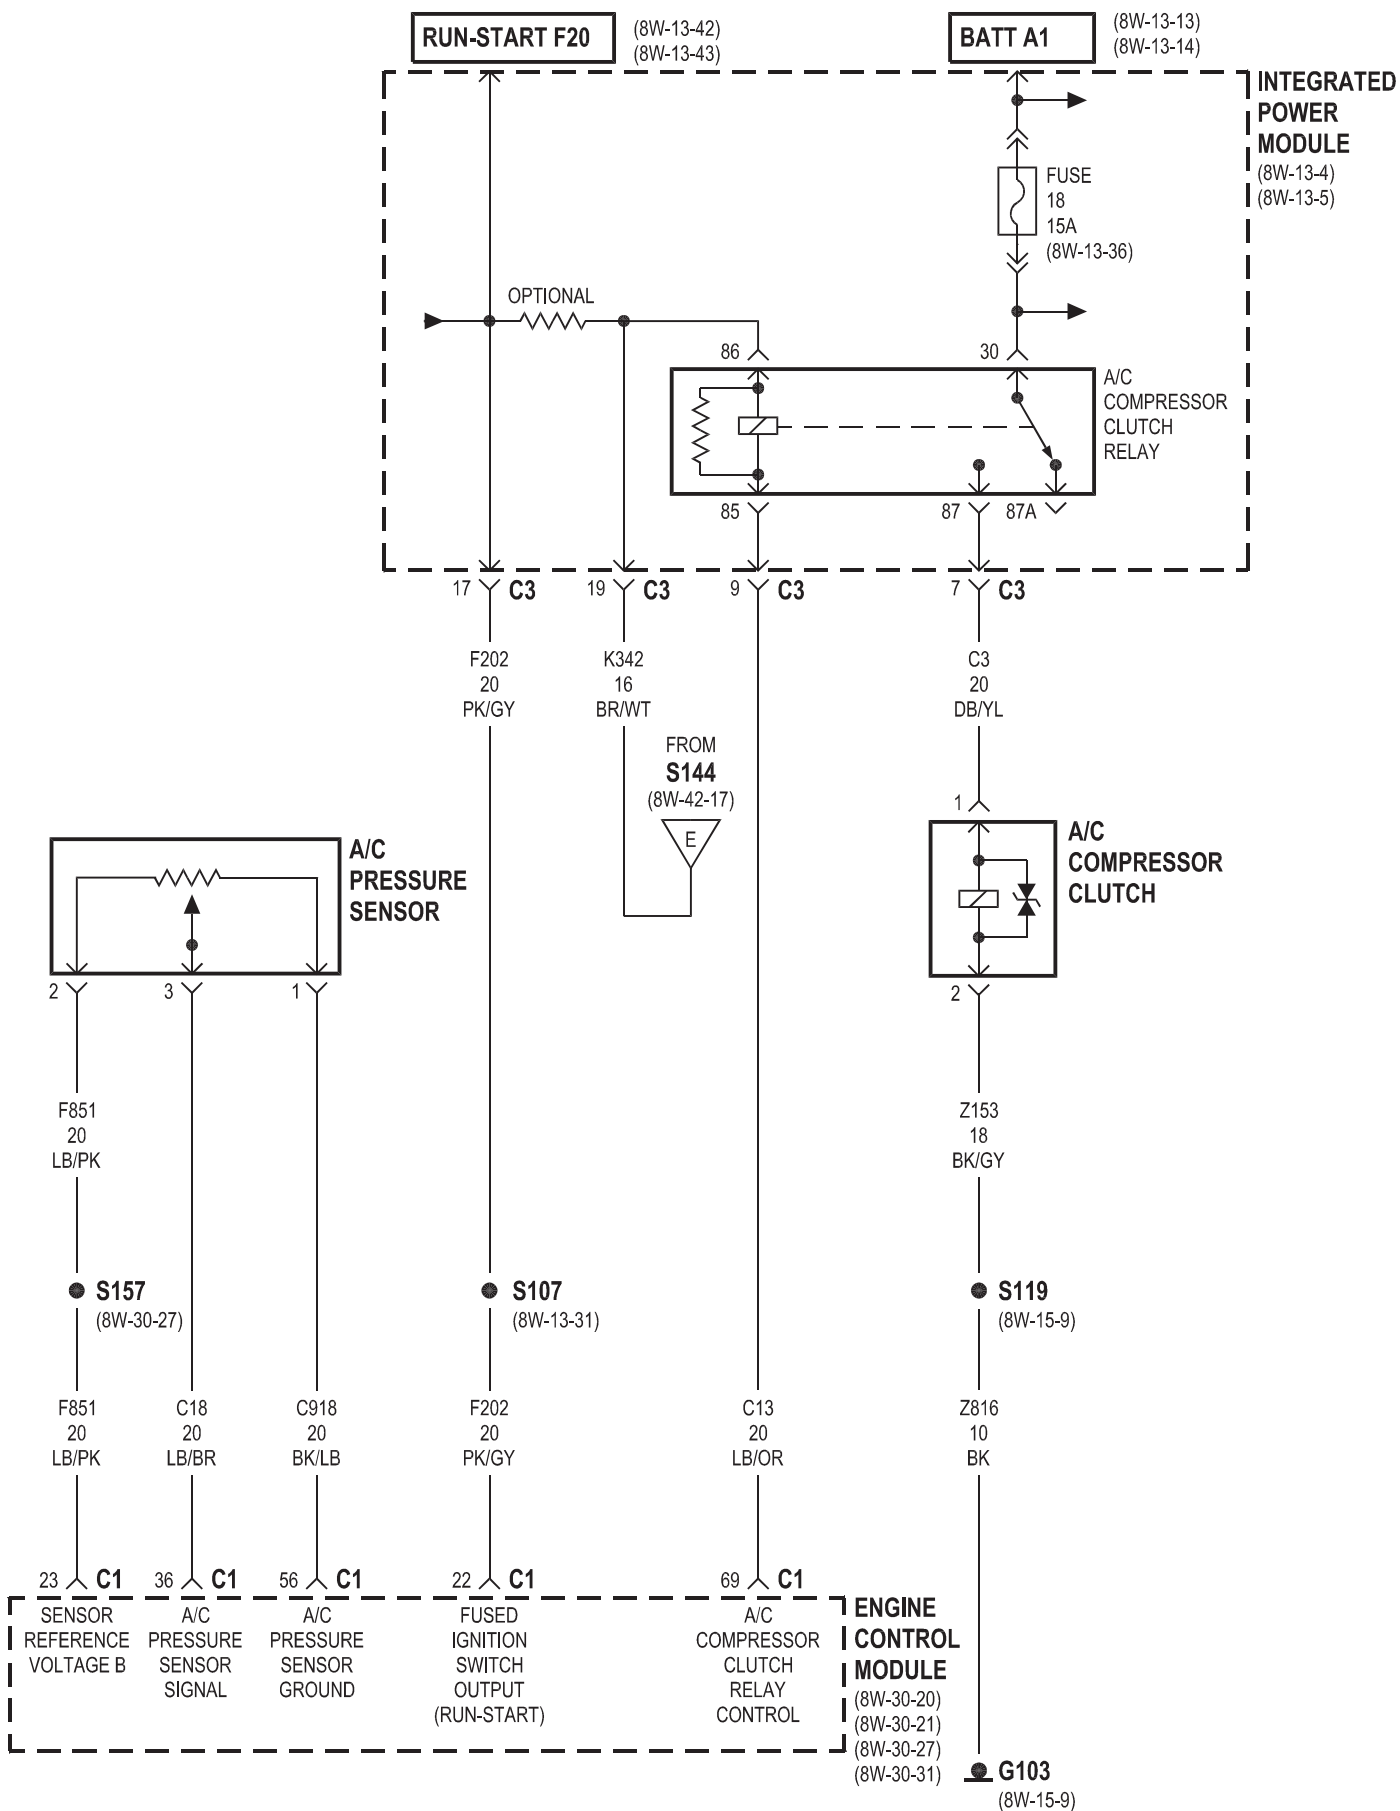

DIESEL

